


14.3.3 Printer

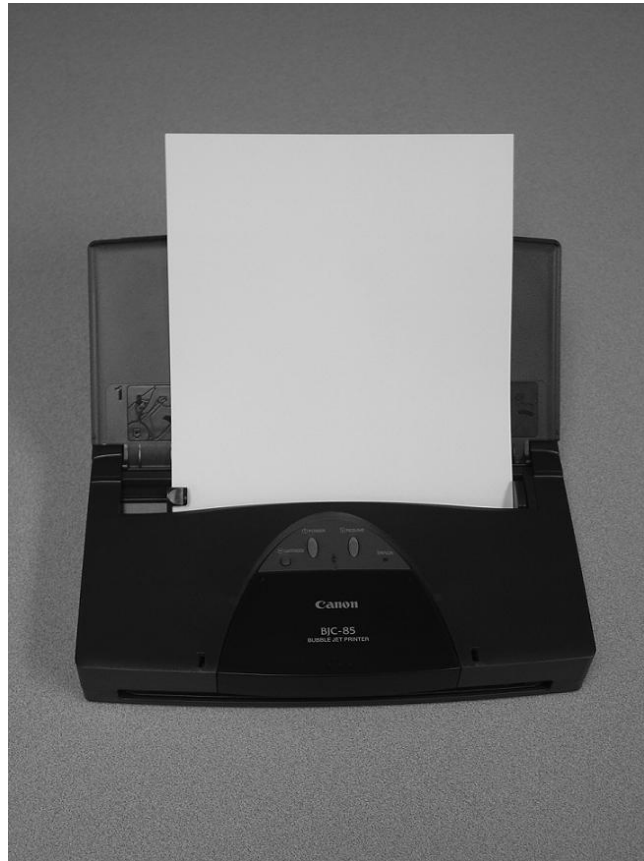


14.3.4 V2 Computer (Screen and Keyboard)



14.3.5 V2 MIL Ports



14.3.6 V2 Power and Data Cables

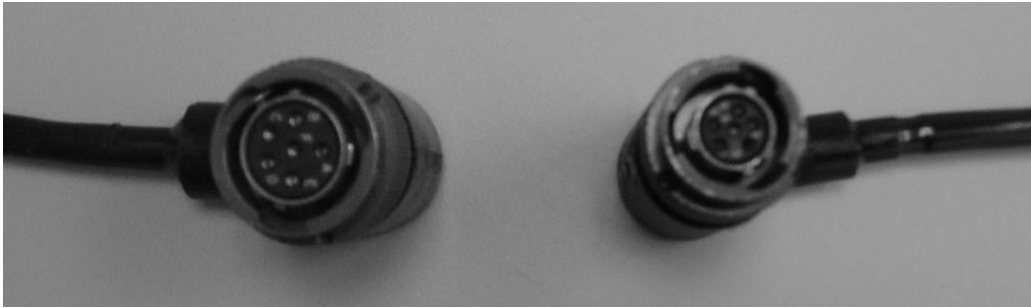

Left to Right -- Power Cable, Data Cable

15. Index

A

About this Manual	2-3
A-Kit	1-1
FMTV – Vehicle Interior	14-1
FMTV Transceiver Mount	14-4
HEMTT – Vehicle Interior	14-2
HEMTT Transceiver Mount	14-4
HET – Vehicle Interior	14-2
HET Transceiver Mount	14-5
HMMWV – Vehicle Interior	14-3
HMMWV Transceiver Mount	14-5
PLS – Vehicle Interior	14-3
PLS Transceiver Mount	14-6
Assignments Tab (TracerLink)	6-9
Autotrack (TracerLink)	6-11

B

Batteries	
CS Laptop Spare.....	3-2
B-Kit	2-3
Bumper Number	
Change Bumper Number	5-15
Release Bumper Number	7-16

C

CADRG (NIMA) Maps	
General Information	6-20
Loading CADRG Maps to the Computer’s Hard Drive	6-24
NIMA Raster Kit Control	6-20
Viewing CADRG Maps Directly from the Hard Drive.....	6-26
Center on Vehicle (TracerLink)	6-19
Change Center (TracerLink)	6-6
Concept of Operations	2-1
Control Station	2-3
Create Group	7-1
CS Control Box	4-1
Delete Group	7-10
Demote Control Station	7-14
Equipment List	3-2
Installation	3-4
Picture.....	14-7
Power ON/OFF	4-1
Promote Mobile Unit.....	7-13
Release Bumper Number	7-16
CSS^{See} Control Station	

D

Debug Log	9-1
Display Position Report Time (TracerLink)	6-17
Displaying Individual Vehicles (TracerLink)	6-15

F

FMTV	
A-Kit -- Transceiver Mount	14-4
A-Kit -- Vehicle Interior	14-1

Control Panel	14-1
---------------------	------

G

GPS (Setting the Reporting Rate)	5-14
Groups	
Create Group	7-1
Delete Group	7-10
Hiding an Entire Group (TracerLink).....	6-14
Modify Group	7-6
Review Groups.....	5-15
Sending a Group Message	5-9
Sending messages while outside of	5-10

H

HEMTT	
A-Kit -- Transceiver Mount.....	14-4
A-Kit -- Vehicle Interior	14-2
HET	
A-Kit -- Transceiver Mount.....	14-5
A-Kit -- Vehicle Interior	14-2
Hiding Groups (TracerLink)	6-14
Hiding Individual Vehicles (TracerLink)	6-15
Hiding Position Report Time (TracerLink)	6-17
HMMWV	
A-Kit -- Transceiver Mount.....	14-5
A-Kit -- Vehicle Interior	14-3

I

Icon	
MTS Messenger	5-1
TracerLink Startup	6-2
Vehicle Server	6-2
Information Security	2-1
Installation	
Control Station	3-4
PLGR (Control Station).....	3-5
Transit Case (Opening).....	3-1

K

Kit Bar (TracerLink)	6-9
-----------------------------------	-----

L

Lat-Long Display (Changing in MTS Messenger)	5-12
LEDs (Light Emitting Diodes)	
Transceiver	9-3
Loading NIMA CADRG Maps to a Hard Drive	6-24

M

Map Viewer (TracerLink)	6-3
Maps	
Manipulating the Map Viewer.....	<i>See</i> TracerLink
NIMA CADRG	6-20
Various Formats.....	6-4
Measure Distances on a Map (TracerLink)	6-6
Message Routing Architecture	2-1
Messaging	

Printing Messages 5-14
 Reading 5-4
 Reading Received Messages 5-5
 Reviewing Sent Messages 5-6
 Sending 5-7
 Starting 5-1
MT 2010.....*See Transceiver*
MT-2011*See Transceiver*
MTS Messenger 5-1
 Error Message 8-1
 Lat-Long Display 5-12
 Main MTS Messenger Window 5-3
 Print Message Log 5-14
 Reading Messages 5-4
 Reviewing a Sent Message 5-6
 Sending Messages 5-7
 Set GPS Rate 5-14
 Starting 5-1
 The Options Menu 5-12
MTS Overview 2-1

N

NIMA CADRГ Maps 6-20
 Loading NIMA CADRГ Maps to a Hard Drive 6-24
 Viewing CADRГ Maps from a Compact Disk (CD) 6-20
 Viewing CADRГ Maps from a Hard Drive 6-26

O

Options
 Clear locally store information 5-16
Options Menu..... 5-12

P

Pan a Map (TracerLink) 6-6
PLGR
 CS Installation 3-5
PLS
 A-Kit -- Transceiver Mount 14-6
 A-Kit -- Vehicle Interior 14-3
Printer..... 4-2
 Picture 14-8
Printing a Message Log 5-14

R

Reading Messages 5-4
Reset Map (TracerLink)..... 6-7
Reviewing a Sent Message..... 5-6
Right Click Pop Up Menu 6-5

S

Safety 1-1
 Bumping Injuries 1-2
 Driving Operation 1-2
 Electric Shock Injuries 1-3
 Procedures for Treating Victims of Electrical Shock: 1-4
 Repetitive Stress Injuries 1-3
Save TracerLink Configuration 6-8
Selection Tab (TracerLink)..... 6-9
Sending a Group Message..... 5-9
Sending a Message 5-7
Server Vehicle Kit Control Window (TracerLink) 6-8

Set GPS Rate..... 5-14
Showing Groups (TracerLink)..... 6-14
Spare parts..... 11-1
Starting MTSMessenger 5-1
Starting TracerLink..... 6-2
Symbols (TracerLink)..... 6-4
System Administrator Tasks 9-1
 Check and Troubleshooting TracerLink 9-4
 Check Cables 9-4
 Check LEDs 9-4
 Debug Log 9-1
 Using MTS Messenger Help 9-1

T

Tools 12-1
Trace (TracerLink) 6-12
TracerLink Mapping 6-1
 Assignments Tab 6-9
 Autotrack 6-11
 Center on Vehicle 6-19
 Change Center 6-6
 Change Units of Measure 6-7
 Displaying & Hiding Group Position Labels 6-18
 Displaying & Hiding Vehicle Position Labels 6-17
 Displaying & Hiding Vehicles 6-15
 Hiding Groups 6-14
 Loading NIMA CADRГ Maps to a Hard Drive 6-24
 Map Viewer 6-3
 Measure Distances 6-6
 NIMA CADRГ Maps 6-20
 Pan a Map (Move) 6-6
 Reset Initial View 6-7
 Right Click Pop Up Menu 6-5
 Save TracerLink Configuration 6-8
 SelectionTab 6-9
 Server Vehicle Kit Control Window 6-8
 Showing Groups 6-14
 Starting TracerLink 6-2
 Symbols 6-4
 Trace 6-12
 Viewing CADRГ Maps from a Compact Disk (CD) 6-20
 Viewing CADRГ Maps from a Hard Drive 6-26
 Zooming 6-6

TracerLink

TracerLink
 CS Installation 3-4
 Picture 14-7
 V2 Installation 3-8

Transit Case..... 3-1
 Control Station Contents 3-2
 Opening 3-1
 V2 Contents 3-6

Troubleshooting..... 8-1

U

Units of Measure (TracerLink) 6-7

V

V2 - Standard System
 MIL Ports, Picture 14-9
 Picture 14-9
 Power and Data Cables, Picture 14-10

V2 – Standard System
 Control Box 4-4

Equipment List 3-6
General Information 2-3
Installation 3-8
Power ON/OFF 4-4
Viewing CADRG Maps from a Compact Disk (CD) 6-20
Viewing CADRG Maps from a Hard Drive..... 6-26

W

Warranty..... 10-1

Z

Zooming 6-6