

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

## KEEP AWAY FROM WATER DANGER –

To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water or other liquid. Unplug immediately.

**WARNING** –To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. This product is not to be used by, on, or

near children or by individuals with certain disabilities.

3. Use this appliance only for its intended purpose as described in the manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.

5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.

6. To avoid burning, do not pick up the unit while water is hot since water can spill out.

7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.

8. Never use while sleeping.

9. Never drop or insert any object into any opening or hose.

10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

11. Do not use an extension cord with this appliance.

12. Unplug this appliance before filling. Fill reservoir with tap water only. Do not overfill.

13. Use The Microdermabrasion Facial Spa only on a level surface.

14. Do not use additives.

15. Never place face close to facial steamer in one position as this may cause scalding.

16. To avoid burning, do not touch after plugging in water reservoir unit.

17. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries.

18. Do not use the spa without the mask.

19. Do not place hand in the base.

20. Do not touch steam as it comes out of the base.

21. Do not move or pick up the unit until the water cools.

## SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

• The Microdermabrasion unit operates on 2 “AA” batteries. For battery insertion, gently pull down lower cap and insert batteries.

If you have any skin condition, sensitivity to heat, or other health issues or questions, including those relating to use of this product while undergoing any treatments or taking any medications, please consult with a physician before use.



This product should not be used in the following cases:

Tuberculosis, benign and malignant tumors, inflammations of the skin, phlebitis and thrombosis, open and fresh wounds, bruises, broken skin or varicose veins.

## INSTRUCTIONS FOR USING YOUR MICRODERMABRASION SPA

Before beginning, cleanse your face, following your daily care routine. Lightly pat your favorite moisturizer or eye cream around the eye area.

## USING YOUR FACIAL STEAMING UNIT

• Your Facial Spa includes two detachable cones:

1. Facial Mask: Use for facial cleaning.
2. Sinus Cone: Use for concentrated steam to assist in respiratory therapy. Place your nose in the sinus cone with forehead touching curved rim. Relax as soothing mist promotes easier breathing, however, do not use as room humidifier.

• Turn facial mask or sinus cone counter-clockwise and lift away from base.

• Fill the water cylinder with warm tap water. Pour water into the reservoir and plug it into a 120 volt AC household outlet. (See Figure 1)



Figure 1

• Place facial mask or sinus cone over unit. Lock by aligning bumps on facial mask with slots over water reservoir and turn clockwise. (See Figure 2)

• Press “ON/OFF” button to turn unit on.

• When the power is on, the ready indicator light will flash for 3 minutes as the water is preheating.

• When the indicator light has stopped flashing and is steady, you may use the Facial Spa. Unit will automatically shut off after 45 minutes.

• FOR A TIMED TREATMENT, the timer control can be set from 3 to 15 minutes by rotating the knob to desired time.

• Press the timer start button and the timer indicator light will go on.

• The unit will shut off and a buzzer will sound to indicate that preset time has expired.

**NOTE:** One fill provides between 10-30 minutes of soothing mist. If the facial spa should run out of water, shut off immediately, then begin your facial again.

• Clean your face and neck

• Allow approximately 3 to 4 minutes for steam mist to develop, then place your face gently against the rim of the facial mask or sinus cone. To avoid burning, do not pick up the unit while water is hot since water will spill out.

• If more steam is desired, place a towel over your head that so it covers the mask and sides of the steamer.

• Close your eyes and relax as the soothing



Figure 2

mist begins deep cleansing action.

• Remove your face occasionally and blot with a cool, damp towel. Steam for a minimum of 5 minutes, but no longer than 30 minutes.

• Immediately after steaming, rinse your face with cool water.

## INSTRUCTIONS FOR USING YOUR MICRODERMABRASION TOOL

• Snap the exfoliating brush attachment onto the unit, making sure it is securely attached.

• Apply a generous amount of your favorite exfoliating cream to your face.

• At the speed of your choice, massage the cleanser on your face in a circular motion, making sure not to exceed two minutes.

• Use for 10 second intervals per area beginning with the forehead; avoiding the eye area, move downwards toward the cheek and nose area then to your chin area.

This step exfoliates, thoroughly cleans and removes dulled skin cells. Rinse face and pat dry. Next apply cool water or your favorite astringent to close pores and seal in moisture.

• Now you are ready to apply your favorite moisturizing lotion by using the sponge applicator. Dot your forehead, cheeks, nose and chin with a generous amount of moisturizer and smooth the cream into your skin. Apply light to medium pressure and use upward, circular strokes. After just one personal facial with the Microdermabrasion Facial Spa you’ll find your skin looking fresher and healthier.

## SPECIAL PAMPERING TIPS FOR DELICATE AREAS

### THE EYE AREA

• Give special care to the eye area during your personal facial, by lightly massaging additional moisturizer or eye cream on eyelids and under your eyes before you begin.

### THE NECK & THROAT

• Apply your favorite moisturizer to your entire face.

• Mist your face for only 5 minutes, following Instructions For "Your Personal Facial".

• Tilt your head backward so your throat is approximately 2 inches from the facial mask.

• Mist your throat for 2 minutes. For best results, accelerate moisturizing process by gently turning neck from side to side.

### SPECIAL USES

• Consult your physician or dermatologist for instructions on how to best use The Microdermabrasion Facial Spa for your specific condition.

## USER MAINTENANCE INSTRUCTIONS

Caring for The Microdermabrasion Facial Spa After Completing Your Facial:

• Always turn off and unplug The Microdermabrasion Facial Spa from the electrical outlet before cleaning.

• Let cool then empty excess water, and wipe dry interior of the facial mask and rim around the opening.

• Wipe the base with a clean, damp cloth, then polish lightly with a dry one. NEVER IMMERS THE FACIAL SAUNA IN WATER.

• Do not attempt to repair the appliance

yourself. Return to the place of purchase with sales receipt.

• Facial sponge and brush attachments should be cleaned after each use by running them under warm water. Rinse thoroughly and squeeze out any excess water. Allow attachments to air dry thoroughly before reusing. Clean the Microdermabrasion unit with a dry cloth only. Do not immerse in water.

## CAUTION

Never allow the power supply cord to be pulled, twisted or severely bent. Never wrap the cord tightly around the unit. Damage will occur at the high flex point of entry into the unit, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If cord or unit is damaged or does not operate properly, return it for repair to an authorized Conair Service representative only. No repairs should be attempted by the consumer.

The Microdermabrasion Facial Spa is for household use only.

## STORAGE-Important

When not in use, your unit should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around unit. Allow the cord to hang or lie loose and straight at the point of entry into the unit.

## LIMITED ONE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**


Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**WARNING:  
IF YOU THINK THE  
POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

**KEEP AWAY FROM WATER**

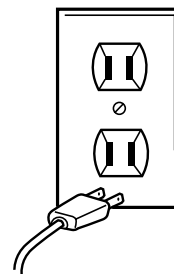

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## ALWAYS UNPLUG SMALL APPLIANCES

Public Service Ad from Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

### SERVICE CENTERS:

#### CONAIR CORPORATION

Service Department 150 Milford Road  
East Windsor, NJ 08520

#### CONAIR CORPORATION

Service Department  
Glendale, AZ 85307  
7475 North Glen Harbor Blvd.

Visit us on the web at: [www.conair.com](http://www.conair.com)

©2003 CONAIR CORPORATION  
East Windsor, NJ 08520

Glendale, AZ 85307

#### Replacement Parts

RP-FBS

MOISTURIZING MIST  
**MICRODERMABRASION**  
SYSTEM



## Instruction Booklet

Model MDF2

IB-4879

**CONAIR**<sup>®</sup>

Model MDF2  
03PC2407