

1.6 User Manual

1.7



EC - Declaration of Conformity

We, In noviTechnologies Ltd of 31/F China Online Centre, 333 Lockhart Road, Wan Chai, Hong Kong

declare under our sole responsibility that our product

#### BULIETDEK MUNI

to which this declaration refers is in conformity with the appropriate standards

EN300 328-02 EN301 489-17 EN301 489-01 EN50371 EN60950

Following the provisions of Radio and Telecommunications Terminal Equipment directive 1999/S/EC.

March 2007

Perticula

Guillaume Ponticelli, Director of Development

# FCC/ Industry Canada Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

In compliance with Industry Canada regulations, technical specifications have been provided in a declaration of conformity. This does not imply that Industry Canada approved the equipment.

Caution: Changes or modifications to this Bluetooth® headset not expressly approved by the party responsible for compliance could void the user's authority to operate it.

Bluetooth  $\!\!^{\alpha}$  is a trademark owned by Bluetooth SKs, Inc. and is used by the manufacturer under license.



 
# Before using your headset for the first time

-You must charge it continuously for about 4 hours, until the red indicator light turns off. Please refer to the "Charging the BLUETREK" MINI" section of this manual. -Pair the headset with a mobile phone. Please refer to the "Pairing the BLUETREK" MINI" section of this manual.

The BLUETREK® MINI heacket is a wireless headset based on the Bluetooth® technology.It complies with Bluetooth® 1.2 protocol, supporting Headset and Hanck-free profile.

The BLUETREK® MINI headset has 2 buttons
-"TALK" button (main button)
- 1"VOL+/-" button





### 1 | BLUETREK MINI

# Charging the BLUETREK® MINI

Please connect the charger to the headset and to the main. During the charge, the indicator light is red. The indicator light will turn off when the charge is complete. During subsequent charges, the charging should take approximately 3 hours.




When you hear a low-tone beep in your headset at regular intervals, and the indicator light flashes in red, your headset needs to be recharged.

- nipor rans.
  If your headset is fully charged, the red indicator light will not turn on when plugging into the charger.
- (To check whether your headset is fully charged, press the talk button for approx. 2 seconds, once released, the red indicator light will turn on for approx.3 seconds.)
- To maximize battery lifetime, it is recommended to recharge your headset to full capacity only when the battery is low, since a battery has a lifetime of about 500 charging cycles.
- If you leave your headset battery empty for an extended period of time, it could excessively discharge the battery. In this case, charge your headset for 3 hours or more until the battery recovers and recharges completely. When you first charge the headset after prolonged storage, it may take few minutes for the red indicator light to turn on.
- Do not charge your headset for more than 10 hours.
- The use of any other charger will automatically suspend the warranty. It is strictly forbidden and can be very dangerous.

BLUETREKMINI 12



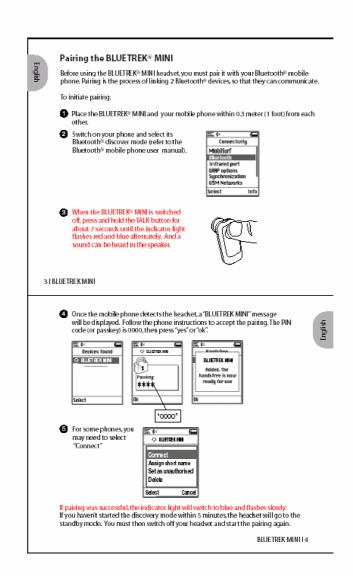



## Using the neckclip

The neckclip provides you a convenient carry solution.







Insert the clip to the neck of the speaker holder.

To remove the headset from the clip, simply pull it out vertically as shown in the diagram.

### 5 I BLUETREK MINT

# Switching the BLUETREK® MINI ON and OFF

Switching BLUETREK® MINI ON
When your heacher is off, press and hold the TALK button for about 5 seconds until the
blue indicator light is on. A beep (2 tones) can be heard in the speaker. Release the
TALK button.



Switching BLUETREK® MINI OFF
When your headset is on, press and hold the TALK button for about 7 seconds until the red
indicator light is on. A beep (2 tones) can be heard in the speaker then release the TALK
button.

# Making a call

Mobile phone with voice recognition

.Make sure the voice recognition function on your mobile is activated and your voice tags have been recorded with the phone. To enter these, please refer to your phone's manual.

.When there is no incoming or active call, pressonce on the TALK button

.Wait for the audio signal sent by the mobile phone (generally a shorttone).

.Speak the name of person you wish to call.

BLUETREK MINI 16





Mobile without voice recognition
. Make sure both the heacket and the mobile phone are ON and in stand-by mode.
. Dial the number on the phone keypad, after approximately 2 seconds the audio connection will be established.

This function may not be available on some phones, please refer to the trouble shooting frequent asked questions in our website: www.bluetrek.com.to find out more.

### Answering a call

When the headset rings, press once on the TALK button to take the call.

#### Ending a call

Press once on the TALK button to end an active call.

### Adjusting the volume

To increase the volume during an active call, press the "VOL+" button on the headset.

To decrease the volume during an active call, press the "VOL-" button on the headset.

## 7 I BLUETREK MINI

# Muting the microphone

To mute the microphone during an active call During an active call, press and hold the VOL+ button for approximately 2 seconds. A periodic tone can be heard in the speaker when the microphone is muted.



To end the mute function
When the microphone is muted, press and hold the VOL+ button for approximately 2-3 seconds. The periodic tone will end.

# Transferring a call from BLUETREK® MINI to the mobile phone

During an active call, double click the TALK button. This function only works in the Hands-Free Profile.

In the Headset profile, you can simply turn off your headset.

This function may not be available depending on your phone.

# Transferring a call from the mobile phone to the BLUETREK® MINI

During an active call on the mobile phone, double click the TALK button to transfer the call

BLUETREK MINI I 8



3 different sizes of Ergobud\* are included in the pack to suit your ear size. You can adjust the Ergobud position that you feel the most comfortable.







To replace the Ergobud\*, remove the speaker cover by pulling gently out from the speaker.



Place the Ergobud\* back onto the speaker by inserting the bottom part first.

 


\* Registered trademark pending

9 I BLUETREK MINI

# Call waiting

When you hear a call waiting alert while you are on a call, press approx. 3 seconds on the TALK button to accept the second call and place the current call on hold.



To end the active call and take the hold call, press once on the TALK button.

BLUETREKMINI I 10





### Additional features with some phones

Rejecting a call
Press the TALK button for about 2 seconds to reject a call.

Redial the last number
When there is no incoming or active call, press the TALK button for about 3 seconds until you hear a beep.

# Troubleshooting guide

The first thing you should do when encountering a problem that you cannot solve with this manual, is to switch off your beacket and your mobile phone, and switch them on again.

To find out more, please refer to the trouble shooting frequent asked questions in our website: www.bluetrek.com.

11 I BLUETREK MINI

### Guidelines for safe use



- The volume level of the Bluetooth® headset may vary, depending on your mobile phone. Before using your headset for the first time, adjust the headset volume to the lowest, then increase the volume gradually until you reach to an acceptable level. High levels of volume may result in heading loss, avoid using the headset at high volume continuously. If you experience ringing in your ears or muffled speech, consult your doctor immediately and stop using the headset.

  Do not drop or try to after the shape of your headset.

- Do not expose your headset to liquid or moisture.

  Do not expose your headset to liquid or moisture.

  Do not expose your headset to extreme temperatures. Temperature range: 0-40C.

  Do not expose your headset to fire or open flames.

  Do not try to disassemble your headset. Service and Maintenance can only be performed by authorized BLUETREK® dealers.
- by authorized BLUF HRM dealers.
  Keep your headset away from dust and dirt.
  Do not let children play with your headset, since it contains small parts that could become detached and create a choking hazard.
  Check the regulation in your area if you plan to use your headset while driving.
  Turn off your headset before boarding an airplane.

CAUTION: Danger of explosion if battery is incorrectly replaced. Dispose of batteries according to local regulations. Do not dispose as household waste.

BLUETREK MINI 112





Mote on orwinon mental protection:

After the implementation of the European Directive 2002/96/EU in the national legal system, the following apples:

Electrical and electronic devices may not be disposed of with domestic waste.

Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the product of their service lives to the product of their product of the product the instruction indicates the product on the product, the instruction manual or the padage indicates that a product is subject to their regulations. By recycling returning the materials to order forms of utilizing did devices, yet are making an important contribution to protecting our environment.