

[www.tuv.com](http://www.tuv.com)

## 1.6 User Manual

### Welcome

Thank you for purchasing the Dior phone.

You are now the proud owner of the first luxury mobile phone created by Dior.

Our design team has conceived each element with the same passion, creativity and perfectionism as for haute couture clothing. We have also selected the best materials thereby highlighting Dior's excellence and know-how.

Combining aesthetics and performance, Dior has reinvented the art of communicating with My Dior, a technological jewel developed exclusively for Dior.

4

### Summary

6

Package contents

7

Installing the SIM card and battery

8

Charging Dior phone and My Dior batteries

10

Description of Dior phone and My Dior

15

Day-to-day use of Dior phone

16

Pairing Dior phone and My Dior

17

Day-to-day use of My Dior

20

Guidelines for a safe and efficient use

24

Network service / Technical data

5

### Package contents

- 1 Dior phone
- 1 My Dior
- 1 leather case for Dior phone
- 1 ring for My Dior
- 1 international warranty book
- 1 user's guide
- 1 CD-ROM\*  
(including the complete user guide and the Data Suite software to pair your Dior phone with your personal computer)
- 1 battery
- 1 charger with 5 international plugs
- 1 USB charge & data cable for the Dior phone
- 1 USB charge & data cable for My Dior
- 1 USB dongle
- 1 charger pouch
- 1 suede cloth
- 1 stereo headphone with remote control

The package contents may vary in accordance with regional regulations.

\*The CD-ROM is compatible only with Windows XP and Vista 32 bits.

6


### Installing the SIM card and battery


Remove the battery cover by sliding the battery button (A), then lift the battery cover (B).


Insert the SIM card

Make sure the gold-coloured contacts on the card are face down.

Install the battery and replace the battery cover.

To switch on your Dior phone, press the [END] key  for 5 seconds.

Enter your PIN code if required. To switch off your Dior phone, press the [END] key  for 5 seconds.

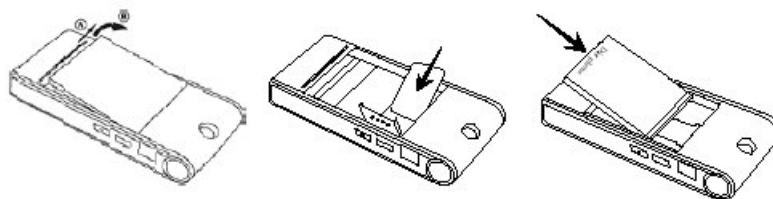

#### Note

It is highly recommended to charge the battery fully prior to using your Dior phone and My Dior for the first time. If you enter a wrong PIN code three times in a row, the SIM card will be blocked. To unblock it, you need to enter your PUK (Personal Unblocking Key), which is provided by your network operator.

7

### Charging Dior phone and My Dior batteries

Your package includes a travel charger and international plug adapters.

You can also charge your Dior phone or My Dior by plugging it to your PC using the USB cable.

You can charge your Dior phone and My Dior separately by plugging them directly into the charger.

You can also charge them at the same time by using the USB dongle.

Insert the mini-USB charging plug into the charging port on the left side of the Dior phone.

Insert the cylinder plug into My Dior.


Plug both cables into the USB dongle.

Plug the USB dongle into the travel charger.

Connect the travel charger to a standard AC outlet.

When charging is completed, disconnect the travel charger from the power outlet and from the Dior phone by pulling out the charging plug.

8

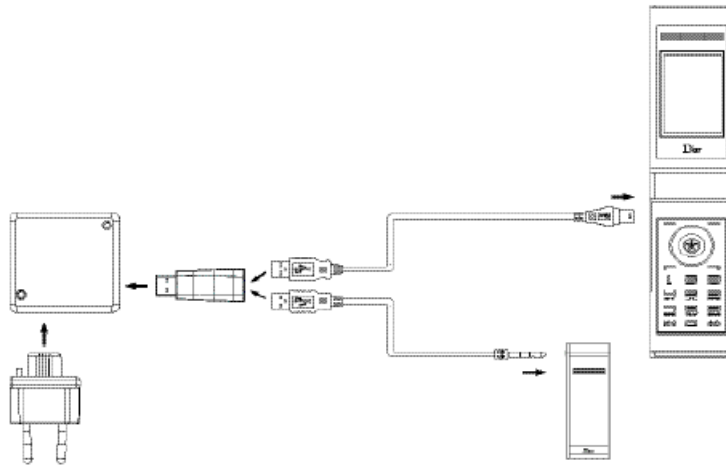

---

#### Note

When the battery is completely discharged and has not been used for a while, the Dior phone does not display any charge warning light for approximately 45 minutes. The charge warning light turns on after 45 minutes.

---

 
9

### Description of Dior phone and My Dior

1. Earpiece
  2. Display
  3. [SOFT] keys
- Perform the functions indicated at the bottom right or left of the display.
4. [NAVIGATION] keys
- Allow you to scroll through the menu options and move the cursor in Edit mode.
5. 3 [OK] Key
- Opens the main menu from the home screen.
- In Menu mode, selects the highlighted menu option or confirms your input.  
In Camera and Video preview mode, works as a shutter.
6. [SEND] Key
- Makes or answers a call.
- From the home screen, it displays the last calls made, received or missed.
7. [END] key
- Switches the Dior phone on and off (press the key and hold it). Ends a call.
- In Menu mode, cancels your input and returns the Dior phone to the home screen.
8. [ALPHANUMERIC] keys
- Enter numbers, letters and special characters.
9. [SPECIAL FUNCTIONS] keys
- Enter special characters and perform various functions according to the context.
10. [SIDE] keys
- Adjust the ring volume. During a call, adjust the speaker volume.  
Adjust the audio player volume when used.
11. MicroSD slot
- Where the Micro SD card is plugged.
12. Microphone
13. Accessories connector
- Battery charger and headphone jack connector
14. Camera lens
15. Fastener
- Used to attach an object to your Dior phone.
16. Battery compartment

10

### Your Dior phone

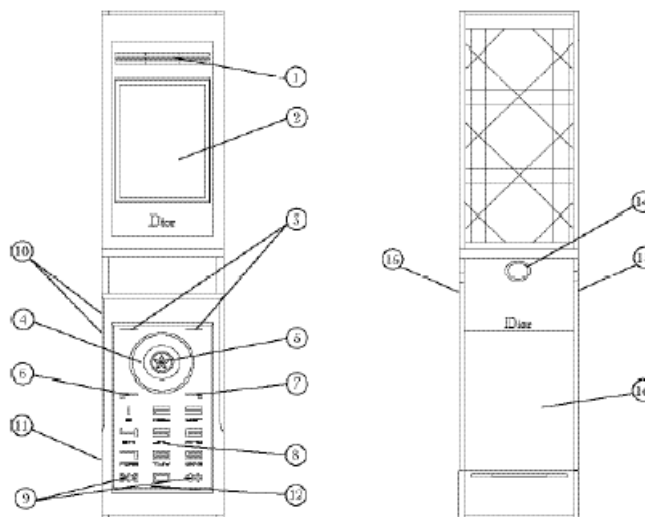


11

## Your My Dior

My Dior is a cutting-edge innovation in mobile phone technology. It enables you to answer a call, browse the contact list and call a contact without having to use your Dior phone. You can thus leave your Dior phone in your handbag and hang My Dior outside to always have it close to you.

My Dior is specifically created and designed to be used with your Dior phone. It can work only with Dior phone.

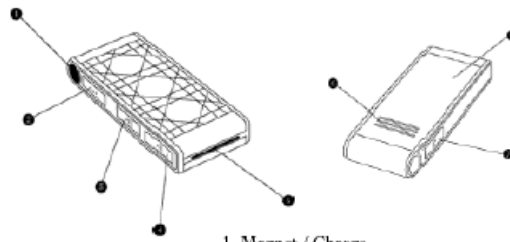

1. Magnet / Charge
2. OK / Answer
3. Volume +
4. Volume -
5. Microphone
6. Speaker
7. Cancel / End call ON / OFF
8. Display

12

## Day-to-day use of Dior phone

### Your first call

Check the network signal strength indicator on the home screen. If low, move away from any obstacle that may block the signal.

From the home screen, enter the phone number you want to call using the keypad.

Press the [SEND] key (Ⓢ) to begin your call.

It may take several seconds to establish the connection.

---

#### Note

For international phone numbers: Press the [0] key (⓪) for 2 seconds. A [+] sign appears on the screen. You can then type in the relevant country code.

---

### Answering calls

When you receive an incoming call, a ring tone is played by default and a call message is displayed.

If enabled, your Dior phone vibrates as well.

The caller's phone number appears on the screen.

Press the [SEND] key (Ⓢ) to answer the call.

Press the [END] key (Ⓡ) to reject an incoming call or to hang up.

13

#### Adjusting the volume

Use the [SIDE] keys ⑩ on the left side of your Dior phone to obtain a comfortable listening level.  
From the home screen, these keys are used to adjust the ring volume of an incoming call. During a call, they are used to adjust the listening volume.  
The volume will remain at the level you have set until you adjust it again.

#### Calling a contact from the "Last Call" menu

From the home screen, press the [SEND] key ⑥ to access the list of the 20 most recently dialed numbers.  
Use the [NAVIGATION] keys ④ to scroll to the desired number and press the [SEND] key ⑥ to dial out.

#### Contact list

You can store phone numbers on your SIM card and/or in the memory of your Dior phone. The SIM card and the Dior phone memory are separate entities, but they display contacts as a single list called [Contact list].  
To access this menu, press the left [SOFT] key ③ from the home screen and select [Menu] and [Contact list].  
You can also press the right [SOFT] key ③ from the home screen and select [NameS].

14

#### Calling a stored contact








After accessing the [Contact list] menu, enter the first few letters of the name you want to find.  
Scroll to the desired name.  
Scroll to select the desired number and press [SEND] ⑥ to dial, or press the right [SOFT] key ③ select [Options] to perform one of the following actions:

- Send SMS: allows you to send an SMS to a selected name or number on your Contact list.
- View: allows you to view the contact information such as name, number and so on.
- Send MMS: allows you to send an MMS to a selected name or number on your Contact list.
- Edit: allows you to edit the contact information.
- Send vCard: allows you to send the contact entry by SMS.
- Delete: allows you to delete a contact.
- Copy: allows you to copy a contact from SIM to Dior phone or from Dior phone to SIM. You can thus store the same contact entry in two different places.
- Move: allows you to move a contact from SIM to Dior phone or Dior phone to SIM. The contact is deleted from its original storage and copied in the selected one.
- Duplicate: allows you to duplicate the contact within the same storage. You can thus store several copies of a contact in the same place.

15

## Pairing Dior phone and My Dior

Allows you to copy the contacts from your SIM to My Dior.

- 1 - Switch on your Dior phone and place it within 50 cm maximum from My Dior.  
Make sure that My Dior is (initially) switched off.  
To switch off My Dior, press the  key.
- 2 - Dior phone: Press the [NAVIGATION] key  downwards; the Bluetooth menu is displayed. Activate the Bluetooth if you have not done so.
- 3 - Press the [NAVIGATION] key  downwards once again and select [Find audio peripherals].
- 4 - My Dior: Press the button  for about 7 seconds until the Dior logo appears and hold down the button until the Bluetooth symbol  is displayed.
- 5 - When Dior phone detects My Dior, press [Pairing].  
You must then enter the following password: 0000.
- 6 - At the same time, the question [Connect?] will be displayed on your Dior phone screen.  
Do not reply; the connection will be made automatically.
- 7 - Pairing is now about to begin.  
The signals  appear on the My Dior screen.
- 8 - When the symbol  freezes on My Dior, the pairing is complete and My Dior is connected to your Dior phone.

---

### Note

Pairing can take up to 8 minutes depending on the number of contacts saved on your SIM.









---

16

## Day-to-day use of My Dior

Make sure both Dior phone and My Dior are switched on and connected.

### Your first call

- Press the  button to open the contact list.
  - Scroll up to the desired contact by pressing  or  to scroll down.
  - To jump from one letter to another (for example from John to Kate)  
keep  pressed until you get to the desired letter.
  - Keep the  button pressed to jump to the previous letter.
  - To call the selected contact, press the  button.
  - To hang up, press the  button.
  - To close the contact list, press the  button.
- When you call a contact, My Dior displays his/her name.

17

#### Calling a contact from the "Last Call" menu

The [Last call] menu stores the last 10 calls made or received with My Dior.

To open the [Last call] menu, press the **☰** button.

Scroll down to the desired contact by pressing **↓** or **↑** to scroll up.

Press **☎** to dial the selected number.

To clear the list of last calls, press the **☰** button for 5 seconds.

To exit the [Last call] menu, press the **☰** button.

When making a call, My Dior will display the contact's name or phone number.

#### Accepting or rejecting a call

When receiving a call, My Dior displays the caller's identity if stored in the contact list or the caller's number if not stored.

If the caller identity is hidden, My Dior will display the hidden number icon **☎?**.

To accept the call, simply press the **☎** button.

To reject a call, simply press **☎**.

This will send the caller to your voice mailbox.

18

#### Options available during a call

##### Adjusting the speaker volume

During a call, press the **↑** button to increase the speaker volume or **↓** to decrease it.

##### Adjusting My Dior's ringer volume

You can choose from 4 ringer volumes: volume 1, volume 2, volume 3 and silent mode.

Make sure that My Dior is switched on (clock is displayed) and connected to the Dior phone.

Press and hold down **↑** to increase the ringer volume and **↓** to decrease it. Scroll through the volume icons displayed on your My Dior screen to choose the desired volume.

Only the silent mode icon is displayed on My Dior screen when it is enabled.

##### Muting the microphone

During a call, press **↑** or **↓** for 3 seconds to turn off the microphone.

You will hear a periodic tone in the speaker

and the muted microphone icon will be displayed.

To reactivate the microphone, press **↑** or **↓** for 3 seconds.

The periodic tone will stop and the muted microphone icon will disappear.

##### My Dior automatic switch-off

To conserve battery life, My Dior switches off automatically if it is not connected to Dior phone for 12 hours.

---

For any further information,  
please refer to the complete user guide on the CD-ROM,  
which contains the PC suite to pair your Dior phone with your personal computer.

---

19



## Guidelines for a safe and efficient use

Please read these guidelines. Failure to comply with them may be dangerous or illegal.

## Warning

- Dior phone and My Dior must be switched off at all times when you are onboard an aircraft.
- Avoid using Dior phone and My Dior while driving. Check the laws and regulations on the use of mobile telephones in the areas where you are driving.
- Do not use the phone in close proximity to service stations, fuel depots, chemical plants or sites where explosives are stored.
  - Use only approved original batteries, chargers and accessories for your safety and not to damage the Dior phone and My Dior.
  - Do not touch the charger with wet hands.
- To avoid the risk of choking, keep the Dior phone and My Dior out of reach of children. They may swallow small detachable parts.

## Caution

- Switch off the Dior phone and My Dior in places where it is prohibited.
- Do not use your phone in hospitals; it may interfere with electronic medical equipment like stimulators and hearing aids.
- Emergency numbers may not be available on all the mobile telephone networks. As a result, you must not depend only on your mobile phone to make an emergency call. Contact your network operator for further information.
- Do not place the Dior phone and My Dior near electrical appliances like television set, radio or personal computer. All radio transmitters have risks of interference when placed in close proximity to electronic appliances. Do not use your phone near medical equipment without permission.
- Avoid placing the Dior phone and My Dior near your pacemaker (for example, in a breast pocket).
  - Used batteries must be recycled in accordance with the legislation in force.
  - Do not disassemble the Dior phone and My Dior, or the battery.

20

## Exposure to radiofrequency

## Information on radio wave exposure and SAR (Specific Absorption Rate)

- Dior phone complies with the safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.
- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate or SAR. Tests for SAR are conducted using standardised methods, with the phone transmitting at its highest certified power level in all used frequency bands.
    - The SAR limit recommended by the ICNIRP (International Commission on Non-Ionizing Radiation Protection) is 2W/kg
  - Dior phone's SAR value was measured by an independent laboratory and certified by the regulatory authorities at 0,263W/kg (10g), for use at the ear.
  - The DAS value applicable to the inhabitants of countries/regions that have adopted the DAS limit recommended by the IEEE (Institute of Electrical and Electronics Engineers) is 1,6W/kg averaged over one (1) gram of tissue.

## Maintenance and repair

- Do not place the Dior phone and My Dior in close proximity to heat sources, like a radiator or stove.
  - Do not drop it.
  - Do not subject the Dior phone and My Dior to mechanical vibrations or shocks.
    - Applying a vinyl coating on the shell may damage it.
- To clean the outside of the phone, use the suede cloth provided for this purpose in the package (do not use solvents such as benzene, or thinners or alcohol).
  - Do not expose the Dior phone and My Dior to excessive smoke or dust.
  - Do not keep the Dior phone and My Dior near credit cards or transport documents, as this may harm the data in the magnetic strips.
- Do not touch the screen with a sharp object so as not to damage the Dior phone and My Dior.
  - Do not place the Dior phone and My Dior in contact with liquids or wet components.
    - Use accessories such as stereo headset with the utmost precaution.

21

Exposure to radiofrequency  
Information on radio wave exposure and SAR (Specific Absorption Rate)

- Dior phone complies with the safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.
- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate or SAR. Tests for SAR are conducted using standardised methods, with the phone transmitting at its highest certified power level in all used frequency bands.
    - The SAR limit recommended by the ICNIRP (International Commission on Non-Ionizing Radiation Protection) is 2W/kg
  - Dior phone's SAR value was measured by an independent laboratory and certified by the regulatory authorities at 0.263W/kg (10g), for use at the ear.
  - The DAS value applicable to the inhabitants of countries/regions that have adopted the DAS limit recommended by the IEEE (Institute of Electrical and Electronics Engineers) is 1.6W/kg averaged over one (1) gram of tissue.

Maintenance and repair

- Do not place the Dior phone and My Dior in close proximity to heat sources, like a radiator or stove.
  - Do not drop it.
- Do not subject the Dior phone and My Dior to mechanical vibrations or shocks.
  - Applying a vinyl coating on the shell may damage it.
- To clean the outside of the phone, use the suede cloth provided for this purpose in the package (do not use solvents such as benzene, or thinners or alcohol).
  - Do not expose the Dior phone and My Dior to excessive smoke or dust.
- Do not keep the Dior phone and My Dior near credit cards or transport documents, as this may harm the data in the magnetic strips.
- Do not touch the screen with a sharp object so as not to damage the Dior phone and My Dior.
  - Do not place the Dior phone and My Dior in contact with liquids or wet components.
    - Use accessories such as stereo headset with the utmost precaution.

21

Battery information and precautions for use

- The battery does not have to be completely discharged before being recharged.
- Unlike other batteries, it does not have any memory effect likely to affect its performance.
- Use only Dior phone batteries and chargers.
    - Dior phone chargers are designed to optimise your battery life.
      - Do not disassemble or short-circuit the battery.
    - The battery's metal contacts must always be kept clean.
    - Replace the battery when its performance is not acceptable.
- The battery can be recharged hundreds of times before it needs to be replaced.
- To optimise its operation time, recharge the battery if it has not been used for a long time.
    - Do not expose the battery charger to direct sunlight.
    - Do not use it in very wet places, like bathrooms.
  - Try to keep the battery at a temperature between 15°C and 25°C (59°F and 77°F).
    - Extreme temperatures reduce the capacity and life of the battery.
    - A device using a hot or cold battery may temporarily not work.
    - Battery performance is particularly limited at temperatures below 0°C (32°F).
      - There is a risk of explosion if the battery is replaced by an incorrect type.
        - Do not dispose of batteries in a fire as they may explode.
        - They may also explode if they are damaged.
- Batteries must be disposed of according to local regulations. Recycle them whenever possible.  
Do not dispose them as household waste.

22



#### Disposing your old appliance

This symbol representing a crossed out wheeled bin means that the product is covered by the European directive 2002/96/EC. Electrical and electronic components must be disposed of separately in the bins provided for this purpose by your municipality or must be returned to a mobile phone shop. A correct disposal of your old appliance will help prevent negative consequences and risks for the environment and human health. For further information on disposal of your old appliance, please contact your municipal office, waste disposal service or the shop where you purchased this product.



#### This product complies with:

- the French Order of 8 November 2005 on the application of Article L.5232.1 of the Public health code on walkmans
- NF EN 50532-1:2000
- NF EN 50532-2:2003.

25

## Network Service / Technical data

The wireless telephone described in this guide is compatible with GSM 850/900, DCS 1800, PCS 1900 networks.

- The availability of the bi-band function depends on the network you are using.
- Check with your local service provider whether you can subscribe to this function and use it.
- To enjoy network services, you must subscribe to them via your service provider, who will give you the operating instructions.

#### CE 0168 - Declaration of conformity

Dior Phone bears the CE mark in accordance with the provisions of Directive 1999/5/CE (R&TTE). We hereby declare that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/CE. Modelabs Manufacture SAS - 11 bis rue Roquépine - 75008 Paris

Modelabs Manufacture pursues a policy of continuous development. As a result, Modelabs Manufacture reserves the right to make changes and improvements to any product described in this document, without prior notice. Within the limits of the law in force, Modelabs Manufacture and its licensors may not be held responsible under any circumstances for any loss of data or income, nor for any immaterial or indirect damage. The content of this document is provided "AS IS". To the extent permitted by applicable law, no warranties of any kind, express or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, shall apply with regard to the accuracy, reliability or content of the document. Modelabs Manufacture reserves the right to revise this document or to withdraw it at any time without prior notice. The availability of the products, applications and services for these products may vary from region to region. Contact your dealer for further information in this regard.

#### Export controls

This product contains commodities, technology or software subject to export laws and regulations in the US and other countries. Diversion contrary to law is prohibited.

24

[www.tuv.com](http://www.tuv.com)

FCC / INDUSTRY CANADA NOTICE

Your appliance may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your phone if such interference cannot be eliminated. If you require assistance, please contact your local service provider.

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

(1) This device must not cause harmful interference and (2) this device must accept any interference received, including interferences that may cause undesired operation. Changes or modifications not expressly approved by Modelabs Manufacture may void the user's authority to operate this equipment.