

Mobile Phone User Guide

Model Name : JV X6699

Brand Name : JIVI

FCC ID: 2ABGBJVX6699

Contents

1	Welcome.	2
1.1	Exciting Features.	2
2	Phone Layout.	3
2.1	Icons and Indicators.	3
3	Getting Started.	3
3.1	Insert SIM and Memory Card.	4
3.2	Charge the Battery.	4
3.2.1	Charging via power socket.	4
3.2.2	Charging via USB cable.	5
4	The Home Screen.	5
4.1	Unlock the phone.	5
5	The Main Menu.	5
5.1	Contacts	7
5.2	call logs.	7
5.3	settings	7
5.4	multimedia	10
5.5	Messages.	
5.6	My manager	12

5.7 games.	12
5.8 organizer	11
5.9 Camera.	12
5.10 user profile	12
5.11Internet	13
5.12 bluetooth	12
6 Health and Safety Information.	13
7 Taking Care of Your Device.	14

1. Welcome

1.1 Exciting Features










Thank you for purchasing the X6699 mobile phone. You are now the proud owner of the JV X6699 which offers you these exciting features:

- Dual SIM Support
- T-Flash card support (up to 32GB)
- Opera Mobile web browser
- Music Player King Movie Snake,
- FM Radio with Recording

2 Phone Layout

2.1 Icons and Indicators

Your phone displays the following status Indicators on top of the screen.




Icons	Indicators	Icons	Indicators
	Battery charging in progress		NO Signal
	SIM network in use		Headset is connected
	Airplane mode		Meeting profile
	New message		Bluetooth is active
	GPRS is in use		

3 Getting Started

3.1 Insert SIM and Memory Card

You can use your phone with one or two SIM cards inserted.

1. Open the cover and remove the battery as shown below.
2. Insert the SIM card correctly in the card slot(s) as shown below.
3. Open the memory card slot, and insert the memory card into the slot with the gold colored Phonebook facing down.

-  The Memory Card gives you extra storage capacity for content such as pictures, music and video clips.
-  Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or on the phone.
-  Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.

3.2 Charge the Battery

You can charge your battery by using the charger or the USB cable supplied with this phone.

3.2.1 Charging via power socket

1. Connect the charger to the charger jack on the phone.

-
2. Next, connect the charger to a power socket, the charging starts, with the charging icon in an animated state.
 3. When the charging icon becomes static, it indicates that the battery is full.
 4. Disconnect the charger from the power socket and the phone.

3.2.2 Charging via USB cable

1. Connect the USB cable to the USB socket on the phone.
2. Next, connect the USB jack of the cable with the pc or laptop. The charging starts, with the charging icon in an animated state.
3. Disconnect the USB cable from the PC/Laptop and the phone.

Note: Slight heating during charging is normal. It indicates that the battery is full, when the charging icon becomes static.

4 The Home Screen

When you sign in, the home screen opens. You can use the navigation key characteristics.

- The Phone screen displays application icons, widgets, and other features.
- At the top of the screen, the Status bar displays the time, status, and notifications.

4.1 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen and it darkens to conserve the battery.

- 1、 Press Unlock key on the keyboard, it will say “Press star key to unlock keyboard”.
- 2、 Press the “*”key, then you will enter home interface.

5 The Main Menu

5.1 Contacts

Through your Phonebook , you can access your existing Phonebook as well as organize groups, access SIM related services and blacklist undesired numbers from calling you up.

The Phonebook is organized into tabs for easily accessing and using. You can access Phonebook from the main menu.

Your Phonebook allows you to organize your Phonebook into groups for customizing

call tunes and other preferences specific to those groups.

You can view the Phonebook by Phone, SIM 1/SIM 2 memory and caller groups.

5.2 Call logs

Menu >Call logs

It offers a convenient way to redial a number, return a call, or add a number to your Phonebook.

Press the Call button you can view dialed, received, missed and blocked calls.

Note: You can configure call blocking by going to Settings> Phone tab> Call settings>Call Barring.

5.3 Settings

You can go to Settings to set various preferences for your phone.

Phone settings	
Time & date	Set your phone's date and time as well as associated preferences.
Language settings	You can set languages
Auto power on/off	Set a time, time then prompt is switch machine
Power management	Set your auto-power on preferences
Restore factory Settings	Restore your phone to factory settings. The default password is 1234
Display	
Animation effect	You can select multiple pictures or videos as fast shutdown animation
Wallpaper settings	Choose more picture as the wallpaper.
Idle display settings	Standby display the corresponding application icon or words
Brightness	Change the brightness of the backlight
Backlight	Change the backlight light time
Keypad backlight time	According to the keyboard backlight time set.
Security	

PIN	Modified PIN code
Modify PIN2	Modify PIN2 code
Phone locked	Boot to input your password set the cell phone
Change password	Change the password on hand
Privacy	Privacy protection password
Auto keypad lock	Set up automatic lock keyboard time
Lock screen by end-key	After checked according to hang up key can quickly lock screen
Mobile Tracker	Lost mobile phone someone finds, for a SIM card, open the mobile phone, there will be a corresponding tracking function.
Fixed dialing	Input PIN code input number
Blacklist	Add number to blacklist
Whitelist	Add number to whitelist
Dual-SIM	The options are: dual SIM mode, enable one SIM mode, disable SIM mode, flight mode
Call Divert	Choose conditions for your call divert and re-route them to voice mail server, data or Fax and so on.
Call waiting	Phone calls will display the new call name or number
Call barring	Bar different types of calls based on your requirements. The barred calls will display in your Call History.
Hide ID	Id network selection
Others	Communication associated Settings
Connections	--
Network account	The network connection mode selection
GPRS Service	After checked can GPRS networks

Data connection settings	Selective way networking
Network selection	Selective way networking

5.4Multimedia

Movie Player

Press the right key in camera mode as you wish or press Vedio Recorder in Media tools.

Note: Your camcorder records videos in 3GP format.

For viewing, your phone supports KMV video formats.

Video recorder

Press the right key in camera mode as you wish or press Vedio Recorder in Media tools.

Note: Your camcorder records videos in 3GP format.

For viewing, your phone supports 3GP, MP4 and AVI video formats.

Audio player

Also it is called music player. Your M303m comes with a music player to let you enjoy any music of your choice through your TF card. You can easily transfer your favorite music from your PC to the TF card and experience a whole world of interesting and melodious music.

Press the phone's up and down keys. A panel opens to show the current media volume; the indicator moves as you adjust the volume.

Video player

Access the menu, you can enter film list and press "options" to choose a movie clip to play, send, rename, delete, delete all files, view details. While playing, long press right or left key to adjust the rate of progress, up and down key to adjust volume, center key to play or pause. Avi, 3gp and mp4 formats are supported.

Image viewer

Enter the menu you can view the photos in phone memory or memory card. Press the left soft key can be: View, set as , send, rename, delete, delete all files, mark, slide show, view details. View pictures, the left soft key can be: set to Phonebook, set as wallpaper, send, delete, can also see pictures of view details.

Recorder

Press center button to start recording, press the right soft key to stop recording. Press the left soft key options are: play, new, delete, view files.

FM radio

You can listen as well as record your favorite FM channels using the inbuilt FM receiver of your phone.

You can record your channels in AMR formats. You can set various radio preferences from Options > Settings.

5.5 Messages

You can use Messaging to exchange text and multimedia messages with your friends.

New SMS

1. Choose Menu > Messages to start messaging.
2. On the Messaging screen, choose Create New > SMS.
3. Use the keyboard on your phone to type your message.
4. Pressing Options while composing a message gives you various SMS features, such as insert picture, video, template and so on.

New MMS

1. On the Messaging screen, choose Create New > MMS.
2. Choose the To, Subject fields and as required to enter the details.
3. Use the keyboard on the phone to type your message body.
4. Press Options while composing a message gives you various MMS features.
5. Press the Send button to send a message.

Inbox: Store the messages received.

Draft Box: Store the messages unfinished

Out Box: Store the messages that have failed to send out

Sent Box: Store the messages that have sent successfully

Templates: List the default phrase or you can add their own phrase, for convenient and practical

Broadcast message: Cell Broadcast is an information service provided by the network operator. The service can be almost anything from weather forecast to cricket scores, traffic conditions and so on.

You can choose your broadcast message setting by going to Menu > Messages > Broadcast message.

Note: Please contact your service provider for the details of the setting if it is not displayed by default. Similarly, from here, you can choose the settings for SMS, MMS, and voicemail.

Voice mail server: You can activate voicemail service to redirect your incoming calls (based on your call settings) to a voicemail server and retrieve them later via SMS alerts.

You can also send voicemails to your desired Phonebook. To divert incoming calls to a voicemail server/Voicemail Number.

Note: You need to contact your network provider for the voicemail server number

Message Settings

Menu > Messages> Options>Settings

You can choose your preferences for SMS, MMS, Cell Broadcast, and Voice Mail from here.

You can also view your message related memory status.

Delete all

Can delete Inbox Outbox Drafts entry in the Sentbox

5.6 My files

It provides you the functions such as browsing media files, checking storage space and formatting function. When browsing the media files, you can operate the selected files such as copy, delete etc.

5.7 Games

Enter the menu can be built-in games to play Snake

5.8organizer

Calendar

Access this menu, the calendar will be shown on the screen. Press the icon to change the date, and the calendar shown on the screen will be changed accordingly.

Alarm

Set the alarm time and it will remind you by alert tone or vibration when the alarm time comes.

World Clock

User can view the local time of some cities around the world.

Flashlight

Open this function can be lighting

Calculator

Access this menu, the calculator will be shown on the screen. You can use the numbers and operators to calculate.

Unit conversion

currency

Stopwatch

Mobile phone provides a stopwatch tool. The President "OK" button to start timer, press start button and stop the clock, no frequency of use.

Countdown

Access this menu, you can press the numbers on the screen to set a time, then press "Start", when that time comes, it will remind you by alert tone.

5.9 Camera

You can choose various preferences for your photos. Adjust the exposure, and other settings if you wish.

Frame your subject on screen. You can zoom in or out by sliding the Zoom icon. You can choose to save or delete the image displayed on the screen.

5.10 profiles

You can according to different events and environments to set the Tone settings, Volume, Alert type, Ring type, Connected notice, Extra tone, Answer mode. Optional profiles have a standard model, general, meeting, outdoor, silent, personal, Headset, Bluetooth. In standby mode, you can press and hold "# "key to switch to silent mode.

Note: Also you can access to User Profile in Shortcuts.

5.11 Internet

Before surfing the internet, You should do WAP profile setting for displaying web pages. For this you need to set up a data account. Please refer to the previous section, setting up GPRS connection for setting up a data account.

1. Choose Menu> Settings>Connection tab.
2. Choose WAP Settings then set profiles.
3. Select from the list of default WAP profiles listed by your network operator's SIM.
4. Enter or select the details of the profile.

Note: You may need to contact the network operator for the details of the WAP settings.

STK

Based on the current insert SIM card information, provided by the business

5.12 Bluetooth

Your phone enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, or talk hands-free.

1. Tap Menu>Bluetooth.
2. You can search and pair with other Bluetooth devices and perform Bluetooth settings.

Note: Go to Bluetooth > Settings and enable the visibility option so that your phone can be detected by other Bluetooth devices for exchanging data.

6 Health and Safety Information

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.

Safe Driving

Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.

Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.

In Hospitals

Your Phone's radio waves may interfere with the functioning medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.

Do not carry the wireless device in a breast pocket.

Turn off the phone if there is any reason to suspect that interference is taking place.

Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

7 Taking Care Of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care:

The following suggestions will help you protect your phone:

Keep the device dry. If your device gets wet, remove the battery without turning on the device,

wipe it with a dry cloth and take it to the service center.

Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.

Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

Do not attempt to open the device other than as instructed in this guide. Repairing the phone by you other than our authorized service agents/centers goes against the warranty rules.

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.

Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.

If the time span of the battery after charging becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.

Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.

Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be responsible for user's safety when using unapproved batteries or accessories.

Disclaimers

Micromax will not bear any responsibility for any incompliance with the above mentioned

Guidelines or improper usage of the mobile phone.

The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the later shall govern.

Micromax keeps the right to make modifications to any of the content in this user guide without public announcement or prior notification.

Copyrights:

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.

Contents in this document in any form without the prior written permission of Micromax are strictly prohibited.

Contents in this document in any form without the prior written permission of Micromax are strictly prohibited.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 0.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications,

or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refer to FCC website search for FCC ID: 2ABGBJVX6699 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.