

User Manual

Version: 1.0.0

Warnings

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.


Content

Your Phone.....	5
Keypad Descriptions	5
Start to Use.....	6
Charge the Battery.....	7
Use Touch Screen.....	7
Make a Call	8
Answer a Call.....	8
Emergency Service.....	9
Input Method.....	9
1. Backup and Restore	9
2. Bluetooth Proximity.....	9
3. Browser	9
4. Calculator.....	10
5. Calendar	10
6. Camera	10
7. Clock	10
8. Downloads	10
9. Email	10
10. File Manager	11
11. FM Radio	11
12. Gallery.....	11
13. Google Service.....	11
14. Messaging	12
15. Music.....	12
16. People.....	12
17. Phone.....	13

18. Search.....	13
19. Settings.....	13
20. SIM Toolkit.....	15
21. Sound Recorder.....	15
22. ToDo.....	15
23. Video Player.....	15
24. Wireless Input Device	15
25. WT SMS.....	15
Widgets.....	15
Accessories.....	16
Care and Maintenance.....	16
Technical Information	18

Your Phone

The phone appearance is shown as below. The picture is for reference only; your phone may be different. Please take your actual phone as the standard.

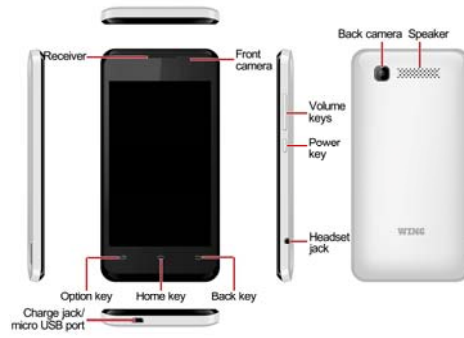

Keypad Descriptions


Key	Description
Power Key	Long press the key to turn on the phone. In the power on status, press the key to lock keypad and screen; long press the key to show phone options.
Option Key	Press the key to enter option menu.
Home Key	Press the key to return to standby mode. Long press the key to show recent list.

Key	Description
Back Key	In the menu mode, press the key to go back to upper menu.
Volume Keys	To adjust incoming call ringtone volume. During a call, playing music, video, or listening to radio, press the keys to adjust volume.

Start to Use

Install Memory Card, SIM Card and Battery

When you apply for a network, you will get a plug-in SIM card. SIM (Subscriber Identity Module) card that contains phone number, service projects and can be used to store phone numbers and personal information.

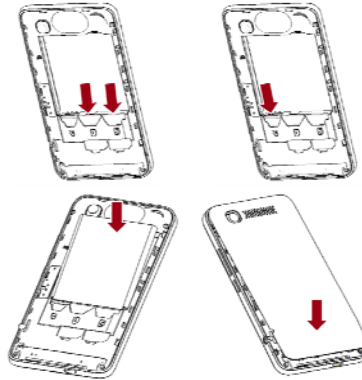

Attention: Do not bend or scratch SIM card, do not let it contact with static electricity, dust or water.

Keep all SIM cards where children cannot reach or touch.

Note: Keep the SIM card chip contacts face downward. Make the SIM card fits card slot.

Remove Memory Card, SIM Card and Battery

Note: If the phone is turned on, long press Power Key about 3 seconds until it tips phone options and select **Power off** and then press **OK** to turn off the phone. Then, remove the battery, SIM card and memory card.

Do not plug or remove memory card in boot state, otherwise it will cause damage to the file system.

Charge the Battery

1. Before charging, check the battery slot to ensure the battery has been installed correctly.
2. Plug one end of the charger into phone.
3. Connect another end of the charger to the socket.
4. Start charging. It can be charged whether power on or power off.
 - In power on state, when the battery icon on screen start rolling means it is been charged. When the icon is full and stop rolling means charge is completed.
 - In power off state, the battery icon on screen start rolling means it is been charged. When the icon is full and stop rolling means charge is completed.
5. Unplug the charger from the socket.
6. Disconnect the charger and phone.

Use Touch Screen

- Press: Use finger to press the desired option to confirm selection or start an application.

- Long press: Long press the screen in current operation interface, icon, or input area; you can open the option menu in current interface.
- Slide: Slide the finger on screen horizontally or vertically. For example, slide the screen in standby mode or main menu horizontally to change menu page.
- Drag: Use finger to long press desired item, drag it to anywhere on screen. For example, you can drag the icon in main menu to standby screen.

Make a Call

1. In standby mode or in main menu, press the dial icon to enter dial panel, press numbers on screen to enter phone number.
2. Press dial icon at bottom and select SIM card to dial the number.
3. Press end icon to cancel the call.



- You need to unlock the phone if the keypad and screen is locked.
- You can make calls through call log, contacts, and messages.
- During a call, press Volume Keys to adjust the volume.
- Your phone supports intelligent dial. When input numbers, the phone will search the corresponding contact in phonebook or call log.

Answer a Call

When there is an incoming call, you can:

- Drag the icon toward right to answer the call.
- Drag the icon toward left to decline the call.
- Drag the icon upward to reject the call with SMS.

Emergency Service

You can call emergency service number directly without SIM card. Different networks use different emergency numbers, please query your network operator.

Input Method

Your phone has the built-in input method. In edit mode, long press “.” to show **Input options** and set input languages and Android keyboard settings.

Input English

Press the on-screen keypad to enter corresponding letters.

Input Number

Press “?123”, you can input numbers directly by press the number icons. Long press the letter icons with number, or after long press, slide finger to the numbers to input.

Input Symbol

Press “?123” to enter symbol list. Press the desired symbol to input.

Long press “...” to show symbol list, slide finger to the desired symbol to input.

1. Backup and Restore

In this menu, you can choose to **BACKUP** and **RESTORE** application and personal data.

2. Bluetooth Proximity

With this application, your phone can search the nearby Bluetooth devices or add new devices. Before use, you need to turn on Bluetooth.

3. Browser

You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages,

you must subscribe to the data service from your service provider and configure your phone's relevant settings.

Select the website list on screen or input URL in address bar to visit.

4. Calculator

The calculator can execute simple calculations. Slide the screen toward left or right, you can change the calculator in **Basic panel** and **Advanced panel**.

5. Calendar

In the calendar, you can check schedules for current month. It has alarm for the date with schedule. Select one date to check all schedules for that day, or you can edit or delete the schedules.

6. Camera

By using the camera application, you can take photos or records for around people or events anytime. Press the **Camera** icon in main menu to enter. Press the shoot icon or record icon to take photos or records.

Press the icons on screen or Option Key to set parameters of the camera or recorder.

7. Clock

In the clock interface, you can check time and date. Press the alarm icon, you can add new alarm clock or turn on/off existed alarm clocks.

In the clock interface, you can also press the icons to enter count down function, stopwatch, cities settings, night mode, and settings.

8. Downloads

To check all downloads applications.

9. Email

You can use **Email** to send and receive emails.

Setup Email Account

According to the tips on screen to input email address and password, and press **Next**. You can press **Manual setup** to setup server information manually.

Check Emails

In the **Inbox**, select the email you want to check to enter. Press the icons at bottom to delete, reply, add to favorite.

Compose and Send Email

In the **Inbox**, press new mail icon to create new email. Input receiver email address, subject, and content, and then press send icon to send the email.

Delete Accounts

In the **Inbox**, press Option Key to select **Settings**. Select the account you want to delete and then select **Remove account** in the option list. Press **OK** to confirm and delete the account.

10. File Manager

In this menu, you can select to check Phone storage and SD card.

11. FM Radio

Select **FM Radio** in the main menu and plug earphone to enter. Press Power icon to turn on/off the radio. Press setting icon and select **Search**, the phone will search available channels and save in the list. Press the icons on screen to operate the FM radio.

12. Gallery

You can use Gallery to view or manage images and videos.

13. Google Service

Availability of Google applications, services, and features may vary according to your country or carrier. Please follow local laws and regulations to use them.

When you turn on your mobile phone for the first time, touch Google services such as **Gmail, Local, Maps, Navigation, Play Store, Talk,**

or **YouTube**, and you may be prompted to sign in to your Google account.

Ensure that your mobile phone has an active data connection (3G/GPRS) before you sign in to your Google account.

14. Messaging

Select **Messaging** in the main menu or standby mode to enter. Select new message icon at left down corner to create new SMS or MMS and send.

1. Enter receiver's number or add number from contacts.
2. Press "**Type text message**" to input message content.
3. If you want to send picture or video file, press + to add pictures, videos and audio. The message will shift to multimedia message automatically.
4. Press send icon and select SIM card to send the message.

15. Music

Select **Music** in main menu. Press **Artists, Albums, Songs,** and **Playlists** at the top of screen to change category. Select one audio file to play the music. Press the icons on screen to operate the audio player.

16. People

In the **People**, press search icon to search contact, press add new icon to add new contact. Press Option Key to enter:

Delete Contact

Select one or more contacts, then press OK to delete all selected contacts.

Contacts to Display

Select All contacts, contacts on SIM card, Phone, or Customize the contacts to display.

Import/Export

Copy the contacts from SIM cards, phone, phone storage or SD card, and then select location to copy.

Accounts

Select whether to Auto-sync app data.

Share Visible Contacts

Select one or more contacts, press OK and then share the selected contacts via Bluetooth, Email, etc.

Memory Query

To check the memory of phone and SIM cards.

Join Contacts

You can use this function to join same contacts.

17. Phone

Press the icons on screen to input numbers in sequence. After inputting numbers, press dial icon and select SIM card to dial. Press the icons at the top screen, you can enter call log or contact.

18. Search

Input keyword in search bar, the phone will match applications or contacts first. If there is no result, press the icon on right to link to network and search.

19. Settings

Wireless & Networks

In this menu, you can select and set **SIM management**, **WLAN**, **Bluetooth**, **Data usage**, under **More...** - **Airplane mode**, **VPN**, **Tethering & portable hotspot**, **Mobile networks**, and **USB Internet**.

- **WLAN**

You can connect to a wireless LAN (WLAN), use it to access and download with high speed.

In **Menu/Settings/WIRELESS & NETWORKS**, slide the icon beside **WLAN** toward right to turn on WLAN. Press **WLAN** to check available WLAN networks. Select one open network, you can access to the network directly. If the network you selected is encrypted, you need to input password.

- **Bluetooth**

The phone supports Bluetooth. It can exchange information between devices including mobile phones wirelessly. Through Bluetooth, you

can sync phone and computer, exchange data with other Bluetooth devices, and can connect to Bluetooth earphone.

In **Menu/Settings/WIRELESS & NETWORKS**, slide the icon beside **Bluetooth** toward right to turn on Bluetooth and set. Before transmit data, you may need to match with other Bluetooth devices.

Device

In this menu, you can set audio profiles and display, check storage and battery, and manage apps.

Personal

- **Location Access**

Select whether to access to my location, or whether to use WLAN & mobile network location.

- **Security**

You can select **SCREEN SECURITY, SIM CARD LOCK, PASSWORDS, DEVICE ADMINISTRATION,** and **CREDENTIAL STORAGE** in this menu.

- **Language & Input**

Select and set Language, keyboard & input methods, speech, and mouse/trackpad.

- **Backup & Reset**

In this menu, select **Factory data reset** and then select **Reset phone** to clear all data in the phone memory. Select **DRM reset** to delete all DRM licenses.

Accounts

- **Add Account**

To add new account of Corporate, Email, or Google.

System

- **Date & Time**

Set time and date for the phone.

- **Scheduled Power On & Off**

Set time to power on/off the phone automatically.

- **Accessibility**

To set accessibility functions for the phone.

- **Developer Options**

Use this function to do USB debugging, set stay awake, etc.

- **About Phone**

To check status, legal information, etc.

20. SIM Toolkit

If your SIM card supports STK (SIM Tool Kit) function, the phone can display different first level menu according to different STK card. This function needs the network provider support. If user finds STK function can't operate normally, please contact the network provider. If the network provider does not support this function, we do not claim any responsibility whatsoever.

21. Sound Recorder

The phone support sound record function, recorded files will be saved with different quality.

22. ToDo

In this menu, you can check to-do items or done items. Press + or **Tap to add new ToDo** to add new item. When finish the item, press **DONE** to save.

23. Video Player

You can use Video player to view or manage videos.

24. Wireless Input Device

Your phone supports wireless device. You need to turn on Bluetooth and select to add new device.

25. WT SMS

Enter this menu, you can select several services by using WT SMS.

Widgets

In the widgets list, you can select desired widget to add to idle screen.

Accessories

You can use accessories approved by our company, the other accessories can be provided by the seller.

- Battery

We provide several kind of lithium battery with different capacity.

- Traveler charger

Useful charger can charge the mobile phone very quickly. Plug the charger into the electrical plugs and connects the other side connects to the upper side of the phone.

You can check the charging progress in the screen of the phone, it will not power on automatically when charging.

Care and Maintenance

- Battery Care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.
- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity

and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.

- Battery performance is particularly limited in temperatures below freezing.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cellphones are not considered household waste.
- Mobile phone maintenance
 - Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
 - Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
 - Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
 - Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
 - Do not attempt to open the device other than as instructed in this guide.
 - Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
 - Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
 - Do not paint the device. Paint can clog the moving parts and prevent proper operation.
 - Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

Caution: The manufacturer assumes no responsibility for the consequences of the users does not comply with the above suggestions or misuse of the phone.

Technical Information

Weight: 120g (with battery)

Size: 126.8mm*65mm*10.mm

Networks: GSM 850/1900MHz
WCDMA 850/1900MHz

The actual situation of the phone using is related to local environment, SIM card and way of use.

Note: If the version of user manual upgrades, we will do not notice. The company has the final interpretation of the user manual.

The pictures in user manual only for reference, please take your actual phone as the standard.



WARRANTY CARD

Purchaser's Name _____

Address _____

Telephone No. _____ Mobile No. _____

Set Serial No. _____

IMEI No. _____

Battery Serial No. _____ Charger Sr. No. _____

Date of Purchase _____ Invoice No. _____

Name of Dealer _____

Dealer's Stamp & Signature

(Compulsory for the dealer to fill and stamp at the time of sale)

Website: www.wingtele.com

CERTIFICATE OF WARRANTY

Dear Customer,

We thank you for purchasing the **WING MOBILE** phone of high quality and best value for money.

ASSURANCE:

WINGTECH TELECOM LTD., Brand "**WING**" (hereinafter referred to as "The Company") assures you that **WING MOBILE** phones are manufactured using high quality components under strict quality controlled manufacturing process by expert teams.

1. The warranty is confined to the first purchaser of the product only and is not transferable.
2. The limited warranty for the product (except Battery packs) extends for the first twelve (12) months beginning on the date of purchase of handset.
3. The limited warranty for genuine and original Battery Packs and Charger extends for the first six (6) months beginning on the date of purchase of the handset. (Earpiece not cover under warranty).
4. This warranty card in original only filled with sign & stamp of dealer alongwith invoice must be produced at the time of availing FREE repair under warranty.
5. Service to this product shall be carried out on a carry-in basis wherein the customer has to carry the product to the nearest authorized service center at the purchaser's risk, responsibility and cost.
6. The Company's authorized personnel shall carry out repairs

- under warranty period only.
7. While authorized service center will make every effort to carry out the necessary repairs at the earliest. It is however made explicitly clear that the authorized service center is under no obligation to do so within a specified period of time.
 8. This warranty entitles the purchaser for free of cost repairs of the unit within warranty period. It does not entitle the purchaser for replacement or refund of entire unit.
 9. During warranty period, the Company or its authorized service center may repair or replace, at Company's option, any defective product or parts thereof with new or factory rebuilt replacement items and return the product to the customer in working condition.
 10. All replaced parts, boards or equipment shall become property of the Company.
 11. The external housing and cosmetic parts shall be free of defects at the time of purchase of the product and therefore, shall not be covered under these limited warranty terms.
 12. Calls registered with the authorized service center, wherein only cleaning of the unit/parts in the unit due to dust gathering on portions of the unit, general explanations/ returning, particular software not being read/ installed, are not to be construed as defects. The Company does not undertake responsibility on the quality of software being used by the purchaser.
 13. In case the need of software up-gradation of Phone, no warranty is provided on the Phone memory of the Phone Book.
 14. In the event of repairs of any part(s) of the unit, this warranty

will thereafter continue and remain in force only for the un-expired period of the warranty. The time taken for repair and in transit whether under the warranty or otherwise shall not be excluded from the warranty period.

15. In case of any damage to the product/misuse detected by the authorized service center personnel, the warranty conditions are not applicable and repairs will be done subject to availability of parts and on chargeable basis only.
16. The Company's obligation under this warranty shall be limited to repair or providing replacement of part/s only. The maximum claim/s if entertained by the Company will be subject to the maximum retail price of the product purchased, or the purchase price, whichever is lower.
17. In the event of any unforeseen circumstance and spares not being available, the Company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
18. Under no circumstance the Company is liable for loss directly or indirectly for any of the following:-
 - a. Third party claims against customer for losses or damages.
 - b. Loss or damages to records, information or data.
 - c. Economic consequential damages including lost profits.

This warranty is not applicable in any of the following cases:

1. In case of incomplete warranty card and invoice i.e. (no mention of dealers sign, date and seal or expiry date) then warranty will cease to be in force.
2. The product is not purchased from an authorized dealer.

3. The product was used with or connected to accessory not supplied by the Company, not fit to use with the product or used in other than its intended use.
4. Warranty is also void if anyone has opened handset other than Company's authorized personnel.
5. The product purchased is not used according to instructions given in the Instruction Manual as determined by the authorized service center/ Company personnel.
6. Warranty does not cover defects caused by the fact that the Battery has been short circuited or by the fact that the seals of the Battery enclosure or the cells are broken or show evidence of tempering or by the fact that the Battery has been used in equipment other than those for which it has been specified.
7. Defects caused by improper use, as determined by the authorized service center/Company's personnel.
8. Alternations or Modification of any type made in the circuitry by the purchaser or unauthorized personnel, as determined by the Company personnel.
9. The original serial number/product IMEI is defaced, altered or removed from the product.
10. Defects due to causes beyond control like lighting, abnormal voltage, acts of God or while in transit to service center or to the purchaser's residence.
11. Defects caused by house hold pets, rats, cockroaches or any other animals or insects.
12. This warranty is void for damages resulting from: accidents, mishandling, negligence, improper use, tempering, breakage,

fire, unauthorized repair, inappropriate electric voltage, contacts with various liquids or vermin or water damage of any nature, lack of supervision or care of lack of every day maintenance. Improper storage and poor environment condition, particularly those related to temperature and hygrometry, parasites from the electric network or from the earth. Abrasives on the phone esthetics or glass parts. User of another charger than the one provided with your handset. Communication problems related to an unsuitable environment, including in particular problems related to access and/or connection to the internet or transmission faults due to poor geographical coverage by radio transmitters, interference or poor line quality.

13. Customer of the alleged defect or malfunction of the product did not notify the Company during the applicable limited warranty period.
14. Performance variations arising due to passage of time, sustained usage and climatic conditions. Any extraneous particle, entering the product or damaging its physical property like water, dust, soil, burn or extreme temperature.

Note: All warranty information, product features and specifications are subject to change without notice. This warranty is issued at New Delhi. All disputed are subject to the jurisdiction of the Court of New Delhi.

RF Exposure Information and Statement:

Phone has been tested and meets applicable limits for Radio Frequency (RF) exposure.

Specific Absorption Rate (SAR) refers to the rate at which the body absorbs RF energy. SAR limits are 1.6 Watts per kilogram (over a volume containing a mass of 1 gram of tissue) in countries that follow the United States FCC limit and 2.0 W/kg (averaged over 10 grams of tissue) in countries that follow the Council of the European Union limit. During testing, Phone radios are set to their highest transmission levels and placed in positions that simulate use against the head, with no separation, and near the body, with 10mm separation.

To reduce exposure to RF energy, use a hands-free option, such as the built-in speakerphone, the supplied headphones or other similar accessories. Carry Phone at least 10mm away from your body to ensure exposure levels remain at or below the as-tested levels. Cases with metal parts may change the RF performance of the device, including its compliance with RF exposure guidelines, in a manner that has not been tested or certified.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC Warning:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne

doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Radio apparatus containing digital circuitry which can function separately from the operation of a transmitter or an associated transmitter, shall comply with ICES-003. In such cases, the labelling

requirements of the applicable RSS apply, rather than the labelling requirements in ICES-003.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

The device has been tested and compliance with SAR limits, users can obtain Canadian information on RF exposure and compliance-For SAR test

Le présent appareil est conforme

Après examen de ce matériel aux conformité aux limites DAS

et/ou aux limites d'intensité de champ RF,
les utilisateurs peuvent sur l'exposition aux radiofréquences et
la conformité and compliance d'acquérir
les informations correspondantes