 


Receiver Volume Control

 
Set switch (left side of handset) to Norm, Mid or High.

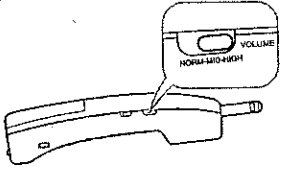

Handset Battery Charging

The battery pack in the handset must be fully charged 10-14 hours before using the telephone for the first time.

1. Place handset in base, the CHARGE LED on base will light.
2. After batteries are fully charged, check for dial tone by pressing TALK on handset.
3. Establish security code by recradling handset for 5 seconds. Handset is now ready to use.
4. When handset battery gets low, there will be 2 beeps every 30 seconds. The TALK LED will flash. Return to cradle for charging.
5. If battery becomes low while you are on a call, you will be disconnected after about 2 minutes. Terminate the call quickly and recharge battery.

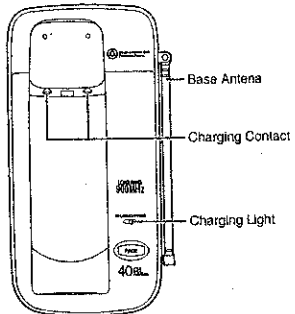


To recharge battery pack, place handset in base and:


1. Make sure contact points are touching and CHARGE LED is lit.
2. Be careful not to short battery with conducting materials such as rings, bracelets and keys.

Replace battery every 2 years. Use only a Southwestern Bell Freedom Phone® approved NiCad battery in your cordless phone.

 
To Replace Battery:

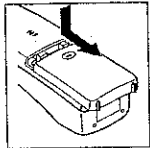

 1. Remove battery cover.

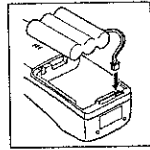

 2. Install new battery.

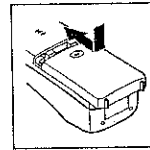

3. Close battery cover. Charge 10-14 hours before first use.

 


Southwestern Bell
Freedom Phone®

Fold open this manual for information about this telephone's installation and operation. Please read the **Important Safety Instructions** included in your package.

8:30 a.m. - 4:30 p.m. EST, Monday through Friday
1-800-366-0937
Retail Sales Help Line:
Southwestern Bell Freedom Phone®
missing parts or installation, call the
For immediate answers to your questions regarding operation,
LOOK — for the toll-free "help" telephone number
LISTEN — as our experts talk you through the problem.
STOP — don't take unit back to the store.

User's Manual for Cordless Telephone FF905/FF908

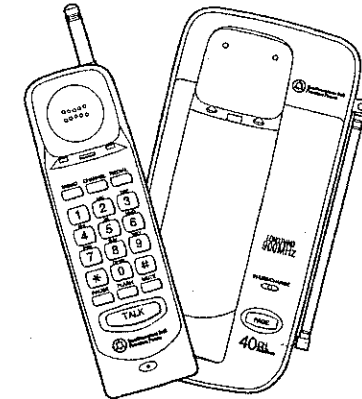

SOUTHWESTERN BELL FREEDOM PHONE®
7475 North Glen Harbor Boulevard, Glendale, AZ 85307
FF905/FF908 IB-2947 Printed in Malaysia

IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING YOU TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING;

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, or

other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.

7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
9. Do not overload wall outlets extension cords as this can result in the risk of fire of electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
11. To reduce the risk of electric shock, do not disassemble this product. But take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassemble can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged or frayed.
 - b. If liquid has been spilled into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - e. If the product has been dropped or cabinet has been damaged.
 - f. If the product exhibits a distinct change in performance.
13. Avoid using telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTOINS

FCC WANTS YOU TO KNOW

This equipment complies with Part 68 of the FCC rules. On the bottom of the base of this equipment is a label that contains, among other information, the FCC Registration Number, Ringer Equivalence number (REN) and the Universal Service Order Code (USOC), which is RJ-11C, for this equipment. You must, upon request, provide this information to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that

could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the Cordless Telephone farther away from the TV or VCR will often reduce or eliminate the interference.

SAFETY INSTRUCTIONS FOR BATTERIES

CAUTION: To reduce the risk of fire or personal injury, read and follow these instructions.

1. Use only a Southwestern Bell Freedom Phone® approved battery pack in the handset of your cordless telephone.



CONTAINS NICKEL-CADMIUM BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

FOR HANDSET UNIT:
CP60AASBWX-R 3. BY 600mA
CPI INTERNATIONAL LIMITED

2. Do not dispose of the battery in a fire. It may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes and skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conduction material may overheat and cause burns.

5. Charge the battery (ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

6. Observe proper polarity orientation between the Battery Pack and battery charger.



The RBRC™ Seal on the nickel-cadmium (NI-CD) battery indicates that Southwestern Bell Freedom Phone® Retail Sales is voluntarily participating in a program to collect and recycle these batteries at the end of their useful life, when taken out of service within the United States. Please call the RBRC™, toll-free at 1-800-8-BATTERY or contact your local recycling center for information on where to return the spent battery.

RBRC™ is a trademark of the Rechargeable Battery Recycling Corporation.

LIMITED WARRANTY

This Southwestern Bell Freedom Phone® is warranted to the original purchaser to be free from defects in materials and workmanship under normal installation, use and service for a period of one (1) year from the date of purchase as shown on the purchaser's receipt.

The obligation of Southwestern Bell Freedom Phone® Retail Sales under this warranty shall be limited to repair or replacement (at our option) during the warranty period of any part which proves defective in material or workmanship under normal installation, use, and service, provided the product is returned to Southwestern Bell Freedom Phone® Retail Sales TRANSPORTATION CHARGES PREPAID (California residents call 1-800-368-0937 for shipping instructions). If we choose to replace your Southwestern Bell Freedom Phone® product, the replacement will be warranted for either (a) 90 days or (b) the remainder of the original one year warranty period, whichever is longer. Battery packs are warranted for the same time period.

Products returned to us must be accompanied by a copy of the purchase receipt. In the absence of such purchase receipt, the warranty period shall be one (1) year from the date of manufacture. To obtain service under this warranty, return the defective product to the service center nearest you together

with your sales slip and \$9.50 for postage and handling (California residents need only provide proof of purchase).

This warranty shall be invalid if the product is damaged as a result of defacement, misuse, abuse, neglect, accident, destruction, or alteration of the serial number, improper electrical voltages or currents, repair alteration or maintenance by any person or party other than our own service facility or an authorized Service Center, or any violation of instructions furnished by us.

This warranty is also rendered invalid if this product is removed from the country in which it was purchased, if it is used in a country which it is not registered for use, or if it is used in a country for which it was not designed. Due to variations in telephone systems and communications laws, this product may be illegal for use in some countries. Southwestern Bell Freedom Phone® Retail Sales assumes no responsibility for damages or penalties incurred resulting from the use of this product in a manner or location other than that from which it is intended.

This one-year limited warranty is in lieu of all other express warranties, obligations, or liabilities. ANY IMPLIED WARRANTIES, OBLIGATIONS, OR

NO
COI
FCI
Hoi
not
doe
rec
eqt
to r
foll

LIA
TH
ME
PAI
DU
TH
ST
LO
AB
IN
SP
DA
OT
WR

Thi
ma
sta

YOU TO KNOW

the FCC
equipment
information,
divalence
Order
equipment.
information to

could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the Cordless Telephone farther away from the TV or VCR will often reduce or eliminate the interference.

quantity of
line and
then you
not all
connected
be certain
ct to your
id contact
mine the

rm to the
any
sible,
oice isn't
ossible,
complaint

ges in its
ures that

WARRANTY

hone* is
free from
er normal.
of one (1)
n on the

Free
/ shall be
n) during
h proves
er normal
e product
n Phone*
ARGES
369-0937
o replace
*product,
ter (a) 90
one year
ary packs

carried by
absence of
d shall be
To obtain
defective
together

with your sales ship and \$9.50 for postage and handling (California residents need only provide proof of purchase).

This warranty shall be invalid if the product is damaged as a result of defacement, misuse, abuse, neglect, accident, destruction, or alteration of the serial number, improper electrical voltages or currents, repair, alteration or maintenance by any person or party other than our own service facility or an authorized Service Center, or any violation of instructions furnished by us.

This warranty is also rendered invalid if this product is removed from the country in which it was purchased, if it is used in a country which it is not registered for use, or if it is used in a country for which it was not designed. Due to variations in telephone systems and communications laws, this product may be illegal for use in some countries. Southwestern Bell Freedom Phone® Retail Sales assumes no responsibility for damages or penalties incurred resulting from the use of this product in a manner or location other than that from which it is intended.

This one-year limited warranty is in lieu of all other express warranties, obligations, or liabilities. ANY IMPLIED WARRANTIES, OBLIGATIONS, OR

NOTICE TO HEARING AID WEARERS: This Cordless Telephone has been registered with the FCC as hearing aid compatible.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

OPERATION

40-Channel Operation

The FF905/FF908 cordless telephone automatically searches and selects the clearest of 40 channels when the handset is plucked up from the base. While on a call, if you experience notice or static:

1. Press **CHANNEL** on handset until a clear channel is found; the call will not be interrupted. Or
2. Move closer to base.

Note: You must be in usable range to change channels. Base antenna should be in upright position.

Security Code

The security code prevents your cordless telephone conversation from being accessed by a phone on a different line. Once the handset battery is fully charged, the handset will automatically select the code from a total of over 65,000 combinations. The code is changed every time the handset is placed in the cradle.

If you experience difficulty with placing or receiving calls, a lost security code may be the cause of the problem. When this occurs, the handset can no longer communicate with the base. Reset by placing handset on base for 5-10 seconds. If that does not work, unplug the AC adaptor from the wall outlet. Disconnect the handset battery for 5-10 seconds, then reconnect. Place handset back on base and then replug the AC adaptor.

Place Call

1. Press **TALK** button.
2. **TALK** LED on handset will light.
3. When you hear a dial tone, place your call.

Receiving a Call

1. IF THE HANDSET IS OUT OF THE BASE UNIT, press any button.
2. IF THE HANDSET IS IN THE BASE UNIT, lift the handset.

Do not press **TALK**. You will automatically be connected.

Note: If you pick up handset before the first ring is complete, you may have to press **TALK**.

Ending a Call

1. Place the handset in the base or press **TALK** to be disconnected from the line.
2. **TALK** LED on handset will turn off.

Flash

1. Use the **FLASH** button to activate custom calling services such as Call Waiting or Three-Way Calling (*Special subscription from your local telephone company required).
2. Press **FLASH** after you complete a call to generate a new dial tone.

Temporary Tone(**)

PULSE (rotary) service users may access touch-tone features needed to operate answering machines or use electronic banking, calling cards, etc., by pressing the **TONE** (*) button. Phone will reset automatically after call ends.

Out of Range

If you experience static while using the telephone, move closer to the base or change the channel by pressing the channel button.

Redial

Last number dialed (up to 32 digits) is stored in redial memory until another number is dialed.

1. Press **TALK** on handset.
2. When you hear a dial tone, press **REDIAL**.

Pause

A 4-second **PAUSE** may be inserted into the speed dialing of long distance numbers. Press **PAUSE** button at required point during storage of a number in memory.

Page

Send a signal from the base to handset. Press **PAGE** button on base and a series of rings will sound from handset.

Memory Feature

Store up to 10 numbers in memory for quick dialing. To Program Frequently Called Numbers

1. Pick up handset, with **TALK** off.
2. Press **MEMO** (**MEMORY**) button.
3. Dial phone number (up to 16 digits).

 
Note: Each **TONE** (*) or **PAUSE** (**REDIAL**) entered uses one of the available digits. If a 17th digit is accidentally pressed or a pause of more than 30 seconds occurs during programming, an error tone will sound. Try again.

4. Press **MEMO** button again.
5. Press a number key (0-9) for the memory location where the number is to be stored.
6. A long beep tone will confirm the number has been successfully stored.
7. Record numbers to be speed dialed on memory index label, which can be adhered to the base or other desired locations.

Change a Stored Number Replace a stored number by programming a new number in its place.

Dialing a Number Stored in Memory

1. Lift handset. Press **TALK**.
2. With **TALK** button lit, press **MEMO**.
3. Press memory location (0-9) assigned to number being called.

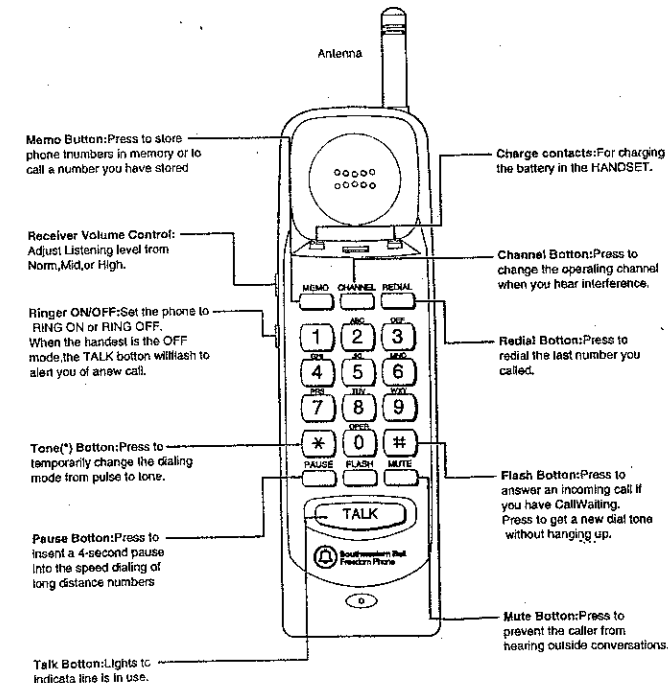

TROUBLESHOOTING

If you experience difficulty operating your cordless phone, try the suggestions below.

If the trouble persists, call the Southwestern Bell Freedom Phone® Retail Sales Toll Free Help Line at 1-800-366-0937, Monday-Friday between the hours of 8:30 a.m.-4:30 p.m. (EST)

The unit will not operate/no dial tone:

- Make sure TALK LED is lit.
- Make sure AC adaptor is plugged into base unit and wall outlet.
- Make sure telephone line cord is plugged into wall jack.
- Make sure base antenna is in upright position.
- Make sure handset battery is fully charged.
- Make sure you have selected correct dialing mode, tone (touch) or pulse (rotary).
- Make sure you are within usable range of the base station.
- Reset security code by placing handset in base for 5-10 seconds.

The phone does not ring when you receive a call:

- Make sure the RINGER switch on left side of handset is turned to ON.
- Make sure AC adaptor is plugged into base unit and wall outlet.

- Make sure telephone line cord is plugged into wall jack.
- Make sure you are within usable range of the base station.
- You might have too many extension phones on your line. Try unplugging a few.



Noise, static, interference or other calls heard while using handset:

- Try changing channels.
- Make sure base antenna is in upright position.
- Make sure you are within usable range of the base station.

- Make sure AC adaptor is not plugged into wall outlet with other appliances.
- Try relocating base unit to another location.
- Make sure handset battery is fully charged.

Phone will not hold charge:

- Make sure charging contacts on the handset and base are free of dust and dirt.
- Make sure CHARGE LED on base is lit when handset in cradle.
- If necessary, replace handset battery. (See Handset Battery Charging)

 
Difficulty in Placing or Receiving calls:

- Move closer to base and try again.
- If moving closer doesn't work, you may have lost security code. Reset code by placing handset back on base for 5-10 seconds.
- Make sure you have selected correct dialing mode, tone (touch) or pulse (rotary).
- Make sure AC adaptor is not plugged into wall outlet with other appliances. Disconnect for 5-10 seconds then reconnect. Place handset back on base and then replug AC adaptor.
- Make sure handset battery is fully charged.
- Make sure you are within usable range of the base station.

INSTALLATION


Antennas

1. Base antenna to upright position.

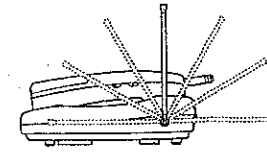

Set Tone/Pulse Switch

 
Set switch (top of base) to correct dialing mode - (touch) TONE or PULSE (rotary).

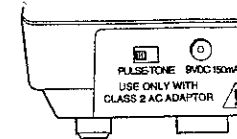

Please check with local phone company if uncertain of type of service.


Ringer On/Off

 Set switch (left side of handset) to ON or OFF. Ringer switch must be ON for handset to ring during incoming calls.

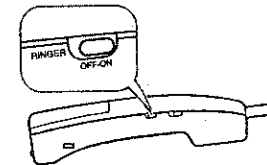

Receiver Volume Control

 
Set switch (left side of handset) to Norm, Mid or High.

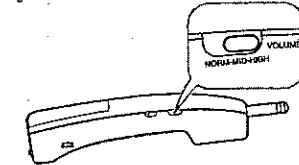

Handset Battery Charging

The battery pack in the handset must be fully charged 10-14 hours before using the telephone for the first time.

 
1. Place handset in base, the CHARGE LED on base will light.
2. After batteries are fully charged, check for dial tone by pressing TALK on handset.
3. Establish security code by recradling handset for 5 seconds. Handset is now ready to use.
4. When handset battery gets low, there will be 2 beeps every 30 seconds. The TALK LED will flash. Return to cradle for charging.
5. If battery becomes low while you are on a call, you will be disconnected after about 2 minutes. Terminate the call quickly and recharge battery.

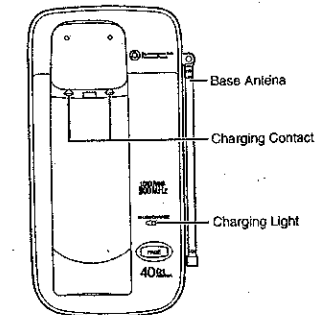

INSTALLATION

CAUTION

 1. Never install telephone jacks during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

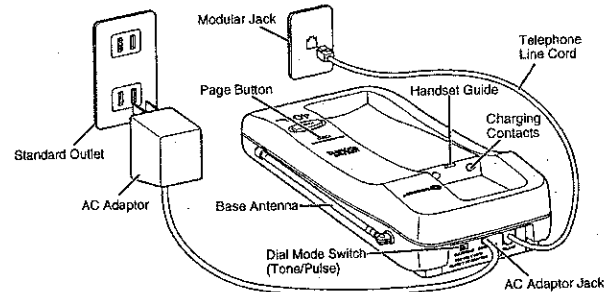


Modular Outlet/Telephone Jacks

1. This phone requires a modular phone jack (RJ11) and a standard 120 volt outlet.
2. Plug phone directly into outlet, not an extension cord.
3. Do not plug other appliances into outlet or have outlet controlled by a wall switch.

Wall Mount Installation

 - Base unit may be mounted on a standard wall plate.
1. Insert AC adaptor into back of base unit.
 2. Insert one end of short line cord into back of base unit, passing line cord through groove.
 3. Plug other end of line cord into modular jack.
 4. Mount base on wall plate studs and gently press until the unit locks in place.
 5. Plug AC adaptor directly into standard 120 volt outlet.

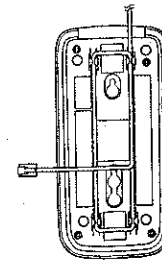

Desk Top Installation

1. Plug one end of line cord into back of base unit.
2. Plug other end of line cord into modular jack.
3. Press until locking lever clicks.
4. Connect AC adaptor into back of unit and plug directly into standard 120 volt outlet.