


4	校	亭
H9年11月14日		



**Southwestern Bell
Freedom Phone®**

**900MHz
Cordless Telephone
with Digital Answering Machine**

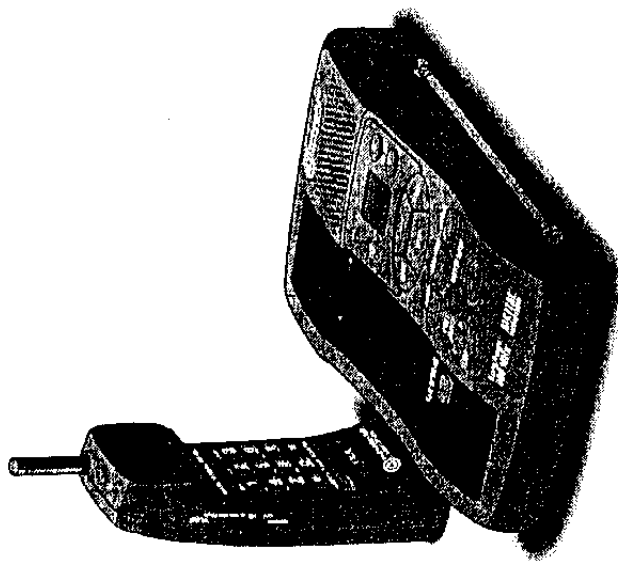

PRELIMINARY

**FF925 Owner's Manual
Se incluyen instrucciones en Español
Toll-Free Help Line 1-800-366-0937**

AAAAC0000AA

5	校	真
H9年11月17日		

IMPORTANT SAFETY INSTRUCTIONS 3

SAFETY INSTRUCTIONS FOR BATTERIES 4

INTRODUCTION 5

NAME OF CONTROLS AND INDICATORS 6

WHATS INCLUDED WITH YOUR FF925 8

MAINTENANCE 8

INSTALLATION 9

CHARGING THE HANDSET 12

SETTING THE SELECTORS 14

ADJUSTING THE VOLUME CONTROLS 15

RECORDING YOUR OWN GREETINGS 16

SETTING THE CLOCK 18

MAKING A CALL 19

ANSWERING A CALL 20

SPEED DIALING 21

PAGE/INTERCOM 23

OTHER FEATURES 24

AUTOMATIC ANSWERING SETTINGS 27

AUTOMATIC ANSWERING OPERATION
(Operation by the base unit) 29

RECORDING YOUR OWN MEMO MESSAGE
(Operation by the base unit) 31

AUTOMATIC ANSWERING OPERATION
(operation by the handset) 32

REMOTE OPERATION FROM A TOUCH TONE TELEPHONE 34

TROUBLESHOOTING 38

PRODUCT CARE 39

SERVICE 40

LIMITED WARRANTY 41

FCC WANTS YOU TO KNOW 42

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
4. Do not use this product near water; for example, near a sink or in a wet area.
5. Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the unit.
6. To protect the product from overheating, do not block or cover any slots or openings in the Base Unit. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
9. Do not overload wall outlets and extension cords, as this can result in the risk of fire or electrical shock.
10. Never push objects of any kind into this product through the Base Unit slots, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product. Contact qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally when following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
13. Avoid using telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.

CAUTION

To reduce the risk of fire or personal injury, read and follow these instructions.

1. Use only a Southwestern Bell Freedom Phone® approved battery pack in the handset of your cordless telephone.

FOR HANDSET UNIT:

3N-600AAL 3.6V 600mAh SANYO Electric Co., Ltd or
GP60AAS3BMX 3.6V 600mAh GPI INTERNATIONAL LIMITED.



CONTAINS NICKEL-CADMIUM BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

2. Do not dispose of the battery in a fire, as it may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes and skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conduction material may overheat and cause burns.
5. Charge the battery (ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
6. Observe proper polarity orientation between the Battery Pack and battery charger.



The RBRC™ Seal on the nickel-cadmium (Ni-CD) battery indicates that Southwestern Bell Freedom Phone® Retail Sales is voluntarily participating in a program to collect and recycle these batteries at the end of their useful life, when taken out of service within the United States.

Please call the RBRC™, toll-free at 1-800-8-BATTERY or contact your local recycling center for information on where to return the spent battery.

RBRC™ is a trademark of the Rechargeable Battery Recycling Corporation.

SAVE THESE INSTRUCTIONS


About the FF925

This is a 40-channel 900MHz analog cordless telephone with a telephone answering machine (TAD). It is designed and engineered to exacting standards for reliability, long life, and outstanding performance.

Features


- Integrated Digital TAD
- Approx. 20 minutes recording (ICM, MEMO, OGM) in a Flash memory.
- Two OGMs recordable in a Flash memory. (Max, 30 seconds each)
- Remote control through the C/O line and handset.
- Intercom between base and handset.
- 40-channel auto and manual selection.
- Receiver volume control.
- Memory dial (10 locations)
- Long battery life (14 days stand-by)
- Digital security coding

Handset controls

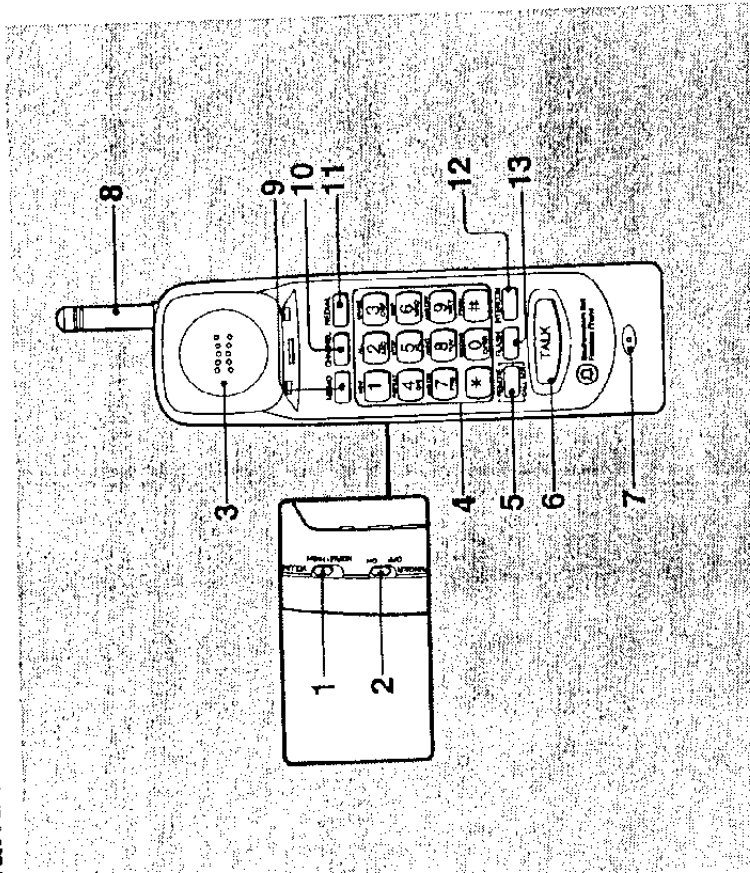


- 1 VOLUME control
- 2 RINGER ON/OFF switch
- 3 EARPIECE
- 4 DIAL buttons
- 5 REMOTE/CALL SCR button
- 6 TALK button (with indicator)
- 7 MICROPHONE
- 8 ANTENNA
- 9 MEMO button
- 10 CHANNEL button
- 11 REDIAL button
- 12 INTERCOM button
- 13 FLASH button

Base unit controls

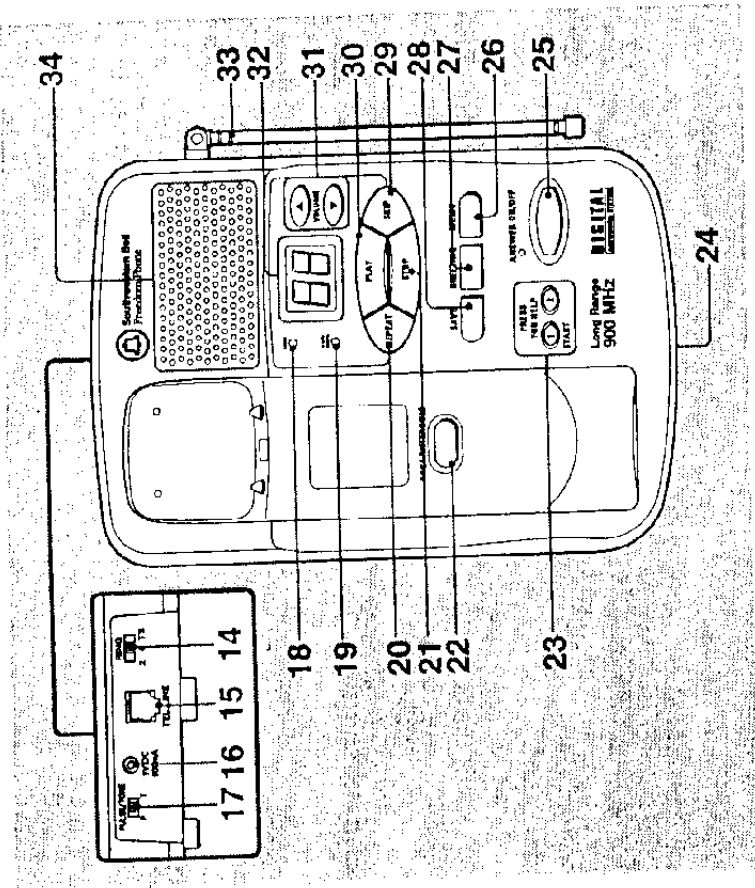

- 14 RING control switch
- 15 TEL. LINE jack
- 16 DC IN 9V jack
- 17 PULSE/TONE switch
- 18 POWER indicator
- 19 IN-USE/CHARGE indicator
- 20 REPEAT button
- 21 STOP button
- 22 PAGE/INTERCOM button
- 23 VOICE WIZARD buttons
- 24 MICROPHONE
- 25 ANSWER ON/OFF button
- 26 MEMO (message) button
- 27 GREETING button
- 28 SAVE button
- 29 SKIP button
- 30 PLAY button
- 31 VOLUME control buttons
- 32 DISPLAY
- 33 ANTENNA
- 34 SPEAKER

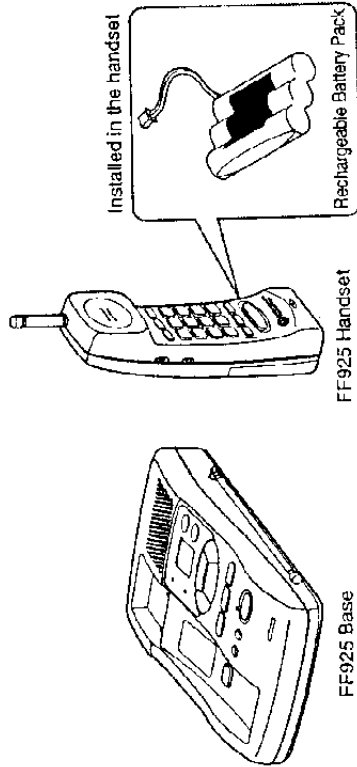

- FF925 Base unit 1
- FF925 Handset 1
- Rechargeable Battery Pack (Installed in the handset) 1
- Owner's manual 1
- Memory card 2
- AC adapter 1
- Line cords (6feet 1, 6inch:1) 2
- Quick reference guide 1
- Registration card 1

If any of these items are missing or damaged, contact your place of purchase.

MAINTENANCE

Cleaning the cabinet

Periodically wipe the cabinet clean with a soft cloth and diluted soap solution, then wipe with a dry cloth.

Note

Do not use benzine, thinner or similar solvents.

INSTALLATION

Installing Your FF925

Selecting the installation Location

Select a location for the FF925 to avoid excessive heat or humidity (as in a kitchen or bathroom). The Base Unit of your FF925 can be placed on a desk or tabletop near a standard 120V AC outlet and telephone line jack or mounted on a standard AT&T or GTE wall plate. Keep the Base Unit and Handset away from sources of electrical noise (motors, fluorescent lighting, etc.).

CAUTION


- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

Desk or Tabletop Installation

- 1 Plug the AC adapter cord into the 9V DC input jack on the base unit.
- 2 Plug one end of the long telephone cord into the TEL LINE jack on the base unit.
- 3 Plug the other end of the telephone cord into the telephone wall jack.
- 4 Turn the antenna on the base unit to the upright position.
- 5 Plug the AC adapter into a standard 120V AC wall outlet.

Note

Use only the AC adapter supplied with the FF925.

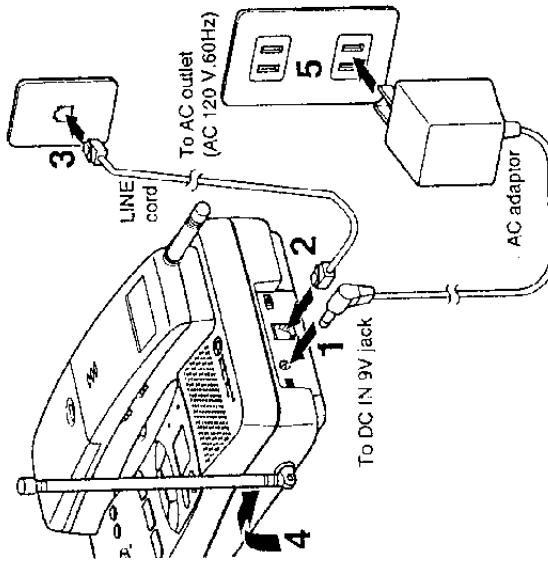


Place the telephone and power cords where they will not create a trip hazard, or where they could become chafed and create a fire or other electrical hazards.

Mounting on a Standard Wall Plate

The FF925 is designed to be mounted on a standard wall plate.

- 1 Plug the AC adapter cord into the base unit and thread the cord through tow guides.
- 2 Insert one end of the short line cord into the base unit.
- 3 Plug the other end of the line cord into the modular jack.
- 4 Mount the unit on the wall phone plate so that the heads of the studs of the wall phone plate are inserted into the slots on the wall mount bracket. Then set the base unit securely by pushing it down.
- 5 Turn the antenna on the base unit to the upright position.
- 6 Plug the AC adapter into a standard 120V AC wall outlet.

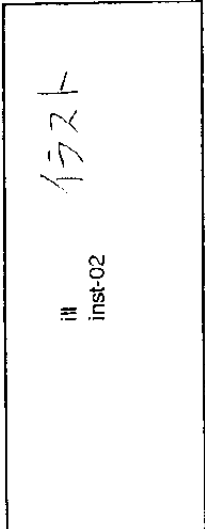

Note

Use only the AC adapter supplied with the FF925.

Route the telephone and power cords where they will not create a trip hazard, or where they will not become chafed and create a fire or other electrical hazards.

Kit 44

Place the handset on the base for charging *if* and leave 10 hours before the first use.

For optimum battery performance:

- Do not let the battery become fully discharged.
- Be sure to return the handset to the base at night.

Low battery indicator


Once the battery charge becomes low, the indicator built into the TALK button flashes for about 5 minutes and a beep sound is emitted. The flashing of the indicator will stop as will the beep sound, but use of the handset will not be possible until the battery is recharged.

To recharge the handset, place the handset in the base cradle. The IN-USE/CHARGE indicator is lit while charging. Allow 10 hours without any interruption for the handset to fully recharge.

Replacing the Battery Pack


To replace the rechargeable battery in your phone, follow these steps:

- 1** Remove the handset battery cover.
- 2** Remove the old battery.
- 3** Plug the battery's cable into the handset.
Note
The plastic connectors will fit together only one way. If you have difficulty, make sure the battery connector is properly aligned.
- 4** Replace the battery cover.
- 5** Charge 10 hours before the first use.

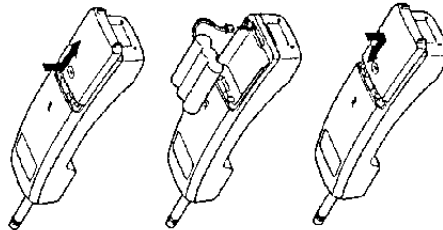

Cleaning the Charge Contacts


To maintain a good charge, it is important to clean all charge contacts on the handset and base unit about once a month. Use a pencil eraser or other contact cleaner. Do not use any liquids or solvents.

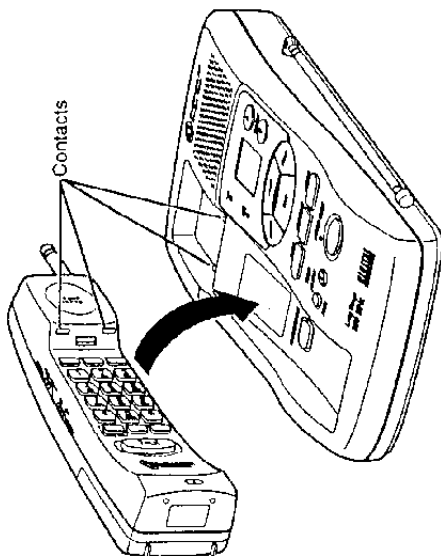

Handset

RINGER ON/OFF switch


This unit allows you to switch on or off the ringer. Slide the RINGER ON/OFF switch on the side to change the setting.

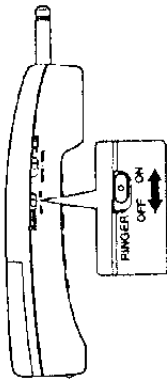

Base unit


A) Toll Saver / Ring Select

Select the number of rings (2, 4 or TS). Your FF925 will answer on the ring number selected. Your unit has a built-in automatic TOLL SAVING feature. See page 37.

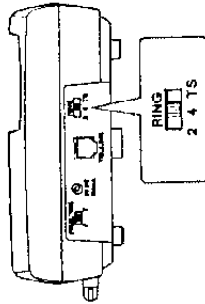

B) PULSE/TONE switch


Place the switch in the "T" position for tone dialing, or the "P" position for pulse dialing.

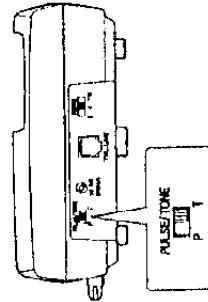

Handset

VOLUME control

This unit allows you to adjust the handset volume to a more comfortable listening level. Simply slide the VOLUME control on the side of the handset to either the HIGH, • (MID) or NORM position.

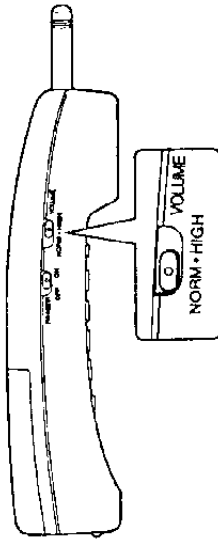


Base unit

VOLUME control:

Use the up/down VOLUME control on the base unit to set the answering system volume to the desired sound level.

- The volume level will be indicated on the LED display from 0 to 7.

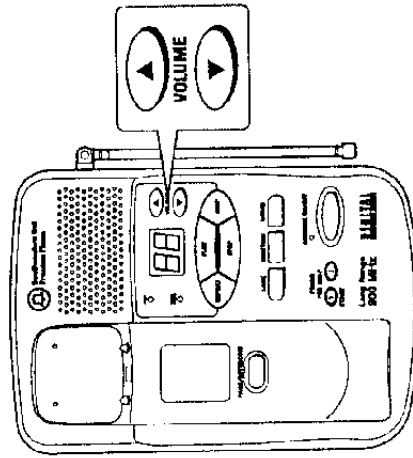

RECORDING YOUR OWN GREETINGS

The FF925 has two kinds of greetings, Answer mode and Announce only mode. Each mode permits 30 seconds of recording.

Note


- If you do not record any greetings, the following two types of messages will automatically be used.
 - 1) For Answer mode:
 - "Hello! We are not available now. Please leave your name and phone number after the beep."
 - "Hello! We are not available now. Please call again."
 - 2) For Announce only mode:
 - "Hello! Our machine cannot accept messages. Please call again."
 - "Hello! Our machine cannot accept messages. Please call again."
 - "When the memory is full, "Memory is full. Erase all messages." will be announced.

To record Greetings

Recording from the base unit

- 1 Press the ANSWER button to select the Answer or Announce only mode.

- Each press of the ANSWER button advances the mode through the following sequence.

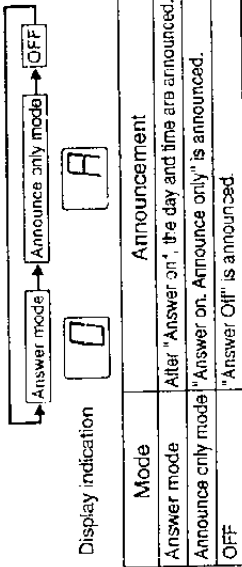

- 2 Hold down the GREETING button of the base unit and keep it down

- After two seconds, "Record greeting after beep" is announced and the greetings recording starts.

- 3 Face to the microphone of the base unit and speak out the message

- The recording time of the greeting, which is 30 seconds, appears on the display.

- 4 When you finish recording the message, release the GREETING button

- A beep sound is emitted and the recording is played back.
- When the recording time exceeds 30 seconds, a beep sound is emitted and the recording is played back.

Note

To check the message, use the ANSWER button to select the Answer mode or the Announce only mode, then press the GREETING button.

Recording from the handset



- 1 Lift the handset and press the REMOTE button

- This sets the unit to remote control standby mode.



- 2 Press dial button 7 (ANS ON) to record the greeting for the ANSWER mode, or press dial button 8 (ANNC) to record the greeting for the ANNOUNCE ONLY mode.



- 3 Press dial button "0" (RECORD) to start recording.
 - "Record greeting after beep. Press 5 to end recording." is announced, and the greetings recording starts after a beep tone.



- 4 Speak out the message to the handset microphone
 - The recording time of the greeting (30 seconds) appears in the display of the base unit.



- 5 When you finish the message, press dial button "5" (STOP)

- The recording will stop and the recorded message will be played back automatically.

- When the recording time exceeds 30 seconds, a beep sound is emitted and the recording is played back.

To erase Greetings (base unit operation only)



- 1 Press the ANSWER button on the base unit and select the mode of the message that you wish to erase (either Answer mode or Announce only mode)



- 2 Press the STOP and GREETING buttons simultaneously for 2 seconds.

- The Greetings of the Answer mode or Announce only mode, whichever was selected, will be erased with a confirmation beep tone.

Note

 
When your greeting is erased, pre-recorded greeting will answer calls. Pre-recorded greeting can not be erased.

When messages (both incoming messages and your own memo messages) are recorded, the day and time will be recorded with each message. This convenient feature lets you know exactly when your messages have been received.

Setting the day and time (handset operation only)

When the telephone is not in use, perform the following operation at the handset.

- 1** Lift the handset and press the **REMOTE** button
- 2** Press dial button **"#"** (PRGM)
- 3** Press dial button **"1"**
- 4** To set the day; Press dial button **"#"** (PRGM) until the correct day is heard from the base speaker or earpiece.

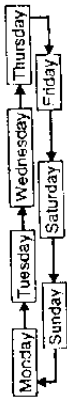

- 5** To set the time; Press the dial buttons on the handset corresponding to the time you want to set.

Example: When setting the time to 10:35, Press dial buttons, "1", "0", "3", "5".



- 6** To set AM or PM. Press dial button **"#"** until correct AM or PM is heard from the base speaker or earpiece.



- 7** Press the **REMOTE** button.



Note

During the setting, if the next operation is not performed within 30 seconds, the clock setting mode will be canceled.

Check the Time (Handset operation only)


- 1** Lift the handset and press the **REMOTE** button
- 2** Press dial button **"#"** (PRGM)
- 3** Press dial button **"1"**
- 4** Press the **REMOTE** button



The time is announced once more, and the unit goes back to the standby mode.

Making a call from the handset


- 1** Lift the handset and press the **TALK** button to obtain a dial tone.
 - The **TALK** button indicator will light.
- 2** Dial the phone number.
- 3** To end the call: Press the **TALK** button on the handset.
 - or
 - Place the handset back onto the cradle.
 - The **TALK** button indicator will go out.

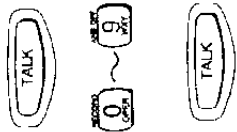

To redial

This unit can redial the last number called from the handset. Press the **TALK** button to obtain a dial tone, then press the **REDIAL** button.

- The last dialed number is automatically redialed.
- 32 digits can be stored in the redial memory.

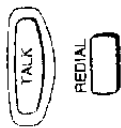


Set the RINGER switch of the handset to CN. If you do not, the handset will not ring.

When the handset is on the base cradle


When the telephone rings, lift the handset.

 - The TALK button will light and the call will be connected automatically.

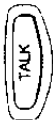

When the handset is not on the base cradle

 When the telephone rings, press the TALK button on the handset and answer the call.

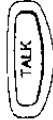

When the call is over

Place the handset onto the base cradle.

or

Press the TALK button on the handset to hang up.

 


The unit can store 10 phone numbers that you can dial just by pressing the MEMO button and one of the dial buttons (0 to 9). The phone numbers stored in each memory location can be up to 16 digits.

Programming a phone number into memory

Storing memory dial numbers

- 1** Lift the handset and press the MEMO button
 - This will set to the standby mode.
- 2** Press the dial button and enter the telephone number that you wish to store
 - If more than 16 digits are pressed, an error sound is emitted and the number will not be stored.
- 3** Press the MEMO button again
- 4** Press one of dial buttons (0 to 9) where the phone number should be stored.
 - The telephone number will be stored with a confirmation beep tone.

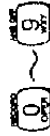

Note

- The telephone number will not be stored when the following operations have been performed.
 - 1) When the TALK button has been pressed.
 - 2) When the handset has been returned to the base unit.
 - 3) When 30 seconds or longer have passed without operation.
 - 4) When a button other than a dial button (0 to 9) has been pressed for memory location.
- When a telephone call is received during the operation, the ringer will sound (provided that the RINGER switch is ON) and the storage function will be canceled.

Changing a stored number

You can change a number just by programming a new number in its place.

Memory card

Write down the programmed names and telephone numbers on the memory card. It may be useful to attach the memory card on the back of the handset or in the cradle of the base unit.

You can use the unit as an intercom system between the handset and the base unit.

Dialing a stored number from memory

1 Lift the handset and press the TALK button to obtain a dial tone.

 
 
- The TALK button indicator will light.

2 Press the MEMO button.

3 Press the dial button (0 to 9) where the phone number you wish to dial is stored.

- The stored number will be dialed automatically.
- No operation for 30 seconds will cancel the mode.

4 When the conversation is over, place the handset onto the base cradle.
OR
press the TALK button to hang up.

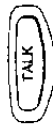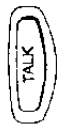

From the handset

The handset user :

1 Press the INTERCOM button.

- A beep sound will be emitted at the base unit and the INTERCOM mode will be set.

2 Intercommunication is possible between the handset and the base.

3 To end this function, press the INTERCOM button of the handset or the PAGE/INTERCOM button of the base unit.

Note

- The intercom function cannot be used during a call with an outside telephone line.
- When a phone call is received while using the intercom function, the intercom mode is canceled and the ringing sounds.



Paging from the base unit

The handset can be called from the base unit.

The base unit user :

1 Press the PAGE/INTERCOM button

- If the button is pressed for a short time, the handset will ring once.
- If the button is pressed for 2 seconds, the handset will ring for 30 seconds.
- This is useful to locate the handset.
- To establish the INTERCOM mode, press the REMOTE button on the handset





FLASH button

The FLASH button functions as the hook switch does on a corded phone. The FLASH button is used to access special telephone services like call waiting.

For further details on subscriber services, please contact your telephone company.

Note

- You may access some features of a PBX (Large business phone system) using the FLASH button. In this case, follow the procedure for hook switch operation which is required by the PBX.

- Flash time is 0.7 second.

Example Call waiting

1 If you are having a conversation with someone and another party calls, you hear a call waiting tone.

Press the FLASH button.

2 The first call is put on hold and you can answer the second call.

Press the FLASH button again.

3 The first caller will be connected again and the second call is put on hold.



Temporary touch tone dialing

If you only have pulse dial service, this feature lets you send the tones needed to operate answering machines, or use electronic banking services, charge cards, and other special services.

1 Dial the phone number normally.



2 Turn on temporary touch tone dialing by pressing the (*) button.

3 You can then press the numbers or symbols you need to send using touch tone dialing.

- The temporary touch tone dialing feature will allow you access to most special services over a pulse dial line. But some services may actually require a touch tone line. To be sure, ask the company that provides the special service.
- When programming a number in memory, the number button and (*) button can be stored together.

Note

- In some cases, the tone service will be unavailable even when the (*) button is used. For details, please ask your telephone company about the computer-accessed service office.

- If you have touch tone service, you do not need to use the temporary touch tone dialing feature. This feature is used for lines with pulse dialing only.

Automatic security coding

Every time you place the handset on the base unit, your phone randomly selects one of about 65,000 possible security codes - much like an electronic password.

With this Automatic Security Coding, your handset and base unit can recognize each other automatically, minimizing the chance that another cordless phone will use your telephone line.

Channel scan

When in the standby mode, this unit automatically selects the call channel from 40 call channels.

In case you have noise or interference during a call, a press of the handset CHANNEL button will switch the channel.



When a call is received, the unit will play back your greeting or prerecorded greeting and then record the incoming message.

Note

The recording time for each message is up to 60 seconds and the total recording time is about 20 minutes. The maximum number of message is 99. (ICM / Memo together)

Preparation for use

Record a greeting. (See page 16.)
If you do not record a personal greeting, the unit will automatically use the prerecorded greeting;

- 1) For Answer mode:
"Hello! We are not available now. Please leave your name and phone number after the beep."
- 2) For Announce only mode:
"Hello! Our machine cannot accept messages. Please call again."

Setting the unit to answer calls

Set the unit to automatically answer calls and record messages.

Setting from the base unit

Press the ANSWER button and set the Answer mode or the Announce only mode

- The unit is now ready for answering preparations.



- 1** Press voice wizard button "1" (START)
- The Voice Help Guide will start.



- 2** Follow the announcement in the Voice Help Guide and press voice wizard button "1" or "2"



- When there is a description of your problem in the menu of the Voice Help Guide, the method of dealing with the problem will be announced.

Note

The voice wizard cannot be used during a call with an outside telephone line.

- When 30 seconds or longer have passed without operation, the voice wizard will be canceled.

Pause function

The pause function is available during dialing by pressing the REDIAL button. The pause function is useful when the phone is connected to a PBX and an access digit (usually 9) is required in order to make an outside phone call.

When you program a speed dial, insert a pause after the outside line access digit, and continue to add the phone number.



Example Outside line access digit of PBX is 9.



The pause will allow the PBX to give you an outside line before the phone number is dialed out.

 
 
 
Use the REDIAL button to insert a pause.

Pause time is 4 seconds.

Each pause you program is counted as 1 digit when storing a number in memory.

Voice wizard (base unit operation only)

This unit is provided with a Voice Help Guide function. Should some problem arise, before contacting manufacturer service, please check the unit with this voice wizard and TROUBLESHOOTING.

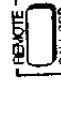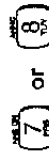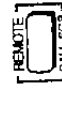

Setting from the handset

- 1** Lift the handset and press the REMOTE button
 - When some messages have been recorded, you will hear an announcement of the number of recorded messages.
- 2** Press dial button "7" (ANS ON) for answer mode, or dial button "8" (ANNC) for announce only mode.

- 3** Press the REMOTE button again to terminate the remote control mode.

Note

If you left home without turning on the answering system, you can turn it on remotely using a touch tone telephone. (See page 00.)

(Operation by the base unit)






When the phone rings (When in Answer mode)

- 1** Initially, the unit will ring twice before automatically answering an incoming call.
- 2** The greeting will be played back to the caller.
 - The message can be heard from the base unit speaker at the same time.
- 3** A beep will be heard, and the unit will start recording the caller's message.
 - The caller's message can be heard from the base unit speaker at the same time.
- 4** When the caller hangs up, a long beep will be heard and the recording will stop automatically. The unit will be ready for the next call.
 - The number of messages recorded will be displayed on the base unit.

Note

 
- Even when the answering system is turned off, when the unit rings 10 times, the call will be automatically answered, and the answering system will start.
- If the memory becomes full, subsequent callers will not be able to leave messages. Play back recorded messages, and then erase the old messages. (See page 30 for message erase.)

Listening to the messages

- 1**  Press the PLAY button.
 - All recorded messages will be played back.
- Note**
 - Message play will be stopped in the following cases.
 - 1) When the TALK button of the handset has been pressed
 - 2) When an incoming call is received.
 - If the time setting has not been made, the time stamp will not be announce
- 2**  To repeat the message ;
 - Press REPEAT button once. Then the message being played will be played back from the beginning. To listen to the previous message, press the REPEAT button twice.
- 3**  To skip the message ;
 - Message play will be stopped and the next recorded message will be played back.
- 4**  To pause the playback ;
 - Press STOP button. The unit will pause for one minute. If the PLAY button is pressed within one minute, the playback will resume starting from the next message.
- 5**  To stop the playback, press STOP button.
 - After one minute of pausing, the unit will come to a complete stop.

To turn off the answering system

Press the ANSWER button to set the OFF mode
A red LED by the ANSWER button will go off

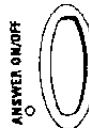


To save messages

- Press the SAVE button during message playback
- A beep sound will be emitted and the message that is being played will be saved.
 - If the SAVE button is pressed after all message playback, all the messages will be saved.



To erase all the messages

 - 1 Press the STOP and PLAY buttons simultaneously for 2 seconds during the stop mode.
"All messages erased" will be announced and those messages that have been played back will be erased. Note that saved messages will remain.

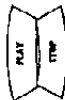

Note

- All messages will be automatically erased after playback, when the next recording is made.
To erase saved messages, play back the message again.

RECORD YOUR OWN MEMO MESSAGE
(Operation by the base unit)

You may record a personal memo. It can be heard by anyone playing back messages manually or remotely. This function is useful when you want to leave messages to someone while you are out.

To record your own memo message

Note

The recording time for one message is up to 60 seconds and the total recording time is about 20 minutes. The maximum number of message is 99. (ICM / Memo together)



- 1 Hold down the MEMO button for 2 seconds.
• "Record memo after beep. Do not release MEMO button until you are finished recording." will be announced.
- 2 Continue to hold down the MEMO button and when the beep sound has stopped, record the message.
- 3 Release the MEMO button after you have finished the message.
• When 60 seconds have elapsed, a beep sound will be emitted and the unit will go back to the standby mode.

Note

- When the memory is full, "Memory is full. Erase all messages." is announced.
- When a telephone call is received while recording, the recording will be canceled.
- Short messages of 2 seconds or less will not be recorded.

Listening to memo messages

- Recorded memo messages are treated as incoming messages.
See page 29.

AUTOMATIC ANSWERING OPERATION

(Operation by the handset)

The functions listed below can be activated with the handset.

- Playing back new messages. (ICM / Memo)
- Playing back all messages. (ICM / Memo)
- Erasing messages.
- Repeating messages.
- STOP. (ICM playback or OGM recording)
- Skipping the messages.
- Switching the Answer mode ON.
- Setting Announce only mode.
- Switching the Answer mode OFF.
- Recording the greeting.



- 1** Lift the handset and press the REMOTE button.
 - This will set to the remote control standby mode.

- 2** Press the dial button for the desired operation.
 - The dial button functions are as listed in the table below.

Note

- The answering system will wait for your command for 30 seconds each time.

Item	Operation
	To play back new messages. • Press dial button "1" • The new messages will be played back.
	To play back all messages. • Press dial button "2" • The all messages will be played back.
	To stop playing messages. • While playing back messages, press the "5" button.
	To erase the message. • Press dial button "3" • "Message erased" is announced and the message being played is erased. • If this button is pressed soon after all message were played, all messages will be erased.

Item	Operation
	To repeat playback of the message being played. • While playing back a message, press dial button "4" • The unit will return to the beginning of the message being played.
	To skip to the next message. • While playing back a message, press dial button "6" • The unit will skip to the next message and playback will start.
	To set the Answer mode ON • Press dial button "7" • The Answer mode will be switched ON.
	To set Announce only • Press dial button "8" • The unit will be switched to the Announce only mode.
	To set the Answer mode OFF • Press dial button "9" • The Answer mode will be switched OFF.
	To record the OGM • Press dial button "0" • "Record greeting after the beep" will be announced. When the beep sound has stopped, record the message. • To stop the recording, press dial button "5".

- To end remote operation, press the REMOTE button or place the handset back onto the cradle.

Note

- Message play will be stopped in the following cases.
 - 1) When the REMOTE button of the handset has been pressed
 - 2) When the TALK button of the base unit has been pressed
 - 3) When the handset has been returned to the base unit
- If the time setting has not been made, the time stamp will not be announced.

You can operate the answering system remotely with a touch tone telephone while you are away from home. The following functions are available with a touch tone telephone.

- Playing back new messages. (ICM/Memo)
- Playing back all messages. (ICM/Memo)
- Erasing all messages.
- Repeating messages.
- STOP. (ICM playback or OGM recording)
- Skipping the messages.
- Set the Answer mode to ON.
- Set to Announce only mode.
- Set the Answer mode to OFF.
- Recording the greeting.

Preparation before leaving home


To enter the remote security code number

To prepare remote access operations, enter your remote security code. The remote security code prevents unauthorized persons from accessing your unit and listening to your messages. The remote security code number consists of 2 digits (00 to 99).

The remote security code is initially set to 12. However, it can be changed.

When the telephone is not in use, perform the following

- 1 Press the REMOTE button.**
- 2 Press the # (PRGM) button.**
- 3 Press dial button "2".**
 - The current remote security code is announced.
- 4 Press the new code using two digits. (00 to 99)**
- 5 Press the REMOTE button.**
 - A beep sound will be emitted and the entered code will be announced.

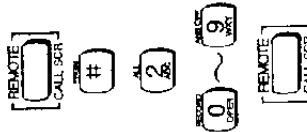

Note

- During the programming mode, the SECURITY CODE is displayed on the base unit call counter.

Conducting remote operations away from home

- 1 Call your home phone using a touch tone telephone and wait until your home phone answers and the greeting starts.**
- 2 Enter the remote security code number during or after the greeting playback. The remote security code is set to 12 at the factory. However, it can be changed. (See page 34.)**
 - A long beep will be heard to indicate that the remote operation mode has been selected.
 - Then, the operation guide will be announced.
- 3 Press the dial button for the desired operations**
 - The dial button functions are as listed in the table below.

Note

- The answering system will wait for your command for 30 seconds each time.

Item	Operation
To play back new messages.	Press dial button "2" <ul style="list-style-type: none"> • The new messages will be played back.
To play back all messages.	Press dial button "2" <ul style="list-style-type: none"> • The all messages will be played back.
To stop playing messages.	<ul style="list-style-type: none"> • While playing back messages, press the "5" button.
To erase the message.	Press dial button "3" <ul style="list-style-type: none"> • "Message erased" is announced and the message being played is erased. • If this button is pressed soon after all messages were played, all message will be erased.
To repeat playback of the message being played.	While playing back a message, press dial button "4" <ul style="list-style-type: none"> • The unit will return to the beginning of the message being played.





Item	Operation
To skip to the next message	While playing back a message, press dial button "6" •The unit will skip to the next message and playback will start.
To set the Answer mode ON	Press dial button "7" •The Answer mode will be switched ON.
To set Announce only	Press dial button "8" •The unit will be switched to the Announce only mode.
To set the Answer mode OFF	Press dial button "9" •The Answer mode will be switched OFF.
To record the OGM	Press dial button "0" •Record greeting after the beep* will be announced. When the beep sound has stopped, record the message. •To stop the recording, press dial button "5".

- To end remote operation, hang up the receiver.

Note

- In remote operation, when 30 seconds or longer have elapsed without an operation, the remote mode will be canceled.
- To stop an operation, perform the following actions.
 - 1) During greeting or ICM/Memo playback, or during the recording of an OGM, press dial button "5" (STOP).
 - 2) Hang up the telephone.
- If the memory is full, "Memory is full" "Erase all messages" will be announced when entering the remote security code.
- Even when the Answer mode is OFF, answer mode is switched on after 10 rings.
- Note that performing the "Erase all messages" operation will not erase those messages that have not been played back.

To use the toll saver feature

When you call the unit from an outside telephone, the number of rings before the unit answers will tell you if there are any incoming or memo messages or not.

- If the unit answers on the 2nd ring: There is at least one message.
- If the unit answers on the 5th ring: There are no messages.

Note

- Hang up immediately when you hear the 3rd ring. The 3rd ring indicates that there are no messages and you do not need to wait for the unit to answer your call. This feature will save you the cost of the call.

If your FF925 Cordless Telephone is not performing to your expectations, please try these simple steps. If you are still unable to resolve the problems, contact your place of purchase.

Note

Do not attempt to service this unit yourself. All service must be done by qualified service personnel.

Problem	Suggestion
Base Unit Power light does not come on.	Make sure the AC Adapter is plugged into the Base Unit and wall outlet. Make sure the wall outlet is functioning.
Charge light will not come on when handset is placed in base unit.	Make sure the AC adapter is plugged into the base unit and wall outlet. Make sure the wall outlet is functioning. Make sure the handset is properly seated in the base unit. Make sure the Rechargeable Battery Pack is properly placed in the handset. Make sure that the charging contacts on the handset and on the base unit are clean.
Conversation interrupted frequently.	Make sure that the base unit antenna is fully vertical. Move closer to the base unit. Change Channels.
Handset does not ring.	Rechargeable Battery may be weak or not charged. Charge the Battery for 4-5 hours. Make sure the base unit antenna is fully vertical. The Handset may be too far away from the base unit. Make sure the AC adapter is plugged into the base unit and wall outlet. Make sure the wall outlet is functioning.

Range

The FF925 is designed to achieve the maximum possible range by transmitting and receiving according to the highest specifications set forth by the FCC. The maximum range of the phone depends on the environment in which it is being used.

Radio Interference

Radio interference may occasionally cause interruptions in your conversations. When this happens, remember that your unit is not defective. If these noises continue and are too distracting, move to a different location while you are talking on the phone or change channels on your cordless handset.

- A. Avoid putting cordless phones near heating appliances and devices that generate electrical noise (motors, fluorescent lamps).
- B. Avoid rough treatment of the phone by placing the handset gently into the base when hanging up. Avoid dropping the handset.
- C. Clean your cordless telephone only with a soft cloth slightly dampened with water or mild hand soap. Do not use any type of solvent or abrasive cleaner.
- D. Your cordless phone is not designed to be water resistant. Do not use the handset in the rain, in the pool or in the shower. Do not install your base unit outdoors, near a sink, bath tub, or shower. Do not expose to direct sunlight.
- E. Retain the original packaging should you need to ship the phone at a later date.

Additional Information

- A. Connecting this telephone to a coin operated telephone or party line is prohibited by law.
- B. If it is determined that your telephone is malfunctioning, the FCC requires that it be disconnected from the modular outlet until the problem has been corrected.

For immediate answers to all your questions regarding your Southwestern Bell Freedom Phone® call the Consumer Hotline, toll-free at (800) 366-0937

According to FCC regulations, this equipment, which has been certified and registered with the FCC, may only be repaired by authorized persons. If repairs or adjustments are made by an unauthorized person, the FCC certification may be voided. Should you encounter any problems, please call the Southwestern Bell Freedom Phone® toll-free Customer Help Line for assistance: 1-800-366-0937 Monday - Friday between the hours of 8:30 am - 4:30 pm (EST).

For In-Warranty Service:

Package your complete unit (including all adapters, line cords, and other accessories) and ship the unit postage prepaid* and insured (for your protection) to:

Southwestern Bell Freedom Phone®

Dept.: Warranty Repair

150 Milford Rd., East Windsor, NJ 08520

OR

7475 N. Glen Harbor Blvd., Glendale, AZ 85307

Be sure to include your return address, proof of purchase, a daytime phone number, \$9.50 for postage and handling*, and a brief explanation of your difficulties. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions.

For Out-of-Warranty Service

You may call our toll-free Customer Help Line for the price of a replacement before returning your unit. Please follow all instructions for In-Warranty service (above) to return your unit, and mark the package Dept. Out-of-Warranty if you have called and know the cost of your replacement, please include this information with your unit for prompt service.

QUESTIONS?

STOP...DON'T TAKE ME BACK TO THE STORE.

LOOK...FOR THE TOLL-FREE "HELP" TELEPHONE NUMBER.

LISTEN...AS THE EXPERTS TALK YOU THROUGH THE PROBLEM.

For immediate answers to your questions regarding operation, missing parts or installation, call the
SOUTHWESTERN BELL FREEDOM PHONE® HELP LINE AT:
 1-800-366-0937

Printed in -----

This Southwestern Bell Freedom Phone® is warranted to the original purchaser to be free from defects in materials and workmanship under normal installation, use, and service for a period of one (1) year from the date of purchase shown on the purchaser's receipt.

The obligation of Southwestern Bell Freedom Phone® Retail Sales under this warranty shall be limited to repair or replacement (at our option) during the warranty period of any part which proves defective in material or workmanship under normal installation, use, and service, provided the product is returned to Southwestern Bell Freedom Phone® Retail Sales (address below) TRANSPORTATION CHARGES PREPAID (California residents call 1-800-366-0937 for shipping instructions). Products returned to us or an Authorized Service Center must be accompanied by a copy of the purchase receipt. In the absence of such purchase receipt, the warranty period shall be one (1) year from the date of manufacture. To obtain service under this warranty, return the defective product to the service center nearest you together with your sales slip and \$9.50 for postage and handling (California residents need only provide proof of purchase). You may also have other warranty rights which vary from state to state.

This warranty shall be invalid if the product is damaged as a result of defacement, misuse, abuse, neglect, accident, destruction, or alteration of the serial number, improper electrical voltages or currents, repair alteration or maintenance by any person or party other than our own service facility or an authorized Service Center, or any use violative of instructions furnished by us.

This warranty is also rendered invalid if this product is removed from the country in which it was purchased, if it is used in a country in which it is not registered for use, and/or if it is used in a country for which it was not designed. Due to variations in telephone systems and communications laws, this product may be illegal for use in some countries. Southwestern Bell Freedom Phone® Retail Sales assumes no responsibility for damages or penalties incurred resulting from the use of this product in a manner or location other than that from which is intended.

This one-year warranty is in lieu of all other express warranties, obligations, or liabilities. ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION OF THIS WRITTEN LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This equipment complies with Part 68 of the FCC rules. On the bottom of the base of this equipment is a label that contains, among other information, the FCC Registration Number, Ringer Equivalence Number (REN) and the Universal Service Order Code (USOC), which is RJ-11C, for this equipment. You must, upon request, provide this information to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when you telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone equipment, disconnect from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the Cordless Telephone farther away from the TV or VCR will often reduce or eliminate the interference. **NOTICE TO HEARING AID WEARERS:** This Cordless Telephone has been registered with the FCC as hearing aid compatible.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.