 


Manual - 390 1 Button

Community
Controls



STINGER™
TRANSMITTER

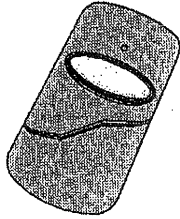

*Thank you for choosing a Community Controls product.
Please read this manual carefully before using the product.*

Made in China. Copyright © 2006 by Community Controls.

CONTENTS

1 - TRANSMITTER OVERVIEW

- 1A - General information
- 1B - Technical specifications
- 1C - Main components

2 - PROGRAMMING

3 - OPERATION

4 - BATTERY ACCESS

5 - TROUBLESHOOTING

1A - General information

The Community Controls - Stinger™ Transmitter is a very small (1-5/8" x 3" x 1/2") visor style wireless transmitter operating at 390 MHz. The Stinger™ achieves its small size by using state-of-the-art, surface mount components. It has been designed for use with and is compatible with Chamberlain®, Liftmaster® and Sears® garage door openers with Security + receivers.


Chamberlain, Liftmaster and Sears are trademarks of their respective manufacturers.

The A23 battery has a shelf life of about 1 year. The product fully complies with Part 15 of the FCC Regulations.

1B - Technical Specifications


Operating frequency	390 MHz
Number of buttons	1
Battery:	1 ea. 12V A23
Number combinations:	1 billion
Operating temperature:	-20°F - 100°F
Overall dimensions:	1/2" x 3" x 1-5/8"
Weight:	1 oz.

 1C - Main components

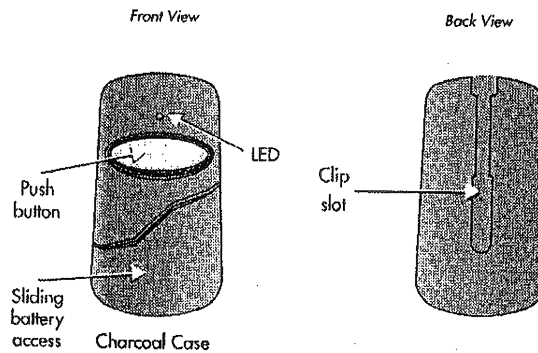

2 - PROGRAMMING

 Find the "learn" button on your existing garage door opener (the unit with the motor located on the ceiling of your garage). Press and hold this "learn" button for 2 seconds and then release. The LED light located beside the "learn" button will go on. Then press the button on your new transmitter remote for 1 second and then release to activate it. The LED light on your existing garage door opener will flash, then go off. Your remote transmitter is now programmed into your existing garage door opener and will operate your garage door.

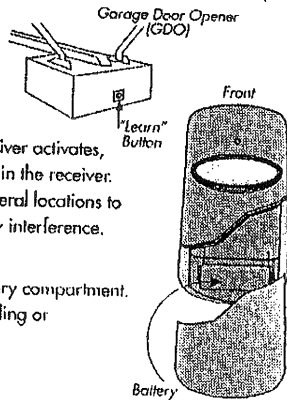

3 - OPERATION

Press the garage door opener button to activate your garage door.

Step 1. Push the button from a distance of about ten feet. If the receiver activates, the transmitter has been memorized in the receiver.

Step 2. Test the transmitter from several locations to discover any "blind spots" caused by interference.

4 - BATTERY ACCESS

Slide front cover down to reach battery compartment. Attend to proper polarity when installing or replacing battery.

5 - TROUBLESHOOTING

PROBLEM	SOLUTION
The system does not receive the transmitter signal. The transmitter LED will not light.	Replace the transmitter battery.
The system does not receive the transmitter signal. The transmitter LED is ON.	Check to ensure the transmitter has been memorized into the receiver.
The operating range is reduced.	Replace the transmitter battery.

**Community Controls Stinger™ - Type : CC390LMP5TV
FCC ID : SU7390LMP5TV**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DO NOT let children use the garage door transmitter without adult supervision. Children can injure themselves or others with the garage door.

Notice

Any changes or modifications to Community Controls equipment not expressly approved by Community Controls could void the manufacturer's warranty.

WARRANTY

The warranty period of Community Controls Stinger™ transmitters is 24 months, beginning from the manufacturing date of the transmitter. During this period, if the product does not operate correctly, due to a defective component, the product will be repaired or replaced at the sole discretion of Community Controls. The warranty does not extend to the transmitter case which can be damaged by conditions outside the control of Community Controls, or to battery life.



2500 South 3850 West, Suite A • Salt Lake City, Utah 84120
www.communitycontrols.com • sales@communitycontrols.com