


Warnings & Safety Instructions

- Read manual **carefully** before using this product.
- Keep manual for future use of product.
- Keep device away from heat, direct sunlight and sharp edges.
- Keep the device away from naked flames.
- Do not insert any metal objects into the device – risk of short circuit.
- To avoid a static charge, do not use the device in an extremely dry climate.
- Professional must complete any repairs.

Technical Specifications

- Wireless: 2.0+EDR (2.4GHz Frequency)
- Transfer Distance: 10m
- Power: DC 5V 1000mA
- Output: 3W
- Battery: 3.7V 300mAh
- Charging Time: 2 hours
- Operating Time: 2-5 hours
(will vary depending on the volume level)
- Rating: IP64 Grade Waterproof

Product Overview

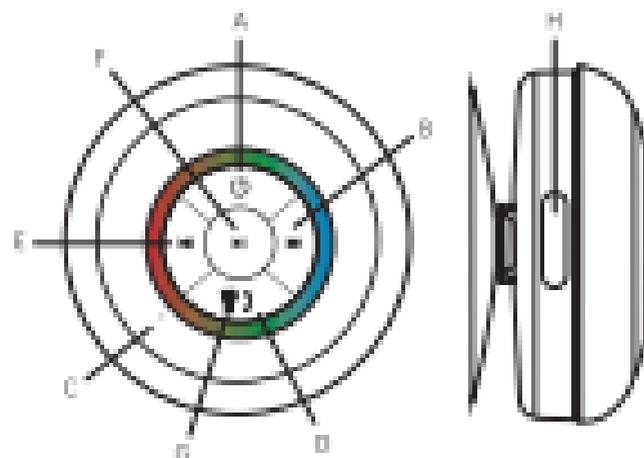

A) ON/OFF

B) Volume Increase/Next song

C) Microphone

D) Phone Calls

E) Volume Decrease/Previous song

F) Play/Pause

G) Led Operating Button

H) Charging port

Product Includes:

- 1 x Wireless Speaker
- 1 x Micro USB Charging cable
- 1 x Instruction Manual

- G) Once speaker unit is turned on the LED light sequence will begin. For **blue light** press button **G** once. For a faster flash sequence with **all colors** press again. For **lower flash** sequence press once more.

- D) To pick up/hang up phone calls short press on this button.

Charging your Speaker

- This wireless speaker is powered by integrated rechargeable lithium battery.
- To charge, insert the charging cable provided into the charging port on the speaker (See 'H' on diagram).
- Connect the USB end of the charging cable into a PC or AC/DC adapter.
- The LED indicator (See 'G' on diagram) will turn red when the battery is charging.
- When the battery is fully charged, the LED indicator will switch off.

Preparing your speaker to pair with your device

- Activate your speaker's wireless function by turning the device on. Press and hold the ON/OFF button (See 'A' on diagram) for about 5 seconds.
- When the device is successfully switched on, the LED indicator (See 'G' on diagram) will flash red and blue alternately. This means that the wireless function has been activated.
- Your speaker is now ready to be paired with your device.

Pairing to your Device

- Switch on your chosen device.
- Go to your device's wireless function and select **TYPOWIRELESSPEAKER** from device list.
- If password is needed, type in '0000'.
- Your speaker should now be connected to your device.

Tip

- Once this speaker is paired and connected to your chosen device, it will automatically connect to same device next time you switch the speaker on, as long as the wireless function on your device is switched on.

Button Descriptions

- On/Off: Long press to switch your speaker on or off
- Short press for the previous song, long press to decrease volume
- Short press for the next song, long press for increasing volume
- When receiving a call, quick press to answer the phone call. Quick press again to hang up the phone call.
- Play/Pause music.

FCC Statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause unintended operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Typo

LED Shower Speaker

Instruction Manual

