
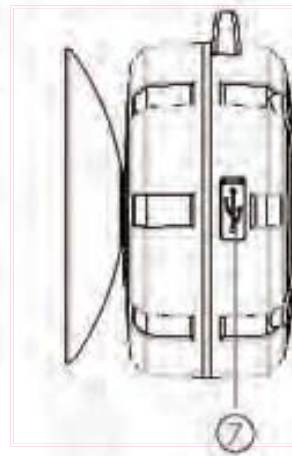


Bluetooth Hiking Speaker

Model: 180121-00

USER MANUAL

RN# 129 164

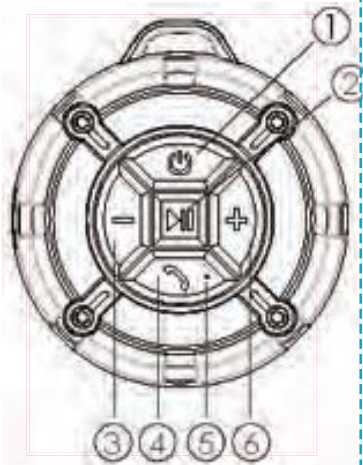

1. Power / Pairing
2. Play / Pause
3. Volume - / Forward
4. Hands-free
5. Microphone
6. Volume + / Backward
7. Usb Charge Port

Specifications

Bluetooth:	4.2
Bluetooth freq.:	2.402 – 2.480 ghz
Operating range:	10m
Output power:	3w
Freq. response:	100hz-20khz
Battery:	dc 5v 400 mah li-ion
Waterproof rating:	IPX67 (up to 1m)
Operating time:	2-3 hours
Charging time:	3 hours
Standby time:	2-3 hours

Safety instructions

1. Keep the unit away from heat sources, direct sunlight and corrosive liquid.
2. Do not use the unit if it has been dropped or damaged in any way.
3. Repairs to electrical equipment should only be performed by a qualified electrician, improper repairs may place the user at serious risk.
4. Keep the unit free from dust, lint, etc.
5. Do not use this unit for anything other than its intended use or purpose.
6. This product is not a toy, keep out of reach of children.
7. Set the volume to a safe level. To prevent possible hearing damage, do not listen at high volume levels for long periods.

8. Do not expose batteries or battery pack to excessive heat, such as direct sunlight, or open flame.

Note: do not submerge speaker into water for long time

Charging

The speaker comes with a built-in rechargeable battery. Before use, please complete a full battery charge. Only use the supplied usb cable to charge the speaker. Connect the usb cable to a computer usb port or wall usb port, and the micro usb plug to the charging port of the speaker. The red LED light will illuminate while the speaker is charging. A full charge of the battery takes around 3 hours. When the battery is fully charged, the LED light will turn

off. Disconnect the speaker at this point. The speaker will then be ready for use.

Bluetooth pairing

1. Ensure the speaker is turned off and with power before pairing.
2. Press and hold the power on/off button for 5-7 seconds until the blue LED turns on. This will indicate your speaker is now in pairing mode.
3. Place the speaker and the bluetooth device which you would like to pair it with, within the operating distance. We recommend keeping the two devices no further than 10 meters apart.
4. Ensure bluetooth is enabled on your device (refer to the manufacturer's instructions for how

to enable bluetooth on your device).

5. Once you have activated bluetooth on your device, select **lost speaker** from the list of available bluetooth devices.
6. Please note, pairing mode on the speaker will last for two minutes. If no devices are paired after two minutes, the speaker will automatically return to standby mode.
7. If pairing is unsuccessful, turn off the speaker and repeat the aforementioned steps. Once you have paired the speaker with a device, the speaker will remember this device & will pair automatically when the device's bluetooth is activated and in range. You do not need to re-pair any previously connected devices. If prompted, enter password "0000".

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.