
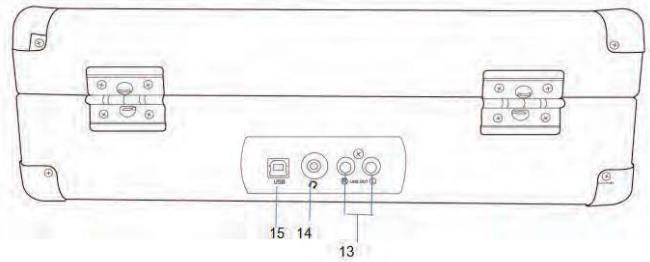


# RECORD PLAYER

363149

## Record Player Content

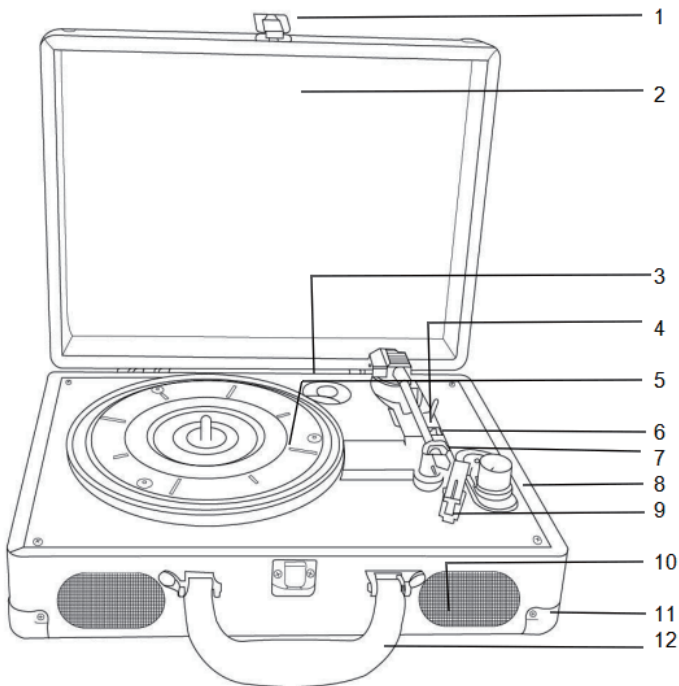

1. Lock catch
2. Dust cover
3. Adapter - Use this when playing 45rpm records with cut out centers.
4. Tonearm lift lever
5. Turntable Disc
6. Wireless/Phono button
7. Speed selection - Three speed for choice: 33.3, 45, 78 rpm.
8. Power switch
9. Ruby type Needle
10. Built-in stereo speakers
11. Metal Protect Cover
12. Handle
13. RCA Output
14. Aux in
15. USB Port

## Maintenance:

Replacing the stylus: Refer to figures 1-9

Note: Please exercise care whilst performing this operation so as to avoid the tone arm and audio line wires from any damage.



1 Push the arm lock to release the tone arm.



2 Remove cartridge cap to expose needle.



3 Separate cartridge from socket.



4 Take off audio line from cartridge.



To fit new one, insert audio-line accordingly.  
Install cartridge to socket lightly.

Note:

We advise to clean your records with an anti-static cloth to gain maximum enjoyment from them and to make them last. We also recommend for the same reason your stylus be replaced periodically (approximately every 250 hours). Dust the stylus from time to time using a very soft brush dipped in alcohol (brushing from the back to front of the cartridge).

When transporting your record player, do not forget to:

- \* Replace the protective cap on the stylus
- \* Put the rest clip into the pick-up arm

## **FCC Warning**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.