


**BLUETOOTH HEADPHONES  
USER MANUAL**

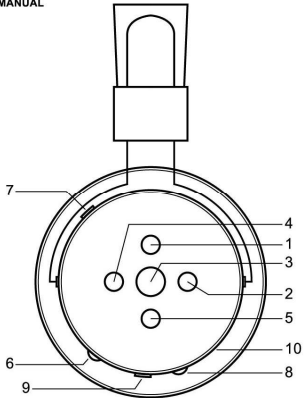

**Box Contents**

*In the box, you will find:*

1. Folding MP3 Bluetooth headset
2. USB data cable
3. Audio cable
4. Manual
5. Charger

**Products schematic**

1. Mode conversion key
2. Volume up/skip song
3. Pause / Play button
4. Volume down / skip to previous song
5. Bluetooth multifunction key / Off button
6. Microphone
7. TF card slot
8. Status indicator
9. audio jack
10. charging jack (USB jack)

**Key definitions**

"MODE" button: to turn Bluetooth on, to turn radio on.

◀/V- Key: short press to skip back a song, long press to turn the volume down.

▶ Key: short press play / pause / resume play, in the FM mode, press for the whole channel automatic station search.

▶▶/V+ Key: short press to play next song, long press to increase the volume.

○/Key: Short press to answer or end calls, press twice to call the last number redial.

**Bluetooth headset start up and shutdown.**

**1. Power:** Press ○/Key for about five seconds or so to turn the device on; the blue light will start flashing once this device is on. You will notice the blue and green light will flash alternatively as it looks for a Bluetooth device to pair with. Once the device has been paired with another device the blue light will flash and then eventually will remain on whilst in use.

**2. Power off:** Long press ○/Key for about three seconds or so, the light will turn off when the device shuts down. If the voltage is low, the red light flashes before going off.

3. When the device is fully charged, a red light will appear. The red light will flash when the device is charging.

**(F) HS-441 Bluetooth Headset Troubleshooting:**

*If you cannot connect a Bluetooth headset to your phone, do the following:*

1. Make sure the headset is turned on and the phone to create the pairing. And make sure that the phone's Bluetooth feature is available.
2. Check the distance between the headset and the phone is more than 10 meters, as well as the existence of obstructions such as walls or electronic devices between the two.

If the HS-441 MP3 / Bluetooth headset cannot play a song

1. Check whether the MP3 TF card to store the song file is in the correct format; connect your computer to view.
2. Check the battery has power.

During the call, to get the best out of your device, please follow the below instructions.

1. Make sure that the Bluetooth headset and mobile phone is within the effective range of the normal communication (within 10 meters)
2. In order to achieve the best Bluetooth headset sound quality during a call, we recommend you use the phone on the right, in order to ensure optimal call quality.

**(C) FM radio mode instructions**

In the Bluetooth mode, short press the "MODE" conversion button to switch to radio mode.

Short press ▶/V- key on the radio for channel selection, or give sustained long press for volume reduction.

Short press ▶▶/V+ key to select the next channel radio, long press for volume continued to increase.

Press ▶ Key, the machine will enter the station search mode, the green flash. When the search is complete the channel will be saved automatically.

*(Note: Before using the radio the best user performs a fully automatic station search.)*

**(D) LINE IN Operating Instructions**

On the audio cable into the headphone connector interface corresponding to this time as in the boot state will automatically shut down, then you can use it to listen to music on your computer can also voice chat.

**(E) Charging Instructions**

1. Before using the headset for the first time, make sure to fully charge the device.
2. Connect the input port to your computer by a charging cable provided.

**(A) Bluetooth mode instructions**

**Pairing your HS-441 Bluetooth Headset**

*Note: Before using the headset, the headset must be paired with the phone. ("Pair" refers to establishing a link between Bluetooth devices, while using a cell phone store headphones unique identification ID. When the headset is paired with your phone, the headset automatically connects with the phone.)*

1. Connect the headset with the phone placed together (no more than one meter distance). When the headset is in the off state, press the ○/Key until the green and blue lights flash alternately, then the device can be paired.
2. Enable the phone looking device functions. Looking for equipment related to the phone function, see mobile phone manual; when the phone retrieval is complete, the phone displays all devices found.
3. Select the trademark "HS-441" in the device list on your phone.
4. When the mating is complete, the headset enters the standby state: blue lights flashing.
5. You can now use a Bluetooth headset to dial and receive calls.

**Talk with the HS-441 Bluetooth Headset**

1. When there is an incoming call, press ○/Key to answer the call.
2. When the call is completed, click ○/Key to hang up, as the other party hangs up, you will need to press the Bluetooth mode key.

*(Note: If your machine crashes or does not boot it can be charged to a hard reset on the MP3 circuit operation or by pressing the reset button)*

**(G) HS-441 MP3 / Bluetooth headset to use security codes**

1. Adhere to local law, the proper use of mobile phones while driving and Bluetooth headsets.
2. Do not allow children to play with the headphones. (Small parts may cause a choking).
3. Note the warning in certain designated areas; should need to turn off electronic devices or radio products. These places include hospitals, blasting ranges, and potentially explosive areas.
4. Before boarding, please turn off the Bluetooth headset and assure it is not available for use on aircraft.
5. In order to avoid damage to your hearing, do not use long-term in conversation or MP3 player in excessive volume levels.

**(H) HS-441 MP3 / Bluetooth headset maintenance and upkeep**

1. Keep the Bluetooth headset dry. Precipitation, humidity, and types of liquids or moisture can contain minerals that will corrode electronic circuits. If the Bluetooth headset does get wet, wait to dry completely before using the headset.
2. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the Bluetooth headset.

3. Press twice in a row ○/Key Bluetooth on your phone will automatically redial the last dialled number.
4. When requiring the phone to play or access, if the HS-441 Bluetooth headset in the broadcast side when listening to music or the radio, then the music or radio will pause into a wait status; the machine hangs up or the other party hangs up automatically allowing continued playing of MP3 music or radio.

**Play / Pause**

In the MP3 player or Bluetooth mode, to play music short press ▶ Key, to stop playing music short press ▶▶ Key

**On a / volume down**

In the MP3 player or Bluetooth stereo mode, short press ▶/V- key, the headset will automatically play the previous song, continued long press ▶/V- key, the volume will be reduced.

**Next / volume up**

In the MP3 player or Bluetooth stereo mode, short press ▶▶/V+ key, the headset will automatically play the next song; continued long press ▶▶/V+ key, the volume will increase.

3. Please do not use or store in dusty and dirty areas. This will damage its moving parts and electronic components.
4. Do not use a Bluetooth headset in extremely hot places; temperatures will shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
5. Do not store Bluetooth headset in extremely cold places, otherwise when the temperature is raised to room temperature, moisture can form inside, which may damage electronic circuit boards.
6. Do not attempt to disassemble or alter your Bluetooth headset; Bluetooth headset rough treatment can break internal circuit boards and fine mechanics.
7. For long unused headphones, make sure to fully charge the device first below using.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.

**Online Standby**

Boot automatically after connecting a Bluetooth headset connected over phone line connection successfully entered standby.

**(B) MP3 playback mode description**

**Play / Pause**

*In the boot state, insert TF card*

1. MP3 player automatically; when the green light flashes slowly, press ▶ Key for the music to be suspended (the music part of the phone will open the phone), then press again for music playback.
2. If the device is in Bluetooth mode, short press the "MODE" button to switch to MP3 mode to play MP3 music. Press ▶ Key for music playback and pause.

**On a / volume down**

In MP3 playback mode, press ▶/V- key, the headset will automatically play the previous song. With continued long press ▶/V- key, the volume will be reduced.

**Next / volume up**

In MP3 playback mode, press ▶▶/V+ key, the headset will automatically play the next song. With a continued long press ▶▶/V+ key, the volume will increase.