

Model 139.53778

3-Function Transmitter

F.C.C. rules prohibit adjustments to or modification of receiver and/or transmitter circuitry except for changing the code setting and replacing transmitter battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Manufactured under 1 or more of the following U.S. patents: RE29,525; 4,037,201; 4,750,118; 4,806,930


MATCH THE CODE IN NEW AND EXISTING TRANSMITTERS

If this transmitter will be used with an existing transmitter to operate the same receiver(s), proceed as follows: Locate the code switches in original transmitter(s). Open the battery compartment cover in the new 3-function transmitter to access the code switches. Place the transmitters side by side as shown below.

Set code switches in the new transmitter to the same positions as code switches in the original transmitter(s).

NOTE 1: Code switches #2 through #9 in ALL transmitters used to operate a receiver must be set to match. (Code switch #1 on a 3-function transmitter is neutral. Set it to ANY position. It will not affect the code selected.)

NOTE 2: If the original transmitter(s) has only 7 or 8 code switches, set code switches #8 and/or #9 to center (0) position in new transmitter.

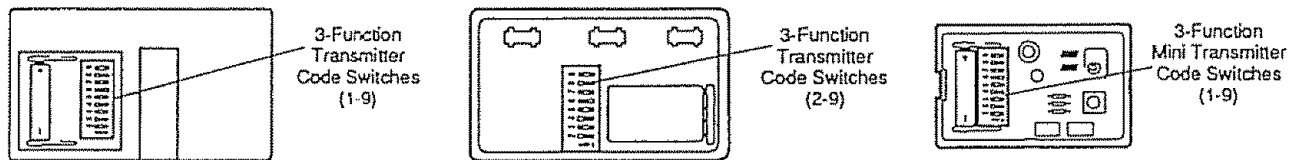

REPLACEMENT PARTS: Case, top and bottom (No circuit board) - 41A3476; Visor clip - 29C128; 12V Battery - 10A14

CHANGE THE CODE IN RECEIVER AND TRANSMITTER(S)


53000SR SERIES

(WITH RECEIVER 'SR' CODE BUTTON)

Garage Door Openers and Light Controls

(Illustration A shows a garage door opener receiver)

Select a transmitter push button to operate receiver

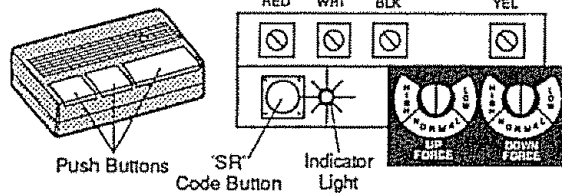

Make sure all transmitters are set to matching code switch positions as described above.

1. Press the 'SR' code button on your receiver. (Illustration (A) shows a representative garage door opener receiver). The indicator light will turn ON.
2. **STAND AWAY FROM DOOR** and press the **SELECTED PUSH BUTTON** of one transmitter. The indicator light will turn OFF and door will move. Code in receiver now matches transmitter(s) code and will activate when the selected transmitter push button is pressed.

NOTE: If transmitter push button is not pressed within 30 seconds, the indicator light will turn OFF. Repeat 1 and 2.


To use the 3-Function Transmitter with other 53000 SR Series receivers: Select another transmitter push button to operate a Light Control or additional garage door opener. All transmitters used to operate receiver must be set to the same code (as described above). Then repeat 1 and 2. You can select a different transmitter push button to operate each device.

53000 SERIES

(WITH RECEIVER CODE SWITCHES)


Garage Door Openers and Light Controls

(Illustration B shows a garage door opener receiver)

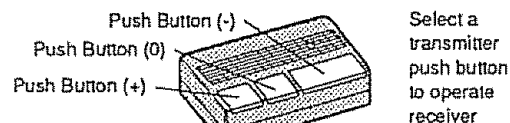

Select a transmitter push button to operate receiver

B

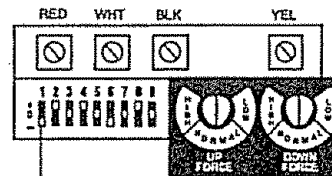

Slide receiver code switch #1 to position that matches selected transmitter push button

Code switch #1 in (-) position. Receiver will operate with transmitters' large push button.

Make sure all transmitters are set to matching code switch positions as described above.


1. Select a transmitter push button to operate the receiver as shown in Figure B.
2. Set **RECEIVER** code switch #1 to match the position of the transmitter push button selected. Refer to Illustration (B). Then set remaining code switches in receiver to match the transmitter(s) code switch positions.

NOTE: If the receiver has only 7 or 8 switches, set transmitter switch #8 and/or #9 to (0).

To use the 3-Function Transmitter with other 53000 Series receivers: Set receiver code switch #1 to match the position of another transmitter push button. Then set remaining code switches to match transmitter(s) code switches.

Code switches #2 through #9 in all transmitters used to operate the receiver MUST be set to matching positions.

**Sears Model 139.53778
3-Function Transmitter**

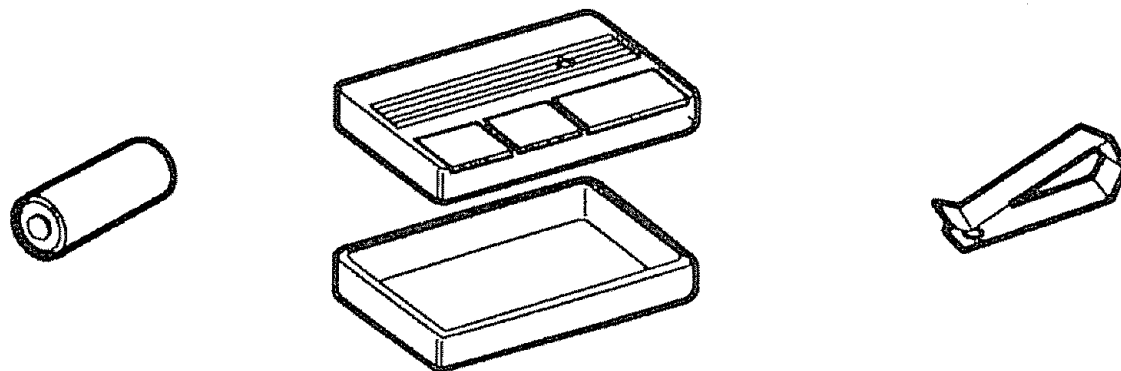

REPLACEMENT PARTS:

Case, top and bottom (No circuit board)

Visor clip

12V Battery

41A3476

29C128

10A14