

Ryobi Technologies, Inc.

Anderson, South Carolina, 29625

Service Level

MANDATORY
SERVICE INFORMATION

SERVICE INFORMATION

Product –

Ryobi Corded Powertools –

Routers – R160, R161, R165, R175, R180, R6112, RE170, RE170VS,
RE175, RE185

Belt Sanders – B713, B713R, B713S, B792S, B792RH

Craftsman Corded Powertools –

Routers – 17444, 17500, 17504, 17513, 17514, 24399, 24471, 24475,
24500, 24599, 27500

Belt Sanders – 11712, 11714, 11791, 11792, 24222, 24223, 24229,
24233, 24240, 24290, 25222, 25233, 25241, 117131,
117151, 117921

Identification – When replacing the switch, the use the appropriate wiring diagram to connect the leads from the original switch to the replacement switch.

Condition – The switch manufacture has changed from Eaton to Defond which has a different wiring configuration.

Remedy – Using the attached wiring schematic or the schematic accompanying the new switch, select the appropriate wiring diagram (Router or Belt Sander) by model number. Transfer the wiring accordingly from the original switch to the new switch terminal locations. Perform all safety checks and operate the product to ensure proper operation is obtained.

For technical assistance contact Ryobi technical support at 1-800-525-2579, or Craftsman technical support at 1-800-932-3188.