


## Operator's Manual



## CABINET SUPPORT STAND

Model No.  
351.241300

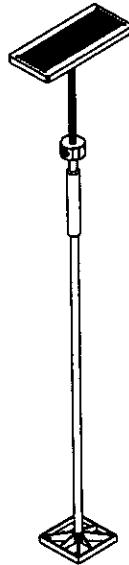

**CAUTION:** Read and follow all Safety Rules and Operating Instructions before First Use of this Product.

- Safety
- Assembly
- Operation
- Parts List.

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.  
[www.sears.com/craftsman](http://www.sears.com/craftsman)

21968.00 Draft (02/05/04)

## TABLE OF CONTENTS

Warranty . . . . .	2	Operation . . . . .	3
Safety Rules . . . . .	2	Parts Illustration and List . . . . .	4-5
Assembly . . . . .	2-3		

## WARRANTY

### FULL ONE YEAR WARRANTY

If this product fails due to a defect in material or workmanship within one year from the date of purchase, Sears will at its option repair or replace it free of charge. Contact your nearest Sears Service Center (1-800-4-MY-HOME) to arrange for product repair, or return this product to place of purchase for replacement.

This warranty applies only while this product is used in the United States.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Dept. 817WA, Hoffman Estates, IL 60179

## SAFETY RULES

- Lock adjustment securely. Adjusting nut threads must engage threaded rod for support stand to work properly.
- Never overload or over-extend support stand. Severe personal injury may result.
- Use good judgement. Do not attempt to install large, bulky objects by yourself. Have a second person help balance the object.
- Only use cabinet support stand on a level surface.

## ASSEMBLY

Refer to Figure 1.

- Check for shipping damage. If damage has occurred, a claim must be filed with carrier for fastest action. Check for completeness. Locate all parts before attempting assembly.

**CAUTION:** Do not attempt assembly if parts are missing. Follow assembly instructions. Use parts list to order replacement parts.

- Thread base (Key No. 1) into the upright (Key No. 3).
- Thread support plate (Key No. 5) onto the threaded rod (Key No. 4).

## OPERATION

### DESCRIPTION

The Craftsman Cabinet Support Stand, Model 241300, is a lightweight versatile tool. To install cabinets, dry wall ceilings and many other applications. The adjustable nut allows precise adjustment to any height within the specified range.

### SPECIFICATIONS

Weight Capacity . . . . . 400 lbs

Height Range . . . . . 50 - 85"

**CAUTION:** Although the operation of this tool is simple, the operator must use this tool carefully. The cabinet support stand can handle heavy loads, but if not used correctly, could result in severe, personal injury.

### HEIGHT ADJUSTMENT

Refer to Figure 1.

- The height of the support plate is adjusted by positioning the threaded rod (Key No. 5) relative to the upright (Key No. 3).

- Depress button on the adjusting nut. Slide the support plate to near the desired support height.
- Release button so that adjusting nut engages thread. Turn adjusting nut to finely adjust support plate to final height.
- For large objects, attach a 2 x 4 to the support plate to increase stability.
- **Other uses of the Cabinet Support Stand:**

Drywall ceilings, duct work, light fixtures, crown molding, drapery tracks, beams, headers, rafters, soffit and decks.

## Model 351.241300

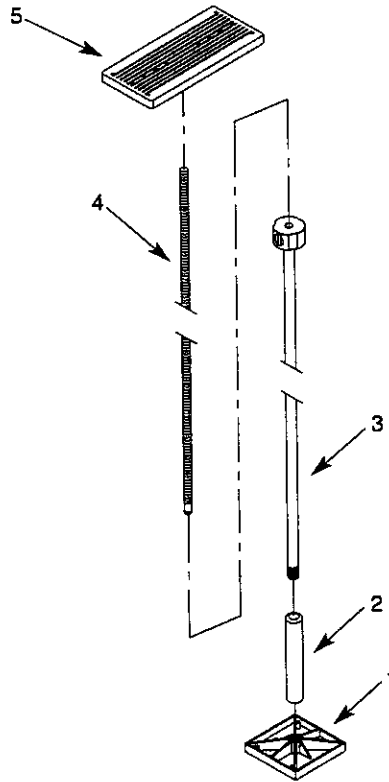


Figure 1 - Replacement Parts Illustration for Support Stand

### REPLACEMENT PARTS LIST FOR SUPPORT STAND

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	21963.00	Base	1
2	21964.00	Grip	1
3	21965.00	Upright with Adjustment Nut	1
4	21966.00	Threaded Rod	1
5	21967.00	Support Plate with 2 Warning Labels	1
Δ	21968.00	Operator's Manual	1

Δ Not Shown

## NOTES

## NOTES

## NOTES

## Get it fixed, at your home or ours!

### Your Home

For repair – **in your home** – of all major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

**1-800-4-MY-HOME<sup>®</sup>** Anytime, day or night  
(1-800-469-4663) (U.S.A. and Canada)  
[www.sears.com](http://www.sears.com) [www.sears.ca](http://www.sears.ca)

### Our Home

For repair of carry-in products like vacuums, lawn equipment, and electronics, call or go on-line for the nearest **Sears Parts and Repair Center.**

**1-800-488-1222** Anytime, day or night (U.S.A. only)  
[www.sears.com](http://www.sears.com)

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

**1-800-827-6655** (U.S.A.) **1-800-361-6665** (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

**1-888-SU-HOGAR<sup>SM</sup>**  
(1-888-784-6427)

Au Canada pour service en français:

**1-800-LE-FOYER<sup>MC</sup>**  
(1-800-533-6937)  
[www.sears.ca](http://www.sears.ca)

# SEARS

© Sears, Roebuck and Co.

® Registered Trademark / <sup>TM</sup> Trademark / <sup>SM</sup> Service Mark of Sears, Roebuck and Co.

® Marca Registrada / <sup>TM</sup> Marca de Fábrica / <sup>SM</sup> Marca de Servicio de Sears, Roebuck and Co.

<sup>MC</sup> Marque de commerce / <sup>MD</sup> Marque déposée de Sears, Roebuck and Co.