


OPERATOR'S MANUAL MANUEL DEL OPERADOR

CRAFTSMAN®

40V LITHIUM-ION CORDLESS HEDGE TRIMMER CORTASETOS INALÁMBRICO LITIO-IÓN 40V

Model No.
138. 99017

Número de modelo
138. 99017

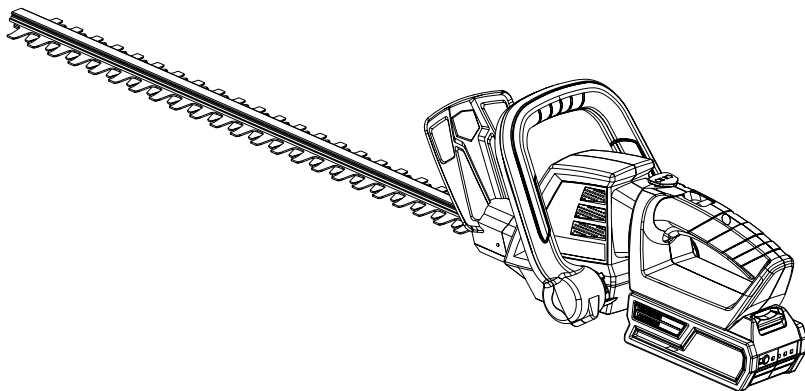

⚠ WARNING: To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

⚠ ADVERTENCIA: Para reducir el riesgo de lesiones, el usuario debe leer y comprender el manual del operador antes de usar este producto.

Customer Help Line: 1-888-266-7096
Teléfono de atención al consumidor: 1-888-266-7096

Sears Brands Management Corporation, Hoffman Estates, IL 60179 USA
Visit the Craftsman web page: www.craftsman.com
Visite el sitio web de Craftsman: www.craftsman.com

**Save this manual for future reference
Guarde este manual para futuras consulta**



TABLE OF CONTENTS / ÍNDICE DE CONTENIDO

ENGLISH

- Warranty.....2
- Introduction.....2
- General Safety Rules.....3
- Specific Safety Rules.....4-5
- Symbols.....6-7
- Features.....8
- Assembly.....8
- Operation.....9-10
- Maintenance.....11
- Illustrated parts list.....12
- Figure numbers (illustrations).....i-ii

ESPAÑOL

- Garantía.....Inlges seccion.....2
- Introducción.....Inlges seccion.....2
- Reglas de seguridad generales.....3-4
- Reglas de seguridad específicas.....4-5
- Símbolos.....6-7
- Características.....8
- Armado.....8
- Funcionamiento.....9-11
- Mantenimiento.....11-12
- Figura numeras (ilustraciones).....i-ii

CRAFTSMAN® FOUR YEAR FULL WARRANTY

FOR FOUR YEARS from the date of purchase this product is warranted against any defects in material or workmanship. FOR TWO YEARS from the purchase date a supplied battery pack or charger is warranted against material or workmanship defects. With proof of purchase, a defective product will be replaced free of charge.

For warranty coverage details to obtain free replacement, visit the web site: www.craftsman.com

This warranty is void if this product is ever used while providing commercial services or if rented to another person. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears Brands Management Corporation, Hoffman Estates, IL 60179

* * *

GARANTÍA COMPLETA DE CUATRO AÑOS CRAFTSMAN®

Esta soplador tiene garantía por cualquier defecto en material o mano de obra DURANTE CUATRO AÑOS desde la fecha de compra. Las baterías y el cargador tienen garantía por cualquier defecto durante dos año desde la fecha de compra. Los productos defectuosos se reemplazarán sin cargo.

Para conocer los detalles sobre la cobertura de la garantía para obtener un replazo gratuito, visite el sitio web: www.craftsman.com.

La garantía pierde validez si este producto se utiliza mientras se prestan servicios comerciales o si se alquila a otra persona. Esta garantía le otorga derechos legales específicos y es posible que también tenga derechos que varían según el estado.

Sears Brands Management Corporation, Hoffman Estates, IL 60179


INTRODUCTION / INTRODUCCIÓN

This tool has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

* * *

Esta herramienta ofrece numerosas características para hacer más agradable y placentero su uso. En el diseño de este producto se ha conferido prioridad a la seguridad, el desempeño y la fiabilidad, por lo cual se facilita su manejo y mantenimiento.

GENERAL SAFETY RULES

 **WARNING:** Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

READ ALL INSTRUCTIONS

- Know your hedge trimmer. Read and understand the operator's manual and observe the warnings and instruction labels affixed to the hedge trimmer.
- Stay alert — watch what you are doing and use common sense when operating a power hedge trimmer. Do not use hedge trimmer while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power hedge trimmers may result in serious personal injury.
- Do not allow children or untrained individuals to use this unit.
- Use Safety Glasses — always wear eye protection with side shields marked to comply with ANSI Z87.1.
- Protect your lungs. Wear a face or dust mask if the operation is dusty. Following this rule will reduce the risk of serious personal injury.
- Dress Properly — Do not wear loose clothing or jewelry. Contain long hair. Loose clothes, jewelry, or long hair can get caught in moving parts.
- Wear heavy long pants, long sleeves, boots, and gloves. Do not wear loose fitting clothing, short pants, sandals, or jewelry of any kind. Do not go barefoot.
- Secure long hair so it is above shoulder level to prevent entanglement in any moving parts.
- Keep Children Away — keep all bystanders, children, and pets at least 50 feet away.
- Use Right Appliance – do not use appliance for any job except that for which it is intended.
- Don't Force Hedge Trimmer. It will do the job better and less with likelihood of risk of injury at the rate for which it was designed
- Disconnect Hedge Trimmer – remove battery from hedge trimmer when not in use, before servicing, when changing accessories, such as blade and the like.
- Do Not Overreach — Keep proper footing and balance at all times. Proper footing and balance enables better control of the hedge trimmer in unexpected situations. Do not use on a ladder or unstable support.
- Do not operate in poor lighting.
- Keep hands, face, and feet at a safe distance from moving parts. Do not touch or try to stop the cutting blades when they are moving.
- Do not use hedge trimmer if switch does not turn it on or off. A hedge trimmer that cannot be controlled with the switch is dangerous and must be repaired.
- Avoid Accidental Starting — Be sure switch is in the locked or off position before plugging into power cord. Carrying hedge trimmers with your finger on the switch or plugging the power cord into a hedge trimmer with the switch on invites accidents.
- Avoid Dangerous Environments — Do not use the hedge trimmer in damp or wet locations. Do not operate the hedge trimmer in rain.
- Maintain Hedge Trimmer with Care — Follow instructions for lubrication and changing accessories, keep handles dry, clean and free from oil and grease. Keep cutting blades sharp and clean. Properly maintained hedge trimmers with sharp cutting edges are less likely to bind and are easier to control and reduce risk of injury.
- Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the hedge trimmer's operation. If damaged, have the hedge trimmer serviced before using. A guard or any other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Many accidents are caused by poorly maintained hedge trimmers.

GENERAL SAFETY RULES

- Keep the hedge trimmer and its handle dry, clean and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum based products, or any strong solvents to clean your hedge trimmer. Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.
- To avoid the risk of electric shock, do not operate unit in damp or wet locations.
- Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one hedge trimmer may create a risk of injury when used on another hedge trimmer.
- Hedge trimmer service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel may result in a risk of injury.
- When servicing a hedge trimmer, use only identical replacement parts. Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of shock or injury.

SPECIFIC SAFETY RULES

- Before starting the hedge trimmer, make sure the blade is not in contact with any object.
- Stop the unit, remove the battery, and make sure the blade has stopped before setting the unit down.
- Never cut any material with a diameter larger than 2/3 in.
- **DANGER!** Risk of cut. Keep hands away from blades. Do not attempt to remove cut material or hold material to be cut when blades are moving. Keep both hands on handles when power is on. Make sure battery is removed and the trigger is released when clearing jammed material from blades. Do not grasp the exposed cutting blades or cutting edges when picking up or holding the unit.
- Blades coast after unit is turned off.
- Always stop the motor when cutting is delayed or when walking from one cutting location to another.
- Keep unit clean of grass clippings and other materials. They may become lodged in the cutting blades.
- Store Idle Hedge Trimmer Indoors — When not in use, product should be stored indoors in a dry, locked up place—out of the reach of children.
- Replace scabbard cover when unit is not in use.
- Never douse or squirt the unit with water or any other liquid. Keep handles dry, clean, and free from debris. Clean after each use; see storage instructions.
- Secure the unit while transporting.

BATTERY SAFETY

- Battery operated units do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards even when unit is not operating.
- Remove the battery pack before making any adjustments, cleaning, storing, or removing material from the unit, or when not in use.
- A battery pack must be recharged only with the specified charger for the battery pack. A charger that may be suitable for one type of battery pack may create a risk of fire when used with another battery pack. Use battery pack only with charger listed.
- To reduce the risk of explosion and possible injury, **DO NOT** place battery units or their batteries near fire or heat.
- Do not mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery pack can propel debris and chemical. If exposed, flush with water immediately.
- For use with Craftsman 40 V lithium-ion battery packs (#29111 2Ah and #29131 4Ah). Refer to your battery owners manual for further information.
- Do not charge unit in a damp or wet location. Following this rule will reduce the risk of electric shock.
- For best results, your battery unit should be charged in a location where the temperature is more than 50°F (10°C) but less than 100°F (38°C). Do not store outside or in vehicles.

SPECIFIC SAFETY RULES

- Under extreme usage or temperature conditions, battery pack leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water, then neutralize with lemon juice or vinegar. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.
- Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow. A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- Do not dispose of batteries in a fire. The cell may explode. Batteries should be recycled. Consult your local waste authority for information regarding available recycling and/ or disposal options.
- When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery pack terminals together may cause sparks, burns, or a fire.
- Save these instructions. Refer to them frequently and use them to instruct others who may use this hedge trimmer. If you loan someone this hedge trimmer, loan them these instructions also.

CALIFORNIA PROPOSITION 65



WARNING: This product and some dust created by power sanding, sawing, grinding, drilling, and other construction activities may contain chemicals, including lead, known to cause cancer, birth defects or other reproductive harm. Wash hands after handling. Some examples of these chemicals are:




- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.










SAVE THESE INSTRUCTIONS

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.



SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	EXPLANATION
	Safety Alert Symbol	Indicates a potential personal injury hazard.
	Read Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear eye protection with side shields marked to comply with ANSI Z87.1.
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	No Hands Symbol	Failure to keep your hands away from the blade will result in serious personal injury.
	Keep Bystanders Away	Keep all bystanders at least 50 ft. away.
	Gloves	Wear non-slip, heavy-duty protective gloves when handling the blades.
	Operate With Two Hands	Hold and operate the hedge trimmer properly with both hands.
	Moving Parts	Keep hands away from moving parts.

SYMBOLS

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	EXPLANATION
	Electric Shock	Failure to use in dry conditions and to observe safe practices can result in electric shock.
	Recycle Symbols	This product uses nickel-cadmium (Ni-Cd) and lithium-ion (Li-ion) batteries. Local, state, or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.
V	Volts	Voltage
hrs	Hours	Time
—	Direct Current	Type or a characteristic of current
n ₀	No Load Speed	Rotational speed, at no load
.../min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute

FEATURES

PRODUCT SPECIFICATIONS

Motor.....	40 V DC	Cutting Speed.....	1600 cuts/min
Blade Length.....	24 in.	Weight(without battery pack).....	5.5 lbs (2.5 Kg)
Cutting Capacity.....	2/3 in.		

KNOW YOUR HEDGE TRIMMER

See Figure 1, page i.

The safe use of this product requires an understanding of the information on the tool and in this operator's manual as well as a knowledge of the project you are attempting. Before use of this product, familiarize yourself with all operating features and safety rules.

GUARD

The guard helps to deflect chips or other debris away from the operator's hands.

TRIGGER SWITCH AND LOCK OFF BUTTON

The trigger switch, located beneath the rear handle, and the lock-off button, located behind the front handle, must be depressed simultaneously to allow blade rotation. Lock-off switch may be released once hedge trimmer is running.

ROTATING HANDLE

The handle of your hedge trimmer rotates 90 degrees to the left or right for control and precision trimming.

ADJUSTABLE AUXILIARY HANDLE

The adjustable auxiliary handle adjusts to 3 positions for better comfort and control.

ASSEMBLY




UNPACKING

This product requires no assembly.

- Carefully remove the product and any accessories from the box. Make sure that all items listed in the packing list are included.
- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.
- If any parts are damaged or missing, please call 1-888- 266-7096 for assistance.

PACKING LIST

Hedge Trimmer
Scabbard
Operator's Manual
40v Battery
40v Charger

-  **WARNING:** If any parts are damaged or missing, do not operate this product until the parts are replaced. Failure to heed this warning could result in serious personal injury.
-  **WARNING:** Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.
-  **WARNING:** Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

OPERATION

⚠ WARNING: Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

⚠ WARNING: Always wear safety goggles or safety glasses with side shields that comply with ANSI Z87.1 when operating power tools. Failure to do so could result in objects being thrown into your eyes, resulting in possible serious injury.

⚠ WARNING: Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

Before each use, inspect the entire product for damaged, missing, or loose parts such as screws, nuts, bolts, caps, etc. Tighten securely all fasteners and caps and do not operate this product until all missing or damaged parts are replaced by qualified repair personnel. Call 1-888-266-7096 to obtain replacement parts. Part installation should only be performed by qualified repair personnel.

APPLICATIONS

You may use this product for the purpose listed below:

- Trimming and shaping hedges and shrubbery

IMPORTANT: For complete charging instructions, refer to the Operator's Manuals for the Craftsman 40 volt battery pack and charger.

TO INSTALL / REMOVE BATTERY PACK

See Figure 2, page i.

⚠ WARNING: Always remove battery pack from the product when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack will prevent accidental starting that could cause serious personal injury.

To install:

- Place the power switch in the OFF position.
- Place the battery pack in the hedge trimmer. Align raised rib on battery pack with groove in the hedge trimmer's battery port.
- Make sure the latch on the battery pack snaps in place and that the battery pack is secured in the hedge trimmer before beginning operation.

CAUTION: When placing battery pack in the tool, be sure raised rib on battery pack aligns with the bottom of the tool and latches into place properly. Improper installation of the battery pack can cause damage to internal components.

To remove:

- Place the power switch in the OFF position.
- Locate the latch on the front of the battery pack and depress to release the battery pack from the hedge trimmer.
- Remove battery pack from the hedge trimmer.

⚠ WARNING: Battery tools are always in operating condition. Therefore, switch should always be locked with hands free of the lock-out button when not in use. Remove battery pack when transporting or carrying hedge trimmer to avoid accidental starting, which may result in serious injury.

BATTERY PROTECTION FEATURES

Craftsman 40 V lithium-ion batteries are designed with features that protect the lithium-ion cells and maximize battery life. Under some operating conditions, these built-in features may cause the battery and the tool it is powering to act differently from nickel-cadmium batteries. During some applications, the battery electronics may signal the battery to shut down, and cause the tool to stop running.

To reset the battery and tool, place the power switch in the OFF position; then start the unit and resume normal operation. If placing the power switch in the OFF position does not reset the battery and tool, the battery pack is depleted. If depleted, the battery pack will begin charging when placed on the lithium-ion charger.

STARTING AND STOPPING THE HEDGE TRIMMER

See Figure 3, page i.

To start:

- Remove the scabbard.
- Press and hold the lock-out button.
- Depress the switch trigger.
- Release the lock-out button. Continue to depress the switch trigger for extended operation.

OPERATION

To stop:

- Release the switch trigger to stop the hedge trimmer.
- Upon release of the switch trigger, the locked-out button will automatically reset to the locked-out position.

USING THE ROTATING REAR HANDLE

See Figure 4, page i.

- Place the hedge trimmer on a flat and even surface and disconnect from the power supply.
- Make sure that you released the triggers.
- Press the lock button and begin turning the rear handle. Release the lock button and turn the handle 90 degrees to either side until it clicks into place and the button pops out.
- To turn the handle back to center, press the lock button again, turn the handle slightly, release the lock button and continue turning the handle until it locks into place.

USING THE ADJUSTABLE AUXILIARY HANDLE


See Figure 5, page i.

- Place the hedge trimmer on a flat and even surface and disconnect from the power supply.
- Make sure that you released the triggers.
- Press the side lock button on the handle and begin moving forward or backwards. Release the lock button and continue moving the handle until it locks into place.


HOLDING THE HEDGE TRIMMER


See Figures 6, pages ii.

- The unit has both a front adjustable auxiliary handle and a rotating rear handle. With the blade directed away from you, hold the unit by both handles.

 **WARNING:** Always keep both hands on the hedge trimmer handles. Never hold shrubs with one hand and operate hedge trimmer with the other. Failure to heed this warning can result in serious injury.

CUTTING TIPS

 **DANGER:** Never cut near electric cords or lines. If blade jams on any electrical cord or line, **DO NOT TOUCH THE BLADE! IT CAN BECOME ELECTRICALLY LIVE AND VERY DANGEROUS.** Continue to hold the hedge trimmer by the insulated rear handle or lay it down and away from you in a safe manner. Disconnect the electrical service to the damaged line or cord before attempting to free the blade from the line or cord. Contact with the blade, other conductive parts of the hedge trimmer, or live electric cords or lines will result in death by electrocution or serious injury.

 **WARNING:** Clear the area to be cut before each use. Remove all objects such as cords, lights, wire, or loose string which can become entangled in the cutting blade and create a risk of serious personal injury.

- Before starting the hedge trimmer, hold the unit with both hands with the cutting blades directed away from you. Always use the hedge trimmer properly.
- Do not force the hedge trimmer through heavy shrubbery. This can cause the blades to bind and slow down. If the blades slow down, reduce the pace.
- Do not try to cut stems or twigs that are larger than 2/3 in. thick, or those obviously too large to feed into the cutting blade. Use a non-powered hand saw or pruning saw to trim large stems.
- If blades do become jammed, stop the motor, allow the blades to stop and remove the battery pack before attempting to remove the obstruction.
- If desired, you can use a string to help cut your hedge level. Decide how high you want the hedge. Then, stretch a piece of string along the hedge at this height. Trim the hedge just above this guide line of string. Trim the side of a hedge so that it will be slightly narrower at the top. More of the hedge will be exposed when shaped this way, and it will be more uniform.
- Always hold hedge trimmer with both hands when operating. Use a firm grip on the handles. The unit is used for cutting in either direction in a slow, sweeping action from side to side.
- Wear gloves when trimming thorny or prickly growth.
- When trimming new growth, use a wide sweeping action, so that the stems are fed directly into the cutting blade. Older growth will have thicker stems and will be trimmed easiest by using a sawing movement.

MAINTENANCE

⚠ WARNING: When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.

⚠ WARNING: Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes resulting in possible serious injury.

⚠ WARNING: To avoid serious personal injury, always remove the battery pack from the product before inspecting, cleaning or performing any maintenance.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

⚠ WARNING: Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.

Replacement parts should only be installed by qualified repair personnel.

BATTERY PACK REMOVAL AND PREPARATION FOR RECYCLING

⚠ WARNING: Upon removal, cover the battery pack's terminals with heavy-duty adhesive tape. Do not attempt to destroy or disassemble battery pack or remove any of its components. Batteries must be recycled or disposed of properly. Also, never touch both terminals with metal objects and/ or body parts as short circuit may result. Keep away from children. Failure to comply with these warnings could result in fire and/or serious injury.

TRANSPORTING AND STORING

- Always place the scabbard on the blade before storing or transporting the hedge trimmer. Use caution to avoid the sharp teeth of the blade.
- Clean the hedge trimmer thoroughly before storing. Store the hedge trimmer indoors, in a dry place that is inaccessible to children. Keep away from corrosive agents such as garden chemicals and de-icing salts.

LUBRICATING THE BLADE

See Figure 7, page ii.

⚠ WARNING: Always allow the blades of the hedge trimmer to come to a stop and remove the battery pack before lubricating. Failure to do so could result in accidental starting causing possible serious personal injury.

For easier operation and longer blade life, lubricate the hedge trimmer blade before and after each use.

- Remove the battery pack from the hedge trimmer.
 - Lay the hedge trimmer on a flat surface. Apply light weight machine oil along the edge of the top blade.
- NOTE:** If you will be using the hedge trimmer for an extended time, it is advisable to oil the blade periodically.

- Stop the hedge trimmer.
- Remove the battery pack.
- Lubricate the hedge trimmer as described above.
- Reinstall the battery pack and resume use.

CLEANING THE HEDGE TRIMMER

- Remove the battery pack.
- Slide the scabbard over the blade.
- Clean dirt and debris from the body of the hedge trimmer, using a damp cloth with a mild detergent.

NOTE: Do not use any strong detergents on the plastic housing or the handle. They can be damaged by certain aromatic oils such as pine and lemon, and by solvents such as kerosene.

- Moisture can cause a shock hazard. Wipe off any moisture with a soft dry cloth.
- Use a small brush or the air discharge of a small vacuum cleaner brush to clear dust or debris from the air vents on the motor housing.


STORING THE HEDGE TRIMMER

See Figure 8, page ii.

- Clean the hedge trimmer thoroughly before storing. Store the hedge trimmer in a dry, well-ventilated place that is inaccessible to children. Keep away from corrosive agents such as garden chemicals and de-icing salts.
- Always place the scabbard on the cutting blades before storing.

CRAFTSMAN 40 V HEDGE TRIMER – MODEL NUMBER 138. 99017

The model number will be found on a label attached to the motor housing. Always mention the model number when calling to order replacement parts. To order parts, call 1-888-266-7096

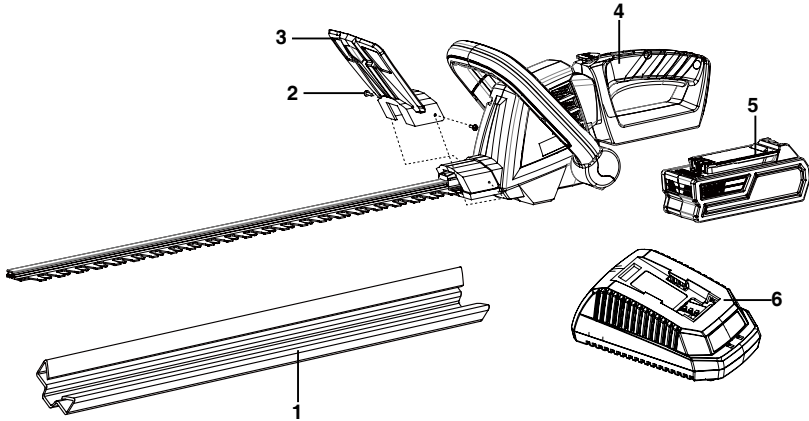

PARTS LIST

Key Part

No.	Number	Description	Qty
1	34991887	Scabbard.....	1
2	3221675A	Screw.....	2
3	34101887	Guard.....	1
4	34981887	Hedger.....	1
5	31103996	Battery Pack.....	1
6	31101998	Battery Charger.....	1

See this section for all of the figures referenced in the operator's manual.

Consulte esta sección para ver todas las figuras a las que se hace referencia en el manual del operador.

Fig. 1

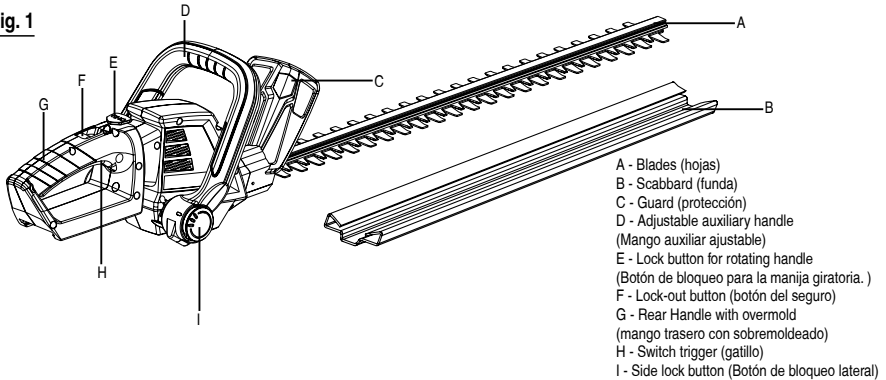


Fig. 2

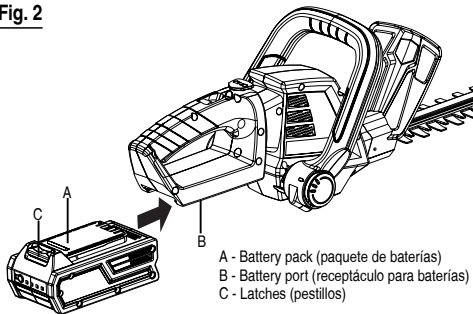


Fig. 3

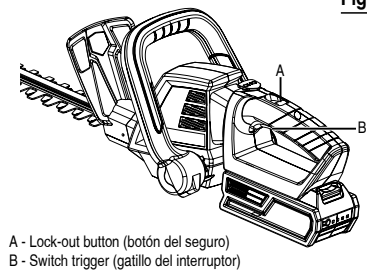


Fig. 4

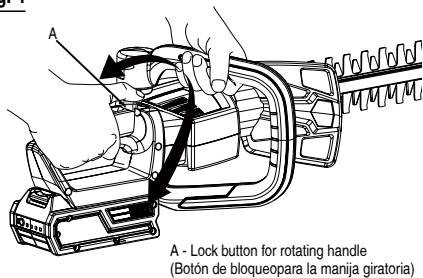


Fig. 5

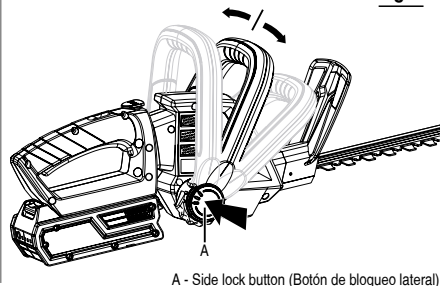


Fig. 6

PROPER OPERATING POSITION
POSICIÓN CORRECTA PARA EL MANEJO DE
LA HERRAMIENTA

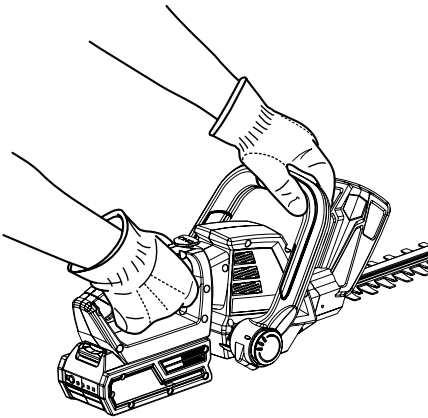


Fig. 7


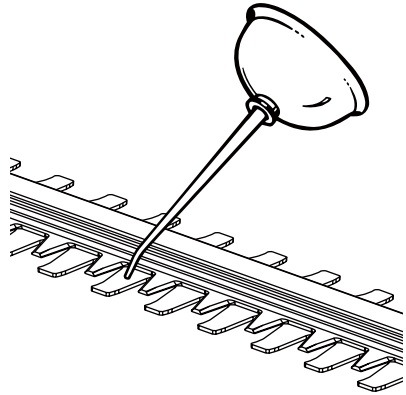


Fig. 8

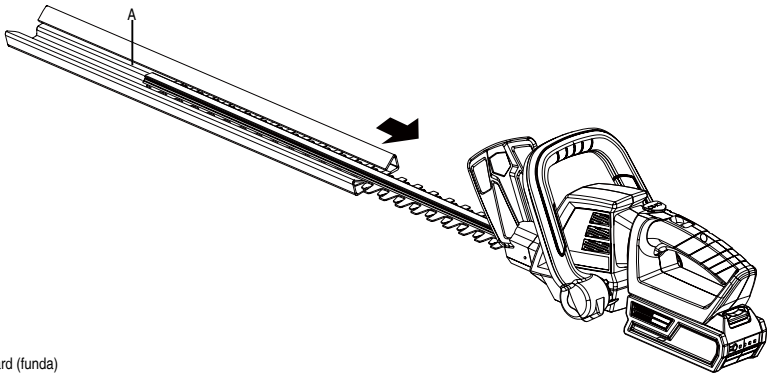

A - Scabbard (funda)