



3-BUTTON REMOTE CONTROLS MODELS 139.30498 AND 139.30499

For use with Craftsman 315 MHz or 390 MHz garage door openers manufactured after January 1, 1993. The garage door opener activates when the programmed button on the remote control is pressed. The remote control can activate up to three garage door openers.


Make sure the garage door opener has a working light bulb because it is a programming indicator.

WARNING


To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate or play with remote controls.
- Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.



MODEL 139.30498

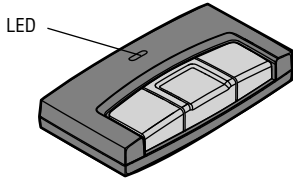


MODEL 139.30499

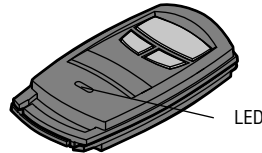

PREPARE

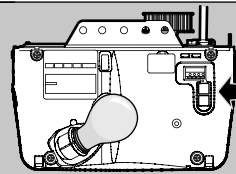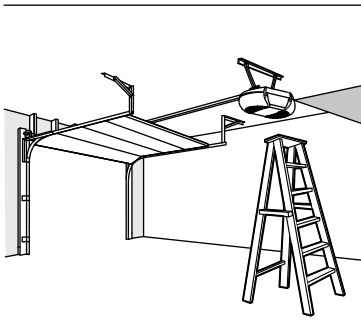  


 Locate the Learn button on the garage door opener.
NOTE: Your garage door opener may look different.

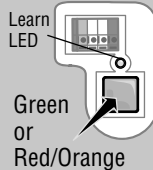


Learn LED
Green or Red/Orange

 OR




Learn LED
Purple

 OR

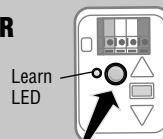


Learn LED
Yellow

 Locate the Program button on the remote control.

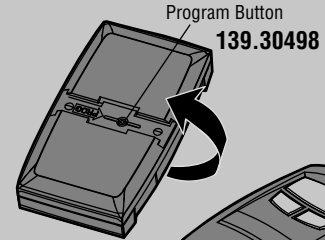

Program Button
139.30498

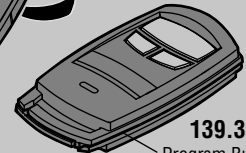 

139.30499
Program Button

PROGRAM THE REMOTE CONTROL (139.30498)

1 To enter programming mode, use the visor clip to press the Program button until the LED on the **front** of the remote control turns on.

2 Press and release the Learn button on the garage door opener.

The Learn LED will light.

Within 30 seconds...

3 Press and release the remote control button you want to use...

Check to see if the garage door opener light bulb blinks. If not, wait for the remote control LED to light solid then **slowly** press and release the remote control button again. **Repeat** until the light bulb blinks.

DO NOT press the button after the light bulb blinks.

4 To exit programming mode, press any remote control button **except** the button that was just programmed.


5 To test, press the programmed button on the remote control...

The garage door opener will activate.


6 Install the visor clip.

PROGRAM THE REMOTE CONTROL (139.30499)

1 Using a safety pin or paper clip, press the Program button until the LED on the **front** of the remote control turns on.

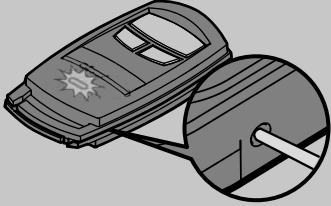

2 Press and release the Learn button on the garage door opener.

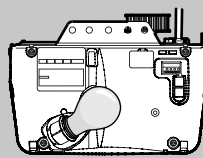


The Learn LED will light.

Within 30 seconds...


3 Press and release the remote control button you want to use...

Check to see if the garage door opener light bulb blinks. If not, wait for the remote control LED to light solid then **slowly** press and release the remote control button again. **Repeat** until the light bulb blinks.




DO NOT press the button after the light bulb blinks.

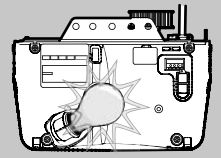

4 To exit programming mode, press any remote control button **except** the button that was just programmed.

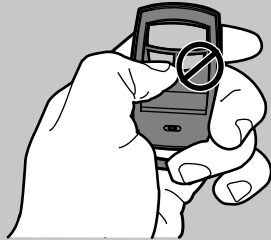

5 To test, press the programmed button on the remote control...

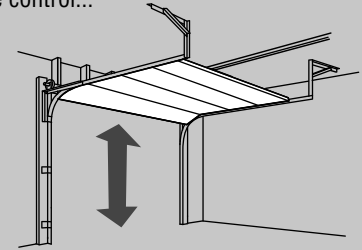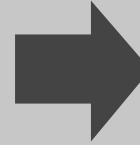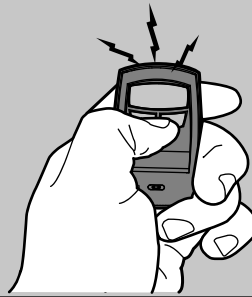


The garage door opener will activate.

BATTERY

The LED on your remote will stop flashing when the battery is low and needs to be replaced. To replace battery, open the case as shown. Insert battery positive side up (+). Replace the battery with only 3V2032 coin cell batteries. Dispose of old battery properly.


139.30498

Pry open the case first in the middle (1), then at each side (2 and 3) with the visor clip.

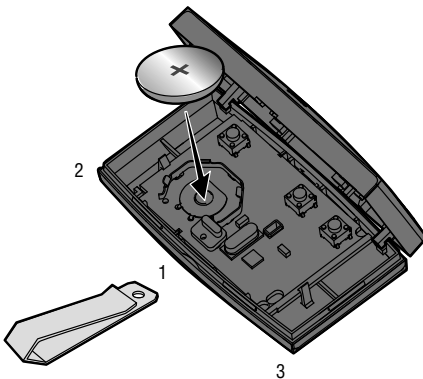

139.30499

Pry open the case with a screwdriver blade.

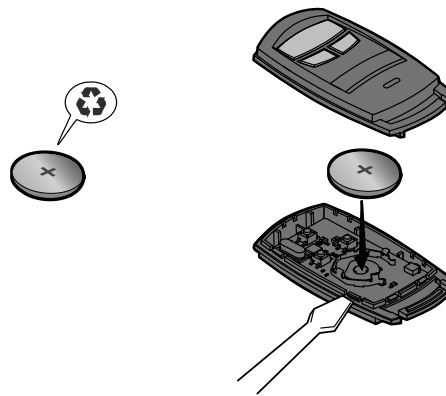

⚠ WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with 3V2032 coin batteries.
- **DO NOT** recharge, disassemble, heat above 212° F (100° C) or incinerate.

NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. **THERE ARE NO OTHER USER SERVICEABLE PARTS.**

Tested to Comply with FCC Standards for Home or office use. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

REPLACEMENT PARTS


Battery 10A20
 Visor Clip
 (Model 139.30498 ONLY) 29B137

To order replacement parts call...
1-800-4-MY-HOME® (1-800-469-4663)


Para uso con abre-puertas de garaje Craftsman de 315 MHz o 390 MHz fabricados después del 1° de enero de 1993. Uno de los botones del control remoto se programa para el accionamiento del abre-puerta de garaje. Con un control remoto pueden activarse hasta tres abre-puertas.

Verificar que el abre-puerta tenga una lámpara en funcionamiento ya que será un indicador de programación.

 MODELO 139.30498

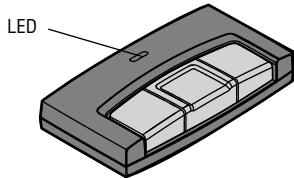

MODELO 139.30499


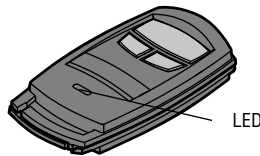 


⚠ ADVERTENCIA

Para evitar accidentes LESIVOS e incluso MORTALES con un portón o un abre-puerta de garaje en movimiento:

- SIEMPRE mantenga el control remoto alejado del alcance de los niños. NUNCA permita a los niños usar ni jugar con un control remoto.
- Abra/cierre una puerta de garaje ÚNICAMENTE cuando pueda verla claramente, esté correctamente instalada y no hayan obstrucciones en su trayectoria.
- SIEMPRE mantenga a la vista el portón o la puerta de garaje hasta que esté totalmente cerrada. NUNCA permita que alguien cruce bajo una puerta de garaje en movimiento.



PREPARACIÓN

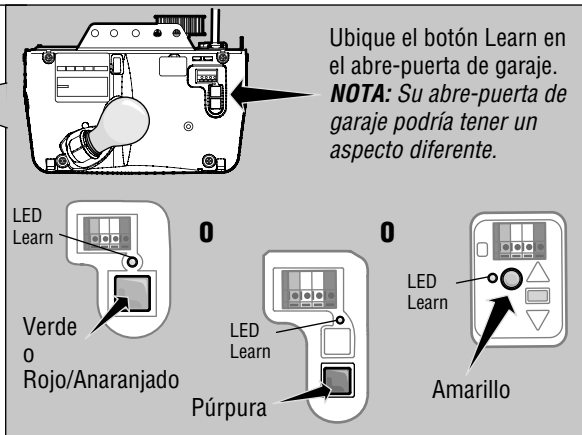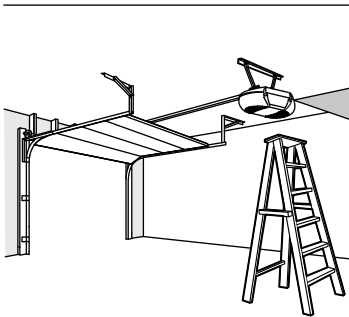

Ubique el botón Program en el control remoto.




PROGRAMACIÓN DEL CONTROL REMOTO (139.30498)

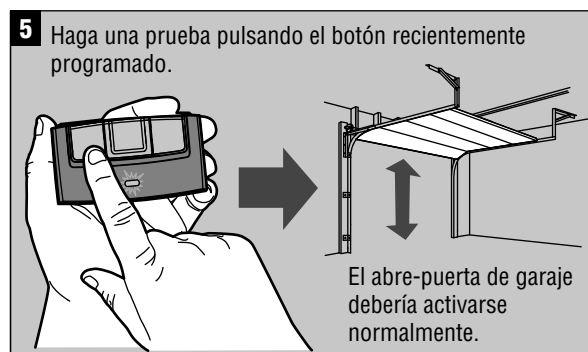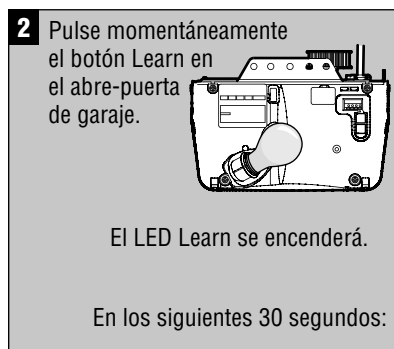


PROGRAMACIÓN DEL CONTROL REMOTO (139.30499)

1 Pulse el botón Program con un alfiler u objeto similar hasta que LED en el **frente** del control remoto se encienda.

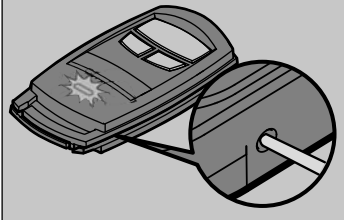

2 Pulse momentáneamente el botón Learn en el abre-puerta de garaje.

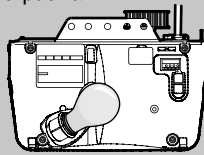


El LED Learn se encenderá.


En los siguientes 30 segundos:

3 Pulse momentáneamente el botón del control remoto que desea utilizar para el abre-puerta.




La luz del abre-puerta debería encenderse intermitentemente. Si no lo hiciera, espere hasta que el LED del control remoto quede encendido permanentemente y vuelva pulsar **lentamente** el botón. **Repita** esto hasta que la luz se encienda intermitentemente. **NO** pulse el botón después de que la luz se haya encendido.

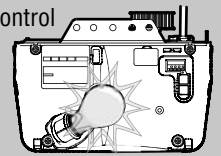

4 Para salir del modo de programación pulse cualquier botón del control remoto **excepto** el botón que acaba de programar.

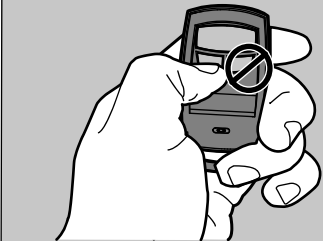

5 Haga una prueba pulsando el botón recientemente programado.

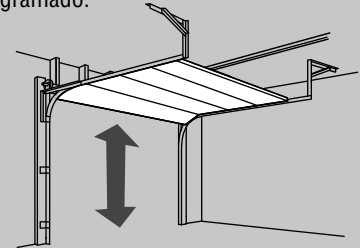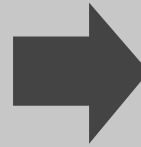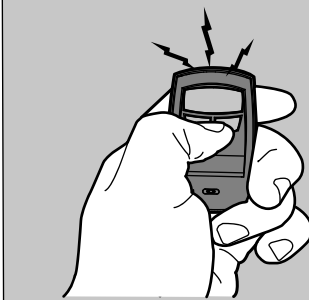


El abre-puerta de garaje debería activarse normalmente.

BATERÍA

Cuando la batería tenga poca carga y debe ser cambiada, el LED del control remoto dejará de encenderse. Para cambiar la batería abra la unidad (tal como se muestra) y coloque la batería con el lado positivo (+) hacia arriba. Use exclusivamente minibaterías 3V2032. Deseche la batería usada según corresponda.


139.30498

Con el bronche para visera del control ábralo primero en medio (1) y después de cada lado (2 y 3).

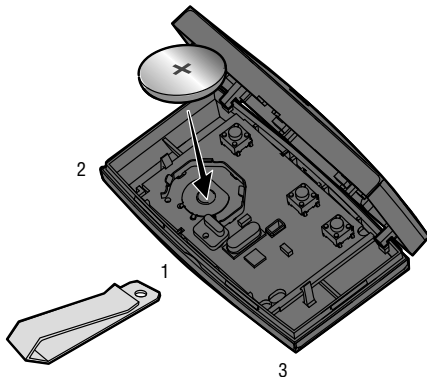

139.30499

Abra la unidad con la punta de un destornillador.

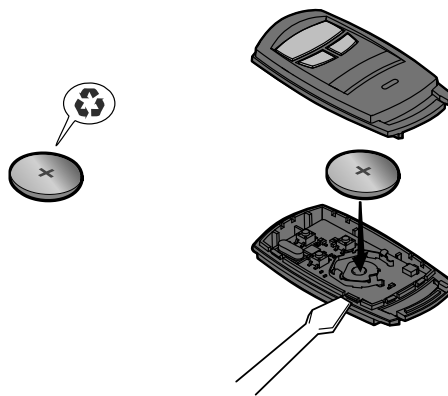

⚠ ADVERTENCIA

Para evitar accidentes LESIVOS e incluso MORTALES:

- NO permita que los niños entren en contacto con baterías.
- Consulte a un médico inmediatamente si se tragara una batería.

Para reducir el riesgo de incendio, explosión o quemadura química:

- Utilice exclusivamente minibaterías 3V2032.
- NO recargue, desarme ni caliente a más de 212 °F (100 °C) una batería.

ADVERTENCIA: Según la FCC de EE.UU. y las Normas Industriales Canadienses (IC), está prohibido modificar de cualquier manera este receptor/transmisor, excepto para el cambio de código o para cambiar la batería. NO HAY OTROS COMPONENTES QUE NECESITEN INTERVENCIÓN.

Probado para cumplir con las normas de la FCC de EE.UU. para uso en residencias u oficinas. El uso estará sujeto a las siguientes condiciones: (1) Este dispositivo no debe causar interferencia y (2) este dispositivo debe ser apto para recibir interferencia, aunque la misma pueda afectar su funcionamiento.

PARTES DE REPUESTO

Batería 10A20
 Bronche para visera
 (únicamente para el Modelo 139.30498)..... 29B137

Para solicitar repuestos llamar al:
1-800-4-MY-HOME® (1-800-469-4663)