

## Product Registration

Registering your product ensures you receive the most appropriate service and product support available. You can register your product during installation or at [register.creative.com](http://register.creative.com).

Please note that your warranty rights are not dependent on registration.

## Technical & Customer Support Services

Go to [support.creative.com](http://support.creative.com) to resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. You can also find Customer Support Services and other helpful information here.

## Other Information


Supplementary documentation for this product includes a detailed user guide, DoC and safety and regulatory information. These documents can be downloaded from the [support.creative.com](http://support.creative.com) site.

**Keep this document for future reference.**

© 2015 Creative Technology Ltd. All rights reserved. Creative, the Creative logo, Sound Blaster and the Sound Blaster logo are trademarks or registered trademarks of Creative Technology Ltd. in the United States and/or other countries. The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Creative Technology Ltd is under license. All other trademarks and trade names are those of their respective owners. All specifications are subject to change without prior notice. Use of this product is subject to a limited hardware warranty. Actual contents may differ slightly from those pictured.

CREATIVE


SoundBLASTER®  
FREE

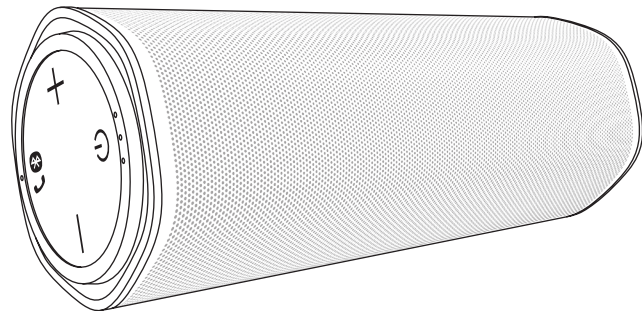

Quick Start

Model No.: SB1660





## 1. Power On

Press  to power on/off.  
Charge<sup>†</sup> speaker before first use.

## 2. Music Source

- A. Bluetooth®
- B. USB audio
- C. Aux-in
- D. MicroSD card\* via Integrated MP3 player



## 3. Play Music



-  Play/Pause
-  Skip track / Skip folder (Press and hold)
-  Shuffle\*\*
-  Repeat all\*\*

## 4. Bluetooth


Press and hold  for 2 seconds to enter pairing mode.

## 5. Speakerphone

Press  to answer/end a call  
Press  to mute /unmute mic.

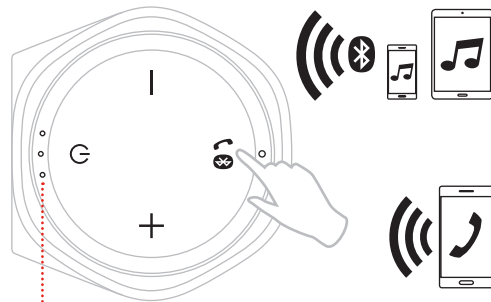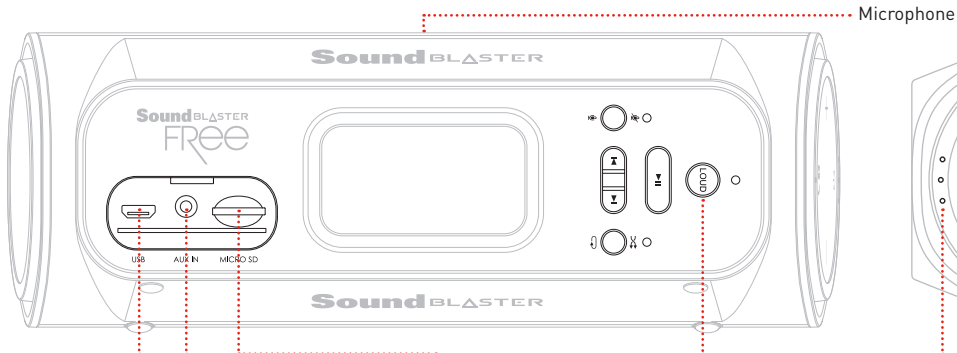


## 6. Loud mode

Press  to instantly boost the loudness, depth and spaciousness of the audio.

## 7. Battery indicator

Critical Low    Low    Mid    Full



The battery indicator consists of four LEDs. From left to right: a red LED with a sunburst icon (Critical Low), a red LED (Low), a red LED (Mid), and a red LED (Full).

<sup>†</sup> Power adapter not included. Compatible with 5V 500mA USB power adapters.

\* MicroSD card not included.

\*\* Not applicable for Bluetooth playback.

