

## **Safety & Regulatory Information**

### Notice for the USA

FCC Part 15: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, this notice is not a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following measures:

- Reorient or relocate the receiving antenna.

  Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/ TV

CAUTION: To comply with the limits for the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be installed with computer equipment certified to comply with the Class B limits

All cables used to connect the computer and peripherals must be shielded and grounded. Operation with non-certified computers or non-shielded cables may result in interference to radio or television reception.

#### Modifications

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

### **Notice for Canada**

This apparatus complies with the Class B limits for radio interference as specified in the Canadian
Department of Communications Radio Interference

Cet appareil est conforme aux normes de CLASSE "B" d'interference radio tel que spe'cifie' par le Ministère Canadien des Communications dans les règlements d'interfèrence radio.

### **Important Notice**

The serial number for the GigaWorks S750/S700/ S700 is located on the subwoofer. Please write this number down and keep it in a secure area. This is for your security.

#### CAUTION

Take care to prevent accidental operation of your new loudspeaker system at excessive sound pressure

In a typical personal computer installation, the GigaWorks S750/S700 satellite speakers are less than a meter from the listener.

If you do not hear sound from your new speaker, keep the GigaWorks S750/S700's volume control at a low level (two Level Indicators lit on the wired remote control) while trying to restore sound to your system. This will prevent accidental operation at uncomfortably loud levels.

### Compliance

This product conforms to the following Council

EMC Directive 89/ 336/ EEC amended by Directive 92/ 31/ EEC and 93/68/EEC LVD 73/ 23/ EEC amended by Directive 93/68/EEC.

## **Safety Warnings**



The lightning flash arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated, "dangerous voltwithin the product's enclosure, that may be of sufficient magnitude to constitute risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

#### CAUTION:

This symbol indicates that the marked item may be Hot and should not be touched without proper care.

- To minimize the risk of burns and other injuries to children, position the device such that hot surfaces are out of their reach
- To minimize the risk of fire, keep flammable materials like paper and cloth (for example, curtains) away from the hot



#### WARNING:

Do not expose this apparatus to dripping or splashing fluids, and ensure that no objects filled with liquids — such as vases — are placed on the apparatus.

### **WARNING**

#### DO NOT OPEN

TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SPEAKER COVERS (OR BACKS). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### **AVISQUE**

POUR EVITER TOUT RISQUE DE CHOC ELECTRIQUE, NE PAS DEMONTER LE COUVERCLE DU HAUT PARLEUR. AUCUN ENTRETIEN DES PIECES INTERIEURES N EST REQUIS. TOUT SERVICE D ENTRETIEN NE DOIT ETRE EFFECTUE ENTRETIEN OUALIFIE.

#### CAUTION:

TO PREVENT THE RISK OF ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, INSERT CAREFULLY.

#### ATTENTION:

POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU AU FOND.

### IMPORTANT NOTICE:

THE SERIAL NUMBER FOR THE SPEAKER IS LOCATED ON THE SUBWOOFER. PLEASE WRITE THIS NUMBER DOWN AND KEEP IT IN A SECURE AREA. THIS IS FOR YOUR **SECURITY** 

READ AND HEED IMPORTANT SAFETY WARNING ON REAR OF SPEAKER ENCLOSURE



### IMPORTANT SAFETY INSTRUCTIONS

- READ INSTRUCTIONS All safety and operating instructions should be read before the *GigaWorks* 5750/ S700 amplified subwoofer/satellite system is operated.
- **RETAIN INSTRUCTIONS** The safety and operating instructions should be retained for future reference.
- **HEED WARNINGS** All warnings on the subwoofer and in the operating instructions should be adhered to.
- **FOLLOW INSTRUCTIONS** All operating and usage instructions should be followed.
- CLEANING Unplug the subwoofer from the wall outlet or other power source before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- ATTACHMENTS Do not use attachments not recommended by Creative Technology as they may cause hazards.
- WATER AND MOISTURE Do not use the subwoofer near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- ACCESSORIES Do not place the GigaWorks \$750/5700 system on an unstable cart, stand, tripod, bracket, or table. The subwoofer or satellites may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by Creative Technology, or sold with the product. Any mounting of the satellites or subwoofer should follow the manufacturer's instructions, and should use a mounting accessory recommended by Creative Technology.
- VENTILATION Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the subwoofer and to prevent it from overheating; and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. The subwoofer should not be placed in a built-in installation such as a bookcase or rack unless proper

- ventilation is provided or Creative Technology instructions have been adhered to.
- HEAT The subwoofer should be situated away from heat sources such as radiators, heat registers, stoves, and other products (including amplifiers) that produce heat.
- POWER SOURCES The subwoofer should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
- POLARIZATION The subwoofer may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- POWER-CORD PROTECTION Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the subwoofer.
- **LIGHTNING** For added protection for the *GigaWorks* \$750/\$700 system during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the subwoofer due to lightning and power-line surges.
- OVERLOADING Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

- OBJECT AND LIQUID ENTRY Never push objects of any kind into the subwoofer through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the subwoofer.
- **SERVICING** Do not attempt to service the subwoofer yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- **DAMAGE REQUIRING SERVICE** Unplug the subwoofer from the wall outlet or other power source and refer servicing to qualified service personnel under the following conditions:
  - a)When the power-supply cord or plug is damaged. b)If liquid has been spilled, or object have fallen into the
  - c) If the subwoofer has been exposed to rain or water.
    d) If the subwoofer does not operate normally by following the operating instructions; or exhibits a
  - distinct change in performance.
    e)If the product has been dropped or damaged in any
- REPLACEMENT PARTS When replacement parts are required, be sure the service technician has used replacement parts specified by Creative Technology, or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- SAFETY CHECK Upon completion of any service or repairs to the GigaWorks \$750/\$700 system, ask the service technician to perform safety checks to determine that the GigaWorks \$750/\$700 system is in proper operating condition.
- WALL OR CEILING MOUNTING The GigaWorks \$750/\$700 satellites should be mounted to a wall or ceiling only as recommended by Creative Technology.



## **Contents**

### GigaWorks S750 / GigaWorks S700



GigaWorks S750



GigaWorks S700

Safety and Regulatory Information and Warnings1
Important Safety Instructions
Contents and copyright notice
Introduction4
Speaker Connection 5
Speaker Placement Options / Stand Attachment6
Audio Control Pod and Remote Control7
Connecting Input Devices
Understanding Upmixing11
Controlling Noise and Distortion12
Specifications and Upgrade option12

Information in this document is subject to change without notice and does not represent a commitment on the part of Creative Technology Ltd. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the written permission of Creative Technology Ltd.

Version 1.0 November 2003

© 2003 Creative Technology Ltd. All rights reserved. GigaWorks is a trademark of Creative Technology Ltd. The Creative logo, EAX, Audigy and Sound Blaster are registered trademarks, and Extigy and Live! are trademarks of Creative Technology Ltd. in the USA and/or other countries. THX and the THX logo are trademarks or registered trademarks of THX Ltd. Lucasfilm is a trademark of Lucasfilm Ltd. Used under authorization. All other logos, brand and product names are trademarks or registered trademarks of their respective holders. All specifications are subject to change without prior notice. Actual contents may differ slightly from those pictured.



### Introduction

### Four steps to enjoying your GigaWorks speakers...

## Connect your speakers

Page 5 contains the set up instructions for Creative GigaWorks S750 or GigaWorks S700.

## Place the speakers correctly

Page 6 contains placement tips that maximize the surround-sound effects of your speaker system.

## Learn to operate the system

Pages 7 and 8 show you what you can do with the Audio Control Pod and Remote Control.

## Connect and upmix audio sources

Pages 9 –11 help you to connect audio devices to your speakers, and "upmix" audio for better sound.

Thank you for purchasing the GigaWorks S750 or S700 speakers by Creative Technology.

The GigaWorks S750 features a powerful 7.1 channel amplifier, driving 7 satellite speakers and a subwoofer. The GigaWorks S700 is similar in all aspects, except that only 5 satellites are supplied. When you are ready to upgrade to 7.1-channel audio, just purchase two additional satellites speakers to make full use of the GigaWorks S700 system's built-in 7.1 amplifier. As such, unless otherwise stated, all references to the hardware from this point onwards, apply to both products.

Both speaker systems feature precision super tweeters suitable for DVD-Audio playback. Additionally, this series of high-quality amplified multimedia speaker systems features the finest drivers, precision internal crossover and amplifier circuitry in an elegant enclosure design.

The GigaWorks S750 and S700 support the very latest in audio technology today. This includes: EAX™, DirectSound®3D, DVD-Audio and multichannel gaming. The powerful speakers also support the 5.1, 6.1 or 7.1 analog output from the the latest Sound Blaster® Live!™ and Audigy® series audio cards. To experience the full

potential of your GigaWorks system, we recommend that you take a few minutes to read through this User's Guide in the order shown above.

Remember to ensure that all plugs are securely fastened to their respective sockets before operating your speaker system.



### GigaWorks S750

With its seven powerful satellite speakers and a separate subwoofer with 8-channel amplification, the Creative GigaWorks S750 is an incredible 7.1 speaker system for use with Creative's EAX-enabled products. This high power speaker system delivers a thrilling, high quality PC home theater audio experience that meets the prestigious THX multimedia certification standard. Combine this speaker system with the 24-bit Sound Blaster Audigy® 2 series sound cards and you will experience the ultimate in highpowered, high definition playback of your Dolby Digital Surround EX titles on your PC.

#### GigaWorks S700

With its five powerful satellite speakers and a separate

subwoofer, the Creative GigaWorks S700 is an excellent speaker system for use with Creative's EAX-enabled products. Combine it with the Sound Blaster Audigy® series sound cards, you will experience a thrilling, high quality 5.1 PC home theater audio experience that meets the prestigious THX multimedia certification standard.




### **THX Certification**

Lucasfilm-THX Certified multimedia products carry the THX mark of excellence in consumer home entertainment. When you purchase a THX Certified multimedia product you will be confident knowing that it has been developed, evaluated and tested to meet rigorous performance requirements established by THX certification specifications. These specifications include power handling, frequency response and dispersion characteristics. The THX logo on your product is your guarantee of performance, promising many years of crisp and clear sound.





## Speaker connection

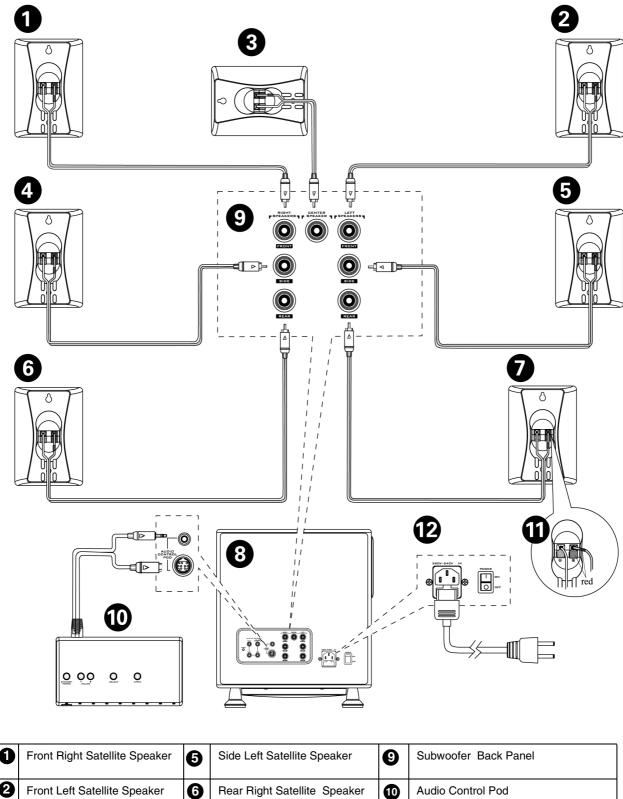


0	Front Right Satellite Speaker	6	Side Left Satellite Speaker	9	Subwoofer Back Panel
2	Front Left Satellite Speaker	6	Rear Right Satellite Speaker (for S750)	8	Audio Control Pod
3	Center Satellite Speaker	0	Rear Left Satellite Speaker (for S750)	<b>@</b>	Connect the red wire to the red termi- nal of each speaker for correct polarity
4	Side Right Satellite Speaker	8	Subwoofer	P	Main Power Socket/Switch Ensure power rating is suitable for your country






# Speaker placement options

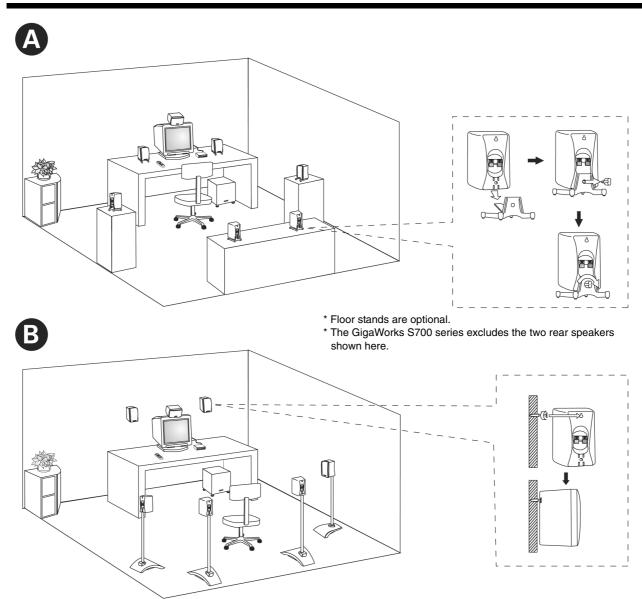

### For placement in front of a monitor

### For placement above a monitor

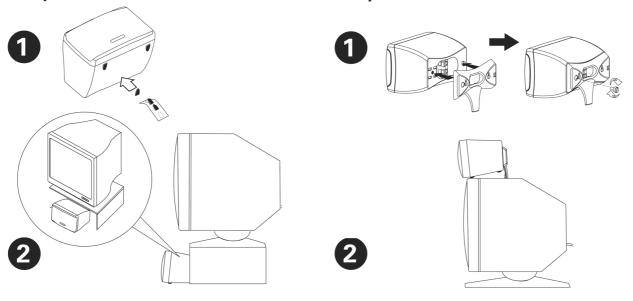














Your GigaWorks S750/S700 speaker system is controlled via the Audio Control Pod and Remote Control.

The indicators on the Audio

Control Pod can be used as a guide when adjusting your speaker settings, and for relaying the operational status of the system. Many of the Audio Control Pod buttons are also found on the Remote Control for convenient operation.

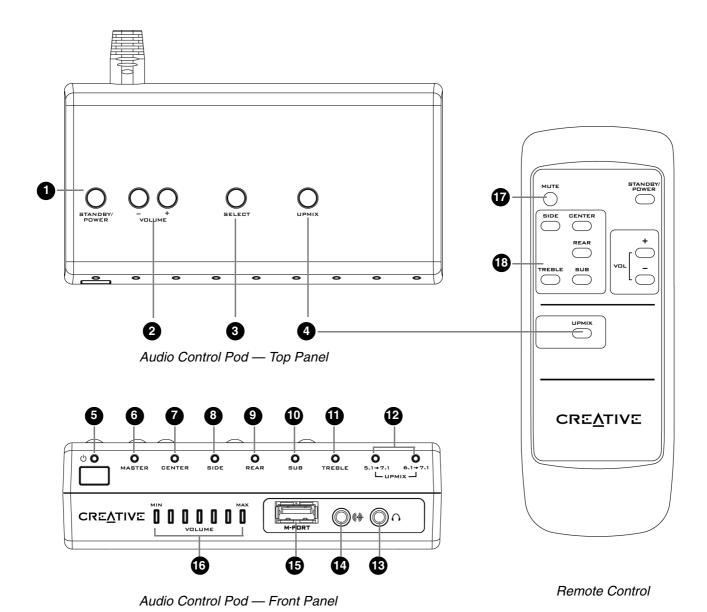



## **Indicators and Controls**

No.	Button/Indicator	Description	Notes				
1	Standby/Power Obutton STANDBY/PDWER	Turns the system on or off the Standby mode	Previous user settings are restored when system is turned on.				
2	Volume Adjust O O buttons	Increase or decreases the selected output level.	Use the Select button to choose Master, Center, Side, Rear speaker and Sub/Treble output levels.				
3	Select button O	Selects Master, Center, Side, Rear, Sub or Treble modes for adjustment.	Use the Volume Adjust buttons to adjust the selected output levels.				
4	Upmix button	Selects 5.1 →7.1 upmixing 6.1 →7.1 upmixing OFF (No upmix)	See Page 11, "Understanding Upmixing" for details.				
5	Power indicator 🔘 🖰	Displays the power status of the system	Red denotes system standby mode.				
6	Master Volume Mode indicator	Illuminates when the Master Volume adjustment mode is selected.	The output levels of all speakers or headphones are adjusted simultaneously.				
7	Center Mode indicator	Illuminates when the Center Volume adjustment mode is selected.	The output level of the Center speaker is adjusted.				
8	Side Mode indicator	Illuminates when the Side Mode Volume adjustment mode is selected.	The output levels of the Side speakers are adjusted.				
9	Rear Mode indicator	Illuminates when the Rear Volume adjustment mode is selected.	The output levels of the Rear speakers are adjusted.				
10	Subwoofer Mode indicator	Illuminates when the Sub Volume adjustment mode is selected.	The output level of the Subwoofer is adjusted. Also adjusts bass level for headphones.				
11	Treble Mode indicator	Illuminates when the Treble Volume adjustment mode is selected.	The output level of the Treble is adjusted for all speakers or headphones.				
12	Upmix status O O indicator Lupmix L	Illuminates when upmixing is active.	5.1 →7.1 For 5.1 source devices 6.1 →7.1 For 6.1 source devices				
13	Headphone output	Connects to any headphones with a 3.5 mm (0.14 inch) plug.	All speakers are muted when headphones are connected.				
14	Line input	Allows connection of an analog stereo device.	Connect to the line output of a digital audio player, MD Player and other portable audio devices.				
15	M-PORT	Portable Audio Docking Point.	Allows direct connection of your Creative digital audio player or any device featuring the M-PORT logo for streaming audio.				
16	Volume III III III	Indicate volume or output level being adjusted.	Dependent on Mode setting.				
17	Mute button Mute	Silences the speaker and headphones outputs.	In Mute mode, all illuminated indicators will blink continuously.				
18	Select buttons    Solic CENTER   SOLIC CENTER	Directly select Sub or Treble volume adjustment modes, as well as level adjustment modes for Center, Side, or Rear speakers.	These buttons on the remote control let you directly select Side, Center, Rear, Sub and Treble modes for adjustment.				
	Table 1: Overview of the Audio Control Pod and Remote Control						

Table 1: Overview of the Audio Control Pod and Remote Control







## **Connecting to Audio Devices**

Your GigaWorks S750 or GigaWorks S700 speaker system can be connected to a wide range of devices, including audio cards, external audio devices, external decoders and other multichannel

audio products. The figures below show you how to connect them.

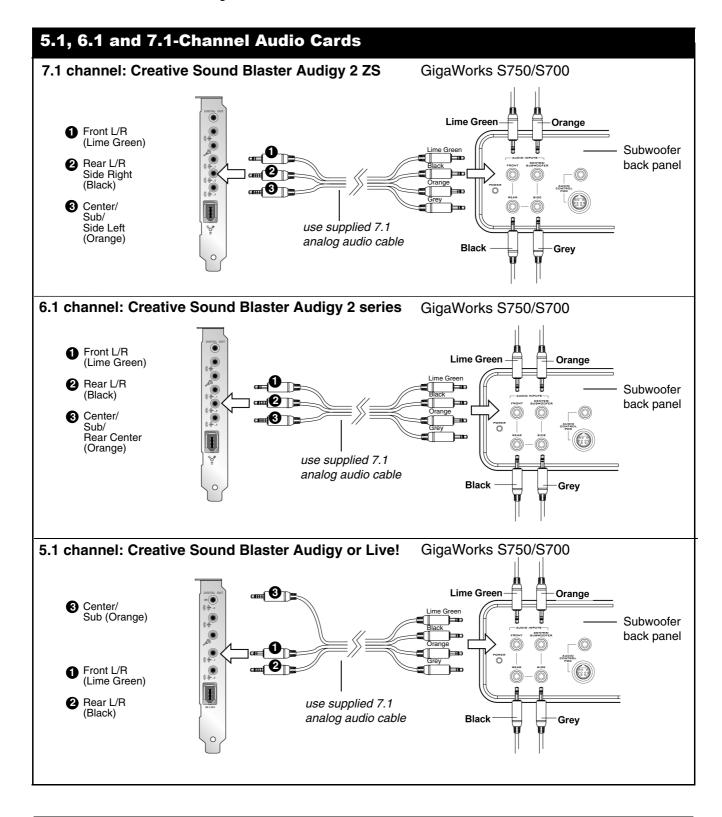



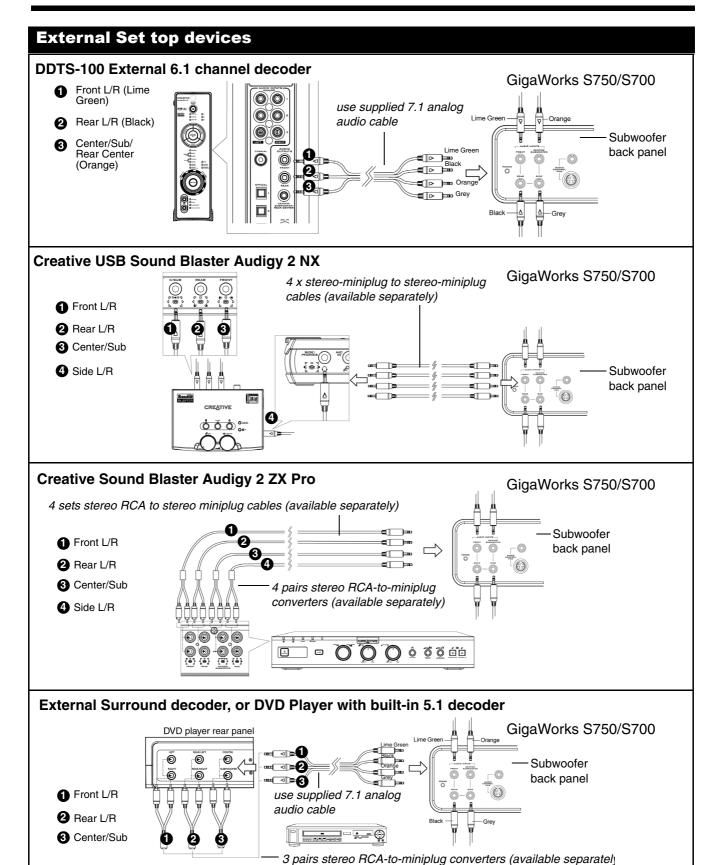





## **Understanding Upmixing**

O O O
TREBLE 5.1→7.1 6.1→7.1

L UPMIX —

When you play 5.1-channel audio on your 7.1-channel GigaWorks, only five satellite speakers (and the subwoofer) will be producing the audio; the remaining Rear Left and Rear Right satellite speakers will be silent.

With the Upmix feature, the 5.1

or 6.1-channel content can be played through all seven satellite speakers on your GigaWorks. This creates a 7.1-channel sound field that improves side and rear imaging.

This Upmix feature is also found on other Creative audio products; you should only enable upmixing on either your audio device *or* your GigaWorks S750 (but not both). The table below shows you when you should bypass the upmixing feature on your speakers. The

upmix feature only applies to a 5.1 and 6.1 signal from the output source device. Auxiliary and M-PORT analog stereo inputs are unaffected.



Upmixing is available on the Giga-Works S700 only if you add two extra surround speakers that are available separately. For more information on adding the extra speakers, see the section "Specifications and Upgrade Option" on page 13.

Source Device	No. of audio channels on source device	Recommended GigaWorks Upmix settings	Number of speakers utilized
Audigy 2 ZX	Up to 7.1	No upmix required. (Upmixing from the source device recommended)	Up to 7.1 (depending on source)
Audigy 2	Up to 6.1	6.1 →7.1	7.1
Audigy or 5.1 Sound Blaster Live!	Up to 5.1	5.1 →7.1	7.1
USB Sound Blaster Audigy 2 NX	Up to 7.1	No upmix required. (Upmixing from the source device recommended)	Up to 7.1 (depending on source)
Audigy 2 ZX Platinum	Up to 7.1	No upmix required. (Upmixing from the source device recommended)	Up to 7.1 (depending on source)
Creative Decoder DDTS-100 (Speaker configu- ration set to 6.1 or 7.1)	Up to 6.1	6.1 →7.1	7.1
DVD player with built-in surround decoder	Up to 5.1	5.1 →7.1	7.1

Table 2: How upmixing maximises the usage of your GigaWorks S750



### Using Multiple Inputs

The Audio Control Pod's Auxiliary input connector allows you to mix an audio program source (Auxiliary Analog Input) with the main 7.1channel program source.

In addition, the M-PORT input lets you hear audio directly from an M-PORT compatible Creative

portable digital audio player, without routing through a computer.

The main 7.1 channel output is always audible; if both the Auxiliary and M-PORT inputs are used, the Auxiliary input will be heard instead of the M-PORT input.

Table 3 lists what sounds you will

hear when using multiple inputs in different ways.



Note: In certain situations, you may require additional cables that are available separately.

Table 3: Mixing audio through the Auxiliary inputs

7.1 Analog Input	Auxiliary Input	M-PORT	Result
Connected	Not connected	Connected	7.1 Analog input and M-Port input mixed
Connected	Connected	Not connected	7.1 Analog input and Auxiliary input mixed
Not connected	Connected	Connected	Auxiliary input only
Connected	Connected	Connected	7.1 Analog input and Auxiliary input mixed

### Controlling Noise and Distortion

The Creative GigaWorks S750 and S700 have moderately high input sensitivity, so they may amplify the hum and hiss inherent in some audio program sources. Any background noise you hear is not due to a fault in the speaker system. You can minimize background noise as follows:

- Use the remote control as your master volume control.
- If your speaker system is connected to a computer, adjust the settings of your computer's sound control software. (If you are using Creative Sound Blaster software. this would be the Surround Mixer application). Turn off any input controls that you do not need, such
- as Microphone, and set the remaining input controls to about 70% of their maximum volume.
- Adjust the master output volume of your sound control software, such that your speaker system reaches a comfortably loud volume in its default volume settings.

### Specifications and Upgrade Option

#### **GENERAL SPECIFICATIONS**

**Total System Burst Power** 700 Watts (For S750)

560 Watts (For S700)

**Frequency Response** 25 Hz ~ 40 kHz

Signal-to-Noise Ratio (SNR) 99 dB

### **Input Voltage**

For Europe/Asia: 220-240Vac 50/60 Hz 3A

For US/Canada/Japan/Taiwan: 100-120Vac 60 Hz 6A

### **Magnetic Shielding**

All satellite speakers are shielded to allow placement close to display devices that are sensitive to magnetic fields.

### **Upgrading your GigaWorks S700**

Purchase the upgrade kit to add two satellite speakers and convert your GigaWorksS700

to full 7.1 channel capability.

For more information, visit www.creative.com