

Introduction

This User Guide details the features of your Creative ZEN® X-Fi2.

Creative ZEN X-Fi2 is a music and video player, alarm clock, recorder, and radio, all rolled into one. To increase your player's data-storage capacity, insert a memory card in the microSD™ card slot.


For setup and installation instructions, refer to the printed Quick Start leaflet that comes with your player.


Your Player at a Glance

This section introduces your player and its parts. Click the numbered labels for more information.



Turning Your Player On or Off

To turn on your player, press and hold  until the touch screen turns on.

To turn off your player, press and hold  until the "Shutting down..." message appears.

Navigating Your Player

With the use of the touch screen, you can access almost all the features and functions of your player. In general, you can tap the screen to select an item. You can also swipe your finger across the screen to scroll through a list or a series of screens.

To directly return to the main menu at any point, press the Menu button⁹



To select an item, tap the corresponding icon. To display the available options for a feature or function, tap . To return to the previous menu, tap .



When you see or on one or both sides of the screen, you can drag the screen to the right or left. This brings you to the previous or next screen.






To scroll through a list, swipe your finger up or down the player's screen.



Locking Your Player

Locking temporarily disables the touch screen and buttons on your player. This feature is useful when you do not want to accidentally activate functions on your player, such as when your player is in your pocket or bag.

To lock your player, press . The Lock  icon appears on the screen header.

To unlock, press either  or the Menu button. On the screen that appears, drag the lock icon towards the edge of the screen.





See also [Enabling Auto Lock](#).

Playing and Managing Media Files

- [Ripping Music](#)
- [Loading Files Into Your player](#)
- [Creating Playlists](#)
- [Playing and Managing Music Tracks](#)
- [Viewing and Managing Photos](#)
- [Playing and Managing Videos](#)
- [Listening to FM Radio](#)
- [Recording with the Built-in Microphone](#)
- [Hiding a Folder](#)

Ripping Music

When you rip music, you convert music tracks (often from CDs) into a format suitable for playback on your computer. You can easily rip music with applications such as [Creative Centrale](#) or Windows Media® Player.

1. Make sure the audio CD you want to rip from is placed inside your CD drive.
2. Start **Creative Centrale** on your computer.
3. In Creative Centrale, click the Rip  button. Follow the instructions on the screen.
3. For more information, click the Help  button.



- When ripping tracks, make sure that they are tagged properly. See [Tagging Your Audio Tracks](#).
- If you are connected to the Internet and you have registered with a music information provider, album information will automatically be retrieved.

Tagging Your Audio Tracks

Every audio track (MP3 or WMA file) has a set of properties that contains information such as song and album title, artist name and genre. Using these properties, your player organizes your music library into categories such as albums, artists and genres, enabling you to browse your huge collection of audio tracks quickly and easily.

If an audio track contains inaccurate properties, such as unrecognized characters or incorrect details, you may not be able to perform accurate searches on your player.

For a better experience, make sure your audio tracks contain correct properties.

To automatically tag audio tracks

While connected to the Internet, use [Creative Centrale](#) to rip audio tracks from audio CDs. Creative Centrale uses MusicIDSM

from Gracenote® to automatically retrieve information about your audio CDs and create track properties.

To manually tag audio tracks

You can use [Creative Centrale](#) to fill in audio track properties manually. For information, click the Help



button in Creative Centrale.


Loading Files Into Your Player

You can use [Creative Centrale](#) to load files to your player. Before loading, make sure that the files are located in folders that are specified in Creative Centrale's **Watch folders**

For more information, refer to the application's Help file.

Warning!

Avoid disconnecting your player from your computer while file transfer is in progress.

To avoid data loss and damage to your player, disconnect your player properly. Click the **Safely Remove Hardware**  icon on the Taskbar, click **Safely remove USB Mass Storage Device**



- When you connect your player to a computer, the computer recognizes your player as a removable disk drive. You can use Windows® Explorer to perform familiar operations such as Copy, Cut, or Delete.
- If a memory card is inserted in the player's microSD Card Slot, your computer recognizes the memory card as another removable disk drive apart from your player. See also [Transferring Files to and from Your Memory Card](#).


Creating Playlists

A playlist consists of music tracks that you select from the player's music library.



You can create several playlists, and later on select and play them exclusively. This is very helpful if you want to listen only to certain songs from a huge collection of music in your player.

Creating a playlist consists of 2 main steps:

Step 1: Adding music tracks to Selected Music list

1. Make sure that the Selected Music list is initially empty. See [Removing Tracks](#).
2. On the main menu, tap **Music > All Tracks**.
3. Tap  and select **Add Tracks**.
4. Select the music tracks that you want to be in a playlist, and tap **Yes** to confirm.
4. The tracks are added to the **Selected Music** list.

Step 2: Creating a playlist from the Selected Music screen

1. Press the Menu button to return to the main menu.
2. Tap **Music > Now Playing**.
3. Swipe your finger towards the left to proceed to the Rating screen.
3. You should be able to see a row of stars at the bottom part of the screen.
4. Swipe your finger again towards the left to proceed to the **Selected Music** screen.
5. Tap  and select **Save as Playlist**.
6. Enter a playlist name by using the virtual keyboard that appears.
7. Tap  after you have finished.

To play the playlist, go to the main menu and tap **Music > Playlist**, and select the playlist name that you set in the procedure above.

Playing and Managing Music Tracks

You can play your music by albums, artists, or genres. You can also play a music track individually based on the track title, or you can create and play personalized playlists that consist of tracks that you pick.

1. Press the Menu button to return to the main menu.
2. Tap **Music**.
3. Select a category, such as **Albums** or **Playlists**.
3. If you want to play by track titles, select **All Tracks**.
4. Tap the track title to start playing.


Media Toolbar

While a track is playing, tap the screen to display the media toolbar. To immediately hide it again, tap on an area outside the toolbar.

The media toolbar automatically disappears after a few seconds of inactivity.



Volume Control

Tap  in the media toolbar to display the volume controls. Drag the volume slider up or down to adjust the volume.

Alternatively, you can press and hold the Menu button to display the volume controls.

 


Track Navigation

In the media toolbar, tap **⏸** to pause the current track. Tap **▶** to resume playback.



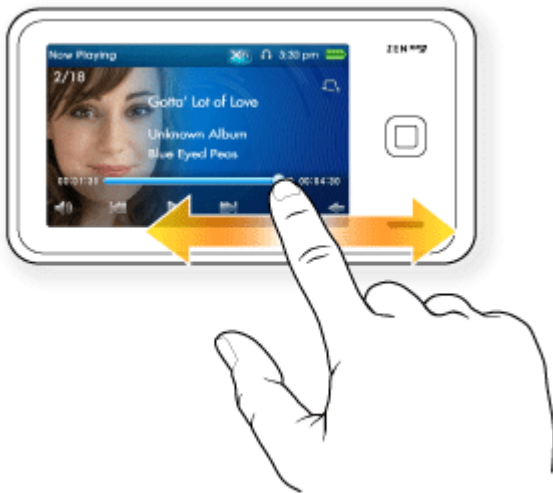


To skip to the previous or next track, tap **⏮** or **⏭**

To fast-forward or rewind, drag the playhead to the left or right.



Shuffling and Repeating Tracks

Set the Play Mode to specify the playback sequence of your music files.

1. On the main menu, tap **System** > **Audio Settings** > **Play Mode**.
2. Select one of the following items:
 - **Normal**
 - Plays your selected tracks in sequential order.
 - **Repeat Track** 
 - Repeats the current track.
 - **Repeat All** 
 - Repeats all selected tracks.
 - **Shuffle** 
 - Plays all selected tracks in random order, once only.
 - **Shuffle Repeat** 
 - Plays and repeats all selected tracks, in random order.
 - **Track Once** 
 - Stops playing after the current track ends.

Rating Tracks


Rate how much you like a track, so your player's DJ (see [Your Own DJ](#)) can automatically play your favorite tracks. Choose from one to five stars.

1. Tap *Music > Now Playing*.
2. Swipe your finger towards the left to proceed to the Rating screen.
2. A row of stars appear at the bottom part of the screen.
3. Tap the stars to rate the current track, with five stars being the highest.

Removing Tracks

On your player, this procedure refers to removing tracks from the **Selected Music** list only. The tracks are still on the player and can be accessed from submenus like **Artists** or **Albums**


To permanently remove tracks, use the Delete Track function. See [Deleting Tracks](#)

1. On the main menu, tap **Music > Now Playing**.
2. Swipe your fingers towards the left to proceed to the Rating screen.
2. You should be able to see a row of stars at the bottom part of the screen.
3. Swipe your finger again towards the left to proceed to the **Selected Music** screen.
4. Tap  and select **Remove Tracks**.
5. Select the tracks to be removed and tap **Yes** to confirm.

Deleting Tracks

This action permanently deletes tracks from your player.

To remove tracks from the **Selected Music** view only, see [Removing Tracks](#)

1. On the main menu, tap **Music > All Tracks**.
2. Tap  and select **Delete Tracks**.
3. Select the tracks to be deleted and tap **Yes** to confirm.


Using Bookmarks

A bookmark marks a point within a track, so you can return to it at a later time.

For example, if you are listening to a lengthy track or recording, you can insert a bookmark if you need to stop. When you want to continue listening exactly from where you left off, go to this bookmark.

Your player can accommodate up to 10 bookmarks.

To insert a bookmark

1. Play the track you want to bookmark.
2. In the **Now Playing** view, tap  and select **Set Bookmark**.
3. In the **Set Bookmark** screen that follows, tap an empty line number.
3. If all 10 bookmark numbers have been assigned, you can tap an existing bookmark to replace it.

To go to a bookmark

1. On the main menu, tap **Music > Bookmarks**.
2. Select the bookmark that you want.

Your Own DJ

Instead of selecting tracks yourself, let your player's DJ pick the tracks for you.

1. On the main menu, select **Music > DJ**.
2. Select one of the following:
 - **Album of the Day**
 - Plays any album.
 - **Random Play All**
 - Plays all tracks in random order.
 - **Most Popular**
 - Plays frequently played tracks.
 - **Rarely Heard**
 - Plays rarely played tracks.
 - **Highly Rated**
 - Plays tracks that you have rated highly.
 - **Yet to be Rated**
 - Plays tracks you have yet to rate.

Viewing and Managing Photos

To load photos on your player, use [Creative Centrale](#) or other programs such as Windows Explorer. When using Window Explorer however, make sure that you load the files in the **Photos** folder in your player.

You can also load photos that are organized in folders and subfolders.

Viewing Photos

1. On the main menu, tap **Photos**.
1. Folders and photos are displayed in thumbnail view.
2. Tap a photo thumbnail to view in full screen.
2. If the photo is inside a folder, tap the folder to access the contents.
3. To see the next or previous photo, swipe your fingers across the screen. The directional arrows ◀ or ▶ indicate available screens on the left right side.

Media Toolbar

While viewing a photo, tap the screen to display the media toolbar. To immediately hide it again, tap on an area outside the toolbar.

The media toolbar automatically disappears after a few seconds of inactivity.

Using this toolbar, you can tap an item to do the following:



Start a slideshow. See [Viewing Slideshows](#).


Zoom in on a photo.

Rotate the photo 90° at a time.

Display the volume control.


Access the available options.


Rating Photos


Rating a photo means that you consider this as one of your favorites, and you can mark the photo with a 

. After rating, you have the option to view the rated photos only.

You can rate the currently displayed photo, or you can rate several photos from a list.




To rate the current photo, tap  and select **Rate Photo**

. To rate several photos, tap **Photos** from the main menu. If the photos are inside a folder, tap the folder to access the contents. Tap  and select **Rate Photos**. Select photos and tap **Yes** to confirm.

To view your rated photos, select **Photos** from the main menu. Tap  and select **View Favorite**.

Setting a Wallpaper


You can set any of the photos in your player as a wallpaper.

1. On the main menu, tap **Photo**.
2. Select the photo that you want.
3. In the media toolbar, tap  and select **Set as Wallpaper**.
4. In the photo toolbar that appears, tap the arrows to set the Brightness  and Tone .
5. Tap **Yes** to confirm.



To remove the wallpaper, see [Removing the Wallpaper](#)

Deleting Photos


You can delete the photo that is currently open, or you can select multiple photos and delete them simultaneously.

To delete the current photo only, tap  and select **Delete Picture**

To delete multiple photos



1. On the main menu, tap **Photos**.
1. Your player displays the contents in a thumbnail view.
2. If the photos you want to delete are located in a subfolder, tap the specific folder to display the contents.
3. While in a thumbnail view, tap .
4. If you want to delete all of the folder's contents (including subfolders and their contents), select **Delete All**. The contents are subsequently marked for deletion.
4. If you want to select specific items only, select **Delete Photos**. Tap the photos and subfolders that you want to delete. The selected items are marked with .
5. Tap **Yes** to confirm.

Viewing Slideshows

1. On the main menu, tap **Photo**.
2. Select a photo thumbnail to view it in full screen.
3. In the media toolbar, tap .
3. A slideshow starts for the photos inside the current folder only.

To set the display time for each photo, tap  in the media toolbar, and select **Slide Interval**

Display Options

You can select from among predefined thumbnail layouts when you view photos and folders. From the main menu, tap **Photos**. Tap either  or  to switch from one thumbnail layout to the other.

Playing and Managing Videos

- [Loading Videos to Your Player](#)
- [Playing a Video](#)
- [Deleting Videos](#)
- [Playing a Video on TV](#)

Loading Videos to Your Player

Use [Creative Centrale](#)

to load videos to your player. If needed, Creative Centrale automatically converts your videos to a format supported by your player.

For information on transferring videos and other media files with the use of Creative Centrale, refer to the application's Help file.

Playing a Video

1. On the main menu, tap **Videos**.
2. Tap a video file to start playing it.
2. If the video is inside a folder, tap the folder to access the contents.


Media Toolbar

While playing a video, tap the screen to display the media toolbar. To immediately hide it again, tap on an area outside the toolbar.

 
The media toolbar automatically disappears after a few seconds of inactivity.





Volume Control

Tap  in the media toolbar to display the volume controls. Drag the volume slider up or down to adjust the volume.

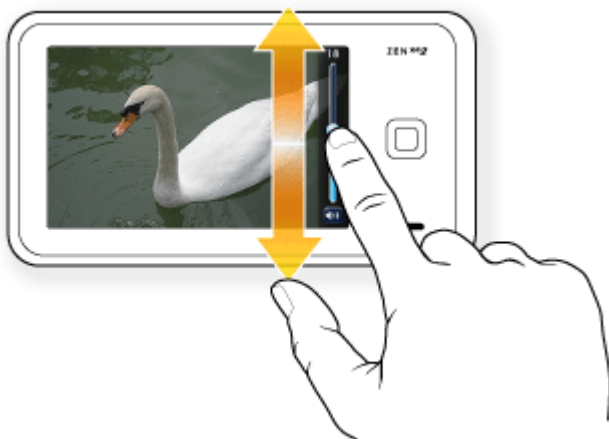Alternatively, you can press and hold the menu button to display the volume controls.




Video Navigation



In the media toolbar, tap  to pause the current video. Tap  to resume playing.
To fast-forward or rewind, drag the playhead to the right or left.



Going Full Screen


While playing a video, tap  or  to switch between a full-screen or a regular screen mode.

Deleting Videos

1. On the main menu, tap **Videos**.
1. Your player displays the contents in a list.
2. Tap .
3. If you want to delete all of the folder's contents (including subfolders and their contents), select **Delete All**. The contents are subsequently marked for deletion.
3. If you want to delete specific items only, select **Delete Videos**. Tap the video and subfolders that you want to delete. The selected items are marked with .
4. Tap **Yes** to confirm.

Playing a Video on TV

Connect your player to your TV with the use of the Creative Audio-Visual cable. For more information on this cable and other accessories, visit www.creative.com

1. Connect the player to your TV.
2. On the player's main menu, tap **Videos**.
3. Select a video.
4. On the media toolbar, tap  .
4. The TV video control appears on your player's touch screen.
5. To return the video output to the player, tap **ZEN X-Fi2**.

Reading and Managing RSS Feeds

On your player, you can directly update and read the latest RSS feeds from your favorite Web sites. Connect your player to your computer and double-click the **RSSSynchronizer.exe** file in the player. This starts the Creative RSS Synchronizer. Use this program to load and manage RSS feeds on your player.

For detailed instructions on using this software, refer to the RSS Synchronizer's Help file.

- [Reading RSS Feeds](#)
- [Deleting RSS Feeds](#)

Reading RSS Feeds


1. On the main menu, tap **RSS**.
2. Select a feed from a folder.
3. To scroll through the selection, swipe your finger up or down the screen.



An icon 

on the folder (or beside a file) indicates unread RSS feeds.

Deleting RSS Feeds

1. On the main menu, tap **RSS**.
2. Scroll to a folder or RSS file.
3. Press  and select **Delete File** or **Delete All**.
4. Select folders or RSS files, and tap **Yes** to confirm.



You can also use Creative RSS Synchronizer to delete RSS feeds on your player. For more information, refer to the Creative RSS Synchronizer Help file.


Listening to FM Radio

Players with the **FM Radio**

feature can store up to 32 predefined FM radio stations called "presets."


The FM frequency range on your player is set to "International" by default. Most regions in the world receive FM broadcasts in this range.

If you are using your player in Japan, make sure you have selected "Japanese" as your player's default language before selecting your FM region.

1. On the main menu, tap **FM Radio**.
2. Tap  and select **Set Region**.
3. Select the FM region for Japan.



 

Performing an Autoscan

You can set your player to scan for FM radio stations within your area, and save the station frequencies as 'presets.'



1. Connect your earphones to your player.
1. The earphones function as antennas and must be connected to your player for signal reception.
2. In the main menu, select **FM Radio**.
3. In the toolbar, tap **Auto** , and select **Yes** to start scanning.

Performing a Manual Scan


You can set the your player to tune in to a specific radio frequency.

1. Connect your earphones to your player.
1. The earphones function as antennas and must be connected to your player for signal reception.
2. On the main menu, select **FM Radio** .
3. Make sure that the player is Manual tuning mode.
3. If the word "Preset" is shown on the screen, tap  to switch to Manual tuning.
4. Tap  or  (located above and below **Mhz**) to adjust the radio frequency.
4. If you want to save a certain frequency, tap  and select **Save as Preset**.




Naming or Renaming a Radio Preset

1. On the main menu, tap **FM Radio**.
2. Select a preset station.
3. Tap  and select **Name Preset**.
3. A virtual keyboard appears on the screen.
4. Use the keyboard to enter a name for the preset station.
5. Tap  when you have finished.





Viewing Your Presets

1. From the main menu, tap **FM Radio**.
2. In the **FM Radio** screen that follows, tap  in the toolbar.

Deleting Presets

1. From the main menu, tap **FM Radio**.
2. To delete the current preset station, tap  and select **Delete Preset**.
2. To delete from the Preset List, tap , followed by , and select **Delete Preset**.
3. Select from the list and tap **Yes** to confirm.

Recording with the Built-in Microphone

1. Place your player as close as possible to the source you are recording .
2. On the main menu, tap **Mic**.
3. Tap  to start recording.
4. To pause the recording session, tap  .
4. To resume, tap  again.
5. To end the recording session, tap  .
5. The player automatically saves the recording with a filename based on the player's date and time setting.







You can play your recordings from the Music menu. See [Playing a Recording](#)

Playing a Recording

1. On the main menu, tap **Music > Recordings**.
2. Select a recording from the Recordings list.


Hiding a Folder

You can hide a folder so that it does not show on your player's content list. This feature is applicable to folders under your player's **Photos** and **Videos** menu.

1. On the main menu, tap **Videos** or **Photos**.
2. Tap  and select **Protect Folders**.
3. Select the folder(s) you want to hide, and tap **Yes** to confirm.
3. The selected folders are marked with a Protected Content  icon.
4. Press the Menu button to return to the main menu.
5. Tap **System** > **Player Settings**.
6. Tap the **Protected Content** row to switch between **Show**  and **Hide** .
6. To hide the folders that you selected in step 3, select **Hide**.
6. If you want to see the folders later, select **Show**.

Setting a Password for Protected Folders

The password you set in this process will be required whenever you want to see or hide your player's protected contents. See [Hiding a Folder](#)

1. On the main menu, tap **System > Player Settings > Protected Content Password**.
2. If a password was previously set, enter the old password.
3. Enter a 4-digit numeric password, and tap  when you have finished.
3. If you want to disable the password protection, enter **0000**.



If you have forgotten your password, clean up your player's memory. See [To clean up your player's memory](#)

Enhancing Audio by Using X-Fi

Your player's X-Fi enhancement consists of 2 components, X-Fi Crystalizer and X-Fi Expand.

The X-Fi Crystalizer

intelligently restores details that were lost during compression of audio files. It makes audio richer and clearer, delivering sound that is closer to the original quality.

X-Fi Expand

, on the other hand, gives audio a realistic and natural feel. It's as if listening to a live performance in front of you. X-Fi Expand works best with your earphones or headphones.

On the main menu, tap **X-Fi**

. Tap to turn on or off the enhancements. Drag each slider to set the level for each.



When using your player together with other X-Fi enhanced accessories (such as X-Fi headphones or external speakers), enable the X-Fi enhancements on either the player or the accessory only.

Viewing Your Organizer Data

Your player can store your contacts, calendar events, and tasks from organizer programs such as Microsoft® Outlook. For information on synchronizing your organizer data with your player, refer to Creative Centrale's Help file.

Viewing the Calendar

Once you have synchronized your player with your organizer, you can view the tasks and events that you scheduled for a particular day.

1. On the main menu, tap **Calendar**.
2. On the calendar that appears, tap a date.
3. Tap **Tasks** or **Events**.

Viewing Today's Tasks

Once you have synchronized your player with your organizer, you can immediately view the tasks that you scheduled for the current date.

On the main menu, tap **Tasks**

To view tasks scheduled for another day, see [Viewing the Calendar](#)

Viewing Contacts

After synchronizing the player with your organizer, you can view details of your organizer contacts. On the main menu, tap **Contacts**

Customizing Your Player

- [Rearranging the Main Menu Icons](#)
- [Setting the Menu Language](#)
- [Turning On/Off the Speaker](#)
- [Enhancing Audio by Using X-Fi](#)
- [Audio Settings](#)
- [Display Settings](#)
- [Player Settings](#)
- [Clock Settings](#)
- [Resetting the Player Configuration](#)


Rearranging the Main Menu Icons


You can personalize the main menu by rearranging the icons in a layout that you prefer. Tap and hold an icon, and drag it to a desired location.

Setting the Menu Language

On the main menu, tap **System > Language**
. From the list that appears, tap a language that you prefer.

Turning On/Off the Speaker

In any menu, submenu, or other screens, tap  and select **Turn On Speaker** or **Turn Off Speaker**

On the screen header,  indicates that the speaker is turned on.



Connecting or disconnecting your earphones automatically switches the audio output between the built-in speaker and the earphones.

Audio Settings

- [Configuring the Equalizer \(EQ\)](#)
- [Enabling Volume Restriction](#)
- [Enabling Smart Volume](#)
- [Enabling Bass Boost](#)

Configuring the Equalizer (EQ)

EQ is the player's collection of equalizer settings, which you can use to enhance the sound of your audio tracks. You can select an equalizer preset or customize your own settings to suit the genre or style of your music.

To select a preset equalizer setting

1. On the main menu, tap **System > Audio Settings > EQ**.
2. From the list that appears, select either Acoustic, Classical, Disco, Jazz, New Age, Pop, Rock, or Vocal.

To customize the equalizer setting

On the main menu, tap **System > Audio Settings > EQ**

From the list that appears, select **Custom EQ**

On the Custom EQ

screen, each slider represents a frequency (Hz). Drag the slider up or down to adjust the intensity level.

- **80** controls bass frequency.
- **250** adjusts the low mid-range frequency .
- **1k** adjusts the mid-range frequency.
- **4k** adjusts the upper mid-range frequency.
- **13k** adjusts the treble frequency.

Enabling Volume Restriction

Listening to very loud music for prolonged periods may damage your hearing. To protect your hearing, set your player's maximum volume to a safe level.

1. On the main menu, tap **System** > **Audio Settings** > **Restrict Volume**.
2. If a password was previously set, enter the password.
3. Drag the volume slider up or down to the desired maximum volume level.
4. Tap ✓ to confirm.
5. If you want to set a password for this setting, enter a new password.
5. To keep this setting password-free, enter "0000".
6. Tap ✓ to confirm.

If you want to remove the volume restriction later, drag the volume slider to the maximum level.

Enabling Smart Volume

Smart Volume keeps the volume level within a specified range, so when you listen to a track, some sections will not be too loud or too soft.

On the main menu, tap **System > Audio Settings > Smart Volume**

Enabling Bass Boost

Enabling bass boost enhances the quality of some audio.

On the main menu, tap **System** > **Audio Settings** > **Bass Boost**

Display Settings

- [Choosing a Theme](#)
- [Setting the Backlight Duration](#)
- [Setting the Display Brightness](#)
- [Removing the Wallpaper](#)

Choosing a Theme

1. On the main menu, tap **System > Display Settings > Theme**.
2. Select a predefined theme for your players's display.

Setting the Backlight Duration

1. On the main menu, tap **System > Display Settings > Backlight Time**.
2. Select the duration that you want before your player's backlight dims.

Setting the Display Brightness

1. On the main menu, tap **System > Display Settings > Brightness**.
2. Drag the slider to the left or right to adjust the display brightness.

Removing the Wallpaper

This function removes a wallpaper that you previously set. See [Setting a Photo as a Wallpaper](#)

1. On the main menu, tap **System** > **Display Settings** > **Reset Wallpaper**.
2. Tap **Yes** to confirm.

Player Settings

- [Setting the Idle Shutdown Time](#)
- [Enabling the Sleep Timer](#)
- [Enabling Auto Lock](#)
- [Turing On/Off the Click Tone](#)
- [Calibrating the Touch Screen](#)

Setting the Idle Shutdown Time

The Idle Shutdown Time refers to the period that your player is inactive before it automatically turns off. This feature helps save battery power.

1. On the main menu, tap **System** > **Player Settings** > **Idle Shutdown**.
2. Select the setting that you want.

Enabling the Sleep Timer

You can specify a fixed period of time before your player automatically shuts down during a continuous and uninterrupted playback.

1. On the main menu, tap **System > Player Settings > Sleep Timer**.
2. Select the setting that you want.

Enabling Auto Lock

The Auto Lock feature automatically locks your player after the screen has dimmed for a few minutes. On the main menu, select **System > Player Settings > Auto Lock**.

This feature is not applicable while your player is performing the following activities:

- Video playback
- Photo slideshow
- Microphone recording
- Building or rebuilding a library
- Importing files
- Battery charging.

See also [Locking Your Player](#)

Turing On/Off the Touch Screen Tone

You can turn on or off the sound whenever you tap your player's touch screen. On the main menu, tap **System > Player Settings > Touch Screen Tone**

Calibrating the Touch Screen





Calibrating the screen means making sure that the player accurately reads the correct area when you touch the screen. Calibrate your player once in a while to make sure that the touch screen functions properly.

1. On the main menu, tap **System > Player Settings > Touch Calibration**.
2. Tap the calibration point when it appears on the screen.
2. The process ends when you correctly tap 4 consecutive points.


Clock Settings

- [Setting the Date and Time](#)
- [Setting the Alarm](#)
- [Displaying the Time](#)




Setting the Date and Time

1. On the main menu, select **System > Clock Settings > View Clock**.
1. The current date and time are displayed.
2. Tap .
3. To set the date, select **Set Date**.
3. On the calendar that appears, simply tap a date to select it.
3. To go to the next or previous month, swipe your fingers to the left or right.
4. To set the time, select **Set Time** from the options.
4. Tap either the hour, minute, or second digits to make it active.
4. Tap  or  to adjust the digit values. Tap  to accept the set time.

Setting the Alarm

When the alarm feature is active,  is displayed on the screen header.

To set the alarm details

1. On the main menu, tap **System > Clock Settings > Set Alarm**.
2. On the **Set Alarm** screen, tap **Alarm** to activate or deactivate the alarm feature.
3. Tap the **Time** to set the alarm time.
3. Tap either the hour or minute digits to make it active. Tap  or  to adjust the digit values. Tap  to accept the set time.
4. Tap **Schedule** to set the day(s) that the alarm is supposed to turn on.
5. Tap **Audio** and select from **Beep**, **Music**, **FM Radio**, or **Recordings**. Further options are available for each of these items.

Displaying the Time

1. On the main menu, tap **System > Clock Settings**.
2. To display the time in the title bar, select **Clock in Title: Digital**. Otherwise, select **Disable**.
3. To display the time in the main screen, select **View Clock**.
3. Swipe your finger left or right to switch the display from analog to digital, and back.

Resetting the Player Configuration

You can reset your player's settings to the original configuration. This process will not delete the files stored in your player.

On the main menu, tap **Systems** > **Reset Settings**. Tap **Yes** to confirm.

 
Using a Memory Card

- [Inserting and Ejecting a Memory Card](#)
- [Playing Media from a Memory Card](#)
- [Transferring Files to and from Your Memory Card](#)
- [Importing Media Files to Your Player](#)

Inserting and Ejecting a Memory Card

 
Inserting a Memory Card Correctly

Make sure that the memory card is properly aligned with the slot, then gently push to lock it in place.

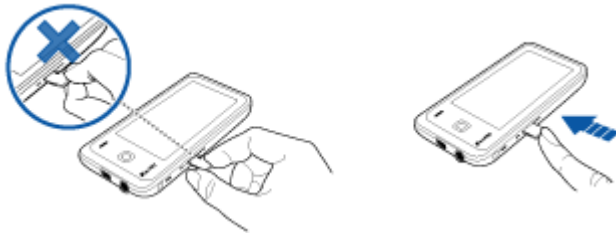

Ejecting a Memory Card Correctly

Push to eject the memory card, then gently pull it out from the slot.

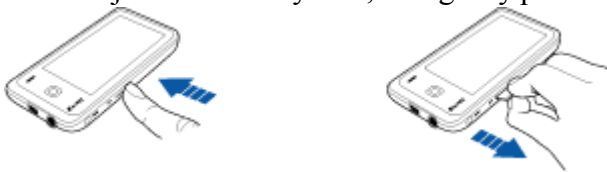

Warning!

To avoid damage to your memory card:

- Do not force the memory card in the slot. If it does not fit properly, gently remove and try again.
- Do not shake the memory card when removing.
- Remove the memory card only when your player displays the main menu or when your player is turned off.
- If your player is connected to your computer and Creative Centrale is open, do not insert or eject the memory card from your player.

Playing Media from a Memory Card


You can play media contents from microSD memory cards in a similar manner as when you play contents from your player's internal memory. When you insert a memory card in the microSD card slot, your player automatically builds a separate music, video, and photo library for the memory card. On the main menu, tap **microSD**, and then select **Music**, **Videos**, or **Pictures**

Transferring Files to and from Your Memory Card

The memory card in your player is considered by your computer as a removable disk drive. This means that on your computer, you can use familiar Windows® Explorer operations to transfer files to and from your memory card.

Use [Creative Centrale](#) to transfer media files (such as videos) to your player or memory card. Creative Centrale automatically converts media files to a format that is supported by your player. See also [Loading Files to Your Player](#)

Warning!

- Do not disconnect your player, or attempt to remove the memory card, while files are being transferred. Disconnect the player only when file transfer is complete.
- To disconnect your player properly, click the **Safely Remove Hardware**  icon on the Taskbar, click **Safely remove USB Mass Storage Device**.
- If your player is connected to your computer and Creative Centrale is open, do not insert or eject the memory card from your player.

Importing Media Files to Your Player


This procedure transfers all media files from the microSD card to your player.

1. Insert the memory card in your player's microSD slot. See [Inserting and Ejecting a Memory Card](#).
2. On the main menu, select **microSD > Import All**.
3. Tap **Yes** to confirm.
3. Your player creates a folder according to the date and time settings. For example, if you transfer files on August 13, 2009 at 6:35 PM, the folder name is **2009-08-13, 18:30**.
4. Tap a destination folder to start the file transfer.



- To view imported photos, go to **Photos > Imported Files** and select a folder.
- To access imported videos, select **Videos > Imported Files** and select a folder.
- Imported music files are integrated into the player's internal music library.

Creative Centrale

Creative Centrale is your complete media experience in one software. Use it to easily rip, tag, transfer, and organize all your media files. For a complete and easy guide for using this software, start Creative Centrale and click the **Help**  button.



Your player came with a Starter Pack that includes the Creative Centrale software. To download the latest version, visit www.creative.com

Frequently Asked Questions

This section covers questions you might have while using your player. For further assistance, you may consult our self-help tool "Knowledge Base". Visit www.creative.com

[Can I transfer Digital Rights Management \(DRM\) protected WMA files to my player?](#)

Yes. Your player supports Windows Media® DRM (WMDRM) 9 file format.

To transfer media files to your player, use [Creative Centrale](#) or Windows Media Player.

[I cannot play DRM-protected WMA files on my player. What do I do?](#)

The files may have become corrupted during transfer or the DRM license may have expired.

If the DRM license is still valid, try transferring the files again using [Creative Centrale](#), or Windows Media Player.

[I have to recharge the player's battery quite often. Is there anything I can do to make it last longer?](#)

Generally, any operation requiring your player to access the memory consumes battery power.

However, some settings and operations depletes the battery faster, such as:

- a long display duration setting. A shorter display duration setting saves battery power.
- a high brightness setting. Position the player so that you can read the display without using a high contrast setting.
- fast forwarding or rewinding.
- turning the player on and off too many times.
- prolonged use at high volume.
- enabling equalizer settings.

[My player's volume is very soft. What can I do?](#)

If you have enabled the **Restrict Volume** setting, make sure that the maximum playback volume that you have selected for your player is not too low. For more information, see [Enabling Volume Restriction](#)

[How do I reset my player?](#)

If your player stops responding, gently push the end of a thin object (like a pin or straightened paperclip) into the Reset button.



[My player is performing erratically. What can I do?](#)

Your player may occasionally operate at less than optimal performance for a number of reasons, for example, if the music library is rebuilt frequently when no changes have been made to it.

Selecting **Clean Up** in your player's **Recovery Mode**

menu cleans, rebuilds and reorganizes your player's memory and restores it to optimal efficiency. Back up your player's content before cleaning up the memory.

[To clean up your player's memory](#)


 
1. Turn off your player.
2. Press and hold  to turn on the player.
3. When the Creative logo appears, press and hold the Menu button until the **Recovery Mode** screen appears. Three menu items are shown: **Clean Up**, **Format All**, and **Reboot**.
4. Press the Menu button to scroll through the options.
4. Highlight **Clean Up**.
5. Press  to select.
6. When the cleanup is complete, highlight and select **Reboot**. Your player restarts and rebuilds its music library.



Your player's firmware is reset to the default settings after you clean up your player's memory.

[▶To format your player in Recovery Mode](#)

If your player is still performing erratically after you have cleaned up your player's memory, format your player.

1. Turn off your player.
2. Press and hold  to turn on the player.
3. When the Creative logo appears, press and hold the Menu button until the **Recovery Mode** screen appears. Three menu items are shown: **Clean Up**, **Format All**, and **Reboot**.
4. Press the Menu button to scroll through the options.
4. Highlight **Format All**.
5. Press  to select.
6. When formatting is complete, select **Reboot**. Your player restarts and rebuilds its music library.

Warning!

Formatting your player erases all content on your player's memory and resets your player's firmware to default settings. If possible, back up all data on your player before proceeding.

[▶My player stops responding or does not turn on. What do I do?](#)

- Make sure that your player is not locked. See [Locking Your Player](#).
- Your battery may need to be recharged. Charge your player's battery with the power adapter or connect your player to your computer's USB port with use of the supplied USB cable.

[▶Where can I get more information on Creative products?](#)

Visit www.creative.com

for updates and downloads relating to all Creative products.

Declaration of Conformity

According to the FCC96 208 and ET95-19,

Manufacturer/Importer's Name:

Creative Labs, Inc.

Manufacturer/Importer's Address:

1901 McCarthy Boulevard

Milpitas, CA. 95035

United States

Tel: (408) 428-6600

declares under its sole responsibility that the product

Trade Name:

Creative Labs

Model Numbers:

DVP-FL0012

has been tested according to the FCC / CISPR22/97 requirement for Class B devices and found compliant with the following standards:

EMI/EMC:

ANSI C63.4 2003, FCC Part 15 Subpart B Complies with Canadian ICES-003 Class B

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesirable operation.

Ce matériel est conforme à la section 15 des règles FCC.

Son Fonctionnement est soumis aux deux conditions suivantes:

1. Le matériel ne peut être source D'interférences et
2. Doit accepter toutes les interférences reçues, Y compris celles pouvant provoquer un fonctionnement indésirable.

Supplementary Information:

Compliance Manager

Creative Labs, Inc.

September 9, 2009

License and Copyright

Information in this document is subject to change without notice and does not represent a commitment on the part of Creative Technology Ltd. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the written permission of Creative Technology Ltd.

ZEN X-Fi2 and the Creative logo are trademarks or registered trademarks of Creative Technology Ltd. in the United States and/or other countries. Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Intel and Pentium are registered trademarks of Intel Corporation in the United States and/or other countries.

Gracenote is CDDDB, Inc. d/b/a ""Gracenote."" CD and music-related data from Gracenote CDDDB® Music Recognition ServiceSM © 2000, 2001, 2002 Gracenote. Gracenote CDDDB Client Software © 2000, 2001, 2002 Gracenote. U.S. Patents Number #5,987,525; #6,061,680; #6,154,773, and other patents issued or pending.

CDDDB is a registered trademark of Gracenote. The Gracenote logo and logotype, the Gracenote CDDDB logo and logotype, and the "Powered by Gracenote CDDDB" logo are trademarks of Gracenote. Music Recognition Service and MRS are service marks of Gracenote.

All other products are trademarks or registered trademarks of their respective owners.

Copyright © 2009 Creative Technology Ltd. All rights reserved.

Version 1.00.04

September 2009