


REMOTE CONTROL QUICK USER GUIDE

The optional remote control provides the user with added functionality for controlling their blinds. The remote control contains single push ability to move the slats open, closed, or to your favorite position. The remote also allows the user to set up separate channels to control specified blinds for customized control.

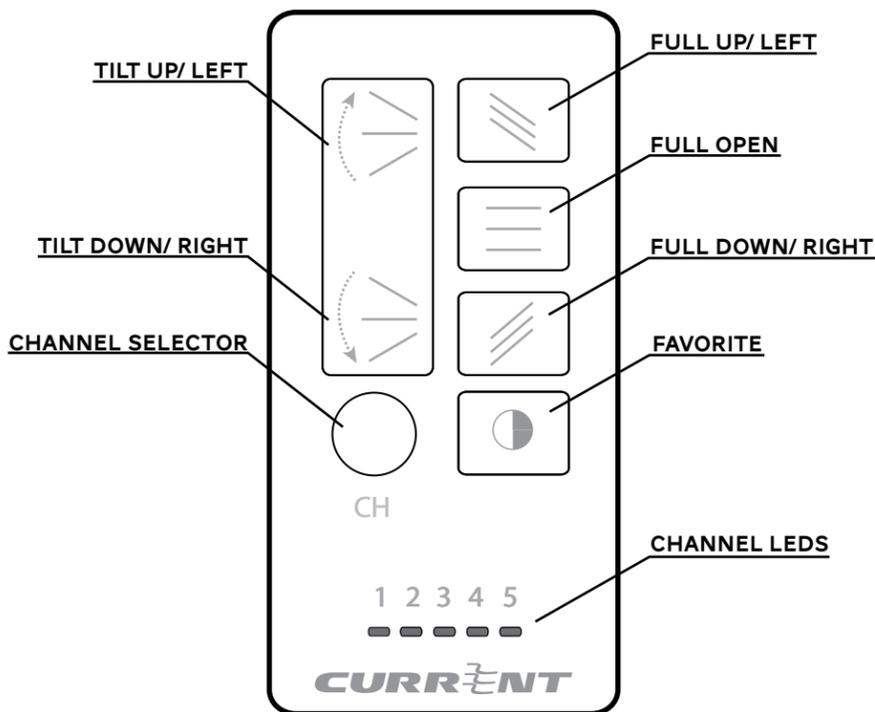

REMOTE BUTTON DESCRIPTIONS

TILT TOGGLE

Briefly press and release to move the slats in the open or closed direction and stop at the next position setting. There are seven (7) position settings from the full up to the full down position. The user may also press and hold the toggle button until the slats get to the desired position, then release the toggle.

FULL UP/ LEFT

Moves the slats to the full up position for horizontal blinds or full right position for vertical blinds.

FULL OPEN

Moves all slats to the full open position.

FULL DOWN/ RIGHT

Moves all slats to the full down position for horizontal blinds, or full left position for vertical blinds.

FAVORITE

The user can program this button to any position they choose to be their most preferred position; however, if left unchanged it will move the slats to approximately half way between the full open and the full down/ left position.

CHANNEL SELECTOR

Used to customize control of multiple blinds on a single remote. The currently selected channel is indicated by the Channel LEDs. Pressing the CHANNEL Button once will display the current channel. Pressing it again will switch to the next channel. When all LEDs are lit, the remote is selected to broadcast on all channels.

SETTING UP THE REMOTE

PAIRING THE REMOTE

Pairing to the remote can be performed before or after installation and programming of the SMART WAND™.

Determine which blind(s) you wish to pair to the handheld remote.

Press the PROGRAMMING BUTTON on each SMART WAND™ you wish to pair to the remote until you hear a SINGLE BEEP (1) [Fig. 1], then release.

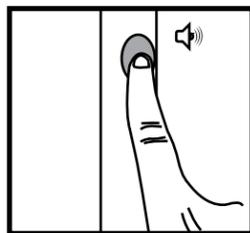


Figure 1; Push and Hold

Press the CHANNEL button until the LEDs reflect the desired channel you wish to set [Fig. 2].

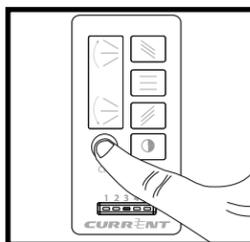


Figure 2; Push Channel Button

Use a tack or pen to press and release the PAIRING button on the back of the remote [Fig. 3] When this button has been pressed, the LED's on the front of the remote will scroll to confirm.

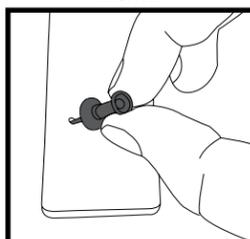


Figure 3; Press in Tack

To PAIR, press the top left button on the tilt toggle [Fig. 4]. The blind(s) will jog down and up showing that it has received the command and completed the process. If you ever need to unpair, you can repeat the same steps and press the bottom button on the tilt toggle to unpair [Fig. 5].

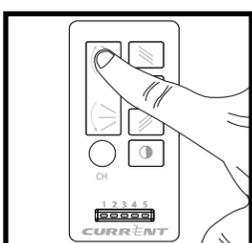


Figure 4; Push To Pair

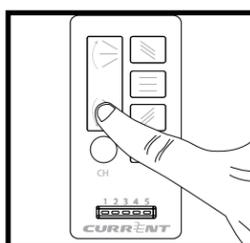


Figure 5; Push to Unpair

SETTING THE FAVORITE BUTTON

The FAVORITE Button allows the user to program a slat position unique to the user which moves all slats included on that channel to the user's favorite position.

To program the FAVORITE Button, twist the SMART WAND™ until the desired position is reached.

Next, press and hold the PROGRAMMING BUTTON on the SMART WAND™ until you hear a TRIPLE BEEP (3), then release. [Fig. 6].

Your FAVORITE Button is now programmed to move that blind to your favorite position. Each SMART WAND™ can be set to have different favorite positions.

After the SMART WAND™ is set, test by moving your blinds, then pressing the FAVORITE Button. All blinds on that channel should move to their programmed favorite position.



Figure 6; Push and Hold Programming Button

CHANGING THE BATTERIES

The SMART WAND Remote is powered using (1) 3V 2032 coin cell lithium battery.

To replace the battery, use a small flat head screwdriver to gently pry the back off of the remote body.

Once removed, the coin cell battery should be visible. Slide the coin cell battery down until it comes out of the battery holster. Inset the new battery by sliding it up into the battery holster.

Replace the remote backing.

SAFETY INFORMATION



WARNING

Read all warnings and instructions prior to setting up the SMART WAND™ MULTI-CHANNEL REMOTE CONTROL. Failure to follow these instructions may result in property damage or serious personal injury.



CAUTION

Do not use the SMART WAND™ MULTI-CHANNEL REMOTE CONTROL for anything other than its intended use. Any usage of the part of this kit outside of its intended purposes is not covered under the warranty.



CAUTION

Existing blinds may have sharp edges. Use gloves to prevent cuts or abrasions whenever removing or reinstalling blinds.

FCC: 2AJXX-CP16A
Model: CP16A0402_02
IC: 22151-CP16A

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by Current Products Corp. could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF WARNING STATEMENT

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

IC STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with the radiation exposure limits in an uncontrolled environment. This equipment is in direct contact with the user's body under certain operating conditions. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux radiations dans un environnement non contrôlé. Cet équipement est en contact direct avec le corps de l'utilisateur dans des conditions de fonctionnement normales. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec tout autre antenne ou transmetteur.

WARRANTY INFORMATION

LIMITED WARRANTY

Current Products Corp. (the "Manufacturer") hereby warrants to Customer that the Smart Wand™ (the "Product") is and will remain for a period of one (1) year from the date of delivery to Customer as evidenced by Customer's proof of purchase (the "Warranty Period"), free of defects in materials and workmanship, provided that the Product used for its intended purpose and is properly serviced in accordance with the User's Manual provided to Customer. Subject to the foregoing, if at any time during the Warranty Period the Product fails to conform to the foregoing warranty by reason of defects in materials or workmanship, Customer shall promptly notify Manufacturer in writing, and Manufacturer at its option shall repair or replace the defective Product or component part without charge to Customer, except for: (A) costs incurred in transporting the Products or component parts to and from Manufacturer's designated dealer or its manufacturing plant; and (B) charges for labor or other costs incidental to the removal or remounting of component parts repaired or replaced under this Warranty, both of which shall be borne by Customer. Notwithstanding any provision herein to the contrary, this Warranty shall not extend or obligate Manufacturer to take any action with respect to: (i) Products which have been modified, altered, installed, used or operated in a manner which is not recommended by Manufacturer, including any Products in which parts not manufactured or approved by Manufacturer have been installed; (ii) Products which have not been regularly and properly serviced in accordance with the User's Manual or which have otherwise been neglected; and (iii) ordinary wear and tear, service and maintenance and replacement items; (iv) the Product has been used, or attempted to be used, for other than the customary usage or for other than the Product's intended use; (v) the Product has been subject to mishandling, misuse, or abuse; (vi) the product has suffered damage resulting from lightning, power surges, vandalism, fire, earthquake, acts of nature, or any other cause which the product was not designed to withstand; or (vii) damage to the Product cause by battery decay or corrosion.

This Limited Warranty extends only to the original owner. This Limited Warranty is not transferable. This Limited Warranty does not cover normal wear or tear or deterioration which occurs with the passage of time. Batteries originally provided with a new product, if any, are produced by a third party and are not warranted by Manufacturer. No employee, distributor, dealer, agent or representative is authorized to change the terms of this Limited Warranty in any way, to extend the warranty time periods, or to grant additional warranties, and no attempt to do any of the foregoing will be binding upon Manufacturer.

LIMITATION OF LIABILITY

EXCEPT AS SPECIFICALLY STATED IN THE PARAGRAPHS IMMEDIATELY ABOVE, MANUFACTURER MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE WARRANTY SET FORTH ABOVE AND THE OBLIGATIONS AND LIABILITIES OF MANUFACTURER THEREUNDER REPRESENT CUSTOMER'S SOLE AND EXCLUSIVE REMEDIES AND ARE EXPRESSLY MADE IN LIEU OF ANY AND ALL OTHER REMEDIES, WARRANTIES, GUARANTIES OR LIABILITIES, EXPRESS OR IMPLIED, ALL OF WHICH ARE HEREBY EXPRESSLY WAIVED BY CUSTOMER. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IN NO EVENT SHALL MANUFACTURER'S LIABILITY HEREUNDER EXCEED THE PURCHASE PRICE FOR THE PRODUCTS, NOR SHALL MANUFACTURER BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER.

OTHER LEGAL RIGHTS

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

For any questions regarding safety, warranty, or liability, call 850-435-4994.