



For an updated list of compatible  
apps & devices, please visit:  
[www.getbigstream.com](http://www.getbigstream.com)



© 2010 Personal Communications Devices LLC. All rights reserved.

Follow us on:



## User Manual



## Table of Contents

● Introduction	01
● Package Contents	01
● Compatible Devices	02
● Set Up	03
● Usage	05
● Charging Instructions	06
● Maintenance	06
● Technical Specifications	07
● Troubleshooting	08
● Contact Us	09

## Introduction


Bigstream™ is a plug-and-play device that enables users to stream media content from their Apple devices to a TV without the need for cables and wires. Extremely portable, the Bigstream can be transported from the home to the road for entertainment, business, and many other applications.

## Package Contents




## Receiver Connectors/Switches

1. Channel Selector
2. Power Switch
3. DC-IN Power Port
4. A/V OUT

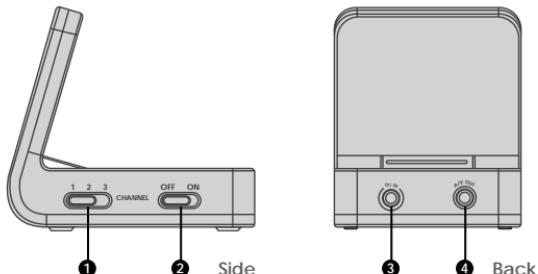

## Transmitter Connectors/Switches

1. Channel Selector
2. Power Switch
3. Mini-USB Port

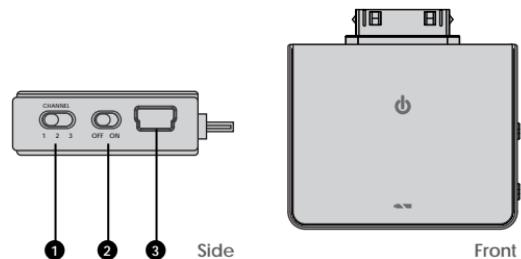


## Compatible Devices

1. iPhone 4®
2. iPhone 3GS
3. iPhone 3G
4. iPhone
5. iPad™
6. iPod touch® (4<sup>th</sup> Gen)
7. iPod touch (3<sup>rd</sup> Gen)
8. iPod touch (2<sup>nd</sup> Gen)
9. iPod nano (6<sup>th</sup> Gen)
10. iPod nano (4<sup>th</sup> and 5<sup>th</sup> Gen)

## Set Up

1. Plug the AC adapter into the receiver's DC-IN power port and turn on the receiver.
2. Set the transmitter and receiver channel switches to the same channel.
3. Attach the fully charged transmitter into the mobile device and turn on. When the transmitter is on, the Power LED will emit a green light.

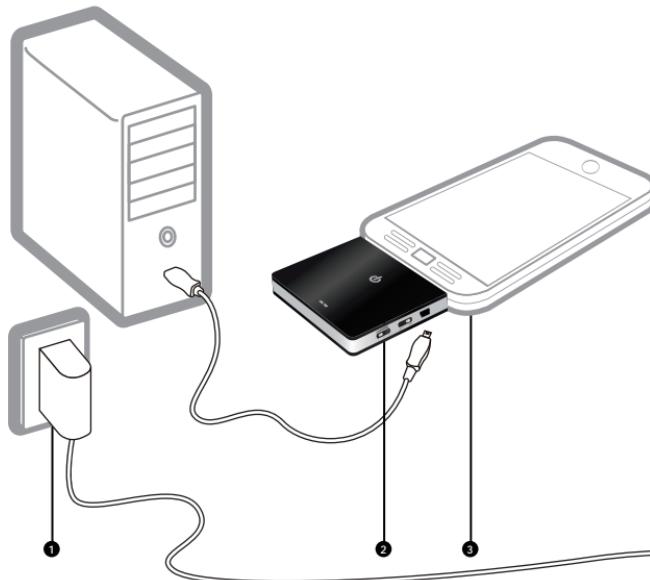

4. Plug the Audio/Video cable (red, yellow, and white connectors) into the component audio/video input ports on your TV. Attach the opposite end of the cable into the receiver's A/V OUT port.
5. On your TV, select the appropriate input setting.
6. You are now ready to begin streaming media wirelessly to your TV.



## Streaming a video/movie

1. Make sure the transmitter is fully charged, and both devices are set up for streaming. (see Set Up)
2. For iPhone users, select the "iPod" icon and then play a video from your library.
3. For iPad and iPod touch users, select the "Videos" icon and play a video from your library.
4. The video will instantly be played on your TV screen.

## Streaming a photo slideshow

1. Select the "Photos" icon.
2. Photos using the TV-out can only be shown as a slideshow.
3. On an iPad, select "slideshow" and "start" to begin viewing photos.
4. On an iPhone or iPod touch, press play to start slideshow and begin viewing. The slideshow will instantly appear on the TV.

## Streaming an app

1. Download and install an app that supports Apps TV-out function. For a list of apps that support Apple's TV-out function, please visit [www.getbigstream.com](http://www.getbigstream.com).
2. Launch the app from your device.
3. Most apps that support TV-out will automatically appear on the TV screen.
4. For some apps such as games, additional steps may be required. Follow the onscreen instructions to show on the TV.


## Streaming a presentation

1. You must have a presentation app installed on your device that supports TV-out to use this function. (e.g., Keynote for iPad)
2. Launch the presentation app.
3. For some presentation apps, the presentation can only be viewed in slideshow mode.
4. Start the slideshow and the presentation will be instantly displayed on the TV screen.

## Charging Instructions

### Charging the Transmitter

1. When the red LED flashes, this indicates the device has less than ten minutes of playback time and needs to be charged immediately.
2. Connect the mini-USB charging cable to the transmitter.
3. Connect the other end of the USB cable to a power source that accepts USB. (computer, USB charger, etc.)
4. When charging, the Battery LED will emit a red light.
5. When the transmitter is fully charged, the Battery LED will turn off.

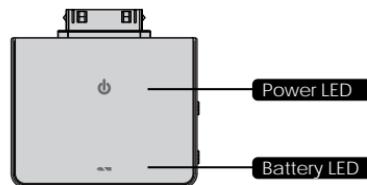

## Maintenance

1. Unplug the power and disconnect all external devices and cables from the transmitter and receiver.
2. Gently remove any surface dirt using a damp, soft lint-free cloth. Dry the plastic with a soft lint-free cloth after cleaning.
3. To clean the device, do not use cleaning sprays or solvents of any kind containing alcohol or other inflammable liquids.

## Technical Specifications

### ● Transmitter End

Dimensions	1.7 in(L) x 2 in(W) x 0.6 in(H) 44 mm(L) x 52.9 mm(W) x 14.6 mm(H)
Weight	30.76(g) / 1.09(oz)
Connectors	Apple 30-pin dock connector, mini-USB port
Switches	Power On/Off Switch, Channel Selector with 3 channels
Indicators	2 LED Indicators
Resolution Support	Up to 480p @30fps
Power & Battery	Lithium Ion Indicators 335 mAh Playback time: 2hr+
Operating Frequency	5.8GHz (FM)
Operating Temperature	0°C-50°C

### ● Receiver End

Dimensions	3.2 in(L) x 2.4 in(W) x 2.9 in(H) 82.2 mm(L) x 60 mm(W) x 72.8 mm(H)
Weight	80.2(g) / 2.83(oz)
Connectors	DC IN, A/V OUT
Switches	Power On/Off Switch, Channel Selector with 3 channels
Resolution Support	Up to 480p @30fps
Power	Power consumption: 210mA/6V
AC Adapter	+6.0V,  3W
Operating Frequency	5.8GHz (FM)

## Troubleshooting

### 1. I can't get the transmitter to turn on.

Make sure that your transmitter is fully charged, and that the receiver is set up properly. In the event that the transmitter battery is not charged, power the transmitter with the included mini-USB to USB cable.

### 2. My picture quality is not clear.

It is possible that there is another user in close proximity. You can solve this by changing the transmitter and receiver to a different channel. Choose the channels that provide the clearest picture and sound quality. Both transmitter and receiver must have the same channel selected.

### 3. I can't get the picture to display on the TV.

Check to make sure you have switched your TV input to the appropriate selection that corresponds to the plugged in Audio/Video cable. Additionally, make sure the application you are running is enabled for iPhone/ iPad/ iPod TV-out functionality.

## Safety Information/ Warnings/ Warranty Repair

Keep safety notes and other documentation together with device.

## Repair

Only qualified technicians should repair the device. Unauthorized opening and improper repair can result in considerable danger to the user, the device, and may also void the warranty.

Please refer to [www.getbigstream.com/support](http://www.getbigstream.com/support) for detailed information regarding warranty.

## Warning

Never force a connector into a port. If the connector and port do not join with ease, they probably do not match. Ensure that the connector matches the port and that you have positioned the connector correctly in relation to the port.

## Contact Us

Should you require additional support, please contact one of our regional offices or contact us at : [support@getbigstream.com](mailto:support@getbigstream.com)

### Office Locations

USA	Personal Communications Devices, LLC. 555 Wireless Blvd. Hauppauge, NY 11788
Canada	PCD Communications Canada Ltd. 5535 Eglinton Avenue West Suite #234 Toronto, ON M9C 5K5

iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.