 
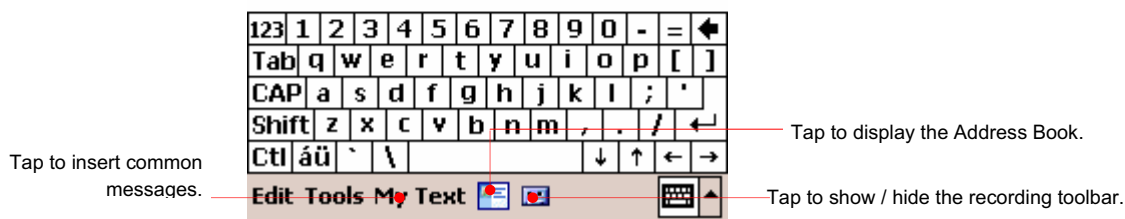 


You can mark the messages that you want to retrieve in full during your next synchronization. In the message list, tap and hold the message you want to retrieve. On the pop-up menu, tap Mark for Download. The icons in the Inbox message list give you visual indications of message status.

Make a new message

1. Tap New.

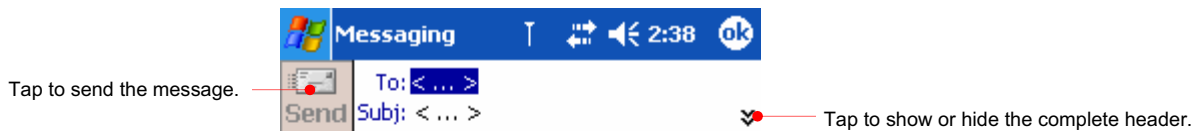 


- In the **To** field, enter an e-mail address of one or more recipients, separating them with a semicolon, or select a name from the contact list by tapping the **Contacts** button.



- Compose your message. To enter preset or frequently used


messages, tap **My Text** and select a message.

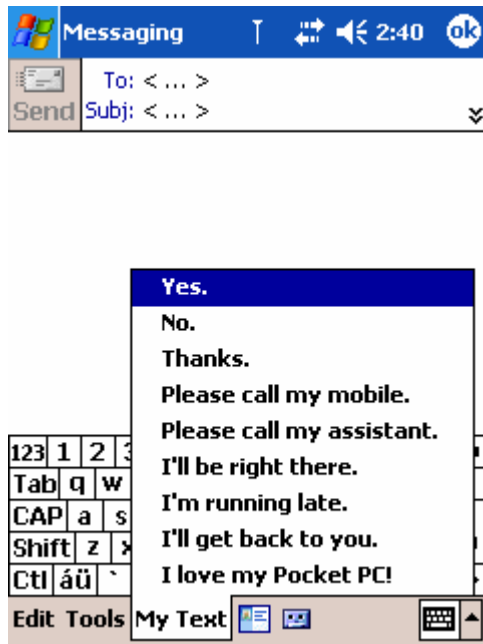

4. When you have finished the message, tap **Send**.

Delete a message

 
When your device is synchronized with your desktop PC, and when you want to delete a message on your device, tap and hold the message to have pop-up menu displayed. Then select Delete.

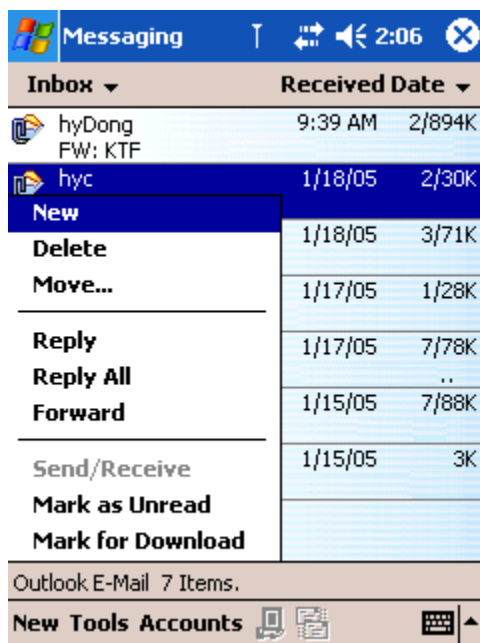

If your device is not synchronized with your device, the next time your device is synchronized, the corresponding message on your desktop PC will be deleted.

Reply, Reply all or Forward a message

 When you want to reply, reply all or forward a message on your device, tap and hold the message to have pop-up menu displayed. Then select Reply, Reply all or Forward.


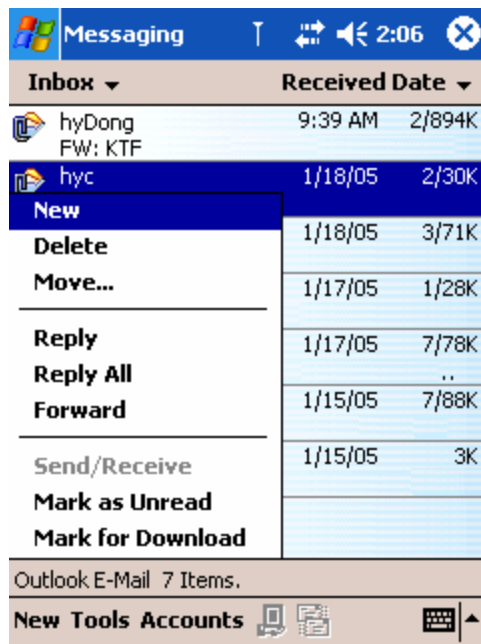


Connecting Directly to E-mail Server


In addition to synchronizing e-mail messages with your desktop PC, you can send and receive e-mail messages using CDMA module. The ISP or network must use a POP3 or IMAP4 e-mail server and an SMTP gateway.

Customize a new mail service

  You can use multiple e-mail services to receive your messages. For each email service you intend to use, first set up and name the e-mail service. If you use the same service to connect to different mailboxes, set up a separate service for each mailbox. In Inbox, tap **Accounts**, and then tap **New Account**. Follow the directions in the New Service Wizard. Here are just parts of setting a wizard.

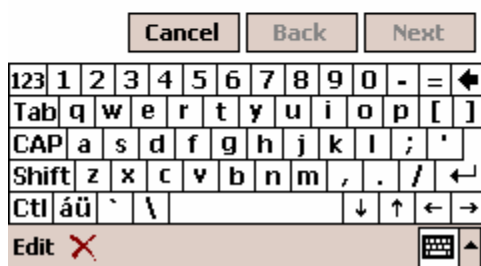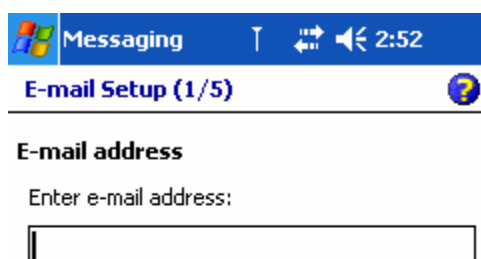

Enter e-mail address and tap Next.

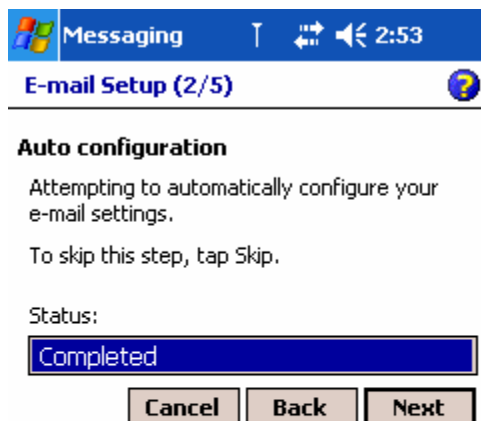 

After the status becomes Completed as shown above, tap Next.

Messaging 2:53

E-mail Setup (3/5)

User information

Your name:

User name:

Password:

☐ Save password

Cancel Back Next

Enter your name and password and then tap Next.

Messaging 2:54

E-mail Setup (4/5)

Account information

Account type:

Name:

Select POP3 or IMAP4 if it is supported, enter a name in the Name box (for example, My Mail).

Cancel Back Next

Enter a name in the Name box (for example, My Mail) and tap Next.

Messaging 2:55

E-mail Setup (5/5)

Server information

Incoming mail:

Outgoing mail:

Domain:

Options

Cancel Back Finish

123 1 2 3 4 5 6 7 8 9 0 - = < >

Tab q w e r t y u i o p []

CAP a s d f g h j k l ; ' ,

Shift z x c v b n m , . / < >

Ctl á ü ` \ _ { } | ~

Edit X

Enter server names in the Incoming mail box and the Outgoing mail box (for example, mail.bigpond.com), and if needed, tap Options to set the other options. For more detailed information, ask your network administrator or corporate mail-server administrator.

To connect to an e-mail service

In Inbox, tap Services, and then tap Connect. Then through CDMA module, you will be connected to mail server. Messages in your own local folder will be downloaded from this mail server directly.

Messaging 3:23

Show Received Date

Outlook E-Mail

POP3

Deleted Items

Drafts

Inbox

 
Outbox

Sent Items

New Tools Accounts

To synchronize your own local folder through ActiveSync

If you want to synchronize your own local folder through ActiveSync, select the local folder (for example, POP3 as shown below) and on the Tools menu, select Manage Folders.

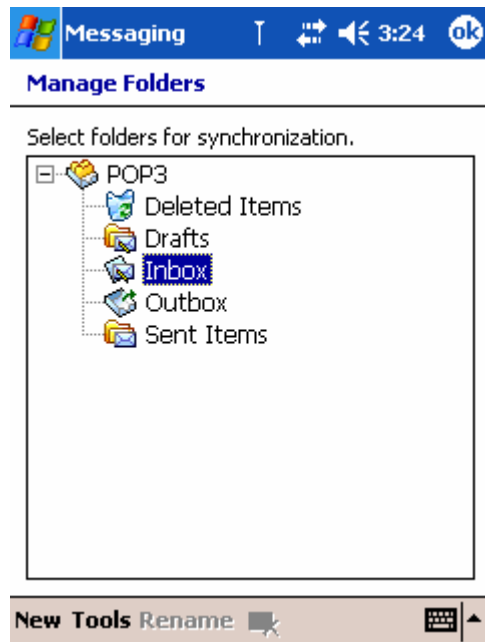

Select the subfolder you want to synchronize through ActiveSync and tap OK on the upper-right corner.

By default, each mail service is composed of 5 subfolders.

- Inbox
- Outbox
- Sent Items
- Deleted Items
- Drafts

When you connect to the e-mail server, new messages are downloaded to the Inbox folder on your device, messages in the Outbox folder are sent, and messages that have been deleted on the e-mail server are removed from the Inbox folder on your device.

 
You can work online or offline. When working online, you read and respond to messages while connected to the e-mail server. Messages are sent as soon as you tap Send, which saves space on your device.

When working offline, you should download new message headers or partial messages, and then you can disconnect from the e-mail server while you decide which messages to download completely. The next time you connect, Inbox downloads any messages you marked for retrieval and sends the messages in your Outbox folder.

To download the attachments of message

You can download the attachments of message through directly connecting to mail server using the CDMA module.
Tap the Connect (📶) icon to directly connect to the mail server.
Then you will find the connect 📶 icon on the navigation bar.
Tap the connect 📶 icon on the navigation bar to finish this connection.

Tap and hold the message to download the attachments and select Mark for Download on the pop-up menu.

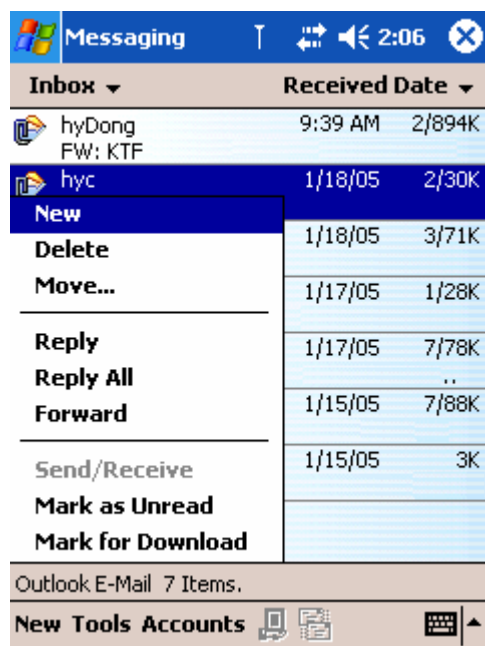

Chapter 7

Mobile Phone

Your device has a built-in CDMA module that supports wide-range data communication and additional features including SMS (Short Messaging Services), along with voice calls. These features save you the trouble of having to purchase another cellular phone with a phone number. Remember that you have no other right to copy the ESN number against the communication law.

In this chapter you will find followings :

- Phone Program
- SMS : Short Messaging Service

 


The information contained in this document is provided “as is” and is subject to change without notice.

Phone Program

You can open the mobile phone program as follows :

- Press the Send(📞) button
- Start 🖱 button > “ MobilePhone” .
- Push the slide up.

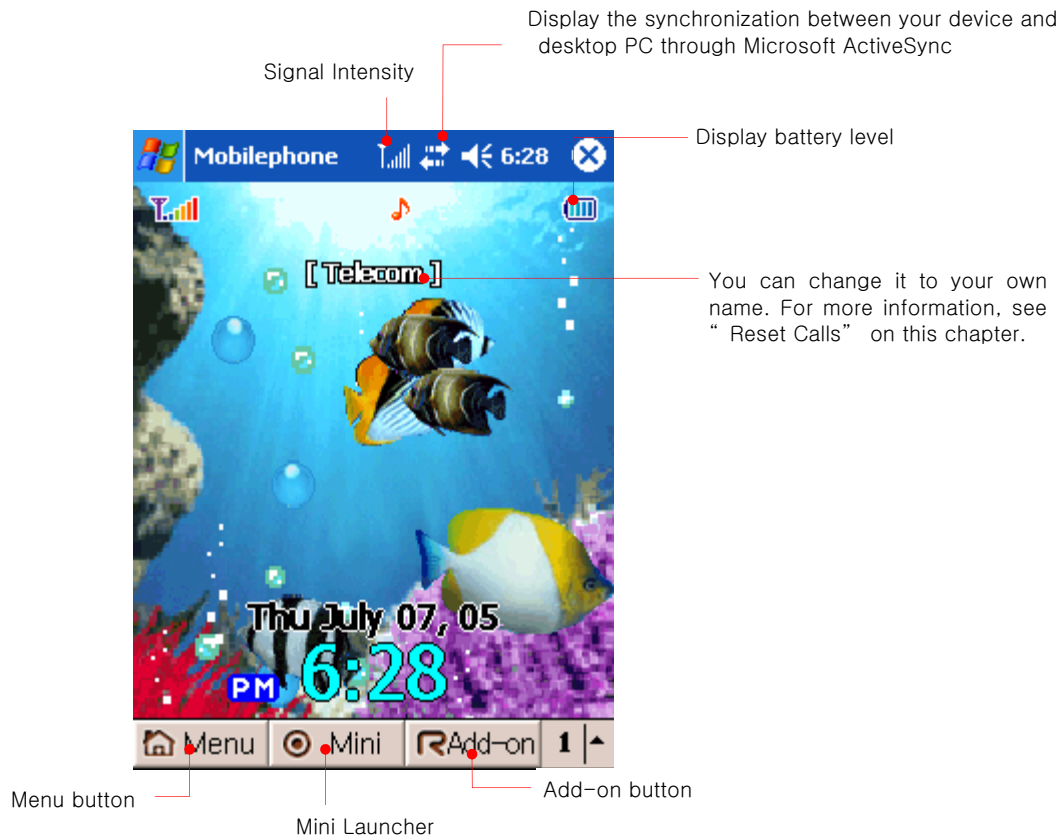


Indicators in the Phone display

Indicators	Descriptions
	signal intensity.
	When connected to CDMA 95A/95B/1x/EV-DO network, the corresponding icon will appear.
	When your call is trying to be connected, it blinks. When your call is connected, it appears.
	When your call is not in the service area, it appears.
	Bell sound mode
	Vibrate mode
	Bell sound + Vibrate mode
	Getting louder mode
	Vibrate mode + Bell sound
	Mute mode
	Lock mode
	Voice mail
	SMS message
	alarm mode.
	Roaming mode
	Battery level

Phone Keypad

 Push up the slide to have the phone keypad appear as shown below.

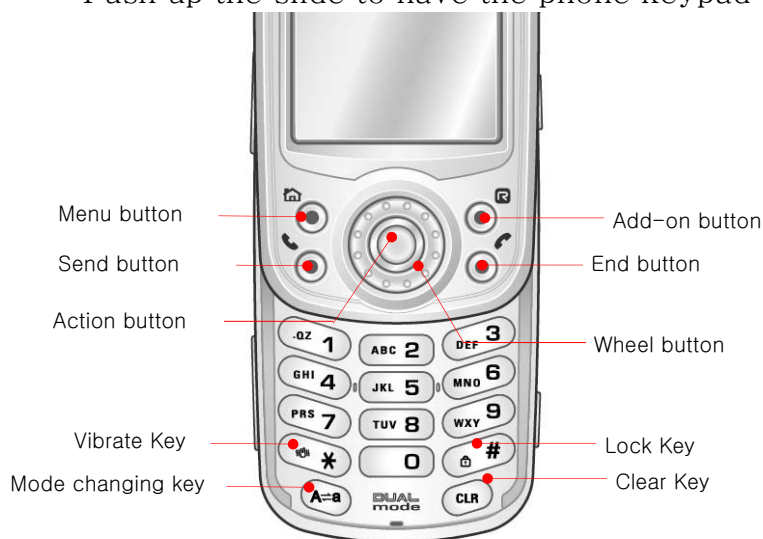

Menu () button

Press the Menu button to have the menu screen display when you are in the

Mobile Phone program. Do  to change your selection and do  to make an action.

Add-on () button

Press the Add-on button to have the mini menu screen display when you are in

the Mobile Phone program. Do  to change your selection and do  to make an action.

Send() button

- After entering the phone number you want, press the Send button to make a call.
- Press the Send button to have the recent call history display. Select the phone number you want and press the Send button again to make a call.

End() button

Press the End button to end a call.



Press and hold the End button to turn the CDMA module off so that you cannot make and receive a call or even you cannot make the internet or messenger connected. Press and hold again the End

Mode Chaging Key()

When you try to enter characters, number and special characters, press the Mode Changing Key to switch modes.

Clear() button

- Press the Clear button to delete a last digit.
- Press and hold the Clear button to clear all digit.

Vibrate () button

Press and hold the Vibrate  button to switch the Bell mode to the Vibrate mode. You will see the Vibrate  indicator in the phone display. If you want to return to the Bell mode, press and hold the Vibrate button again.

Lock() button

Press and hold the Lock button to lock your phone. A locked phone still rings or vibrates for incoming calls or messages.

- If you want to unlock your mobile phone temporarily, enter your password. (the default is “ 0000”)
- Press and hold the Lock button to unlock your phone and enter your password.

Wheel button & Action button

You can use the wheel button and action button as follows :



 
: turn right or left



: push down right



: push down left



: push down up



: push down bottom



: push down action button

 
How to make a call

You can make a call as follows :

1. Keypad
2. Call history
3. Speed dial
4. Contacts
5. The last 4 digit number

1. Keypad

Push up the slide and enter the phone number that includes area code and press

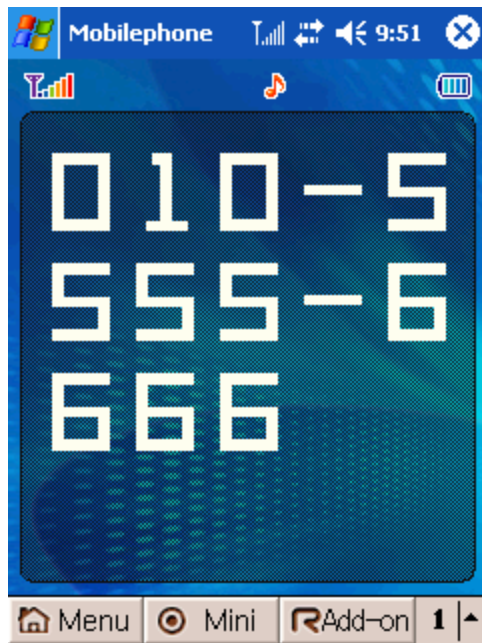

When your call is connected, the screen will be off to save power.

 
Press  to end your call.



While your call is connected, if the signal intensity is low, push down the slide so that you have a better communication state. If you want to have the screen on or off, press the power button.

2. Call History

Press  to have the recent call history appear.

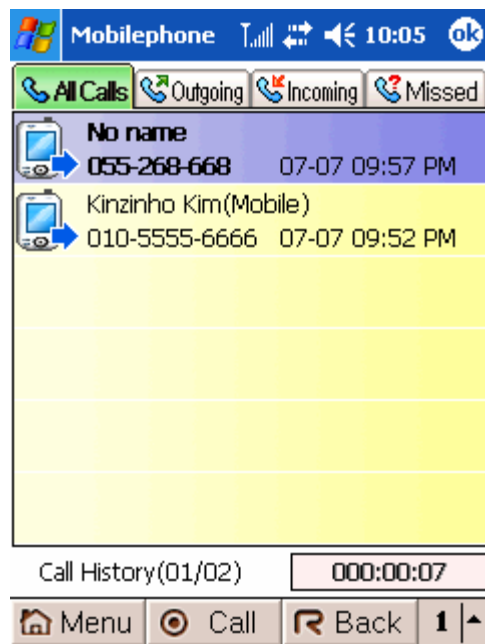

Select the number you want by doing  and press  to make a call.

3. Speed dial

For more information on speed dial, see “ how to register speed dial” of this chapter.

When you remember the speed dial, for example, the speed dial number is “ 025” , press  and press  a little bit longer. You have to remember that the last number of speed dial should be pressed a little bit longer.

When you don’ t remember the speed dial, press  and  to select the speed dial as shown below.



 
Select the speed dial number you want by doing  and press  to make a call.

4. Contacts

Press  and  to select the Contacts as shown below.



Select a contact you want by doing  and press  to make a call.

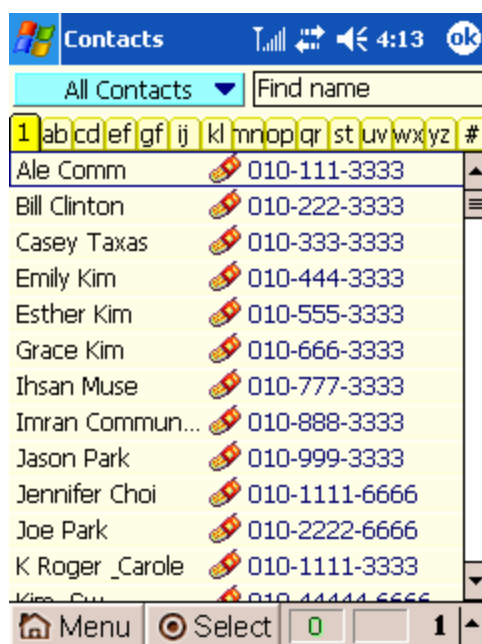

5. The last 4 digit number

Enter the last 4-digit number. By the way, you have press the last number should be pressed down a little bit longer to have the screen display as shown below.



Select a contact you want by doing  and press  to make a call.

Receive incoming call

When call is coming in, your device opens the mobile phone program automatically. If you want to receive the call, do as follows :

- Press , regardless of whether the slide is up or down.
- Push the slide up when “ answered” is selected in the item “ When push slide up, incoming call is answered” .

Press  to end the call.

Mobile Phone Menu Settings

When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display as shown below.



Each icon and its corresponding category name are as follows :


- | | | |
|--|--|---|
|  : 1. My Phone |  : 2. Messaging |  : 3. Phone Skin |
|  : 4. Sound Control |  : 5. Contacts |  : 6. Add-on |
|  : 7. Options | | |

Number Font



1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ My Phone”  by doing  and do  to have “ My Phone” category display. (or, press .)

 3. Select “ Number Font” by doing . (or, press .)

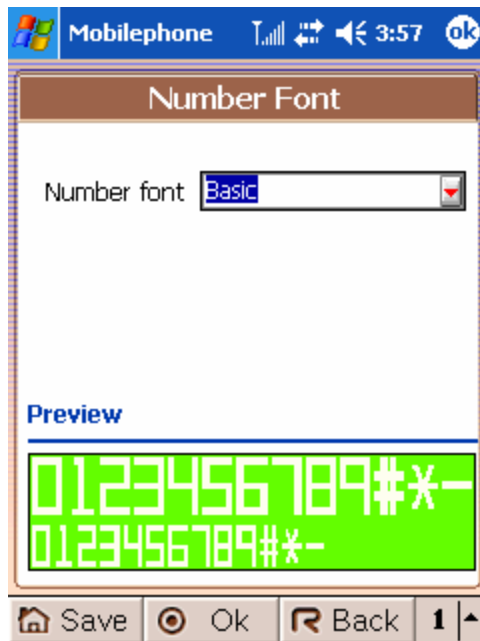

  4. Select “ Number Font” by doing . (or, press .)

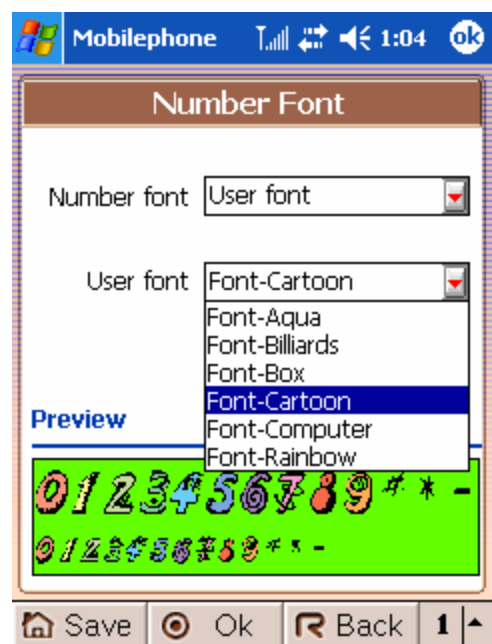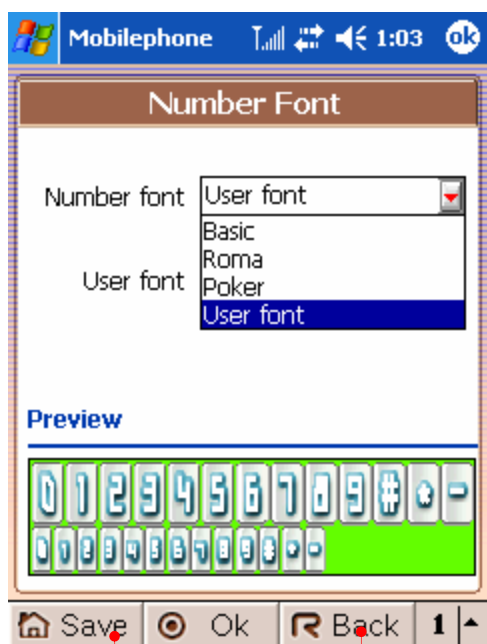


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Call Recording

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ My Phone”  by doing  and do  to have “ My Phone” category display. (or, press .)
3. Select “ Call Recording” by doing . (or, press .)

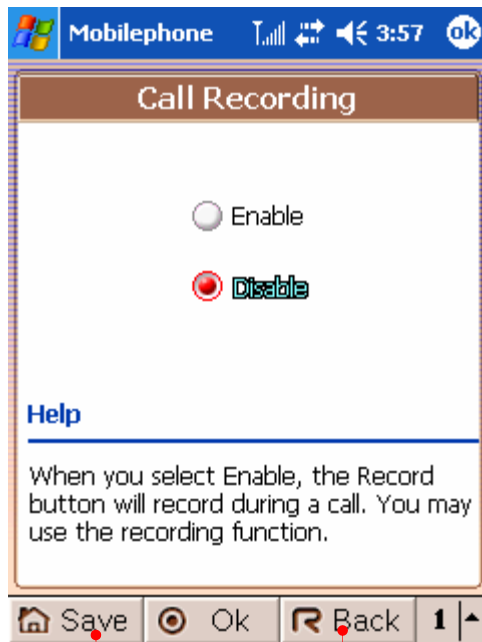

Press if you want to go back to the previous screen without saving.

 
Press if you want to go back to the previous screen after saving this change.

Reset Calls

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ My Phone”  by doing  and do  to have “ My Phone” category display. (or, press .)

3. Select “ Reset Calls” by doing . (or, press .)

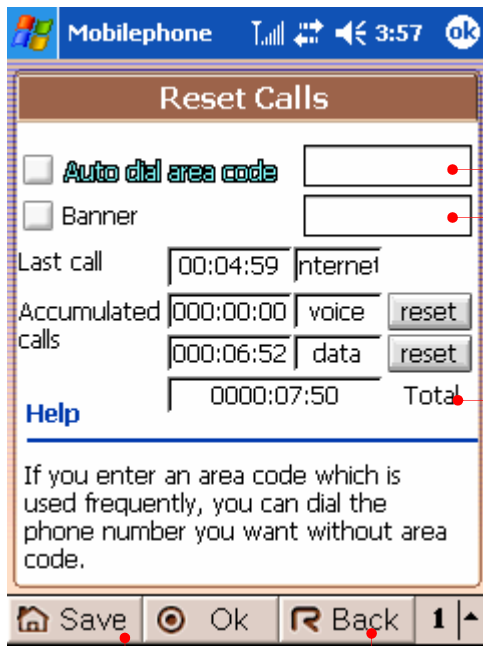

Reset Calls

☐ Auto dial area code

☐ Banner

Last call 00:04:59 Internet

Accumulated calls 000:00:00 voice

000:06:52 data

0000:07:50 Total

[Help](#)

If you enter an area code which is used frequently, you can dial the phone number you want without area code.

1

Enter the area code you use frequently.

Enter the banner you want instead of [Telecom].

 
This is the time you have used since you reset the mobile phone program. For more information, see “ Initialization” section of this chapter. “

Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Password

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ My Phone”  by doing  and do  to have “ My Phone” category display. (or, press .)
3. Select “ Password” by doing . (or, press .)
4. Enter your password(default password : “ 0000”) to have the screen as shown below.

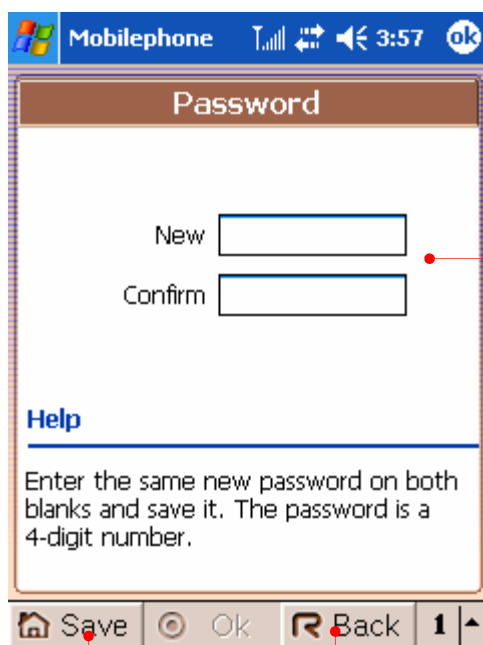

If you want to change this password enter the 4-digit number.

Press if you want to go back to the previous screen without saving.

 
Press if you want to go back to the previous screen after saving this change.



Please memorize your new password. See your local dealer or service center when you forget your new password.

Slide Up/Down Action

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ My Phone”  by doing  and do  to have “ My Phone” category display. (or, press .)
3. Select “ Slide Up/Down Action” by doing . (or, press .)

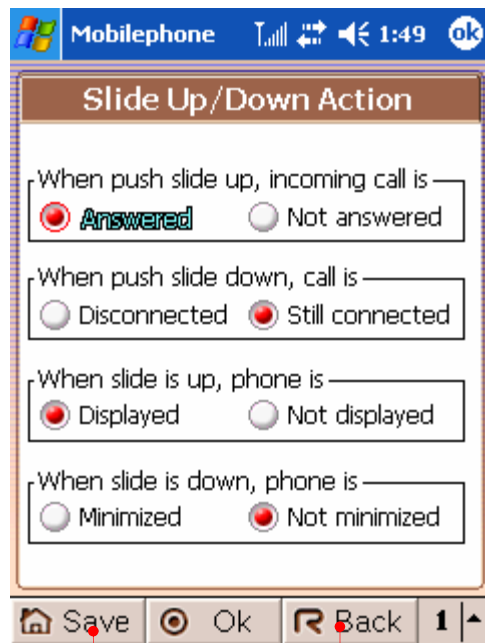

Press if you want to go back to the previous screen without saving.

 
Press if you want to go back to the previous screen after saving this change.

User information

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ My Phone”  by doing  and do  to have “ My Phone” category display. (or, press .)

3. Select “ User Information” by doing . (or, press .)

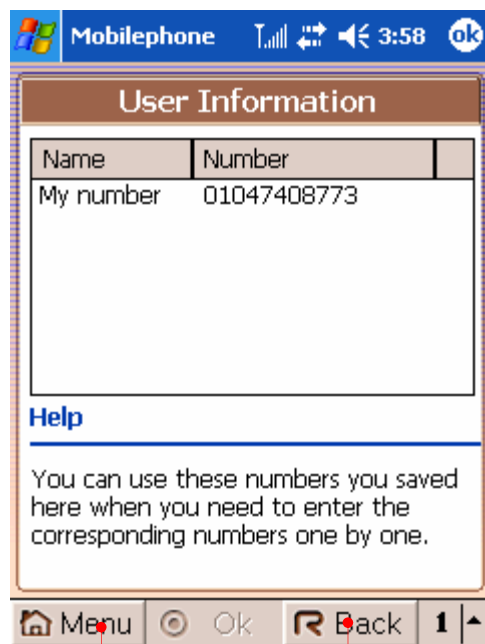

When you need to send a long digit number such as your phone number, social security number or your bank account number to your calling party by pressing the corresponding keypad, you can send these numbers at one time.

Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Messaging

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ Messaging”  by doing  and do  to have “ Messaging” category display. (or, press  .)



 
For more information on Messaging, see “ Messaging” of this chapter.

Background Image

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ Phone Skin”  by doing  and do  to have “ Phone Skin” category display. (or, press .)

3. Select “ Background Image” by doing . (or, press .)

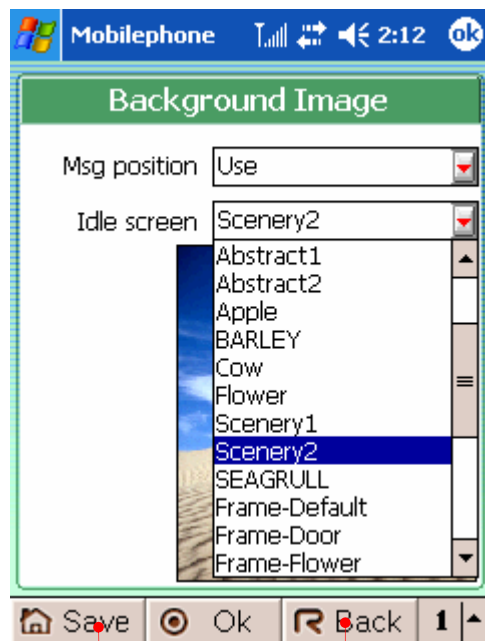


Do  and  to select one of the images that will be displayed as the background of your mobile phone program.

Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Standby Animation

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Phone Skin”  by doing  and do  to have “ Phone Skin” category display. (or, press .)
3. Select “ Background Animation” by doing . (or, press .)

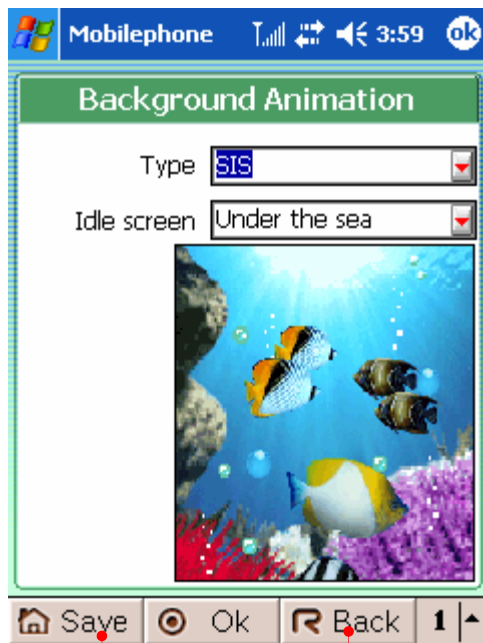

Select the standby file that is displayed on the background of your mobile phone program.

Press if you want to go back to the previous screen without saving.

 
Press if you want to go back to the previous screen after saving this change.

Incoming/Outgoing Animation

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ Phone Skin”  by doing  and do  to have “ Phone Skin” category display. (or, press  .)

3. Select “ Incoming/Outgoing” by doing  . (or, press  .)

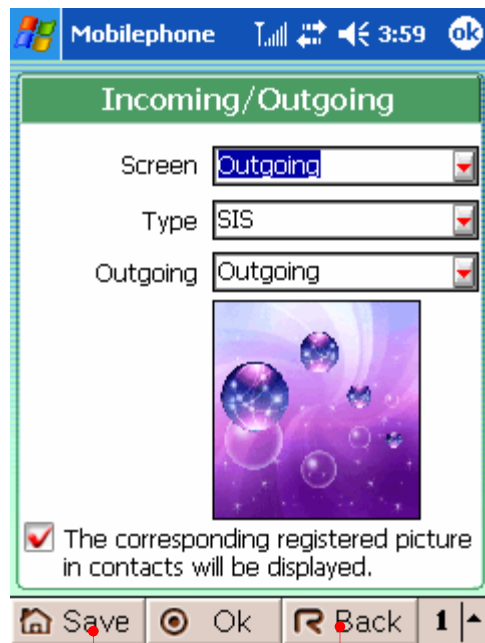

Select the incoming or outgoing file that are displayed when a call comes in or when you make a call respectively.

Press if you want to go back to the previous screen without saving.

 
Press if you want to go back to the previous screen after saving this change.

On/Off Animation

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ Phone Skin”  by doing  and do  to have “ Phone Skin” category display. (or, press  .)

3. Select “ On/Off Animation” by doing  . (or, press  .)

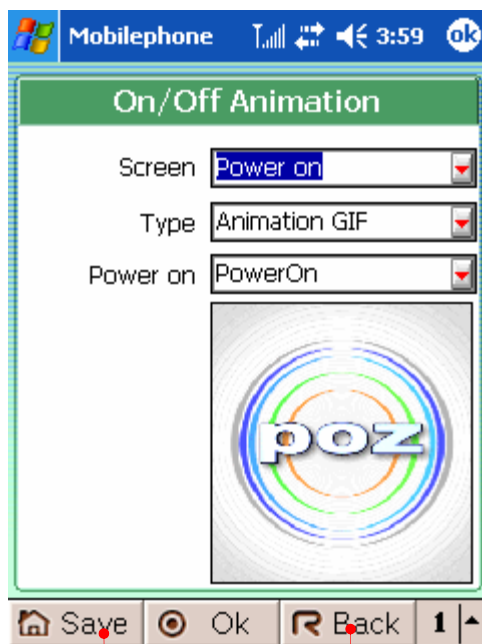

Select the phone on file or the phone off file that are displayed when you turn on or off CDMA module respectively.

Press if you want to go back to the previous screen without saving.

 
Press if you want to go back to the previous screen after saving this change.

Configurations

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ Phone Skin”  by doing  and do  to have “ Phone Skin” category display. (or, press  .)

3. Select “ Configurations” by doing  . (or, press  .)

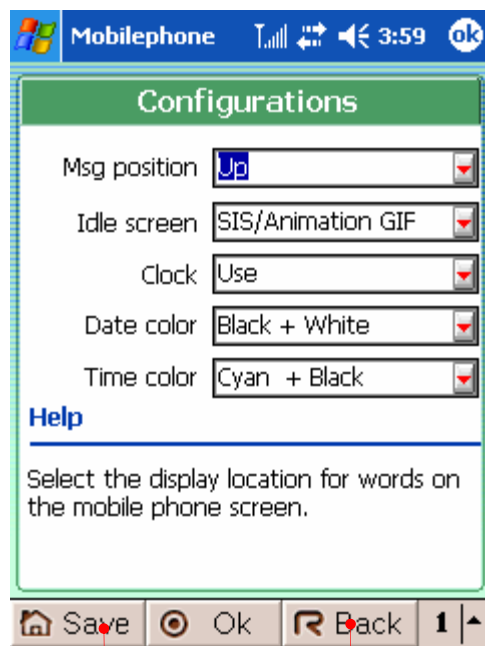

Select the position of banner that is displayed on the mobile phone program. If you want to change the [Telecom] to another banner, see “ Reset Calls” section of this chapter.

Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Ring

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Sound Control”  by doing  and do  to have “ Sound Control” category display. (or, press .)
3. Select “ Ring” by doing . (or, press .)

 


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Volume

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Sound Control”  by doing  and do  to have “ Sound Control” category display. (or, press .)
3. Select “ Volume” by doing . (or, press .)

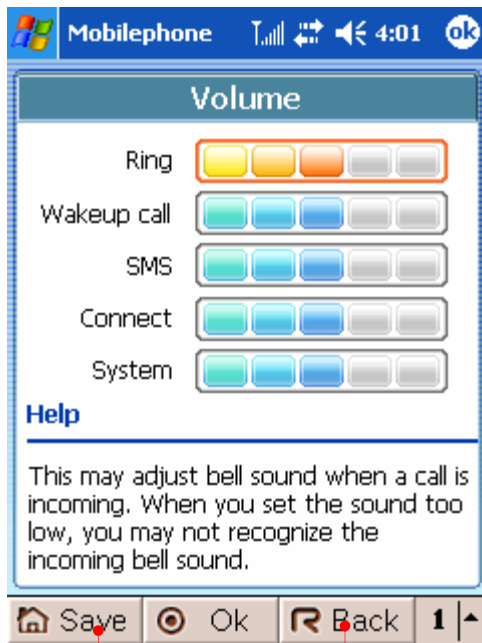


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Keytone

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Sound Control”  by doing  and do  to have “ Sound Control” category display. (or, press .)
3. Select “ Keytone” by doing . (or, press .)

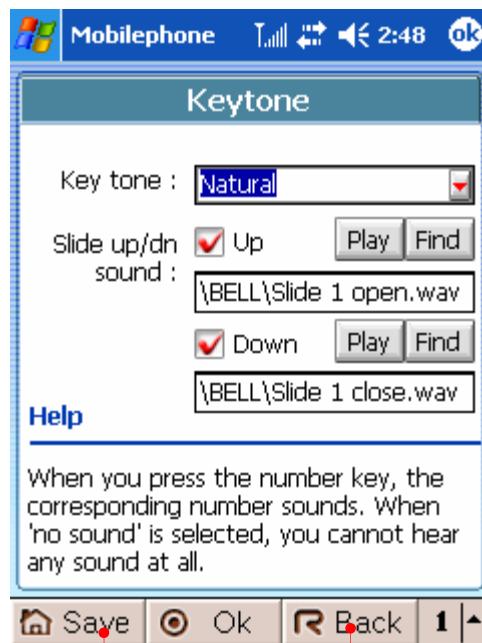


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

SMS Alert

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Sound Control”  by doing  and do  to have “ Sound Control” category display. (or, press .)
3. Select “ SMS Alert” by doing . (or, press .)

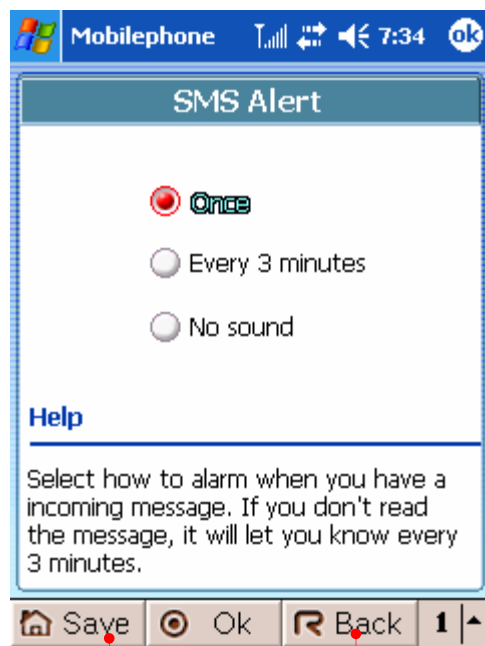


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Earphone/Speaker

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Sound Control”  by doing  and do  to have “ Sound Control” category display. (or, press .)
3. Select “ Earphone/Speaker” by doing . (or, press .)

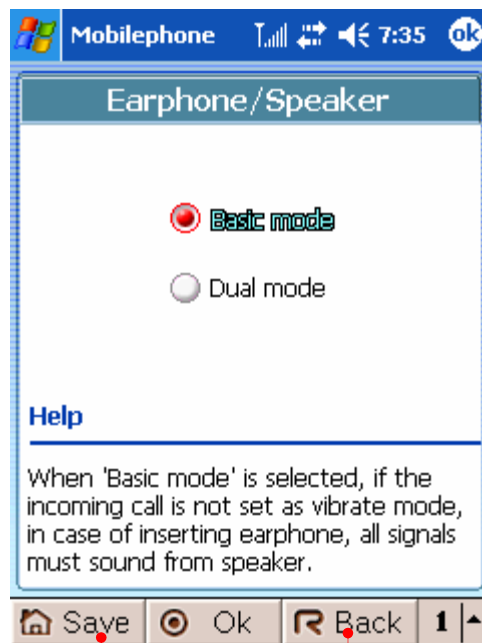


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Ring Type

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Sound Control”  by doing  and do  to have “ Sound Control” category display. (or, press .)
3. Select “ Ring Type” by doing . (or, press .)

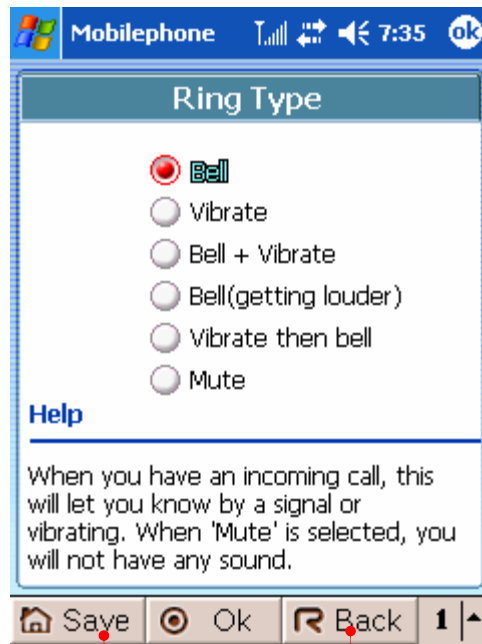

Press if you want to go back to the previous screen without saving.

 
Press if you want to go back to the previous screen after saving this change.

Contacts

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “Contacts”  by doing  and do  to have “Contacts” category display. (or, press .)

3. Select “Contacts” by doing . (or, press .)

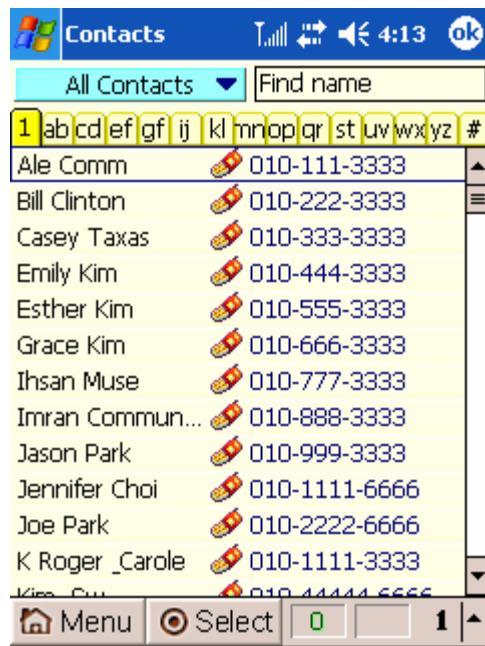


For more information on contacts, see “contacts” of this chapter.

Speed Dial

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ Contacts”  by doing  and do  to have “ Contacts” category display. (or, press .)

 3. Select “ Speed Dial” by doing . (or, press .)

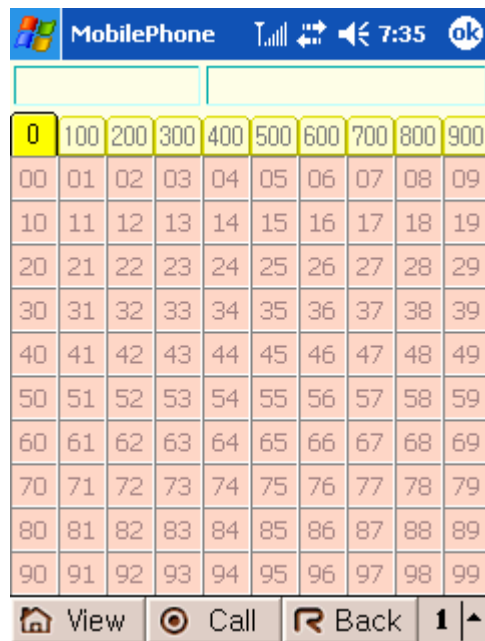


Call History

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.


2. Move to “ Contacts”  by doing  and do  to have “ Contacts” category display. (or, press .)

 3. Select “ Call History” by doing . (or, press .)

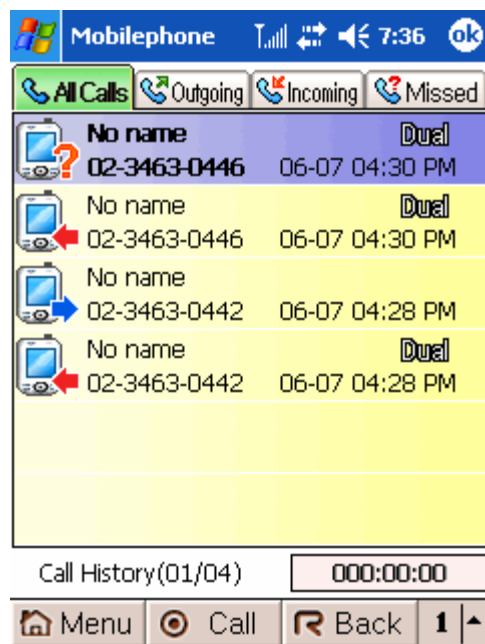

Select NAM

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Contacts”  by doing  and do  to have “ Contacts” category display. (or, press .)
3. Select “ Select NAM” by doing . (or, press .)

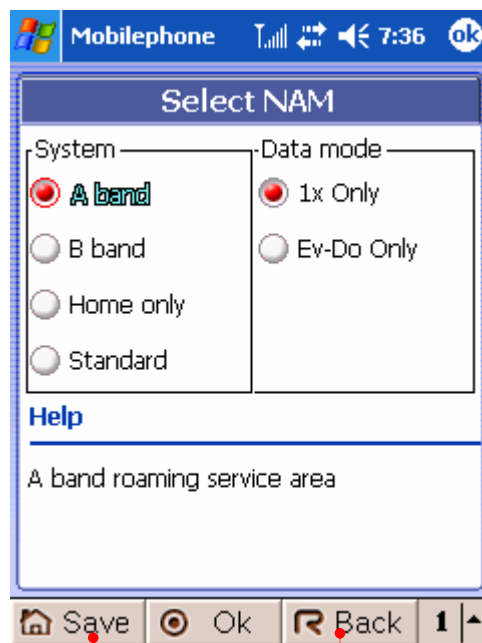


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Wakeup Call

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Add-on”  by doing  and do  to have “ Add-on” category display. (or, press .)
3. Select “ Wakeup Call” by doing . (or, press .)

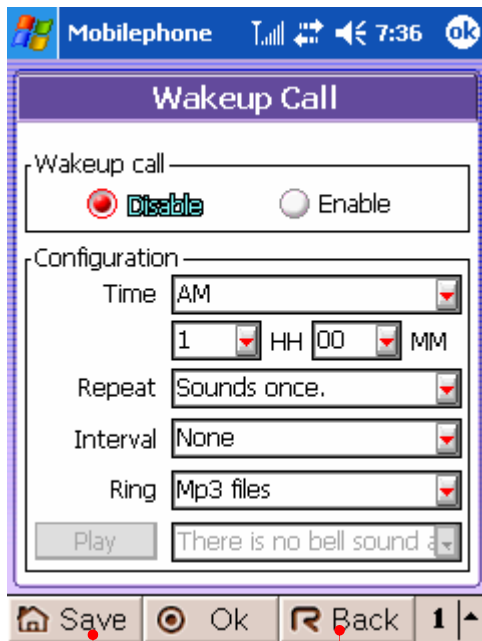


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Voicemail

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Add-on”  by doing  and do  to have “ Add-on” category display. (or, press .)
3. Select “ Voicemail” by doing . (or, press .)

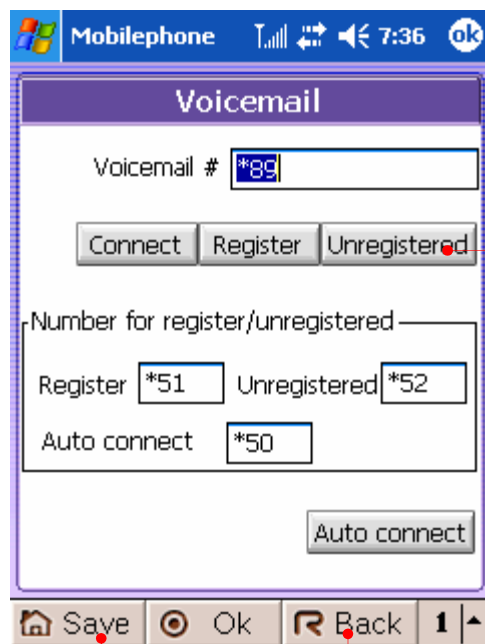

Tap “ connect” to retrieve the voice message.
Tap “ Unregistered” to have registration disabled temporarily. Contact your service provider for more details.

Press if you want to go back to the previous screen without saving.

 
Press if you want to go back to the previous screen after saving this change.



Voice mail is the network service that requires a subscription from your service provider.

Automatic Connection

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Add-on”  by doing  and do  to have “ Add-on” category display. (or, press .)
3. Select “ Automatic Connection” by doing . (or, press .)

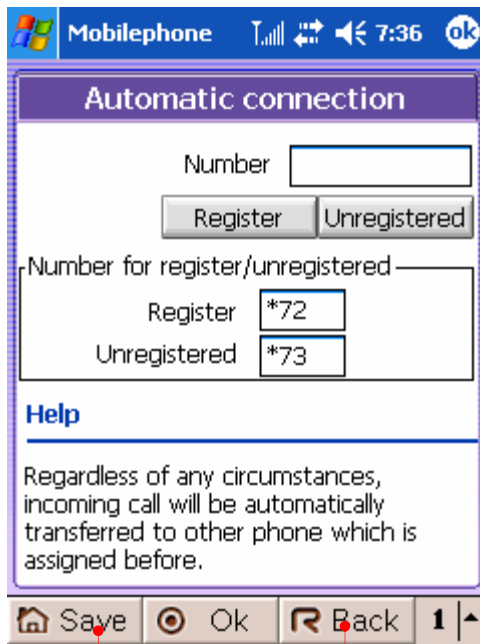

Mobilephone 7:36 ok

Automatic connection

Number

Register Unregistered

Number for register/unregistered

Register

Unregistered

Help

Regardless of any circumstances,
incoming call will be automatically
transferred to other phone which is
assigned before.

Save Ok Back 1

Press if you want to go back to the previous screen without saving.

 
Press if you want to go back to the previous screen after saving this change.

Call Forwarding

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ Add-on”  by doing  and do  to have “ Add-on” category display. (or, press .)

3. Select “ Call Forwarding” by doing . (or, press .)

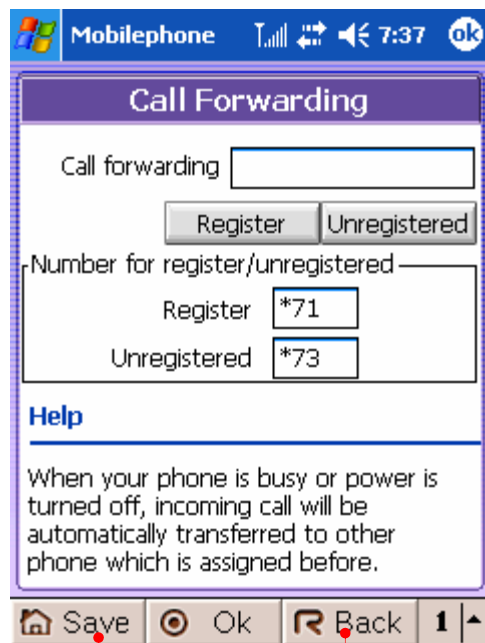


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Automatic Pickups

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Add-on”  by doing  and do  to have “ Add-on” category display. (or, press .)
3. Select “ Automatic Pickups” by doing . (or, press .)

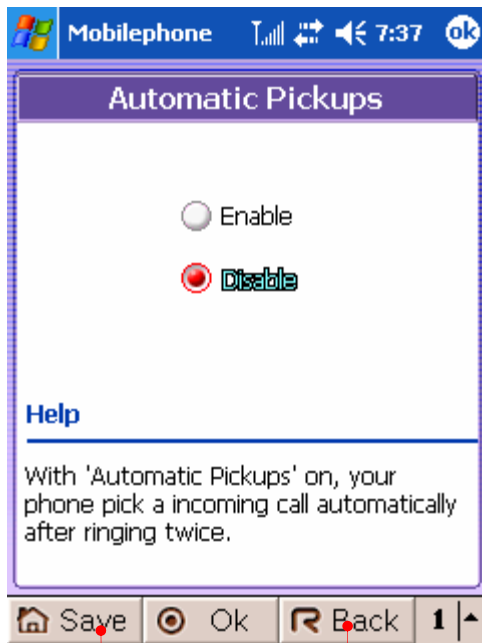

Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Dual Numbers

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Add-on”  by doing  and do  to have “ Add-on” category display. (or, press  .)
3. Select “ Dual Numbers” by doing  . (or, press  .)

 


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Call Lock

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Options”  by doing  and do  to have “ Options” category display. (or, press .)
3. Select “ Call Lock” by doing . (or, press .)

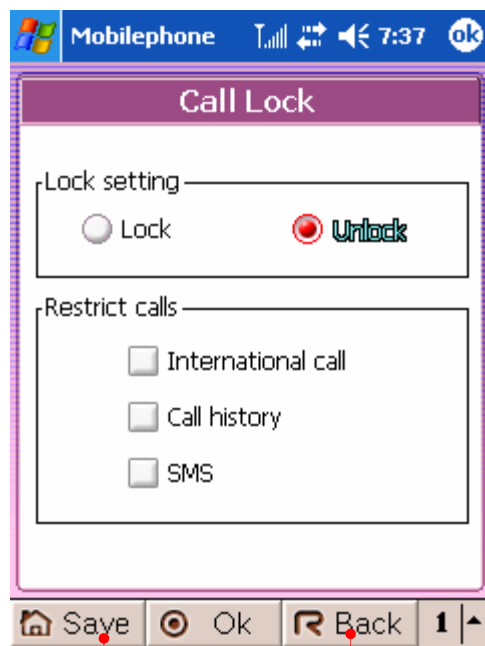


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Keypad Back-Light

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Options”  by doing  and do  to have “ Options” category display. (or, press .)
3. Select “ Keypad Back-Light” by doing . (or, press .)

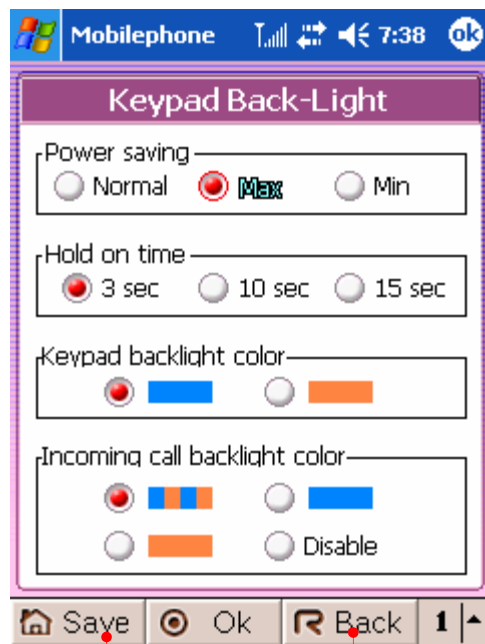


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Data Communication

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Options”  by doing  and do  to have “ Options” category display. (or, press .)
3. Select “ Data Communication” by doing . (or, press .)

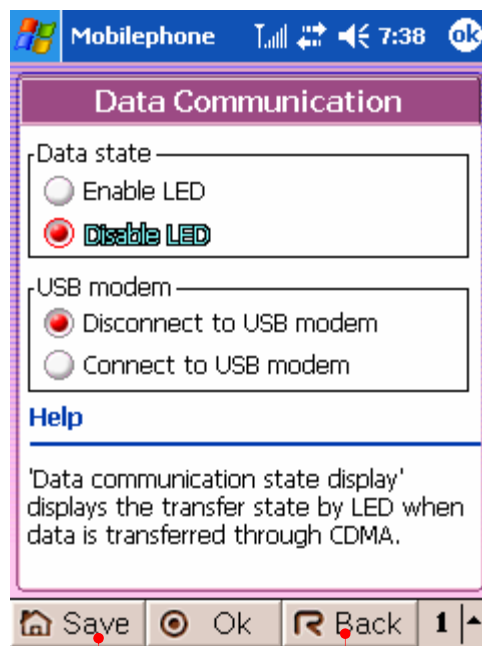


Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

CDMA Status LED

 1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Options”  by doing  and do  to have “ Options” category display. (or, press .)
3. Select “ CDMA Status LED” by doing . (or, press .)

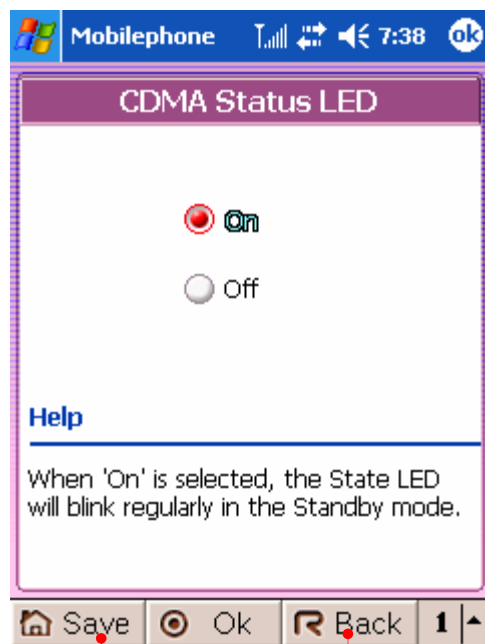

Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

Data Backup

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.
2. Move to “ Options”  by doing  and do  to have “ Options” category display. (or, press .)
3. Select “ Data Backup” by doing . (or, press .)



Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

This function will backup all data and save them at “ My Device\Store\Cyberbank\” folder.



While building the backup data, do not use your device. This may cause the errors in backup.

Phone Initialization

1. When Mobile Phone screen appears, press  button to have the Mobile Phone Menu Settings screen display.

2. Move to “ Options”  by doing  and do  to have “ Options” category display. (or, press .)

3. Select “ Phone Initialization” by doing  . (or, press .)



 
Press if you want to go back to the previous screen without saving.

Press if you want to go back to the previous screen after saving this change.

SMS(Short Message Service)


Contact your service provider before using this function.

Tap the MSG button on the phone program to display the SMS message screen. When you receive a SMS message,  appears on the phone status pane of the phone program. When you tap this icon on the phone status pane of the phone program, nothing happens and you have to tap the SMS button on the right side of the phone program.

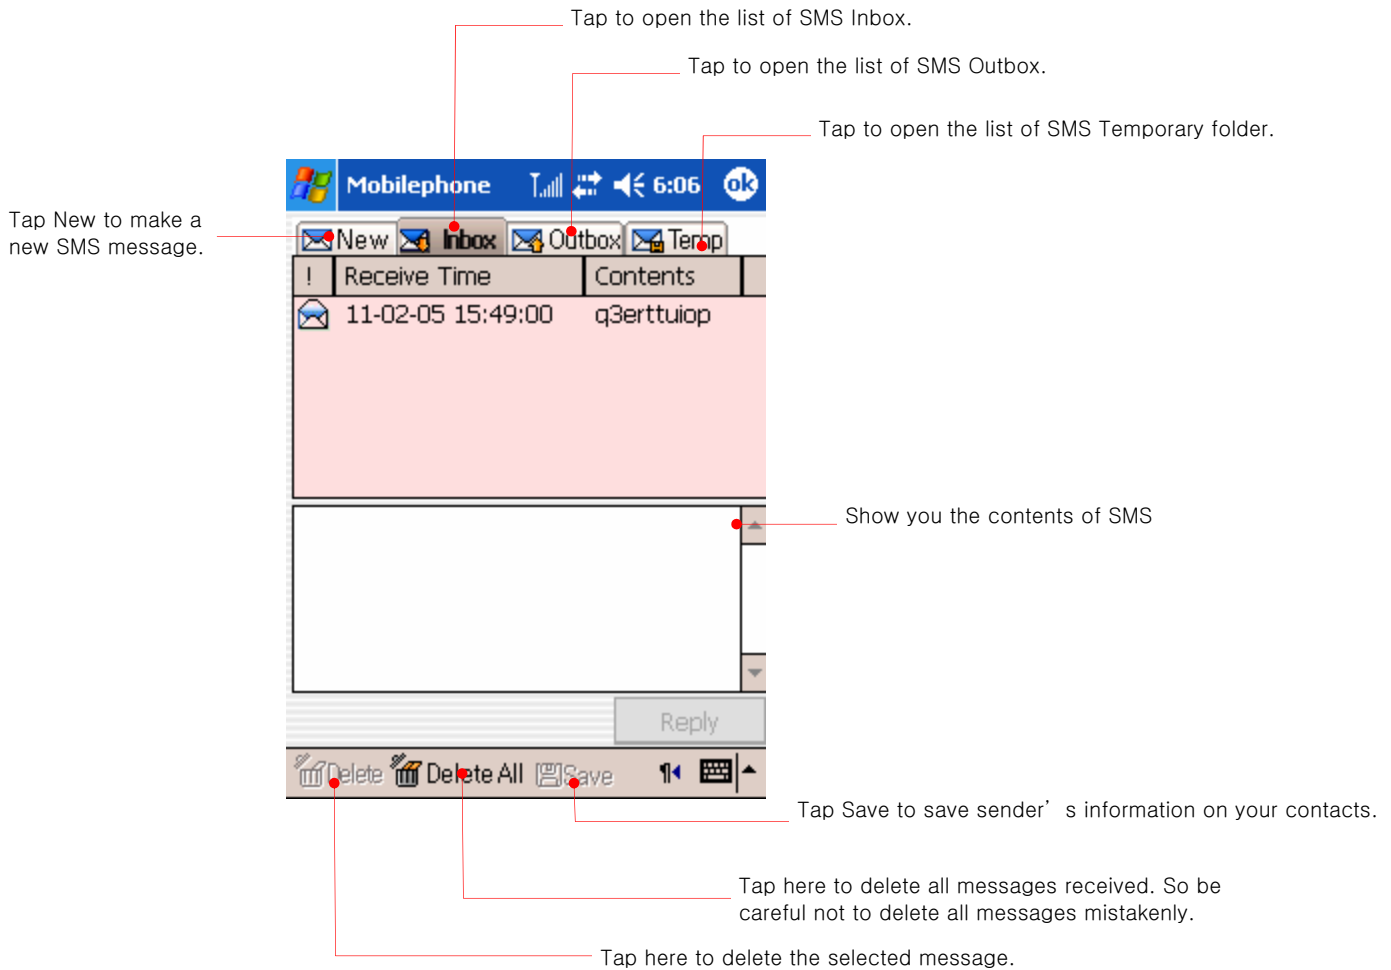


During data communications(Internet), if SMS message is sent or received, the Internet may be disconnected depending on the settings of your service provider.

 Add sender's phone number to your contacts

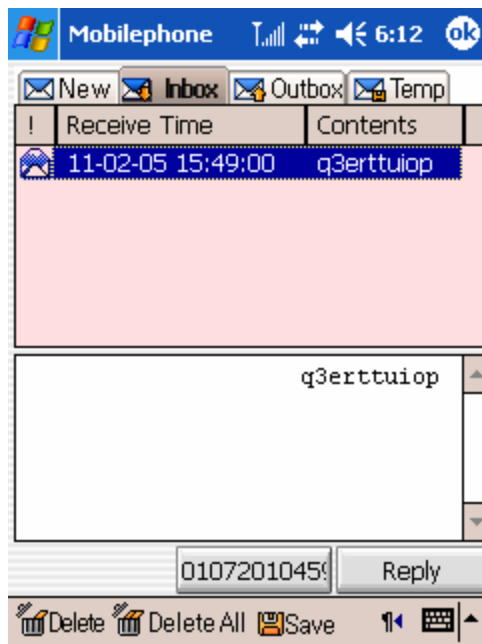


Tap  to save the sender's phone number.

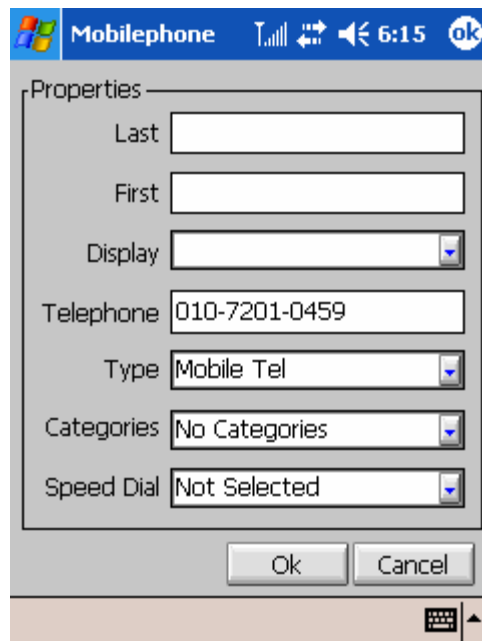 


Enter any necessary information and tap OK.

Reply to SMS

 Among the messages listed on the Inbox, select a message you want to reply to.

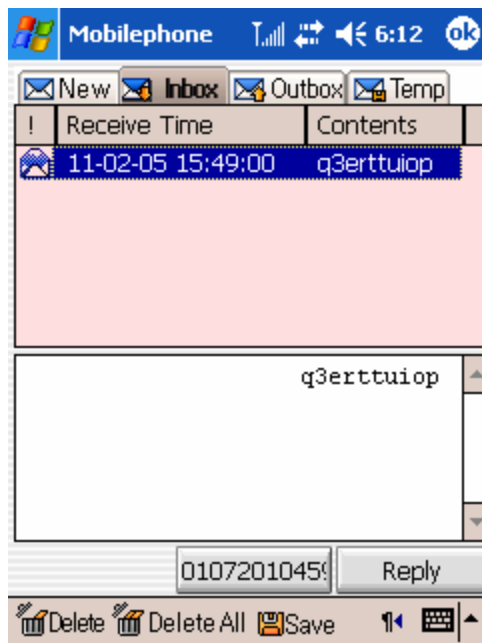

Tap the Reply button

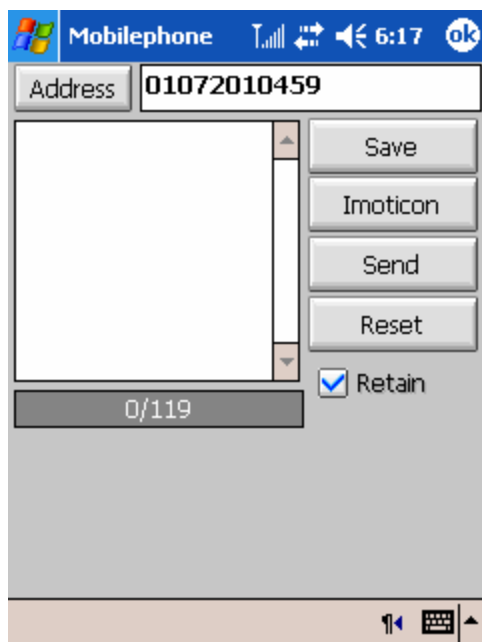 


When you finish the contents, tap Send to this message.



When you enter several phone numbers, each phone number should be separated by semicolon (;).

Compose a new message

 Tap New to compose a new SMS.

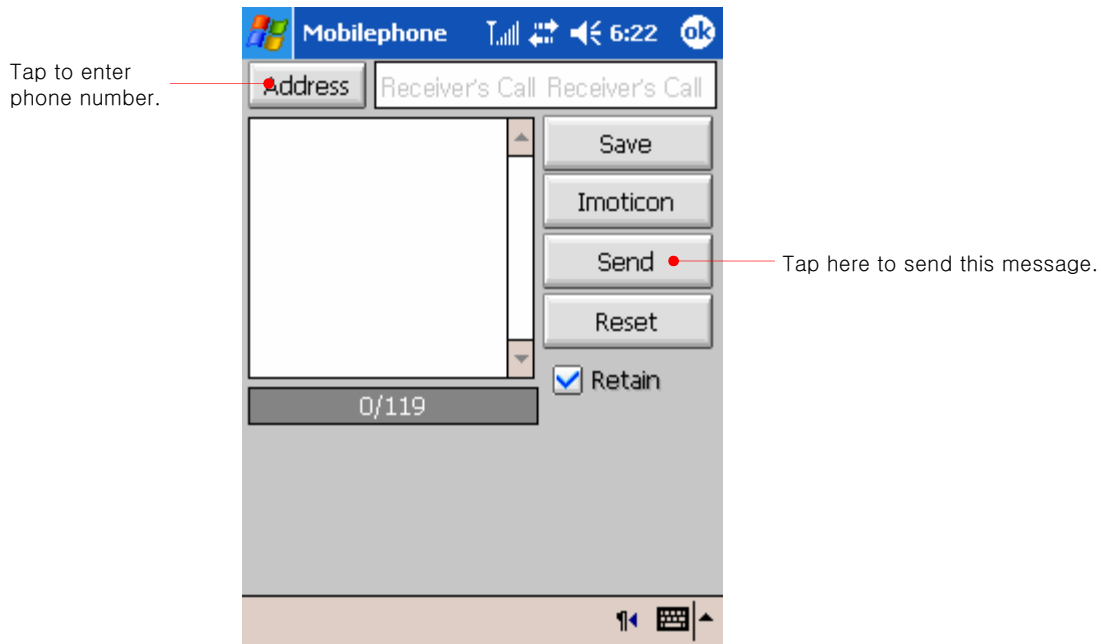

Enter messages on the text box and tap the Send button to send the message.

Chapter 8

Applications

POZ Launcher enables you easily to launch any programs you want such as POZ MusicBox to listen to digital audio files and POZ Camera to snap a picture and save it POZ Camcorder to record a video file and save it using the digital camera lens and POZ Album to edit, save and manage the pictures you snap.

☉ In this chapter, you will learn about

- POZ Launcher
- POZ Musicbox
- POZ Camera
- POZ Camcorder
- POZ Album

POZ Launcher

POZ Launcher enables you easily to launch any programs you want.

You can open POZ Launcher as follows :

 
- Press the POZ Launcher  hot key.



You can use  to move to other items and to select the item you want.

Get settings of POZ Launcher

To set the options on category and shortcuts, tap Setting on the command bar.

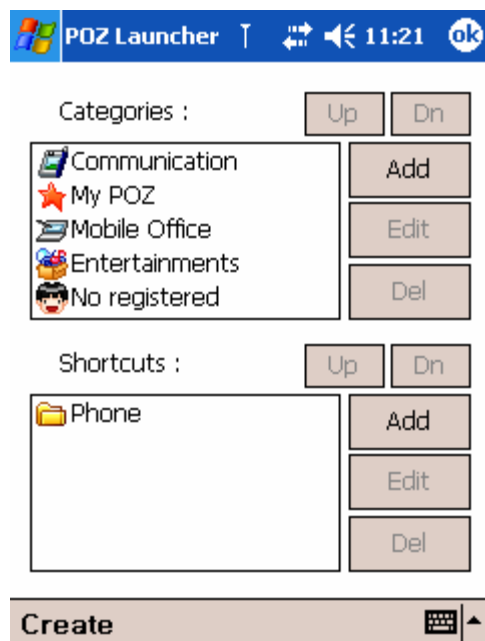

You can add, edit and delete the categories and shortcuts listed and registered on POZ Launcher.

POZ MusicBox

 


POZ MusicBox is basically similar to Windows Media Player. This can be controlled on your remote controller provided by Cyberbank.

Use POZ MusicBox to listen to digital audio files.


You can open POZ MusicBox as follows :

-  > Programs > select "POZ MusicBox" icon.
- Select "POZ MusicBox" on POZ Launcher.

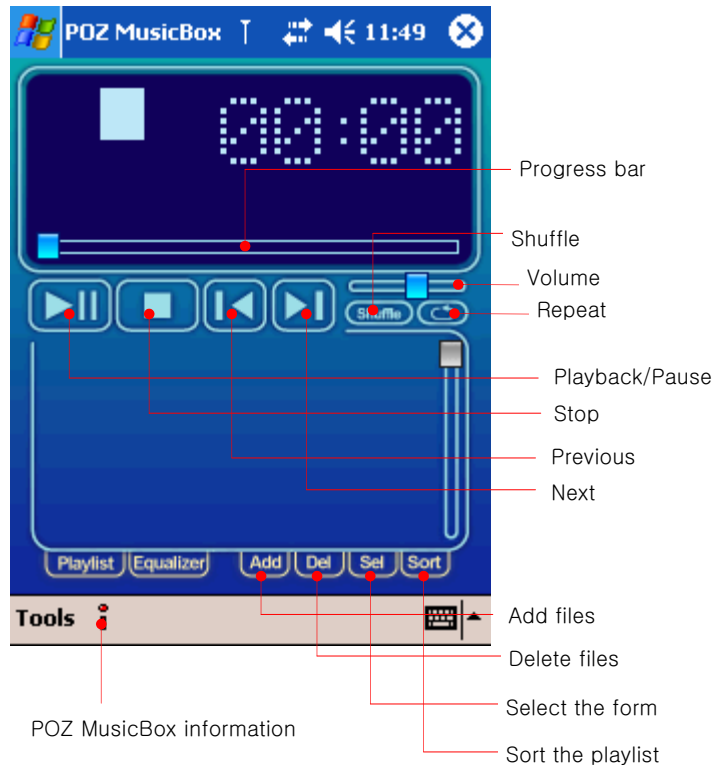

Playlist and Equalizer buttons acts as a toggle that shows and hides each other.

 Tap Add > "Add File" to select music file you want.

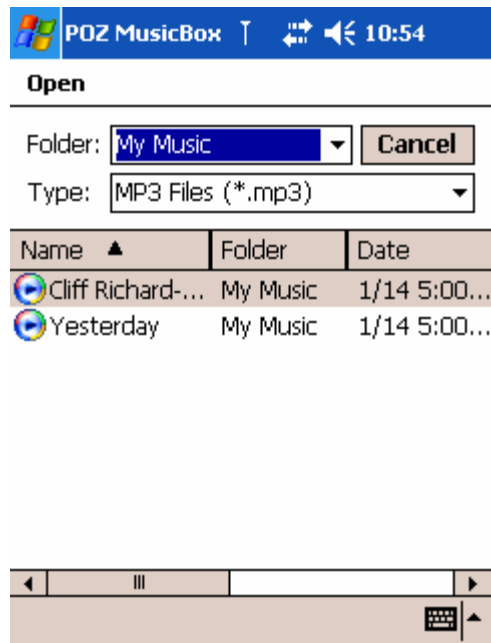


Select a music file you want in the list.



Tap "Del" to delete a music file you want to delete.

Button Mapping

 
Tap "Button Mapping" on the Tools menu to map the buttons in the POZ MusicBox.

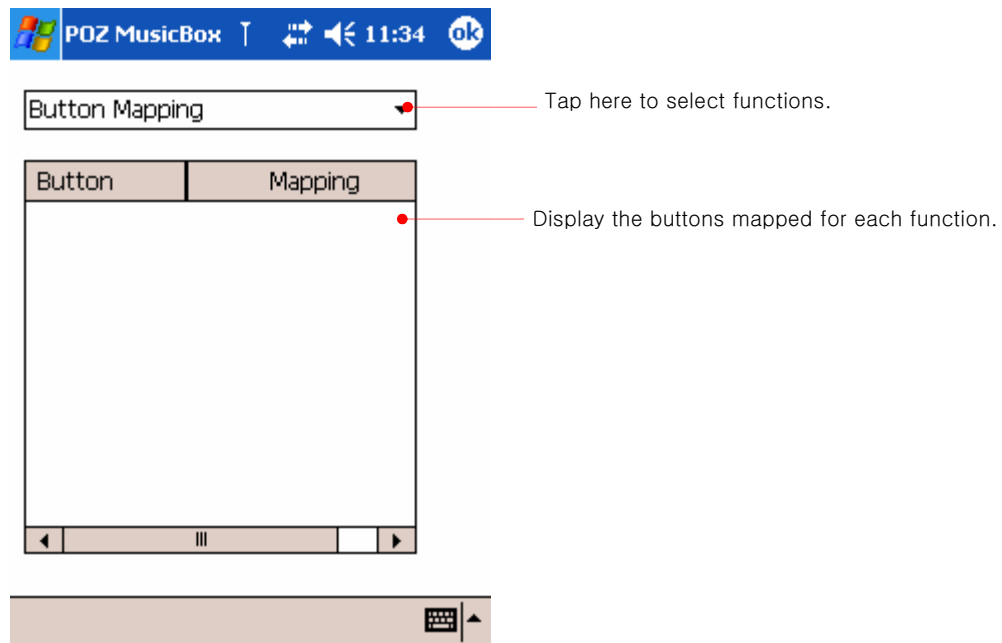

Select the arrow next to "Button Mapping" to select functions you want.

Select the function you want to map in the list popped up and then press the corresponding button(navigation key and 4 hardware buttons) according to the selected function.

 Using Remote Controller

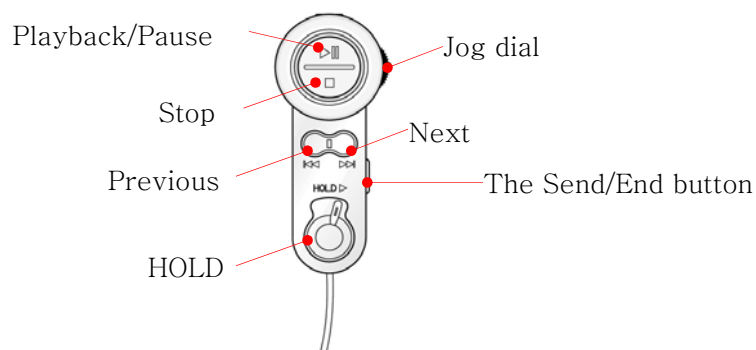


- Press the Playback/Pause button to playback or pause music.
- Press the Stop button to stop music.
- Press the Next button to select the next music.
- Press the Previous button to select the previous music.
- While listening to music, push the Hold switch to the right so that all other buttons will not work. However, even though the Hold switch is pushed to the right, the Send/End button will work.
- Push up/down the Jog dial to adjust the volume of music.

POZ Camera


POZ Camera helps you to snap a picture and save it using the digital camera lens.

You can open POZ Camera program as follows :

 - Start  button > Programs > "POZ Camera"  icon.
- Select the "POZ camera" on the POZ Launcher.
- Select the shortcut  for POZ camera on the POZ Camcorder program.

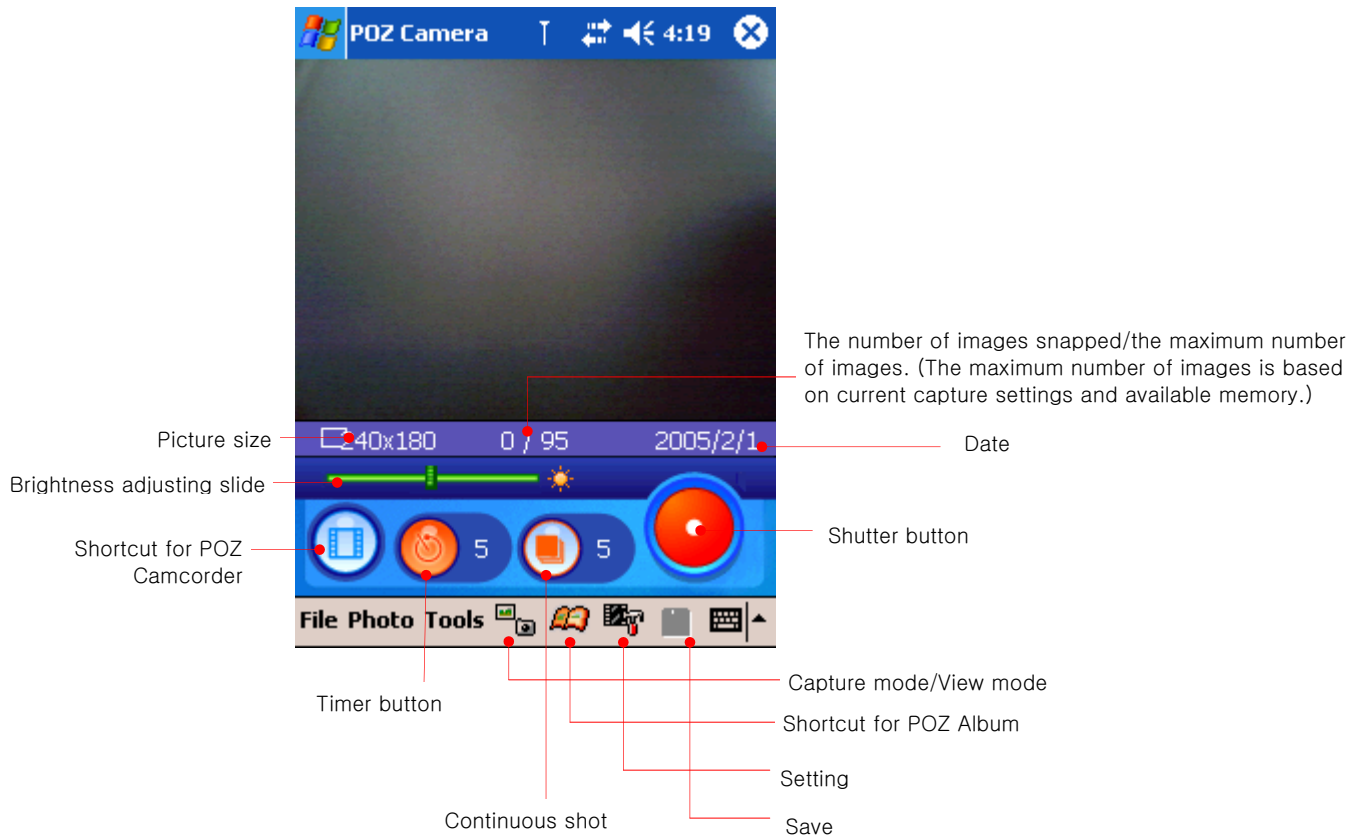

 Tap the shutter button when the subject is framed.

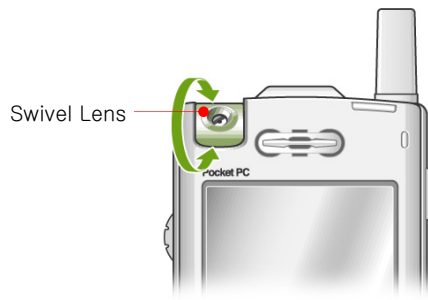


Caring for your camera


- Do not drop your device, or it is subject to hard knocks.
- When you place your device on a flat surface, be sure that the lens is not facing down.
- Do not use excessive force when handling swivel lens.
- Use quality cleaning products designed for use on photographic lenses to keep your camera lens dirt- and smudge-free. Do not use excessive force on the lenses when cleaning to prevent damage to the lens.

Save pictures

 If you want to enter the View mode, tap "Capture mode/View mode"  icon and tap again to return to the Capture mode.

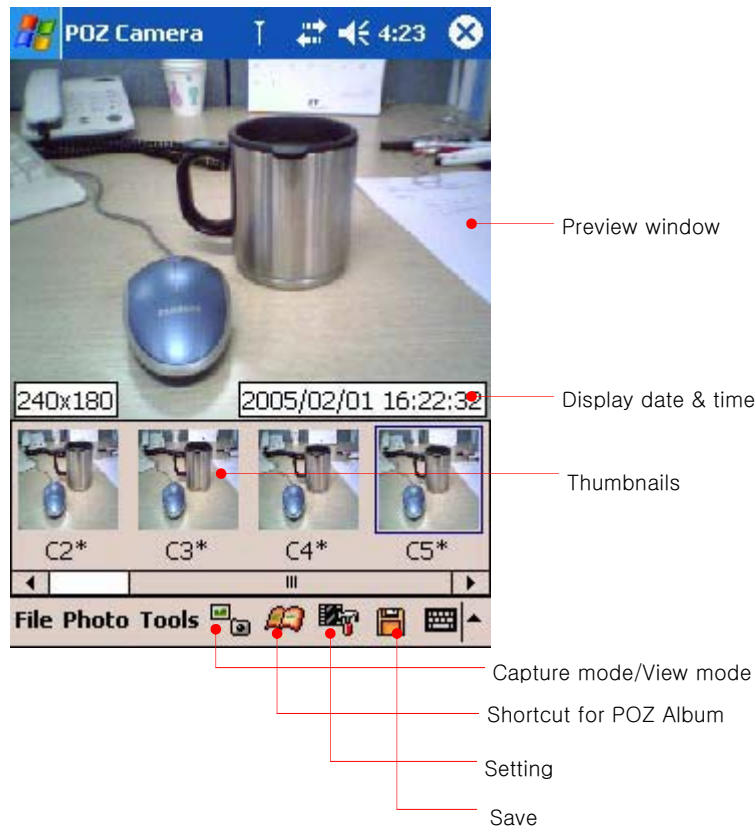

 To save the pictures you snapped, tap "save"  icon on the command bar or select "save" or "save all" on the Photo menu.

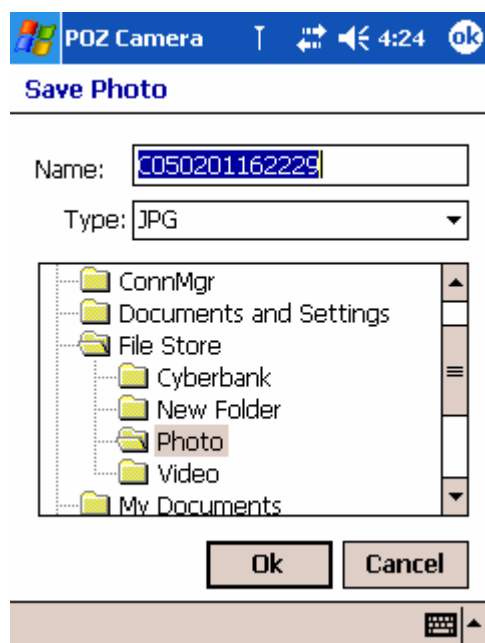

Tap OK to save. The default folder is File Store\Photo.

Shortcuts provided on the keypad for each function of POZ camera

When POZ camera program opens and it is in the Capture mode, you can have the shortcut for each function on the keypad.

For example, press  on the keypad in the Capture mode to snap a picture.



When POZ camera program opens and it is in the View mode, you can have the shortcut for each function on the keypad.

For example, press  on the keypad in the View mode to open POZ Album program.



Shortcut for POZ Album

Tap "Shortcut for POZ Album"  icon on the command bar to open the POZ Album program which helps you to view the stored pictures.

Settings

Tap "Setting" on the Tools menu to set POZ Camera program.



 
Tap OK to save on Screen size, the maximum number of images, Timer, Brightness, button and shutter sound.

POZ Camcorder


POZ Camcorder helps you to record a video file and save it using the digital camera lens.

You can open POZ Camcorder program as follows :

- Start  button > Programs > "POZ Camcorder"  icon.
- Select the "POZ Camcorder" on the POZ Launcher.
- Select the shortcut  for POZ Camcorder on the POZ Camera program.

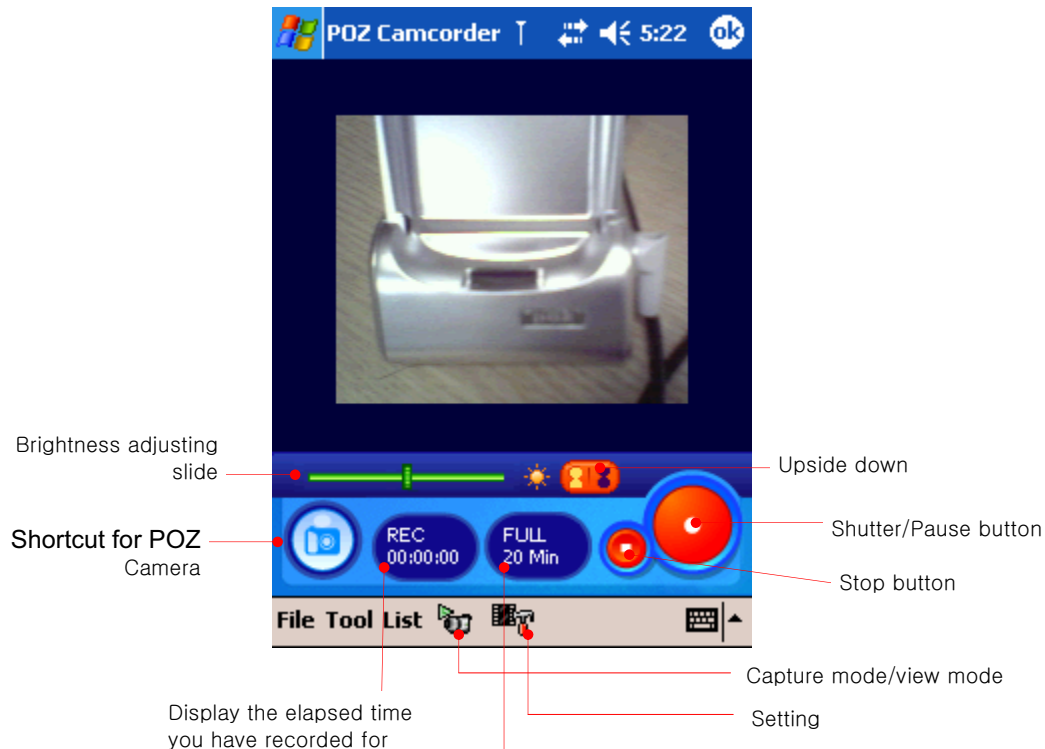


 Tap the shutter button when the subject is framed.

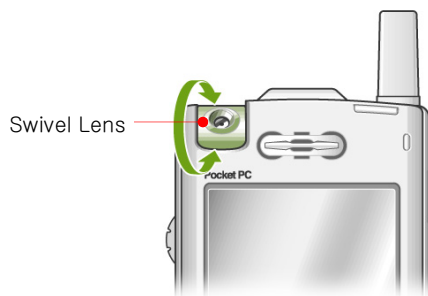

Playback

 Select the file you want on the List menu to playback.

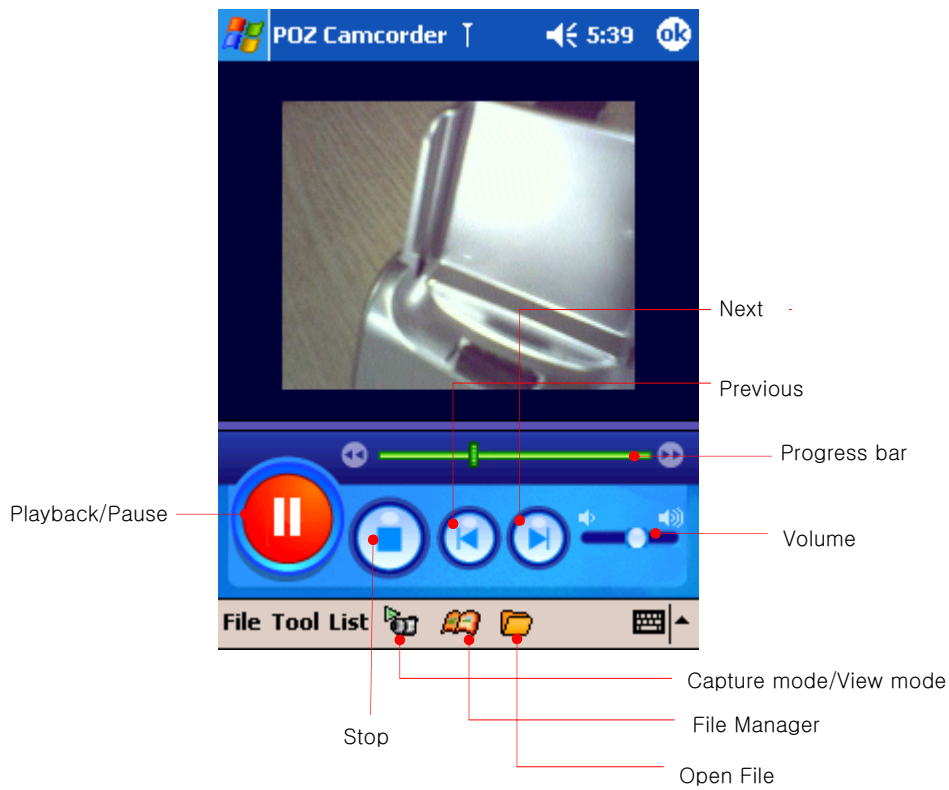


Tap "Capture mode/View mode"  icon to return to Capture mode.


Make a new album

The file you have recorded on the Capture mode will be saved in "File Store\video" folder.

 
Tap "File Manage" on the File menu or tap "File Manage"  icon on the command bar to make a new album.

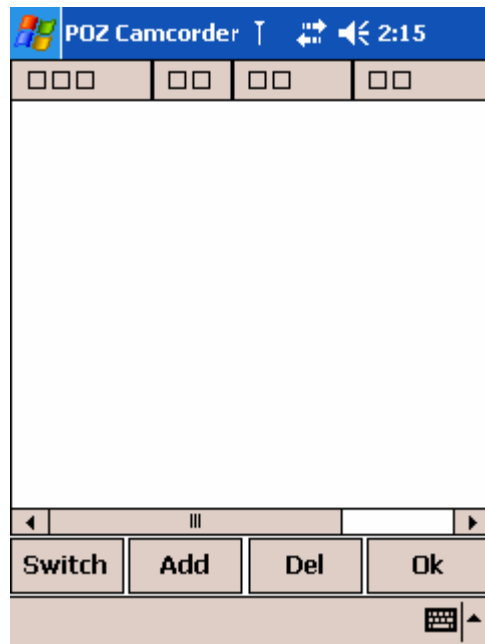

 
Tap "Add" to select the items you want to add.

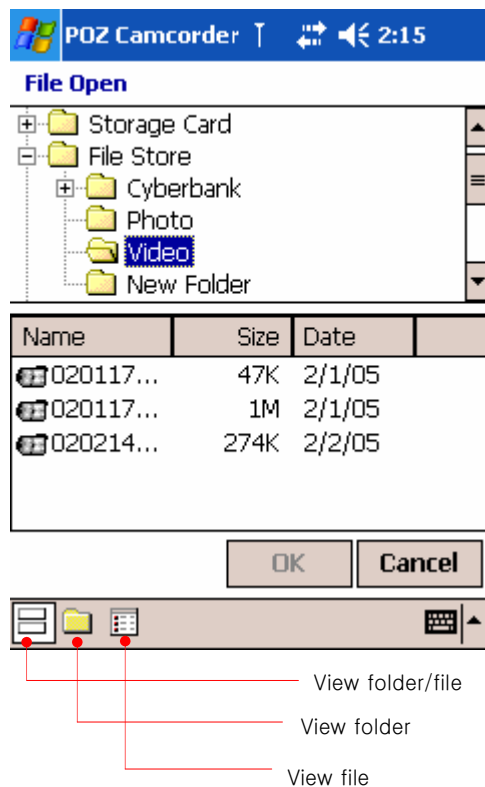

 After selecting the file you want, tap OK.

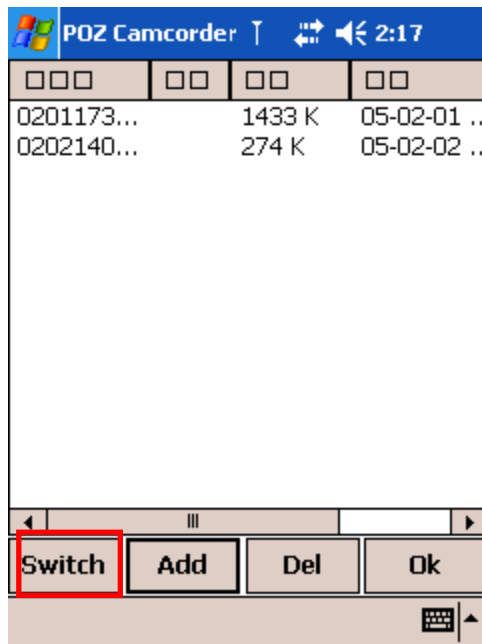

 Tap "switch" to switch between both mode.

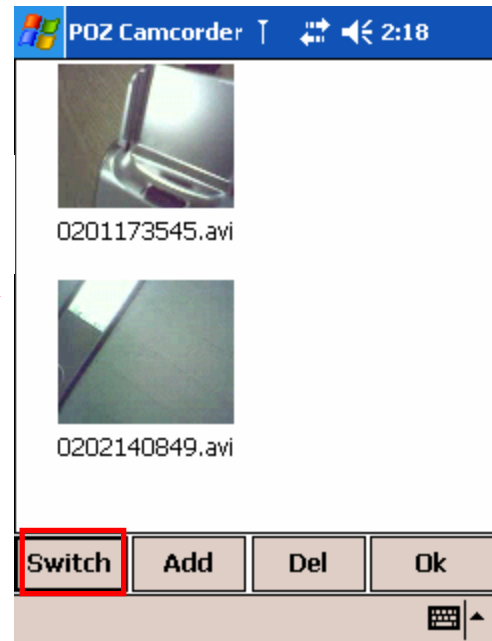


Tap OK to save the video album.

Tap the playback  button to playback all video files saved on the video album.

Open video file

Select the files you want on "File Store\video" folder to open among the existing video file a file which is not saved on the video album.

 Tap "Open File"  icon on the View mode to open a file you want.

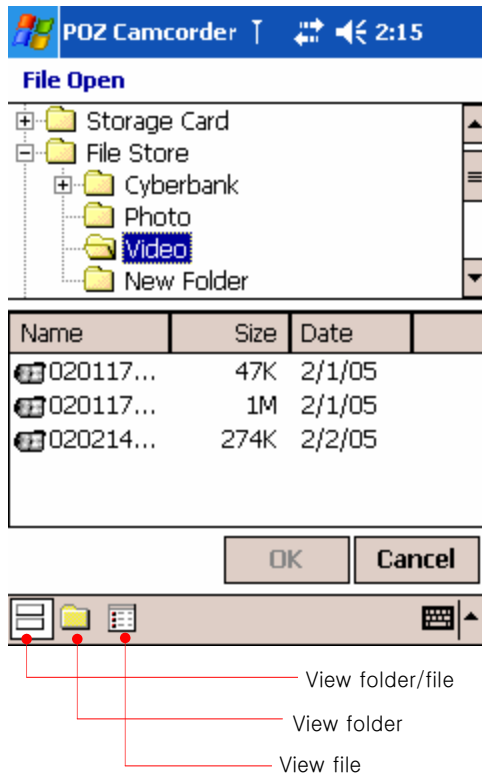

Select a file you want and tap OK to return to normal.

Tap the playback  button to playback the file you have selected.

Shortcuts provided on the keypad for each function of POZ Camcorder

When POZ camcorder program opens and it is in the Capture mode, you can have the shortcut for each function on the keypad.

For example, press  on the keypad in the Capture mode to snap a picture and pause.



 
When POZ camcorder program opens and it is in the View mode, you can have the shortcut for each function on the keypad.

For example, press  on the keypad in the View mode to playback/pause.



Options

Tap “Options”  icon in the Capture mode to optimize POZ Camcorder program.

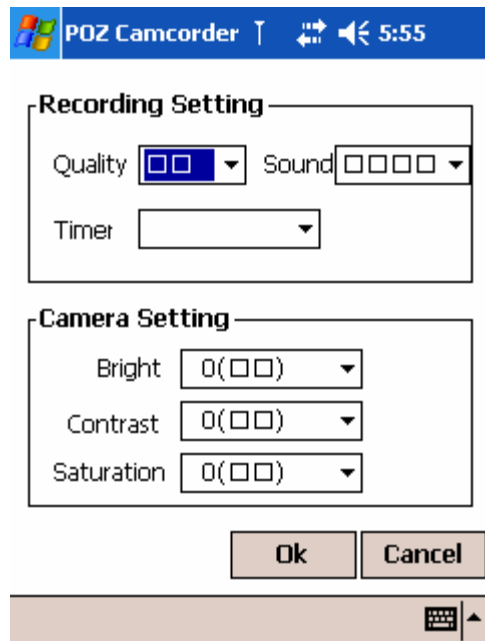

The screenshot shows the POZ Camcorder application interface. At the top is a blue header bar with the Windows logo, the text "POZ Camcorder", a vertical bar icon, a double-headed arrow icon, a speaker icon, and a timer showing "5:55". Below the header is a white dialog box titled "Recording Setting" with a minus sign icon on the left. Inside this dialog are three settings: "Quality" with a dropdown menu showing two squares, "Sound" with a dropdown menu showing four squares, and "Timer" with a dropdown menu. Below the "Recording Setting" dialog is another white dialog box titled "Camera Setting" with a minus sign icon on the left. It contains three settings: "Bright" with a dropdown menu showing "0(□□)", "Contrast" with a dropdown menu showing "0(□□)", and "Saturation" with a dropdown menu showing "0(□□)". Below these two dialog boxes are two buttons: "Ok" and "Cancel". At the bottom of the screen is a brown bar with a keyboard icon and an upward-pointing arrow.

POZ Camcorder 5:55

Recording Setting

Quality Sound Timer

Camera Setting

Bright Contrast Saturation

Ok Cancel

 
POZ Album

POZ Album helps you to edit, save and manage the pictures you snap using the digital Camera lens.

Open POZ Album


You can open POZ Album program as follows :

- Start  button > Programs > "POZ Album"  icon.
- Select "POZ Album" on the POZ Launcher.
- Select the shortcut  icon for POZ Album on the POZ Camera program.

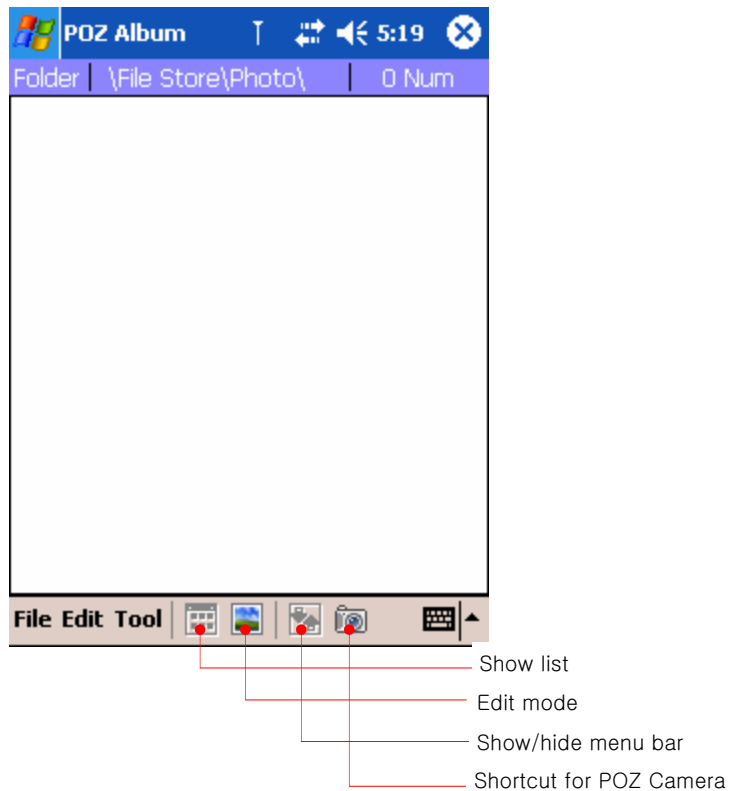


Open the Photo folder

 Tap “Open Folder” on the File menu to open pictures you have snapped on the POZ Camera.


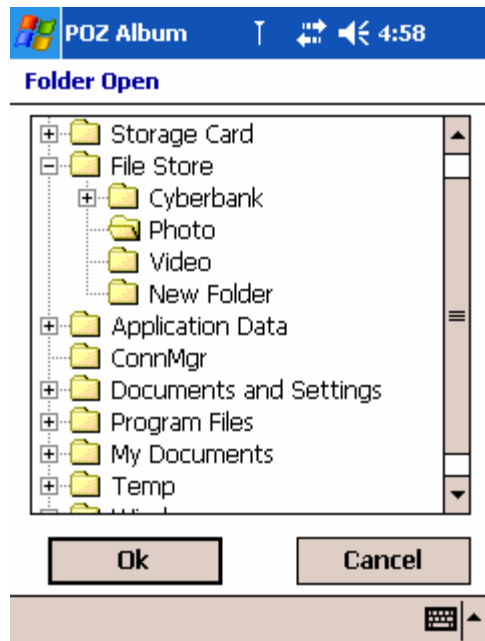


 Select the folder(File Store\Photo) and tap OK.

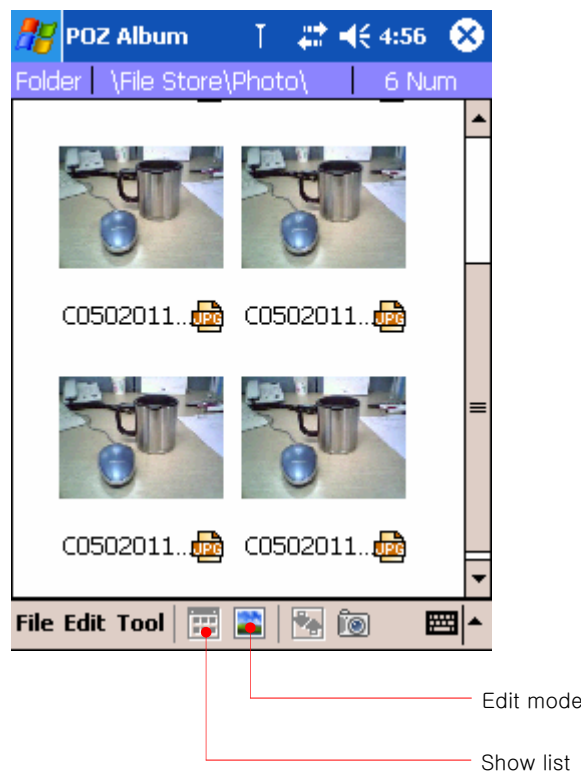

Edit File

  Tap “Edit mode”  icon on the command bar.

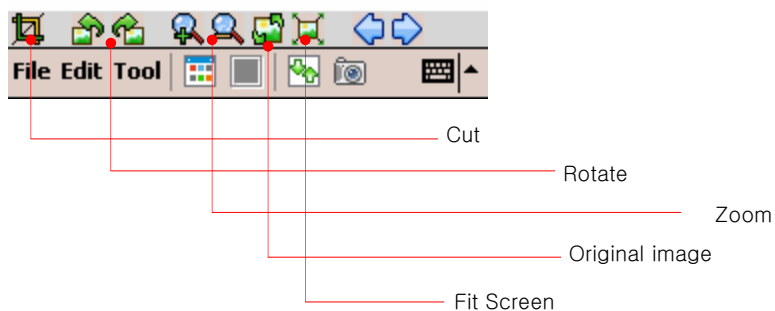

After editing each image file, tap “Show list”  icon to return to list.

Make a new album

If you want to make a new album, select “Add Album” on the File menu. (If you want to use the existing album, select “Add Album” on the File menu.)



After entering a new name for an album and tap OK.

Open the existing album

 
Tap "Open Album" to open the existing album.



Select the album you want and tap OK.



Tap the album name to open the album you want.

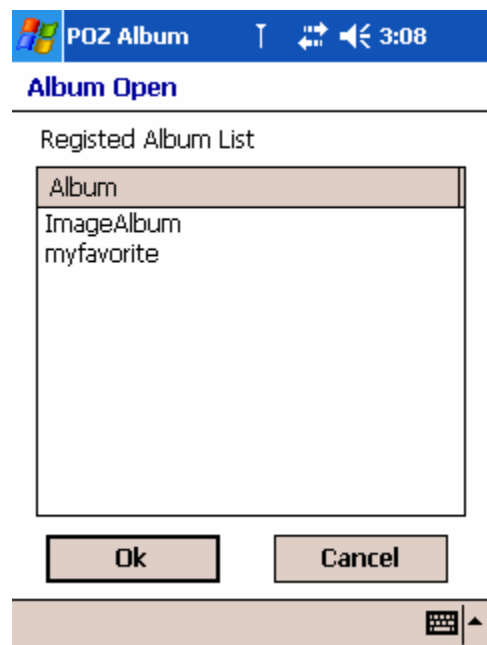


Slideshow

Tap “Slideshow” on the Tools menu to have slideshow display the saved list. You can choose whether the slideshow automatically displays the next picture in sequence after short delay which is set on options.

Options

 Tap “Options” on the Tools menu to set options.

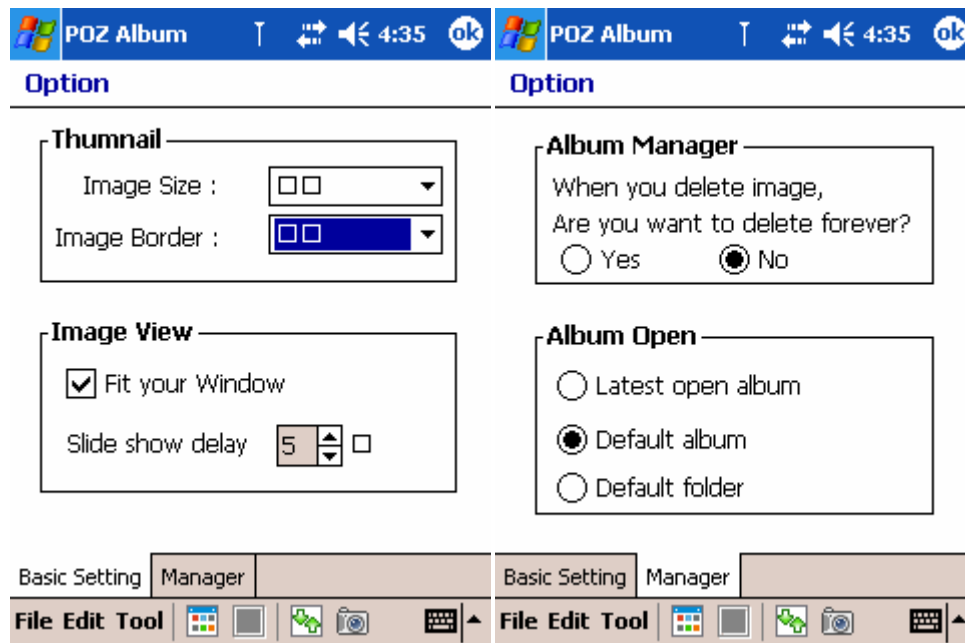

Chapter 9

Microsoft Pocket Outlook

Microsoft Pocket Outlook includes Calendar, Contacts, Tasks, Inbox, and Notes. You can use these programs individually or together. For example, e-mail addresses stored in Contacts can be used to address e-mail messages in Inbox.

Using ActiveSync, you can synchronize information in Microsoft Outlook on your desktop PC with information in Pocket Outlook on your device. Each time you synchronize, ActiveSync compares the changes you made on your device and desktop PC and updates both computers with the latest information. For information on using ActiveSync, see ActiveSync Help on your desktop PC.

In this chapter you will find followings :

- Calendar : Schedule appointments and meetings.
- Contacts : Keep track of friends and colleagues.
- Tasks : Keep a to-do list.
- Notes : Capture thoughts and ideas.

 
For details on using Inbox to send and receive e-mail messages, see “Sending and Receiving E-mail” in chapter 6.




The information contained in this document is provided “as is” and is subject to change without notice.

Calendar : Scheduling Appointments and Meetings

Use Calendar to schedule appointments, including meetings and other events. You can check your appointments in one of several views (Agenda, Day, Week, Month, and Year) and easily switch views by using the **View** menu.

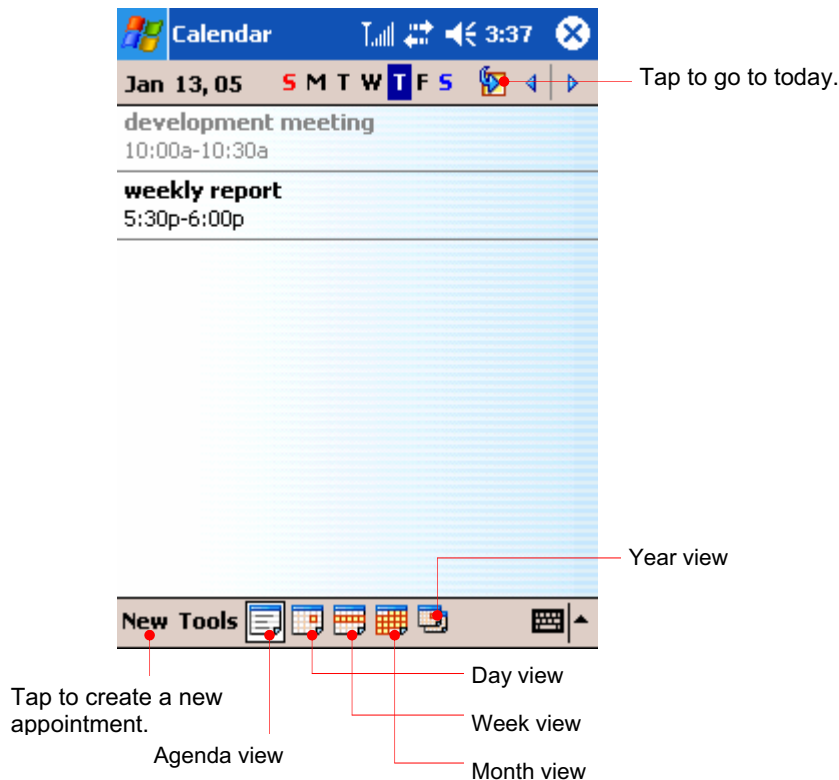


 
When you select landscape on the settings you will have a screen as follows :

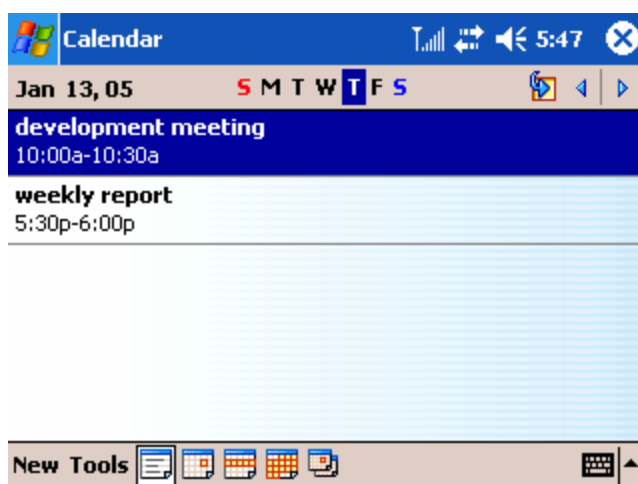

(If you want to select “landscape”,  > “Settings” > “System” tab > “Screen ”  icon. For more detailed information, see the screen setting on chapter 5 Configuring Device.)

For description below, portrait screens are used.

  You can customize the Calendar display (for example, change the first day of the week), by tapping **Options** on the **Tools** menu.

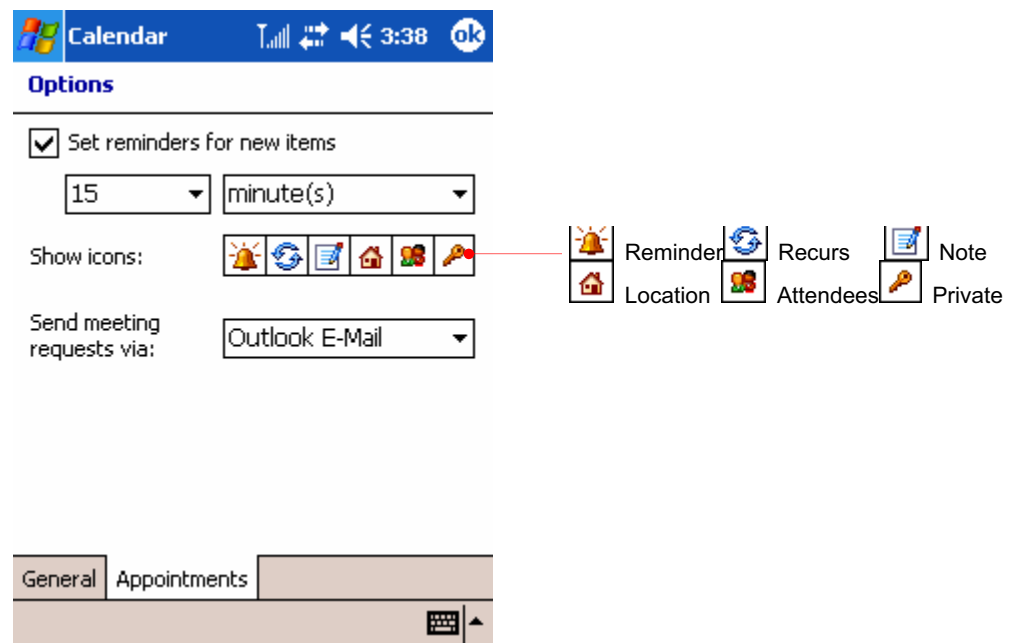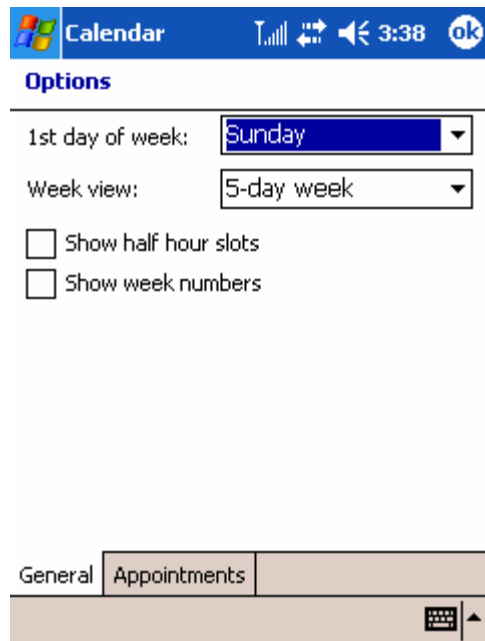

To create an appointment

In Day or Week view, tap the desired date and time for the appointment.

1. Tap **New**.

Calendar

Subject: [] Tap to choose from predefined text.

Location: [] Tap to choose from previously entered locations.

Starts: 1/13/05 12:00 PM

Ends: 1/13/05 1:00 PM Tap to return to the calendar (the appointment is saved automatically).

All Day: No Tap to select a time.

Occurs: Once

Reminder: Remind me 15 minute(s)

Categories: No categories...

Appointment: [Notes] Tap to select a date.

123 1 2 3 4 5 6 7 8 9 0 - = <

Tab q w e r t y u i o p []

CAP a s d f g h j k l ; ' <

 
Shift z x c v b n m , . / <

Ctl á ü ` \ < > < >

Edit

The Notes tab is a good place for maps and directions.

2. Using the Input panel, tap first to select the field, and then enter a description and a location.
 3. If needed, tap the date and time to change them.
- For example, select the date to have the calendar pane displayed as below.

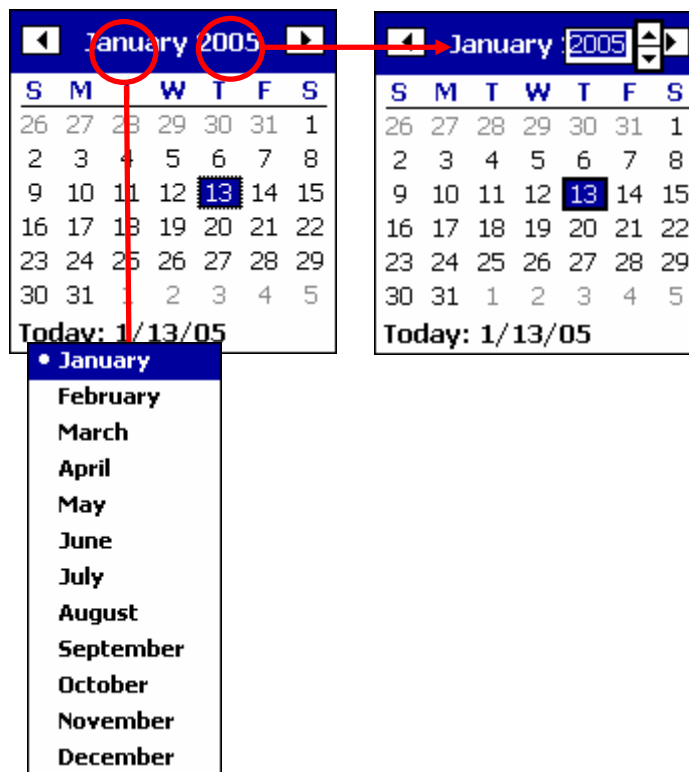


4. Enter other desired information. You will need to hide the Input panel to see all available fields.
5. To add notes, tap the **Notes** tab. You can enter text, draw, or create a recording. For more information on creating notes, see “Notes: Capturing Thoughts and Ideas,” later in this chapter.
6. Tap **OK** to return to Calendar.

If you select Remind me in an appointment, your device will remind you according to the options set in the Sounds & Notifications control panel.

Using the Summary Screen

 When you tap an appointment in Calendar, a summary screen is displayed. To change the appointment, tap **Edit**.

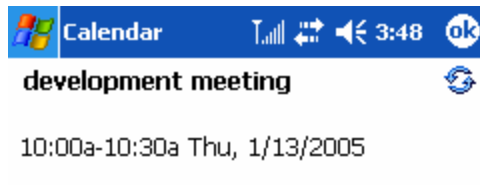


Tap to change appointment.

Creating Meeting Requests

You can use Calendar to set up meetings with users of Outlook or Pocket Outlook. The meeting notices will be created automatically and sent either when you synchronize Inbox or when you connect to your e-mail server.

 
Indicate how you want meeting requests sent by tapping Tools and then Options.

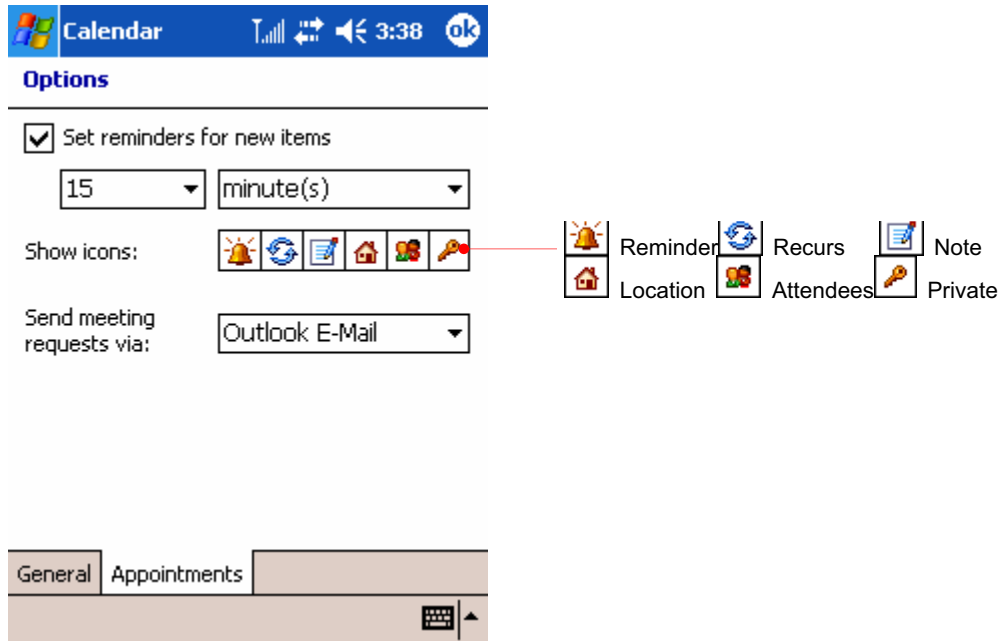

If you send and receive e-mail messages through ActiveSync, select ActiveSync.

To schedule a meeting

 1. Create an appointment.
2. In the appointment details, hide the Input panel, and then tap **Attendees**.

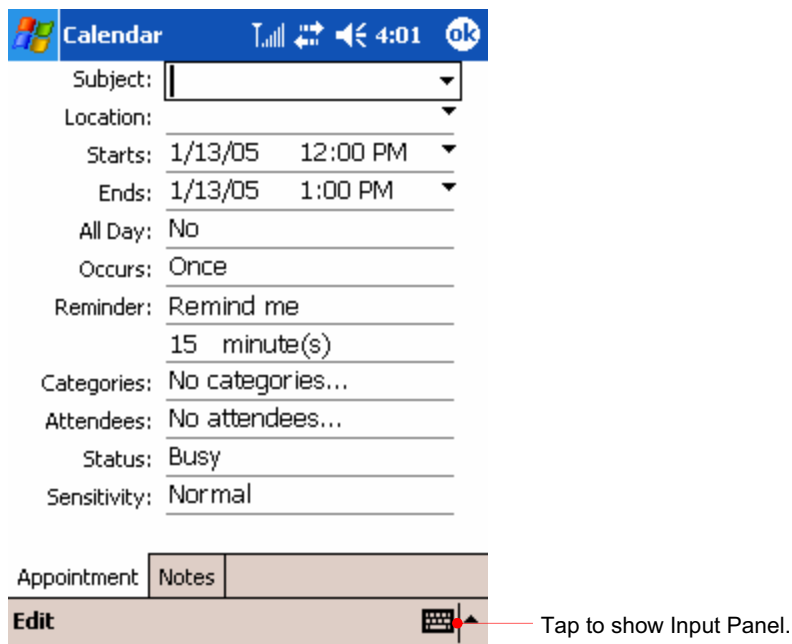

3. From the list of e-mail addresses in Contacts, select the meeting attendees.



 
The meeting notice is created automatically and placed in the Outbox folder.

For more information on sending and receiving meeting requests, see Calendar Help and Inbox Help on your device.

Contacts: Tracking Friends and Colleagues

Contacts maintains a list of your friends and colleagues so that you can easily find the information you are looking for, whether you are at home or on the road. Using the infrared port of your device, you can quickly share Contacts information with users of Pocket PCs and other mobile devices.

Select the category of contacts you want displayed in the list.

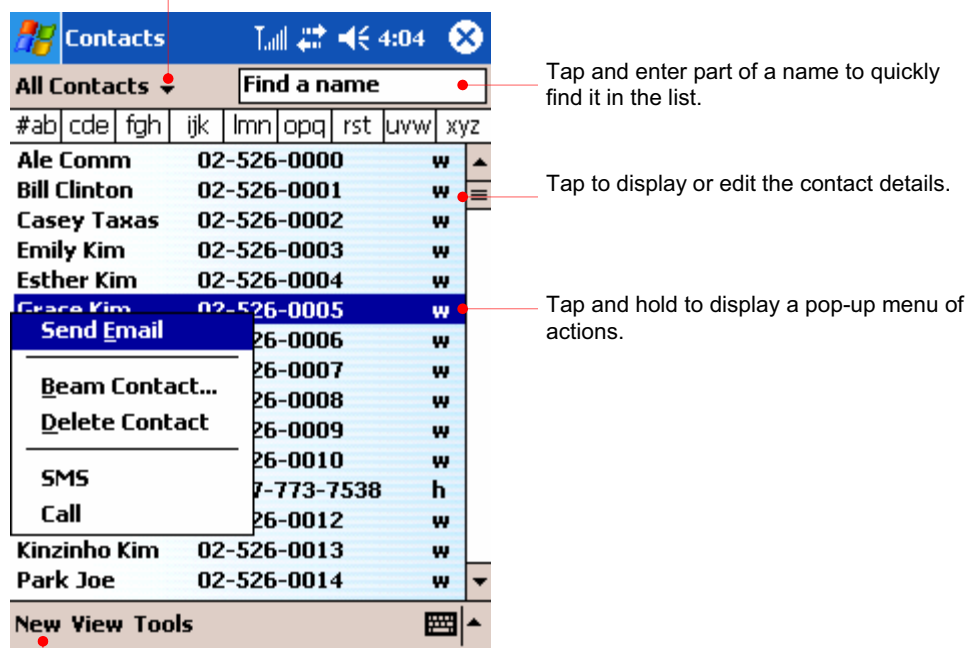

Tap to create a new contact.

When you select landscape on the settings you will have a screen as follows :



(If you want to select “landscape”,  > “Settings” > “System” tab > “Screen ”  icon. For more detailed information, see the screen setting on chapter 6 Configuring Device.)

 
For description below, portrait screens are used.

To change the way information is displayed in the list, tap **Tools**, and then tap **Options**.




To create a contact

1. Tap **New**.

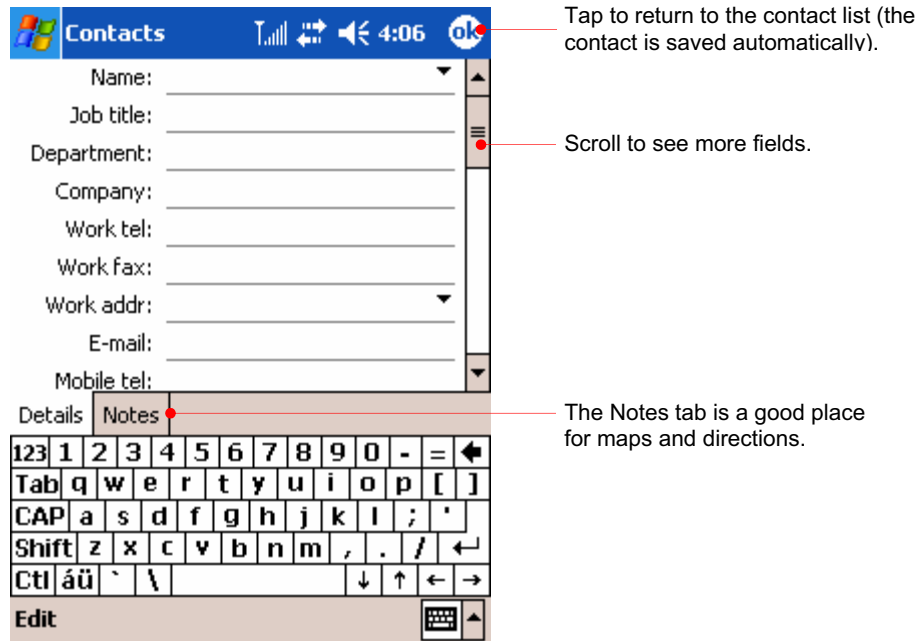

 2. Using the Input panel, enter a name and other contact information. You will need to scroll down to see all available fields.
3. To assign the contact to a category, scroll to and tap **Categories** and select a category from the list. In the contact list, you can display contacts by category.

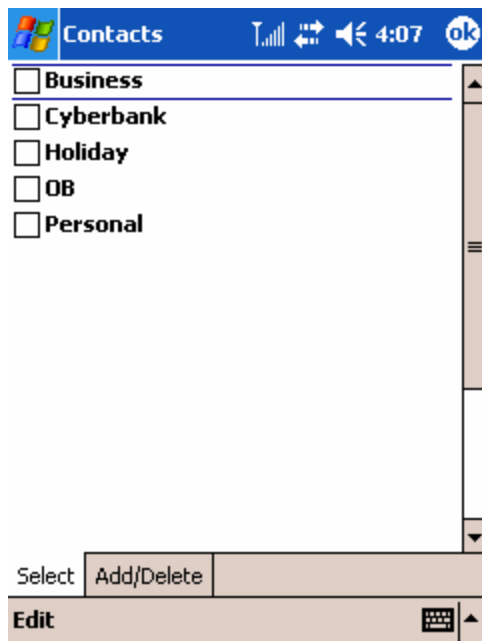


4. To add notes, tap the **Notes** tab. You can enter text, draw, or create a recording. For more information on creating notes, see “Notes: Capturing Thoughts and Ideas,” later in this chapter.

5. Tap **OK** to return to the contact list.

Using the Summary Screen

 
When you tap a contact in the contact list, a summary screen is displayed.

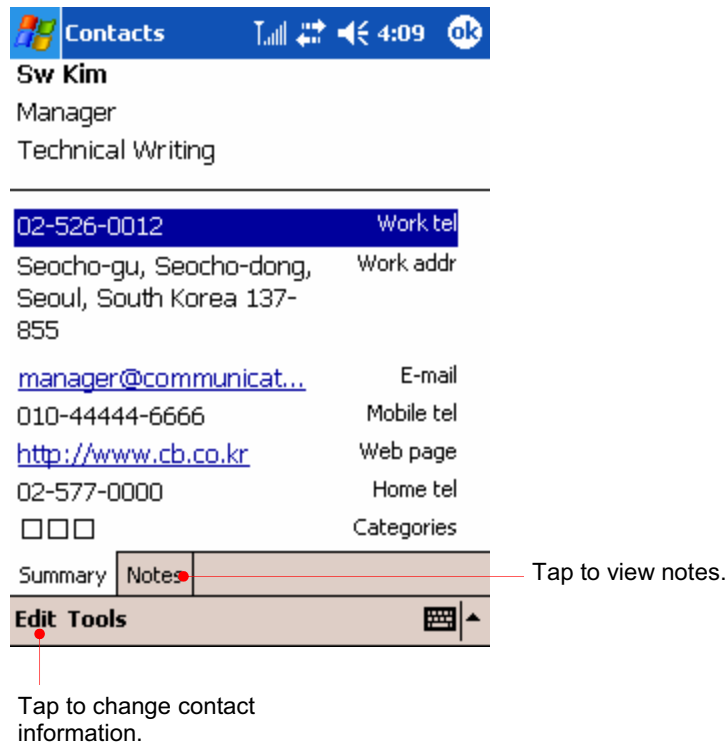

Tasks : Keeping a To-Do List


Use Tasks to keep track of what you have to do.

 Select the category of tasks you want displayed in the list.

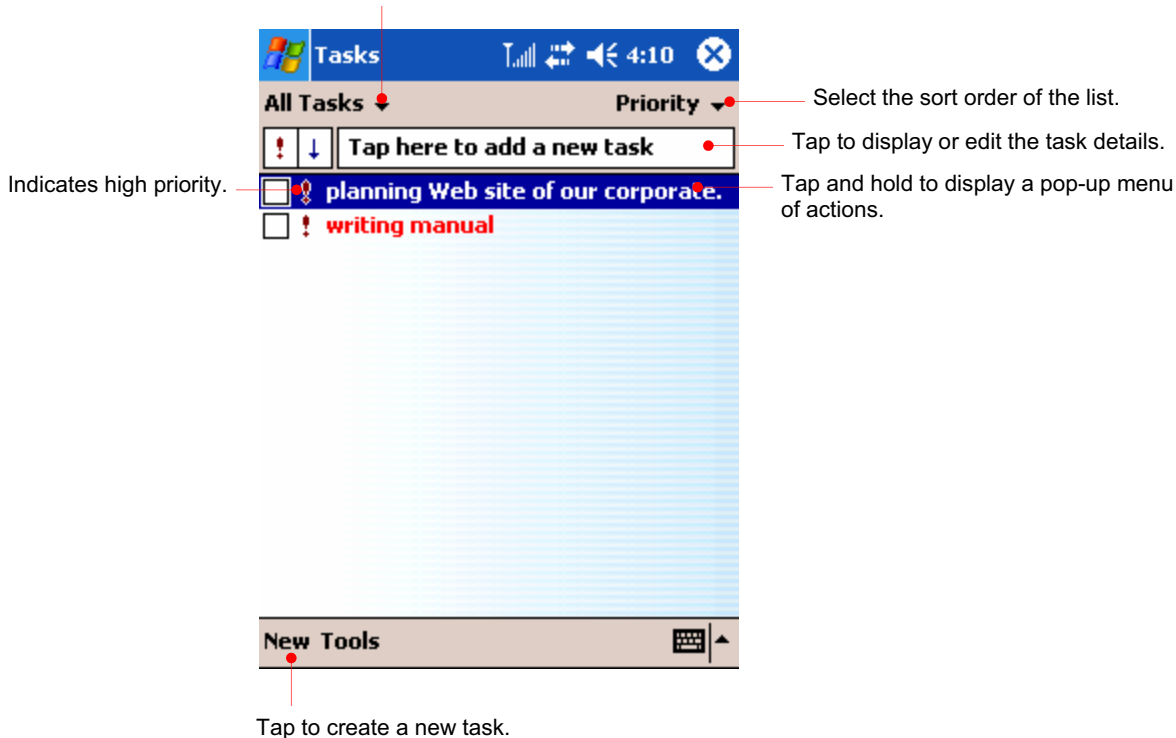

To change the way information is displayed in the list, tap **Tools**, and then tap **Options**.

 When you select landscape on the settings you will have a screen as follows :

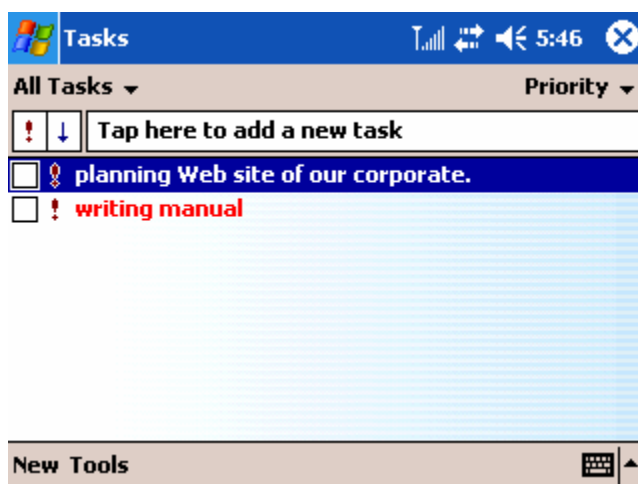


(If you want to select “landscape”,  > “Settings” > “System” tab > “Screen ”  icon. For more detailed information, see the screen setting on chapter 6 Configuring Device.)

For description below, portrait screens are used.

To create a task

 1. Tap **New**.

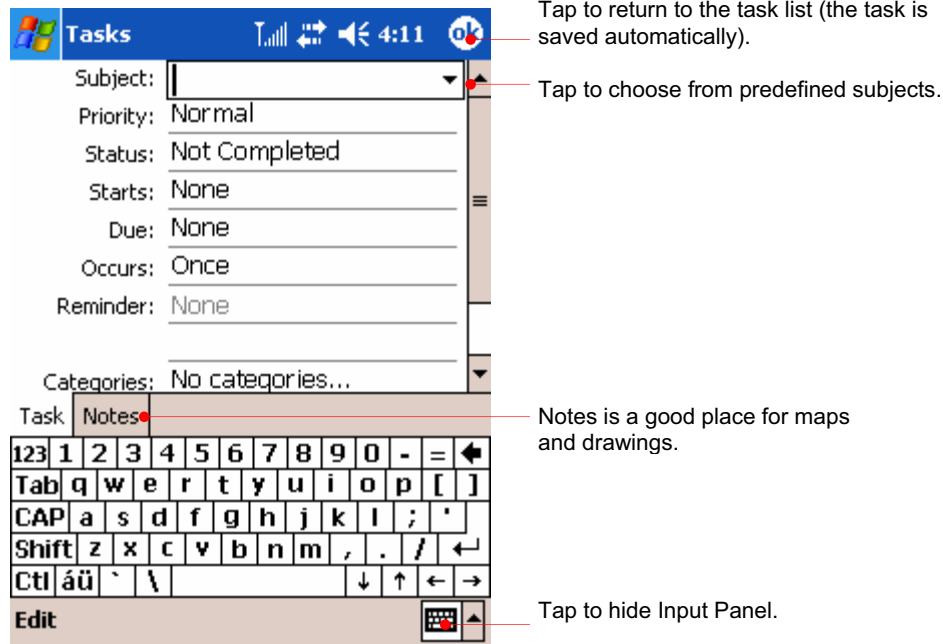


2. Using the Input panel, enter a description.
3. You can enter a start date and due date or enter other information by first tapping the field. If the Input panel is open, you will need to hide it to see all available fields.
4. To assign the task to a category, tap **Categories** and select a category from the list. In the task list, you can display tasks by category.
5. To add notes, tap the **Notes** tab. You can enter text, draw, or create a recording. For more information on creating notes, see "Notes: Capturing Thoughts and Ideas," later in this chapter.
6. Tap **OK** to return to the task list.

To quickly create a task with only a subject, tap **Entry Bar** on the **Tools** menu, and then tap **Tap here to add a new task**.


Using the Summary Screen

 When you tap a task in the task list, a summary screen is displayed. To change the task, tap **Edit**.

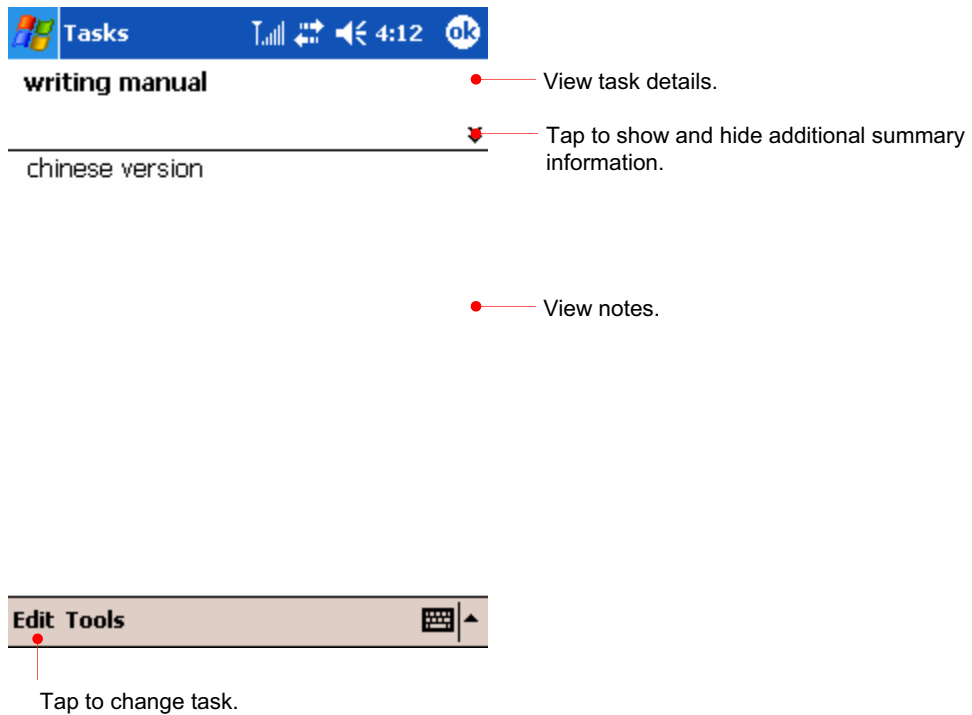


Notes : Capturing Thoughts and Ideas

 Quickly capture thoughts, reminders, ideas, drawings, and phone numbers with Notes. You can create a written note or a recording. If a note is open when you create the recording, it will be included in the note as an icon. If the note list is displayed, it will be created as a stand-alone recording.

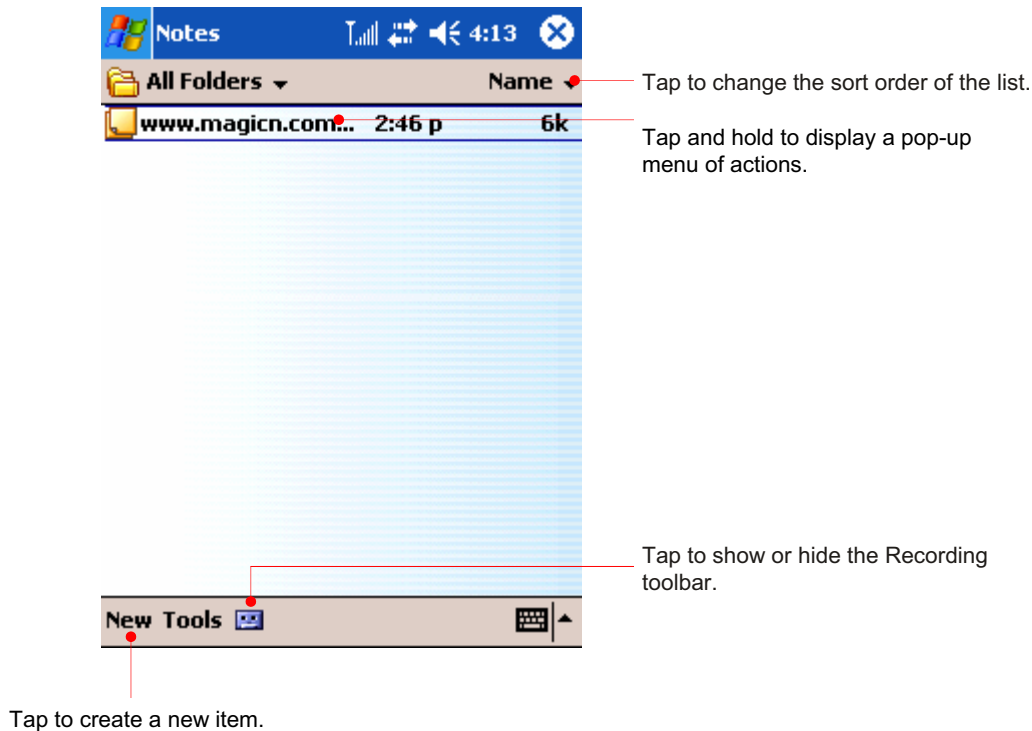

 When you select landscape on the settings you will have a screen as follows :

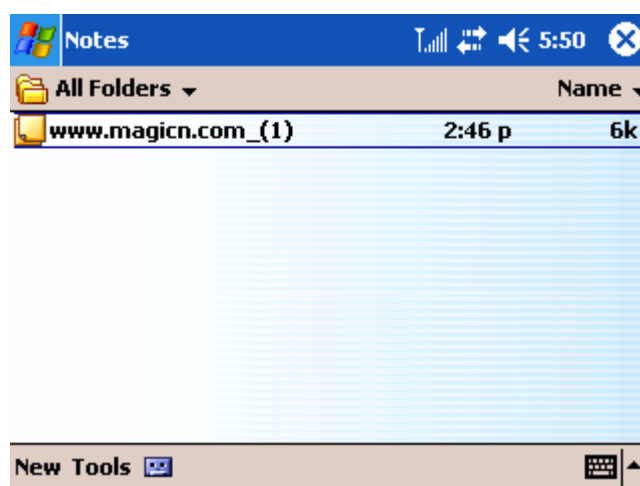

(If you want to select “landscape”,  > “Settings” > “System” tab > “Screen”  icon. For more detailed information, see the screen setting on chapter 6 Configuring Device.)

 
For description below, portrait screens are used.

To create a note

1. Tap **New**.



2. Create your note by writing, drawing, typing, or recording.

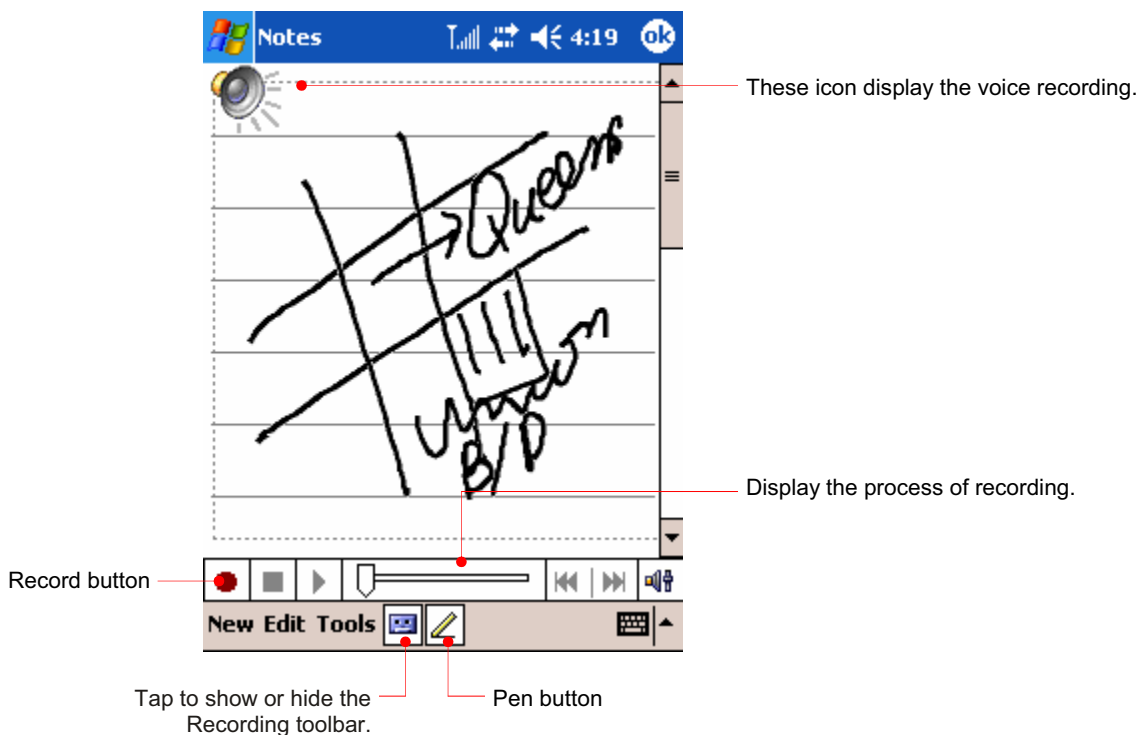

Create your note by writing, drawing, typing, or recording. For more information about using the Input panel, writing and drawing on the screen, and creating recordings, see “Entering Information Using the Input Panel” in chapter 3.

Chapter 10

Microsoft Programs

Your device includes Microsoft Pocket PC Software 2003(Microsoft Pocket Word, Microsoft Pocket Excel, Windows Media Player for Pocket PC, Microsoft Reader, and Microsoft Messenger). This section provides an overview of these programs and enough information to get you started. For complete instructions on using a program, refer to online Help for that program.

In this chapter you will find followings :

- Microsoft Pocket Word
- Microsoft Pocket Excel
- Microsoft Windows Media Player
- Terminal Service Client
- Pictures
- Microsoft Messenger



The information contained in this document is provided “as is” and is subject to change without notice.

Microsoft Pocket Word

 
Microsoft Pocket Word works with Microsoft Word on your desktop PC to give you easy access to copies of your documents. You can create new documents on your device, or you can copy documents from your desktop PC. Synchronize documents between your desktop PC and your device regularly so that you have the most up-to-date content in both locations.

To use Pocket Word

1. On the **Start** menu, tap **Programs**, and then tap the Pocket Word icon.




Tap to make a new word file.

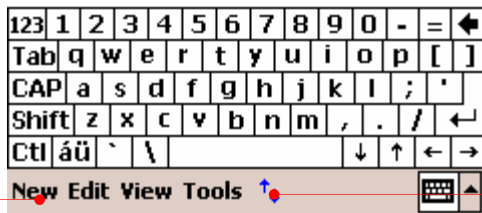

Tap to show and hide toolbar.

 When you select landscape on the settings you will have a screen as follows :

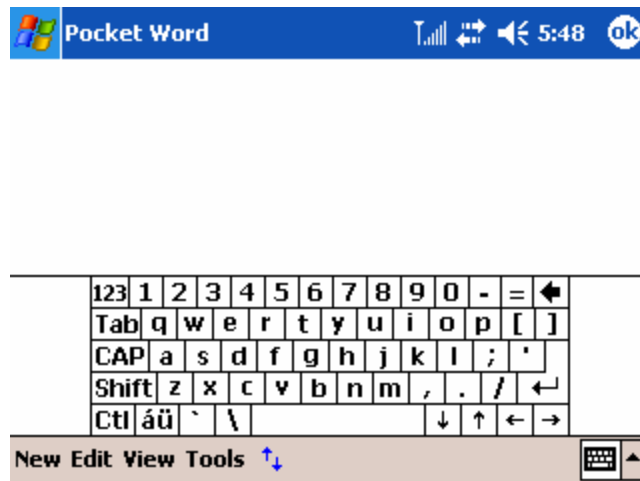

(If you want to select “landscape”,  > “Settings” > “System” tab > “Screen”  icon. For more detailed information, see the screen setting on chapter 6 Configuring Device.)

For description below, portrait screens are used.

2. Tap **New** to open a blank document.

You can open only one document at a time; when you open a second document, you will be asked to save the first. You can save a document you create or edit in a variety of formats, including Pocket Word (.psw), Rich Text Format (.rtf), and Plain Text (.txt). You can enter information in Pocket Word in four modes: typing, writing, drawing, and recording. Use the **View** menu to switch between modes. Each mode has its own toolbar, which you can show and hide by tapping the Show/Hide Toolbar button on the Command bar.

Typing Mode. Use the Input panel to enter typed text into the document with either the keyboard or the Letter Recognizer. For more information on entering typed text, see “Entering Information” in chapter 3.

 
Writing Mode. In writing mode, use your stylus to write directly on the screen. Ruled lines are displayed as a guide, and the zoom magnification is greater than in typing mode to allow you to write more easily. For more information on writing and selecting writing, see “Entering Information” in chapter 3.

Written words are converted to graphics (metafiles) when a Pocket Word document is converted to a Word document on your desktop PC.

Drawing mode. In drawing mode, use your stylus to draw on the screen. Gridlines appear as a guide. When you lift your stylus off the screen after the first stroke, you will see a drawing box indicating the boundaries of the drawing. Every subsequent stroke within or touching the drawing box becomes part of the drawing. For more information on drawing and selecting drawings, see “Entering Information” in chapter 3.

Recording mode. Use recording mode to embed a recording into your document. Recordings are saved as WAV files. For more information on recording, see “Entering Information” in chapter 3.

To open a template rather than a blank document, select a template for new documents. On the **Tools** menu, tap **Options**, and then browse to select the default template. When you tap **New**, the template appears with appropriate text and formatting already provided.

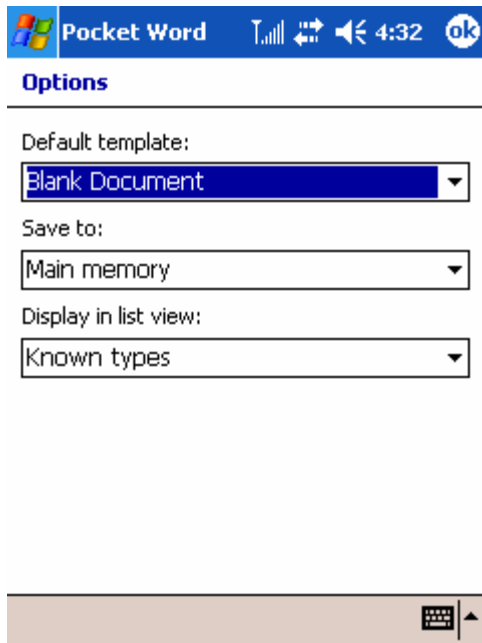

Tips for Working in Pocket Word

 
- You can change the zoom magnification by tapping **View** and then **Zoom**. Then select the percentage you want. Select a higher percentage to enter text and a lower one to see more of your document.
- If you are opening a Word document created on a desktop PC, select **Wrap to Window** on the **View** menu so that you can see the entire document.

Microsoft Pocket Excel


Microsoft Pocket Excel works with Microsoft Excel on your desktop PC to give you easy access to copies of your workbooks. You can create new workbooks on your device, or you can copy workbooks from your desktop PC to your device. Synchronize workbooks between your desktop PC and your device so that you have the most up-to-date content in both locations. Pocket Excel provides fundamental spreadsheet tools, such as formulas, functions, sorting, and filtering, which enable you to create simple workbooks, such as expense reports and mileage logs.

To use Pocket Excel

1. On the **Start** menu, tap **Programs**, and then tap the Pocket Excel icon.

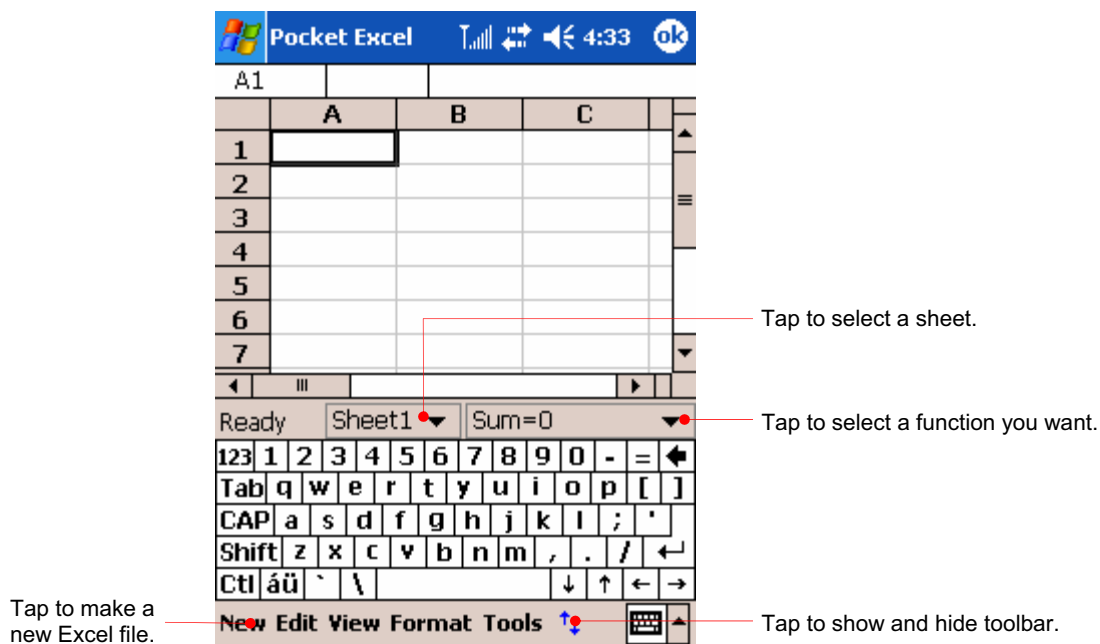

 When you select landscape on the settings you will have a screen as follows :

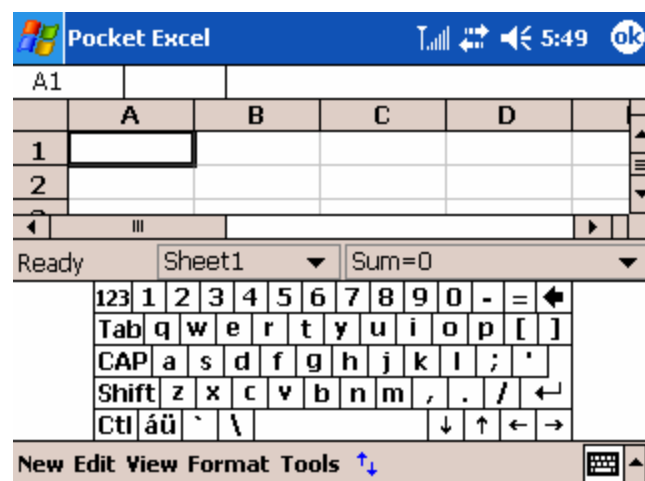

(If you want to select “landscape”,  > “Settings” > “System” tab > “Screen”  icon. For more detailed information, see the screen setting on chapter 6 Configuring Device.)

For description below, portrait screens are used.

2. Tap **New** to open a blank workbook.

To open a template rather than a blank workbook, select a template for new workbooks. On the **Tools** menu, tap **Options**, and then browse to select the default template. When you tap **New**, the template appears with appropriate text and formatting already provided.

You can open only one workbook at a time; when you open a second workbook, you will be asked to save the first. You can save a workbook you create or edit in a variety of formats, including Pocket Excel (.pxl) and Excel (.xls).

Tips for Working in Pocket Excel

 
- View in full-screen mode to see as much of your worksheet as possible. Tap **View** and then tap **Full Screen**.
- If your workbook contains sensitive information, you can protect it with a password. To do so, open the workbook, tap **Edit**, and then tap **Password**.
- Freeze panes on a worksheet. First, select the cell where you want to freeze panes. Tap **View** and then tap **Freeze Panes**. You might want to freeze the top and leftmost panes in a worksheet to keep row and column labels visible as you scroll through a sheet.
- Split panes to view different areas of a large worksheet. Tap **View** and then tap **Split**. Then drag the split bar to where you want it. To remove the split, tap **View** and then tap **Remove Split**.
- Show and hide rows and columns. To hide a row or column, select a cell in the row or column you want to hide. Tap **Format**, then tap **Row** or **Column**, and then tap **Hide**. To show a hidden row or column, tap **Tools**, then tap **Go To**, and then type a reference that is in the hidden row or column. Tap **Format**, then tap **Row** or **Column**, and then tap **Unhide**.

Microsoft Windows Media Player

Use Microsoft Windows Media Player for Pocket PC to listen to digital audio and video files, such as songs or movie clips. Media Player supports file formats, such as MP3, WMA, WMV, ASF and WMP.


To start Windows Media Player

On the **Start** menu, tap **Programs**, and then tap the **Windows Media Player** icon.

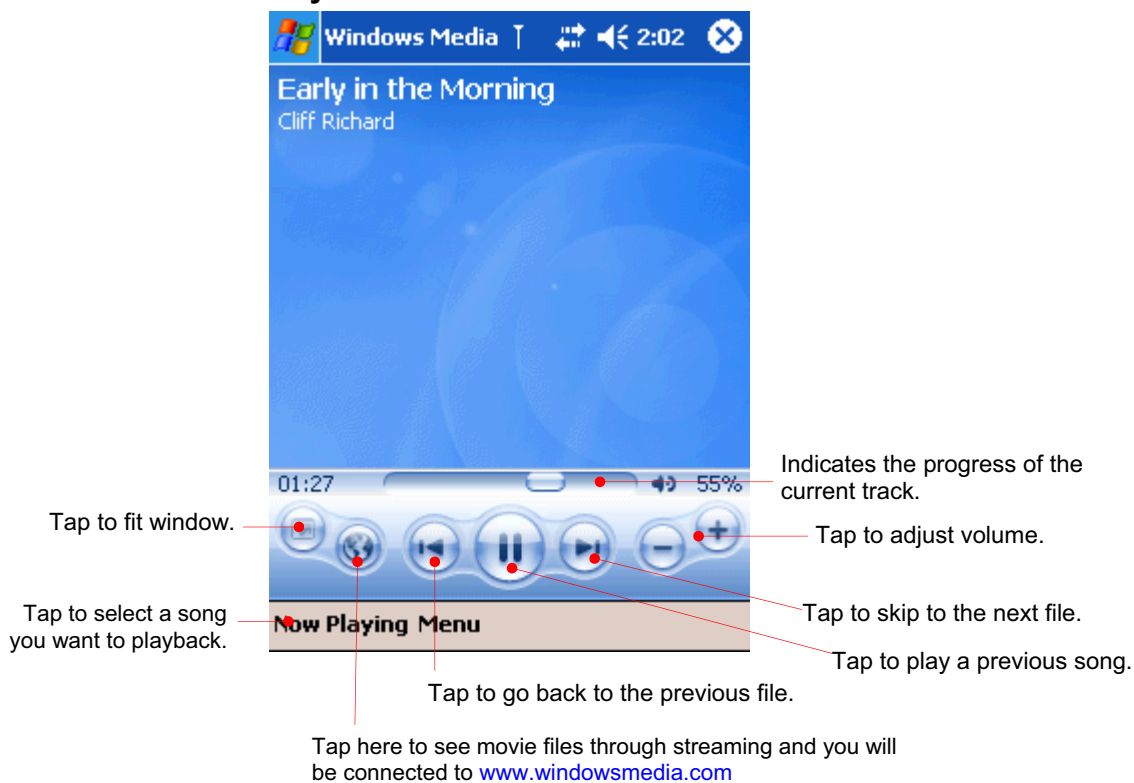

To play the music file repeatedly, on the Menu, Shuffle/Repeat and select Repeat.

 When you select landscape on the settings you will have a screen as follows :

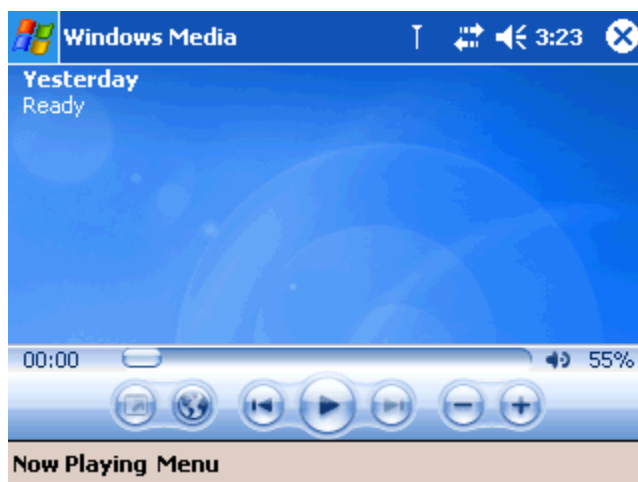


(If you want to select “landscape”,  > “Settings” > “System” tab > “Screen”  icon. For more detailed information, see the screen setting on chapter 6 Configuring Device.)

For description below, portrait screens are used.


Connect to Windowsmedia.com

 Tap  to connect to www.windowsmedia.com.

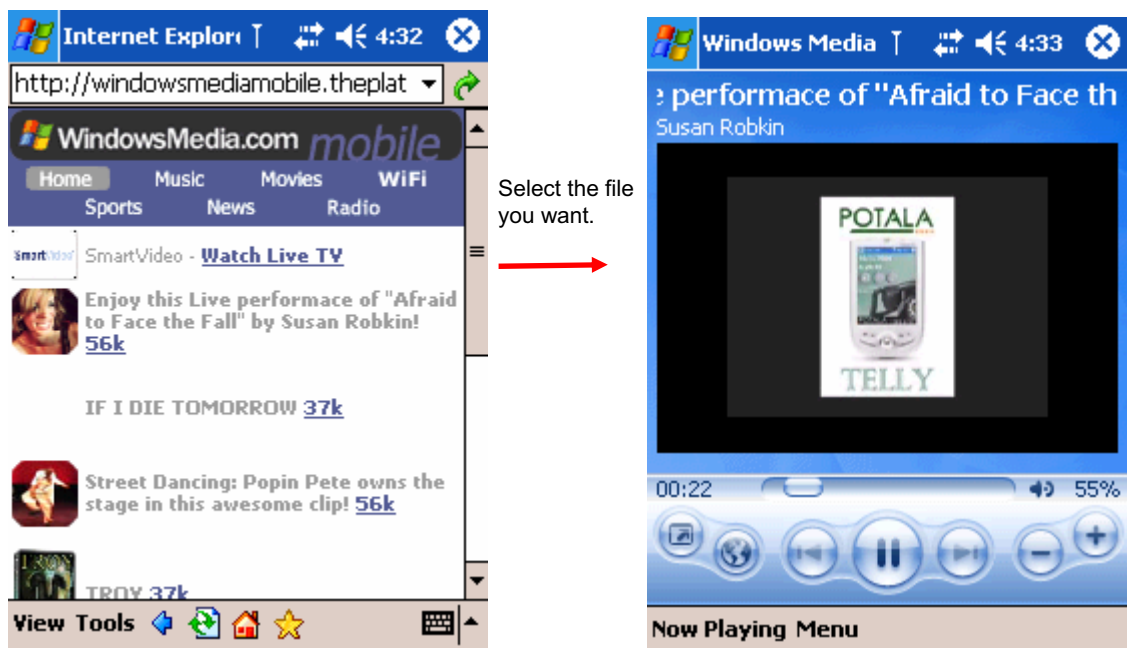


Playlist

 
Tap “Menu” > “Library” to have screen displayed as below.

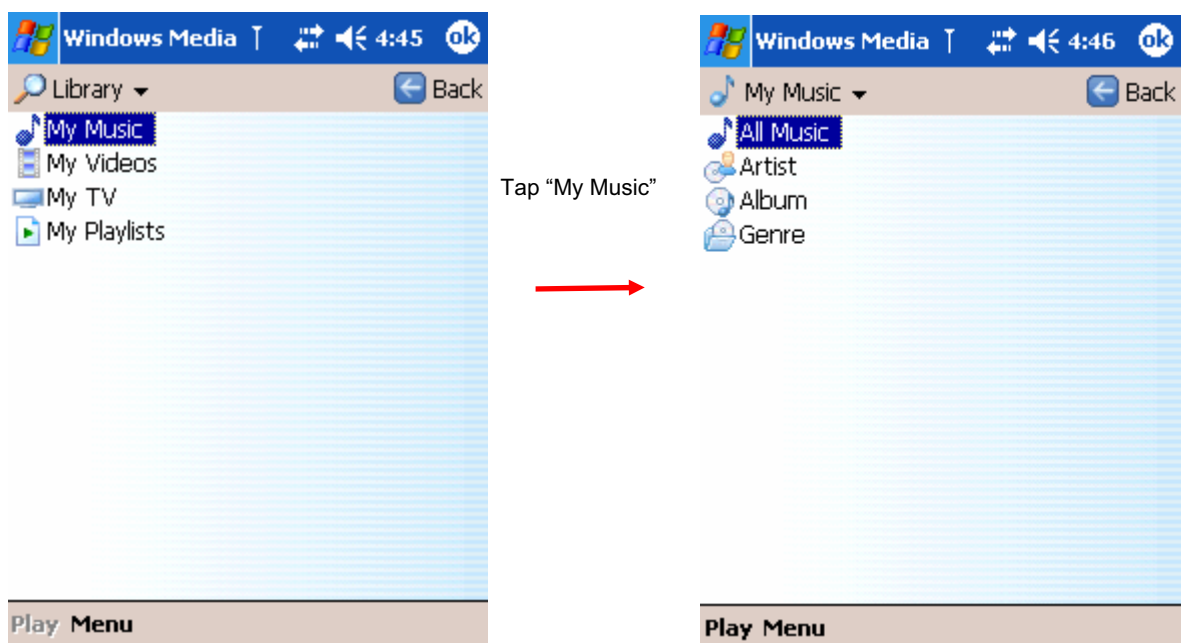

Tap “All Music”.

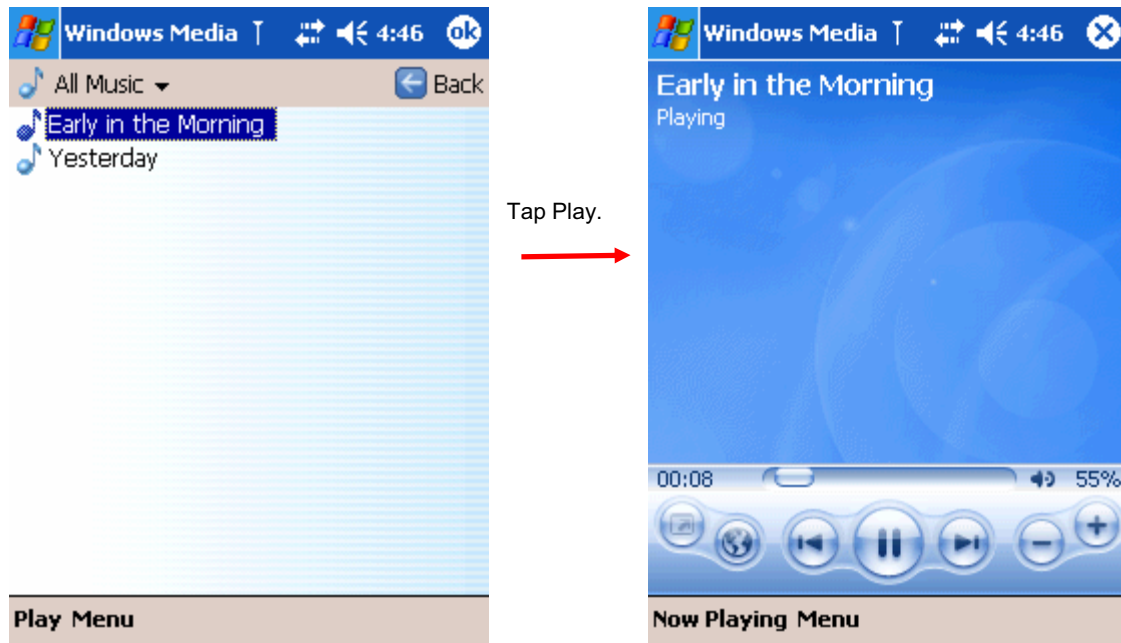 


 
Tap “Now Playing” to see what is played.

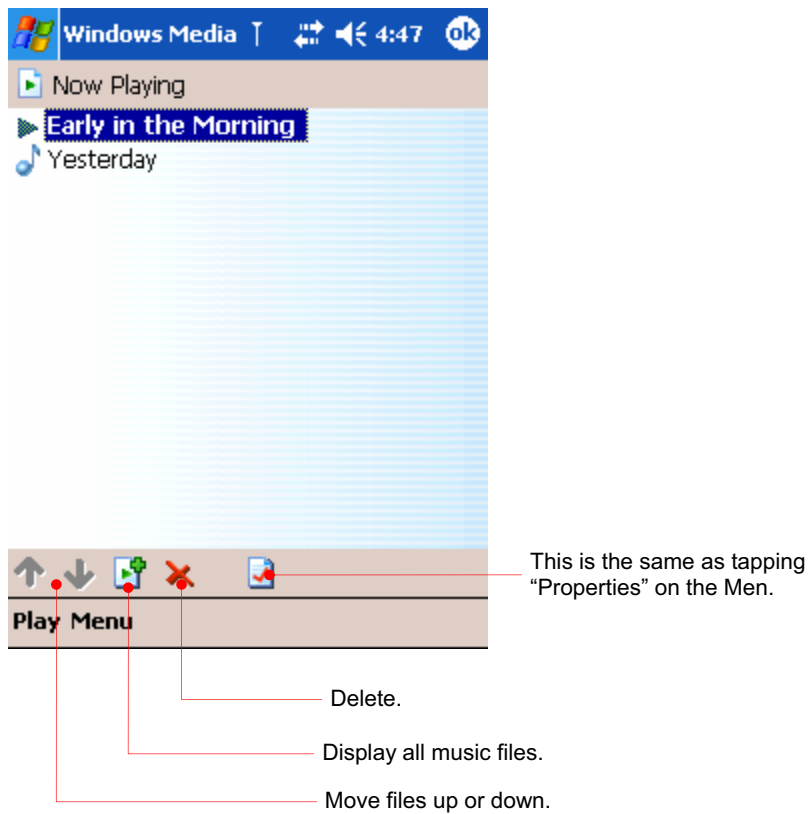

Working with Audio Files on a SD Card


Because songs and audio files can use a lot of storage memory, you may store them on a mini SD memory card.

  To get settings, select Options on the Menu.

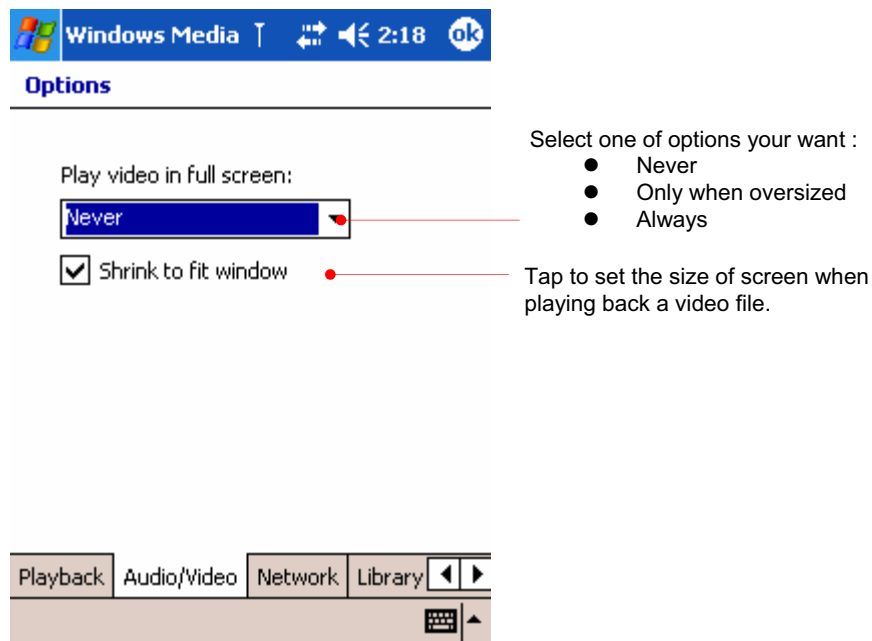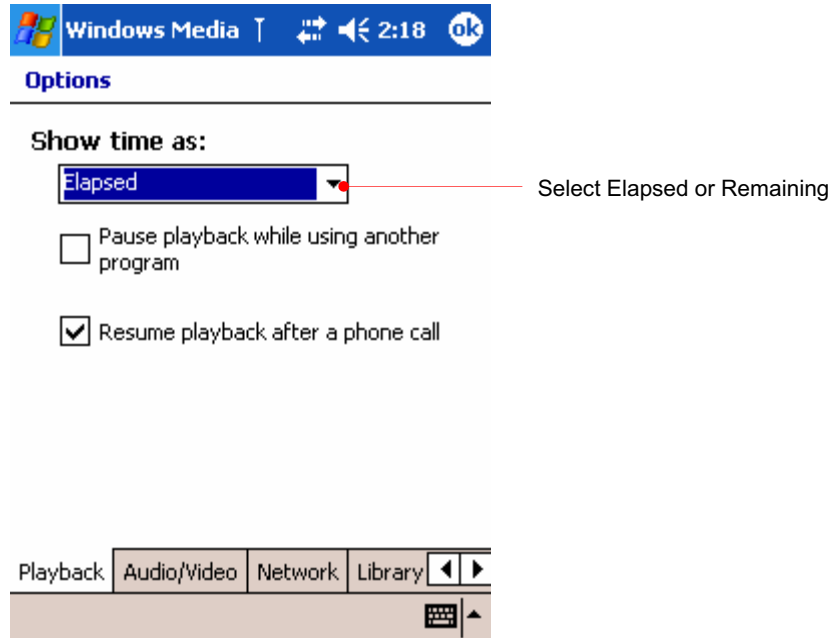

Assign buttons

 On the Menu, tap Options > “Buttons” tab to get the settings of button mapping.

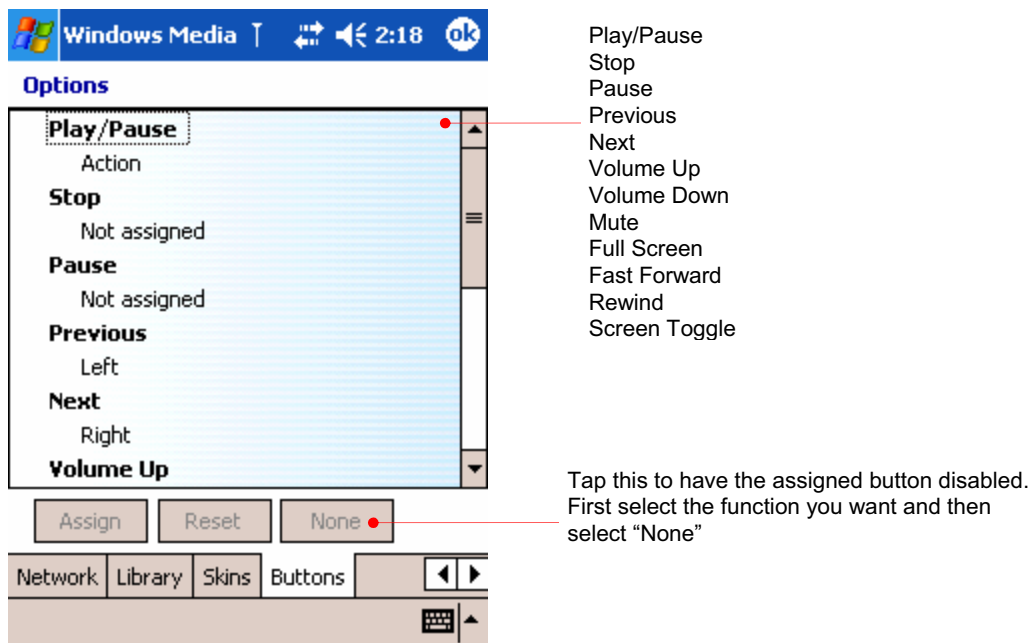


The assigned buttons are limited to , and the description word means as follows :

- “Action” means to press .
- “Up” means to press the up of .
- “Left” means to press the left of .
- “Hold Left” means to press and hold the left of .

Using Terminal Services Client

 Using the Terminal Services Client (TSC), you can log onto a desktop computer running Terminal Services (pre-Windows XP) or Remote Desktop (Windows XP and later) and use all of the programs available on that computer from your mobile device.

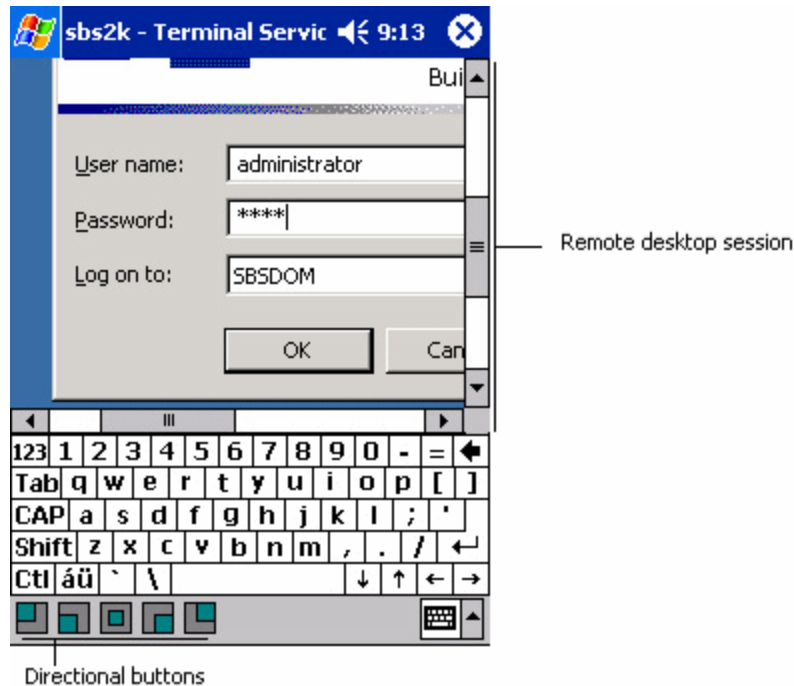


Transcriber is not supported as an input method during a Terminal Services session. You must use Keyboard, Block Recognizer, or Letter Recognizer.


Connecting and Using TSC

Before attempting a Terminal Services connection, you must have authorized access to a desktop or server that supports this service.

 
1. Launch TSC

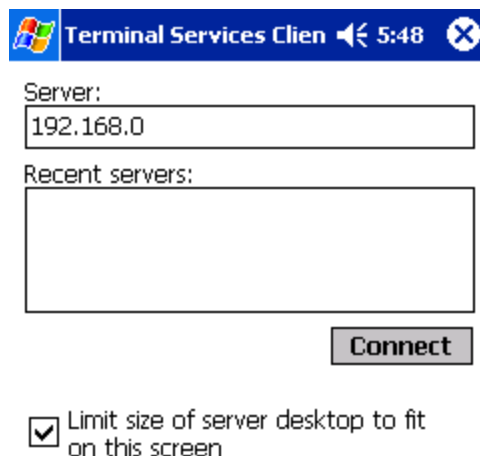

 2. Enter the IP address or host name of a valid TS server.
Checking **Limit size of server**... attempts to compress the remote desktop screen to minimize scrolling. Press **Connect** to start connection.
3. Typically you will be asked to login. Do so using one of the acceptable input methods.
4. If server desktop size is not in optimized mode, you can use one of the five  buttons to jump to the indicated positions on the screen.

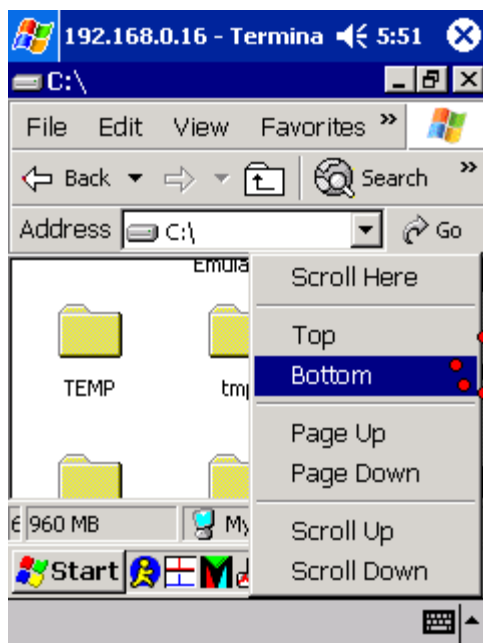

 
Otherwise, you can tap and hold on the screen to get those same options in a context menu form.

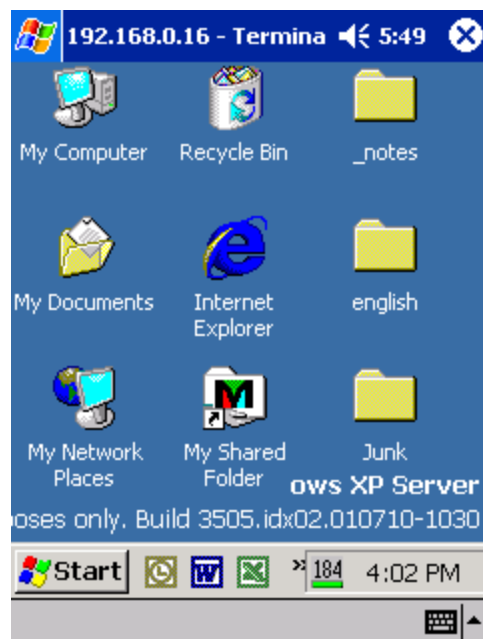


5. Use the remote server as if you were using it directly.

Pictures

 Use Pictures to view JPEG pictures stored on your device or in a storage card, send pictures to others, view a slideshow of your pictures, or set a picture as the background on the Today screen. You can even set Pictures to launch itself when a digital camera storage card is inserted into your device!

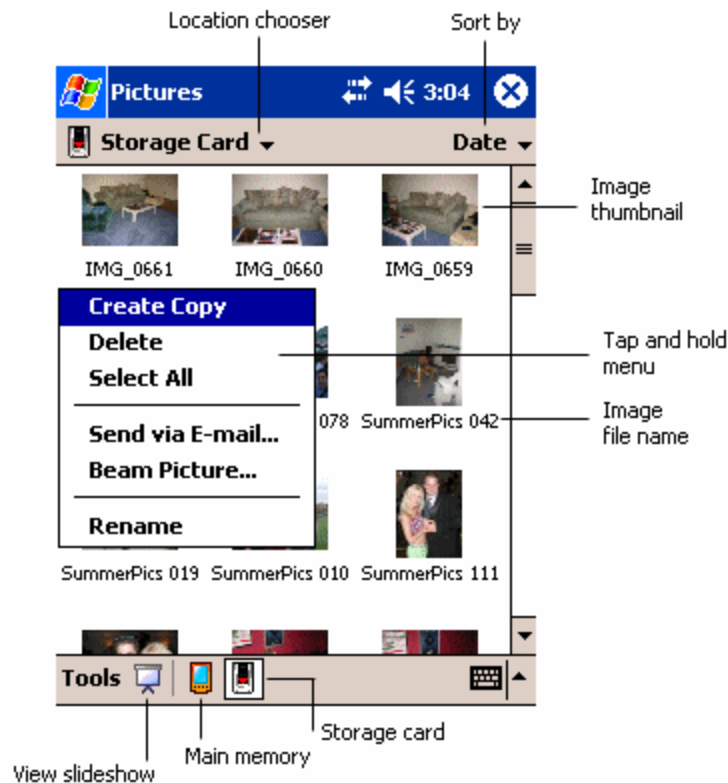

 
To begin, run **Pictures** and either choose to view main memory or storage card contents. By tapping and holding on an image, you can create a clone of that file, delete that file, select all files, send file via e-mail, beam picture, or rename the image.

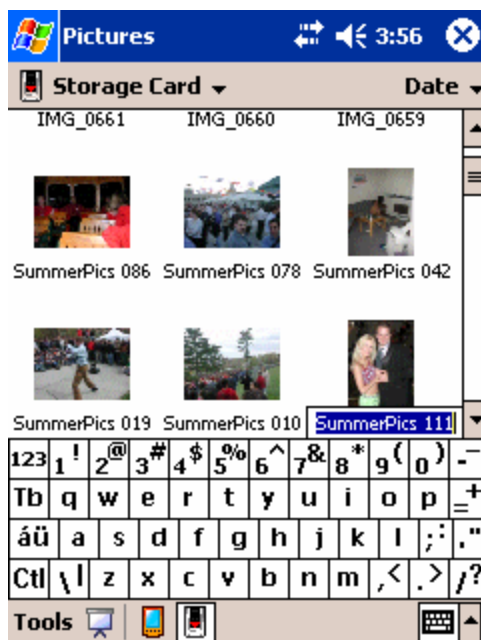

If you choose to **Rename**, type in the new file name.

Working with Images

 Single clicking on a thumbnail presents a zoomed-in version of the picture.

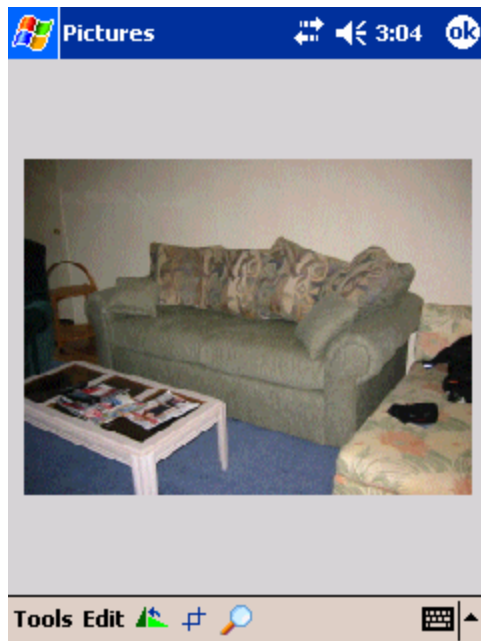

From here, you can rotate, crop, zoom, share, or change brightness and contrast levels of a picture.

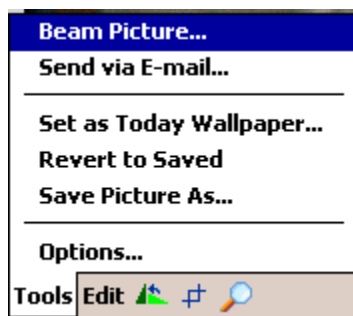 


Image Tools

Both **Beam Picture** and **Send via e-mail** allow you to share your pictures.

 
Set as Today Wallpaper... will set the loaded image as your Today screen background.



An improperly sized image will not appear without distortion on the Today screen.



You will be able to either crop the image to fit to the Today screen (for large images) or fit to screen (for small images). You can also set the transparency level so that Today screen content is still legible.

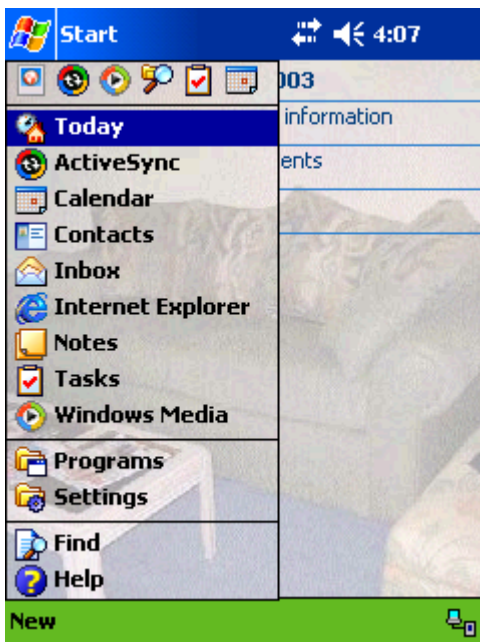


Above is the result of our Today screen.

Revert to Saved discards all changes since the last saving of the

image and displays the original image.

 Save Picture As... performs a save operation on the picture.

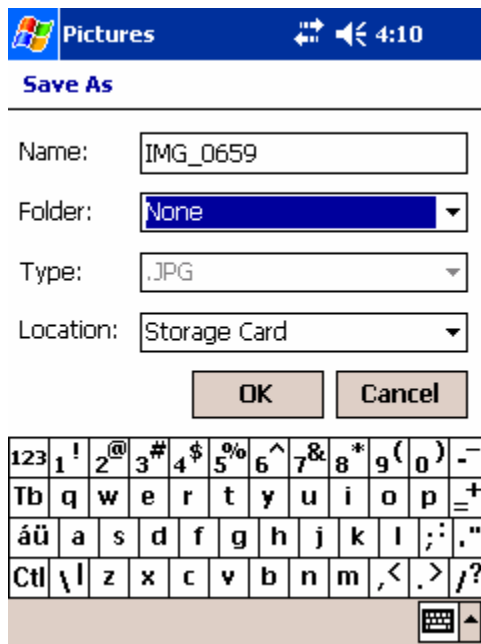

i. Choose the file name and destination for the image then select OK.

ii. Image quality might decrease as a result of the save process, so you are reminded of this when saving.

 
Options: See below

Editing Images

Pictures allows you to rotate, crop, and adjust brightness and contrast levels of your pictures.

Rotating Images

1. Press the  button.

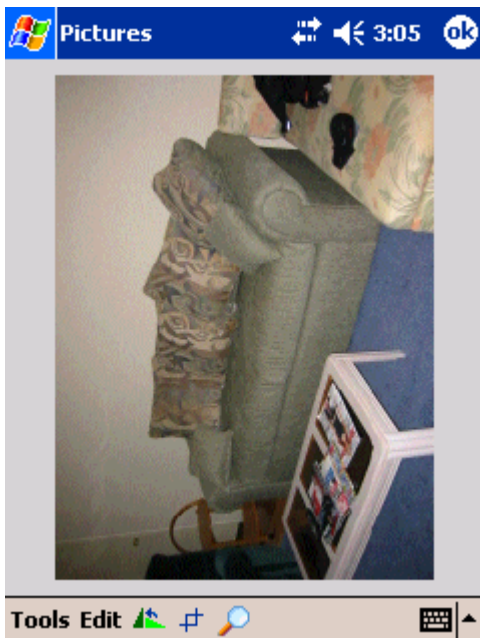


2. The picture will be rotated 90 degrees counter-clockwise.

Cropping Images

1. Press the  button.




 2. Draw a box with the stylus around the area you wish to crop and save.

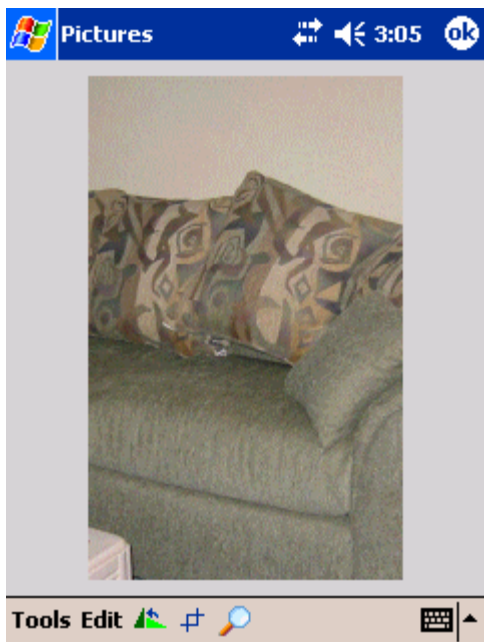

3. Tap once inside the box you have drawn and your picture will be cropped.

 Zooming into Images

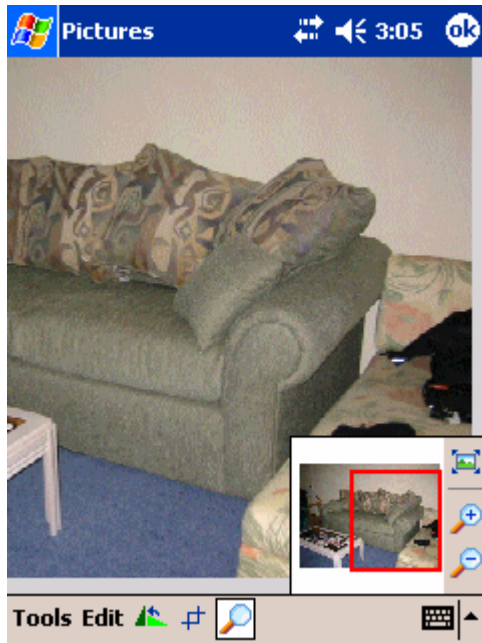

1. Press the  button to raise the Zoom panel. By default your image is in **Best Fit** view mode when you open the image.
2. Pan around the red boxed area to focus a portion of the picture into view.
3. Press the  button to zoom in or the  button to zoom out of the area highlighted by the red box.
4. Press the  button to return to **Best Fit** view mode.

 
Undoing Changes



Press **Edit—Undo** or **Edit—Redo** to undo or redo the last change made.

Changing Image Brightness and Contrast

1. Select **Edit—Brightness and Contrast**

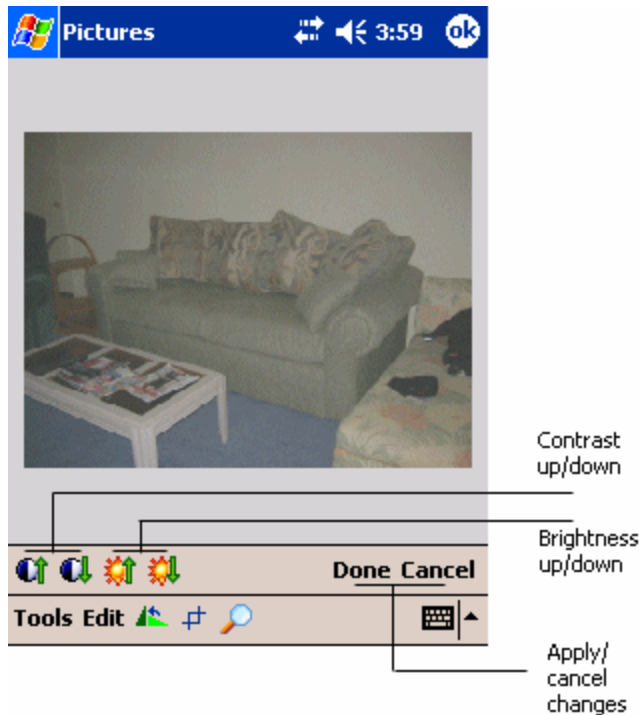

2. Select the **Brightness Up**, **Brightness Down**, **Contrast Up**, or **Contrast Down** button. With each change in brightness or contrast level, **Edit—Undo** will undo that last change.
3. Press **Done** to save changes or **Cancel** to cancel changes.

 
Viewing Images in a Slideshow

With the click of a button, you can create a slideshow of the images located in a folder to present to friends, family, or co-workers.

1. From the main **Pictures** window, press the  button.
2. Automatic playback in vertical viewing mode will begin.



3. To manipulate the slideshow, single tap anywhere on the screen.

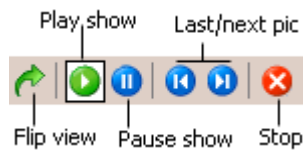


Above is a description of each of the buttons


4. To change from vertical to horizontal viewing mode, press the **Flip view** button.

Configuring Pictures

 Tools—Options from either the main screen or while viewing an image allows you to set various properties about image display and slideshow playback.

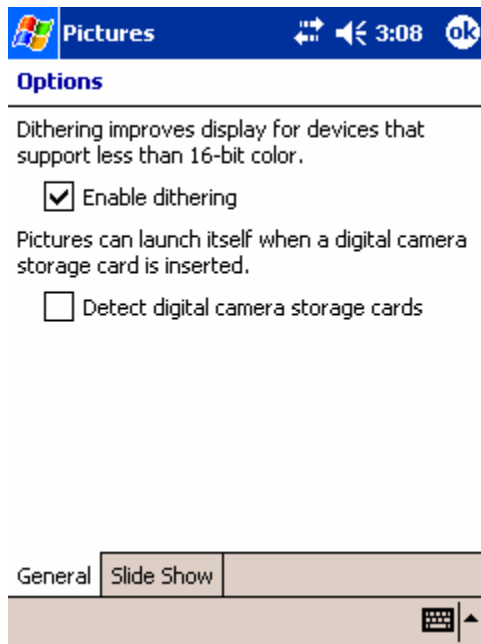

 In the **General** tab, you can turn on dithering to improve image display for Pocket PCs with less than 16-bit color screens. A useful feature is that Pictures can launch itself when a digital camera storage card is inserted.

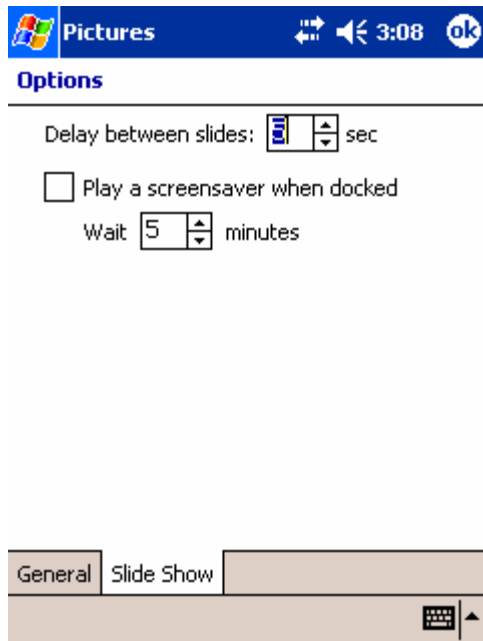

In the **Slide Show** tab, you can change the delay between slides or turn on the slideshow as a screensaver when your device has been idle a set amount of time.

MSN Messenger

MSN Messenger is an instant messaging program that lets you see who is online, send and receive instant messages and have instant message conversations with groups of contacts.

 
To use MSN Messenger, you must have a Microsoft Passport account. If you have a Hotmail® or MSN account, you already have a Passport. Once you have obtained a Microsoft Passport, you are ready to set up your account.



Sign up for a Microsoft Passport account at <http://www.passport.com> . Get a free Microsoft Hotmail e-mail address at <http://www.hotmail.com>.

To set up an account and sign in

1. On the **Start** menu, tap **Programs**, and then tap the MSN Messenger icon.
2. To sign in, tap the sign-in screen and enter your e-mail address and password.

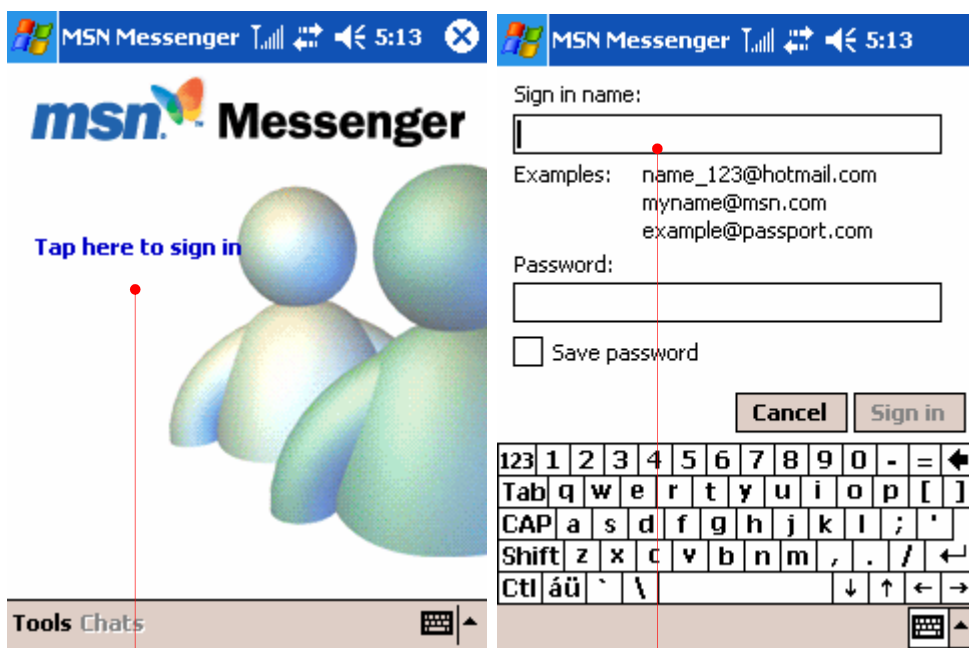

Tap here to sign in.

The account you entered before displays.



If you already use MSN Messenger on your desktop PC, your contacts will show up on your device without being added again.

When you select landscape on the settings you will have a screen as follows :

 


(If you want to select “landscape”,  > “Settings” > “System” tab > “Screen”  icon. For more detailed information, see the screen setting on chapter 6 Configuring Device.)

For description below, portrait screens are used.

Working with Contacts

The MSN Messenger window shows all of your messenger contacts at a glance, divided into Online and Not Online categories. From this view, while connected, you can chat, send e-mail messages, block the contact from chatting with you, or delete contacts from your list using the pop-up menu.

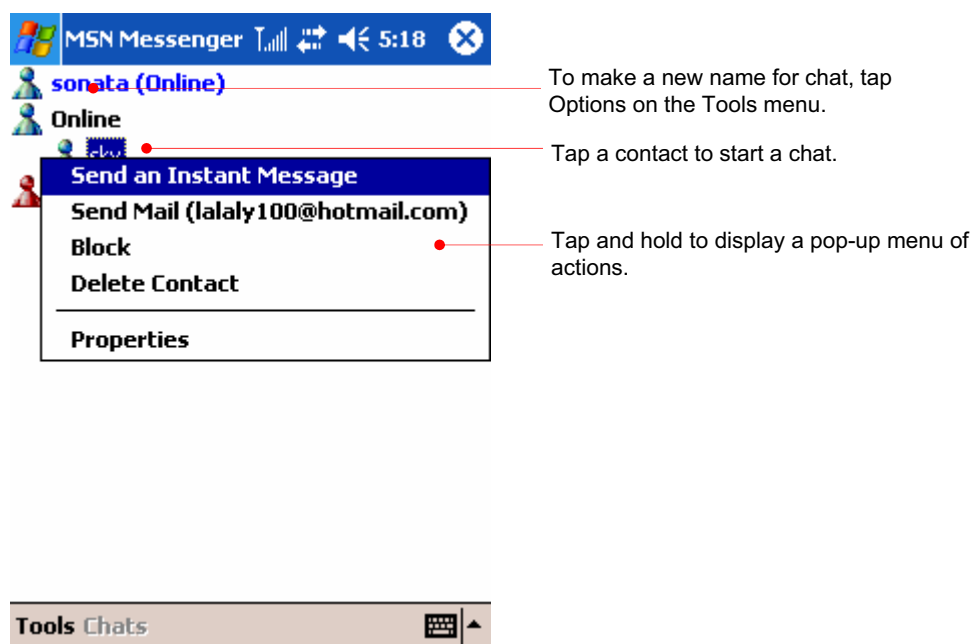




To see others online without being seen, on the **Tools** menu, tap **My Status**, and then tap **Appear Offline**.



If you block a contact, you will appear offline but will remain on the blocked contact's list. To unblock a contact, tap and hold the contact, then tap **Unblock** on the pop-up menu.

Editing My Text Messages

 
Tap Edit My Text Messages on the Tools menu to enter a preset message.

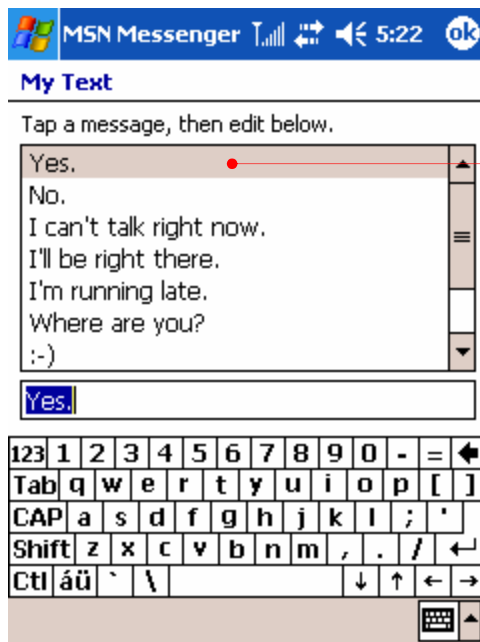

Select a message among the list that is preset.

Chatting with Contacts

 Tap a contact name to open a chat window.

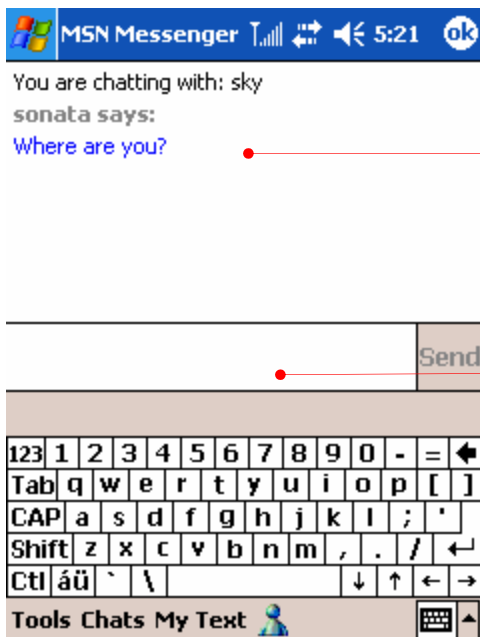

The message you enter display here.

Text entry area

Enter your message in the text entry area at the bottom of the screen (or tap **My Text** to enter a preset message), and then tap **Send**. To invite another contact to a multi-user chat, on the **Tools** menu, tap **Invite**, and then tap the contact you want to invite.



To switch back to the main window without closing a chat, tap the Contacts button. To revert to your chat window, tap **Chats**, and then select the person with whom you were chatting.

Adding a Contact

To add a new contact, tap **Add a Contact** on the **Tools** menu.

MSN Messenger

Add a Contact

Sign-in Name:

Examples: name_123@hotmail.com
myname@msn.com
example@passport.com

Cancel Next

123	1	2	3	4	5	6	7	8	9	0	-	=	↵
Tab	q	w	e	r	t	y	u	i	o	p	[	]	
CAP	a	s	d	f	g	h	j	k	l	;	'		
Shift	z	x	c	v	b	n	m	,	.	/		↵	
Ctl	á	ü	`	\							↓	↑	←
													→

Set Options

On the **Tools** menu, tap **Options**. On the **Accounts** tab, enter your Passport account information.



My display name

 
Enter the name you want others to see:

sonata

Enter your name for chat.

Connection

☐ Run this program upon connection

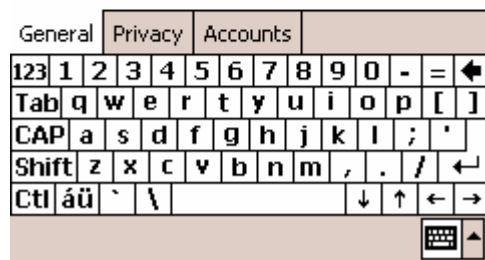


The following users have added you to their contact lists.

sky

☒ Alert me when I am added to a Passport contact list

 Blocked Users...



☒ Enable MSN Messenger Service

Sign in name: swkimesther@hotmail.co

Password: *****

☐ Enable Exchange Instant Messaging

Sign in name:

Password:

Settings...



Chapter 11

Support & Service

Web site

You can obtain product information as well as tips and hints on how to get more from the product at our Web site. This computer service is provided free of charge; you pay only for telephone charges and Internet service fees. To connect to this Web site from a computer via the Internet, go to www.cyberbank.com

Service

For diagnostic instructions and other service information, contact one of the technical support numbers. Please do not ship your device for service without first contacting a CYBERBANK office. If your device qualifies for in-warranty service, be ready to supply a dated proof of purchase.

Before you contact us for help, be sure to:

1. Review the manuals whenever possible.
2. Have the following information about the product:
 - model number
 - serial number
 - purchase date
3. Have your product ready to use. The support personnel may ask you to run tests and other operations.
4. Organize your question or problem. The more detailed information you can provide, the quicker the support personnel can help you.

Appendix A

Hardware Specifications

Items		Descriptions
OS		Windows Mobile 2003 Second Edition - English version
Process or	PDA	PXA263(Cotulla) – up to 400MHz
	CDMA	MSM5500 supports IS95A, 95B, 1x RTT/EvDO
Memory	Flash	Pocket PC 2003 OS : 32Mbyte Program and files : 128Mbyte
	RAM	64Mbyte
Battery	Main	Li-Polymer / rechargeable(takes around 3 hours to charge) Standard battery : 1380mAh Slim battery : 690mAh
	Backup	Li- Polymer, 43mAh – takes up to 12 hours to charge
Size (mm) width x length x height		Standard battery : 52 x112.5 x 26.6 Slim battery : 52 x112.5 x 22.0
Weight (g)		174g : Standard battery 159g : Slim battery
Screen	Resolutions	240 X 320
	Color	2.45 " Transflective, TFT LCD 260K Color
External Power		110~220V
Camera		SXGA / 1.3M pixels / Still snap shot
Earphone jack		2.5Φ, 6 pole, stereo
Miscellaneous		vibrator/loud speaker/receiver/microphone
Radio module		FM Radio
Cradle		Standard battery :charge with 705mAh Slim battery : charge with 350mAh
I/O Connect or	USB (Universal Serial Bus)	Supports specification 1.1.
	Mini-SD (Secure Digital)	External memory card
	IrDA	Supports 115.2Kbps
Time	Stand-by	80~130 hours(standard battery)

	voice communications	3 hours 20 minutes (PDA Sleep mode)
	Data communications	2 hours 50 minutes(standard battery)
LED	Battery charging state (Red, Blue) Phone State (Red, Green, Blue)	
Operating conditions	Temperature : -10~50℃, humidity:0~95%	

Warranty

Important: This is your hardware product warranty statement. Read it carefully. Warranty terms may be different in your country. If so, your authorized dealer or sales and service office can give you details.

One year limited hardware warranty

CYBERBANK warrants this hardware product against defects in material and workmanship for a period of one year from receipt by the original end-user purchaser. If CYBERBANK receives notice of the above-defined defects during the warranty period, CYBERBANK will either, at its option, repair or replace products that prove to be defective. Should CYBERBANK be unable to repair or replace the product within a reasonable amount of time, the customer's alternate exclusive remedy shall be a refund of the purchase price upon return of the product.

Limitation of warranty

The above warranty shall not apply to defects resulting from: misuse; unauthorized modification; opening for any reason; operation or storage outside the environmental specifications for the product; in-transit damage; improper maintenance; or defect resulting from use of non-CYBERBANK software, accessories, media, supplies, consumables, or such items not designed for use with the product. CYBERBANK makes no other express warranty, whether written or oral, with respect to this product. Any implied warranty of merchantability or fitness for a particular

purpose is limited to the one-year duration of this written warranty. Some states, provinces, or countries do not allow limitations on how long an implied warranty lasts, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, province to province, or country to country.

CYBERBANK Software Product License Agreement and CYBERBANK Software Product Limited Warranty

This CYBERBANK product contains preinstalled software programs. Please read the CYBERBANK Software Product License Agreement before proceeding.

Important: Carefully read this License Agreement and the Limited Warranty statement before operating the equipment. The rights to the software are licensed, not sold. CYBERBANK or its licensors continue to own all intellectual property rights to the software, and you will be granted certain rights to use the software upon your acceptance of this license. Rights in the software are offered only on the condition that you agree to all terms and conditions of the License Agreement. Operating the equipment indicates your acceptance of these terms and conditions. If you do not agree to the terms and conditions of the License Agreement, return the complete package for a full refund now.

CYBERBANK Software Product License Agreement

The CYBERBANK Software Product License Agreement shall govern the use of all software that is provided to you, the customer, as part of this CYBERBANK product with the exception of Microsoft Software. Microsoft Products are licensed to you under the Microsoft End User License Agreement (EULA) contained in the Microsoft documentation. Any third-party software supplier's warranty terms that may be found online, or in any documentation or other materials contained in the product packaging, shall govern the use of that third-party software.

Use

You may only use the software on a single computer. You may not reverse, assemble, or decompile the software.

Copies and adaptations

You may make copies or adaptations of the software (a) for archival purposes, or (b) when copying or adaptation is an essential step in the use of the software with a computer so long as the copies and adaptations are used in no other manner.

You have no other rights to copy unless you acquire an appropriate license to reproduce which is available from CYBERBANK for some software.

You agree that CYBERBANK provides no warranty, free installation, or free training for any copies or adaptations made by you.

All copies and adaptations of the software must bear the copyright notice(s) contained in or on the original.

Ownership

You agree that you do not have any title to or ownership of the software, other than ownership of the physical media. You acknowledge and agree that the software is copyrighted and protected under the copyright laws.

You acknowledge and agree that the software or part thereof may have been developed by a third-party software supplier named in the copyright notice(s) included with the software, who shall be authorized to hold you responsible for any copyright infringement or violation of this or their own License Agreement.

Transfer of rights in software

You may transfer rights to the software to a third party only as part of the transfer of all your rights and only if you obtain the prior agreement of the third party to be bound by the terms of this License Agreement. Upon such a transfer, you agree that your rights to the software are terminated and that you will either destroy all your copies and adaptations or deliver them to the third party. Transfer to a U.S. government department or agency or to a prime or lower tier contractor in connection with a U.S. government contract shall be made only upon prior written agreement to terms required by CYBERBANK.

Sublicensing and distribution

You may not lease, sublicense the software, or distribute copies or adaptations of the software to the public in physical media, by telecommunication or at all without the prior written consent of

CYBERBANK.

Termination

CYBERBANK may terminate this software license for failure to comply with any of these terms, provided CYBERBANK has requested you to cure the failure and you have failed to do so within thirty (30) days of such notice.

Updates and upgrades

You agree that the software does not include updates and upgrades that may be available from CYBERBANK under a separate support agreement.

AppendixC

Glossary

AC adapter

An external power supply that converts AC power from a standard household electrical outlet to the low-voltage DC power required to operate your device.

Backup

A duplicate copy of your device files and data that is stored on your desktop PC, on a SD card, or in the Built-in Flash.

Cradle

A desktop base for your device that allows instant connectivity to a desktop PC.

DHCP (Dynamic Host Configuration Protocol)

A protocol that assigns a dynamic IP address to your device each time you connect to a network.

DNS (Domain Name System)

An Internet service that translates domain names into IP addresses. For example, the domain name www.NATE.com might translate as 198.125.247.4.

Driver

A control program that enables a computer to work with a specific peripheral device.

IMAP4 (Internet Messaging Access Protocol v4).

A protocol that enables a computer to retrieve messages from a mail server.

IP (Internet Protocol)

The standard by which packets of information are transmitted over the Internet.

IrDA (Infrared Data Association Protocol)

An established standard for infrared communications between computers and other peripherals and devices.

ISP (Internet Service Provider)

A commercial business that provides Internet access to individuals or businesses, usually for a fee.

POP3 (Post Office Protocol v3)

A protocol that enables a computer to retrieve messages from a mail server.

Proxy server

A server that sits between a client computer or Web browser and the Internet. A proxy server provides security by filtering requests and can improve performance by storing local copies of requested information.

Reset

The process of restarting your device and reinitializing the operating system. Performing a reset erases any unsaved data in open documents, but preserves data that has been saved.

Partnership

An established relationship between your device and your desktop PC for the purpose of synchronizing and transferring data.

PIM (Personal Information Manager)

An application or set of applications that organizes information such as addresses, appointments, and notes.

Restore

To return your device to the state it was in when data was last backed up. This involves copying your backup data to your device.

RAM (Random Access Memory)

Volatile memory that can be read and written. Data stored in RAM is retained only while power is maintained.

ROM (Read-Only Memory)

Nonvolatile flash memory that contains the Microsoft Windows for Pocket PC operating system and pre-installed programs.

SD(Secure Digital) Memory Card

A removable media for high-performance memory cards.

SMTP (Simplified Mail Transport Protocol)

A protocol for sending e-mail messages between computers on the Internet.

Stylus

A pen-like utensil designed to select items on a touch screen.

Synchronization

The process of comparing the files or data between device and desktop PC to ensure that they contain exactly the same information.

Touch screen

A touch-sensitive screen that allows you to open files, launch programs, and select text by touching or tapping the screen with the stylus.

USB (Universal Serial Bus)

A newer standard for connecting peripheral devices. USB supports relatively fast data transfer rates and can be used to connect multiple devices to a single computer.

AppendixD

Installing USB(Universal Serial Bus) Modem Driver

Install the USB Modem Driver in your notebook on which a modem is not installed. This helps you to connect your notebook to the Internet.



 
Because this function uses your CDMA module, you may pay a lot of money.

1. Change your device settings
2. Install the USB Modem Driver in your notebook
3. “Cyberbank CDMA Modem” in the Device Manager
4. Making “connection to 1501” connection

1. Change your device settings

You have to change the settings of your device in order to use a USB modem for your notebook.

Select Start  > Settings > the System tab > System  > the USB tab.

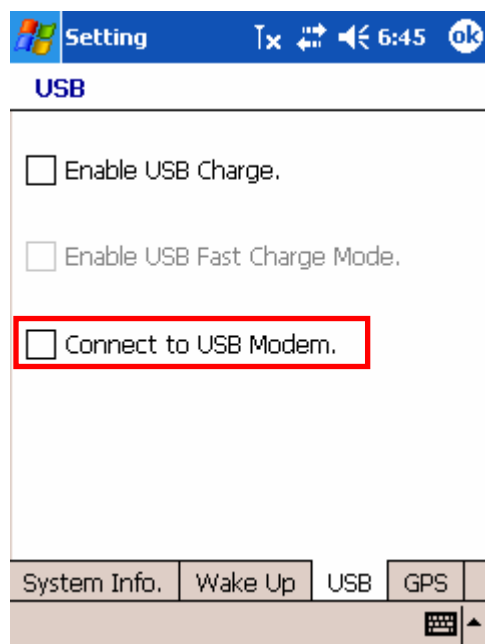

Select the “Connect to USB modem.” Check box and tap “OK”.



If you want to use Microsoft ActiveSync again, de-select the “Connect to USB modem.” Check box and tap “OK”.

 
2. Install the USB Modem Driver in your notebook

When your device is seated on cradle and USB cable is connected between cradle and your notebook, your device will operate as a modem.


Insert the Companion CD into CD-ROM drive.



Select “Next”.

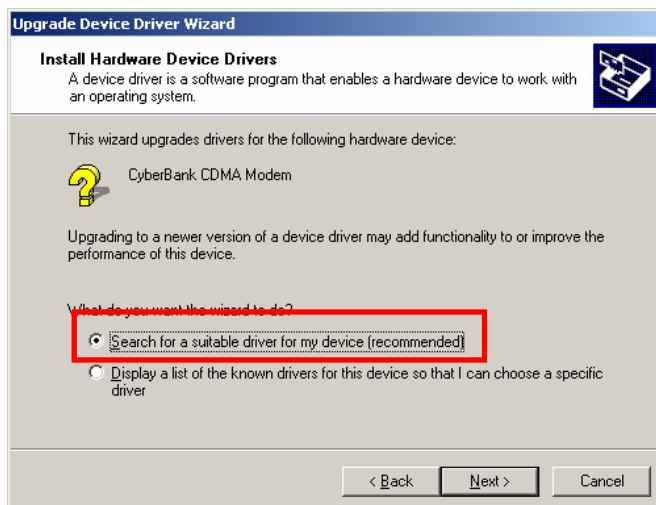

 
Select the “Search for a suitable driver for my device” selection box and click “Next”.

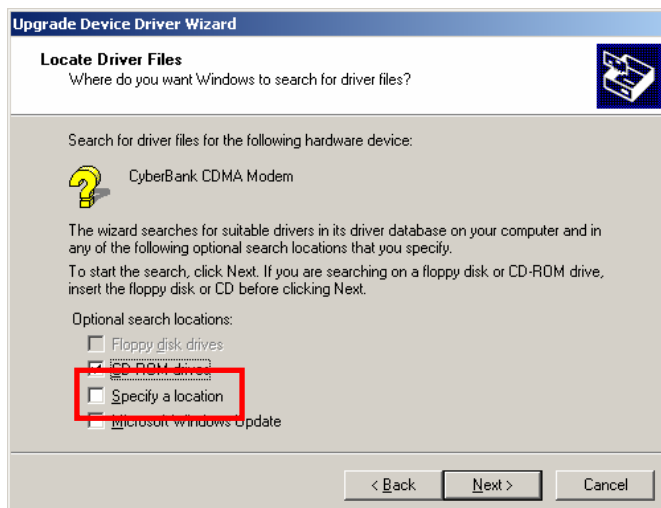

Select the “Specify a location” selection box and click “Next”.



 Select “OK”.

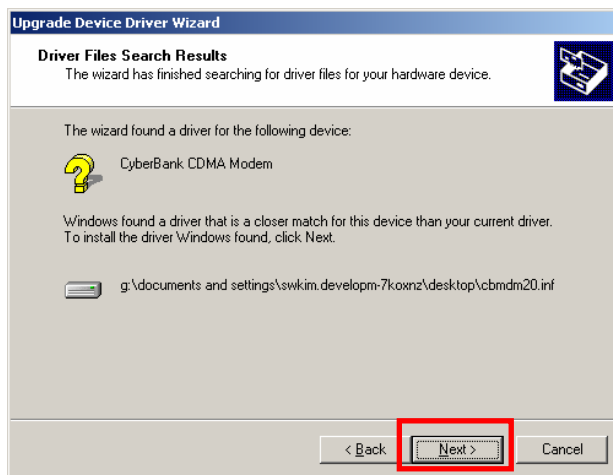


Select “Next”.



Click “Finish”.


3. “Cyberbank CDMA Modem” in the Device Manager

 After installing the USB Modem Driver, there should be “Cyberbank CDMA Modem” in the Device Manager as shown below. (Right-click “My Computer” on the notebook and click “properties” to open the Device Manager. And then click the “Device Manager” button.)

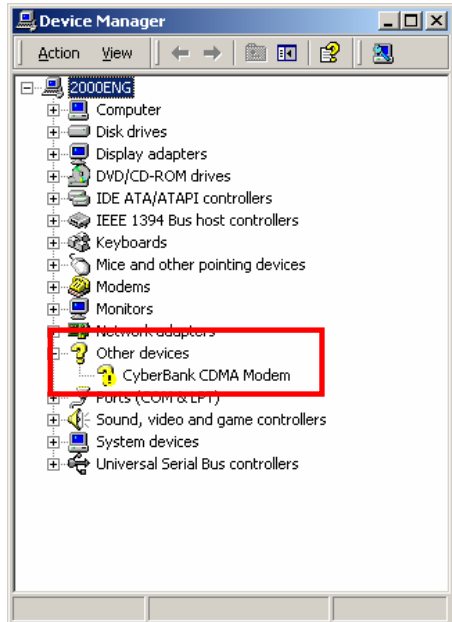


4. Making “connection to 1501” connection

 
Right-click “Network connection places”  on the notebook and click “properties” to open the screen as shown below.

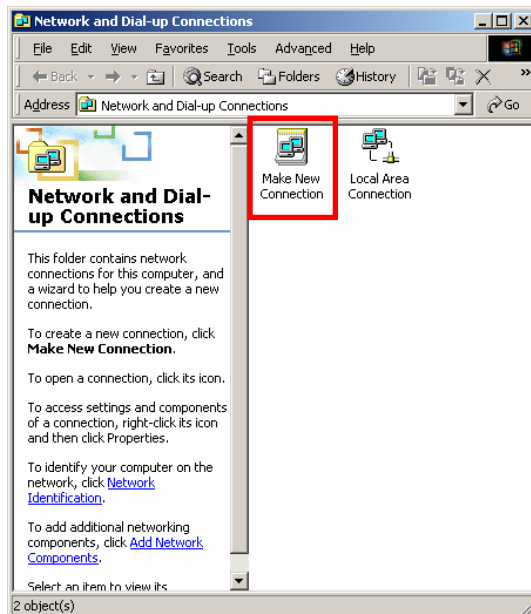

Click “Make New Connection”.

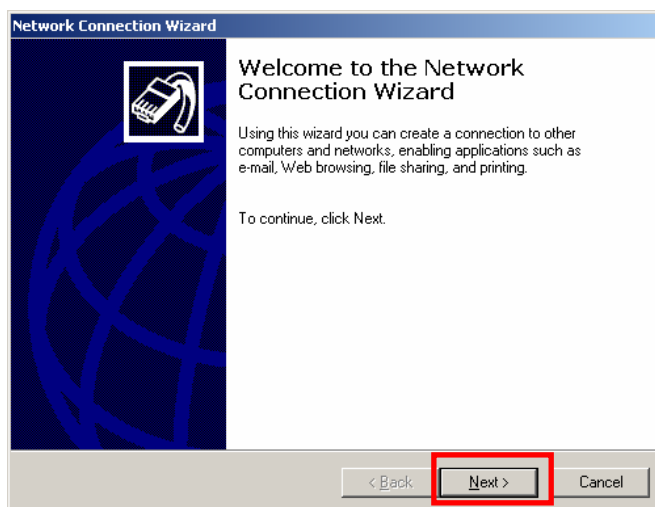 


Click “Next”.

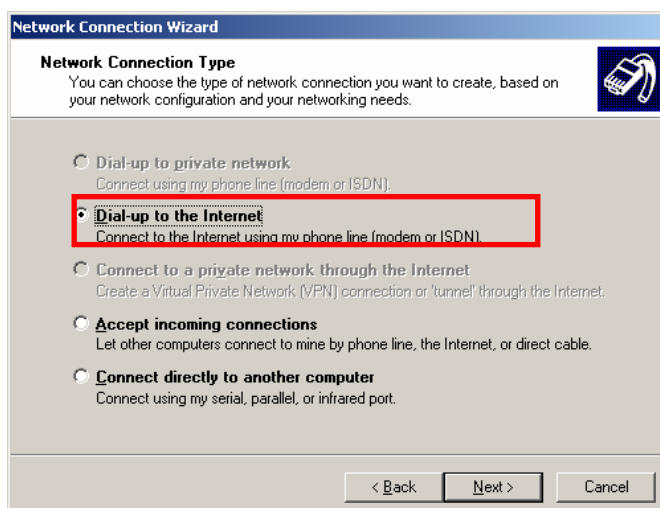 


Select “Dial-up to the Internet” and click “Next”.



 
Select the “I want to set up my Internet connection manually, or I want to connect through a local area network[LAN]” check box, and then click “Next”.

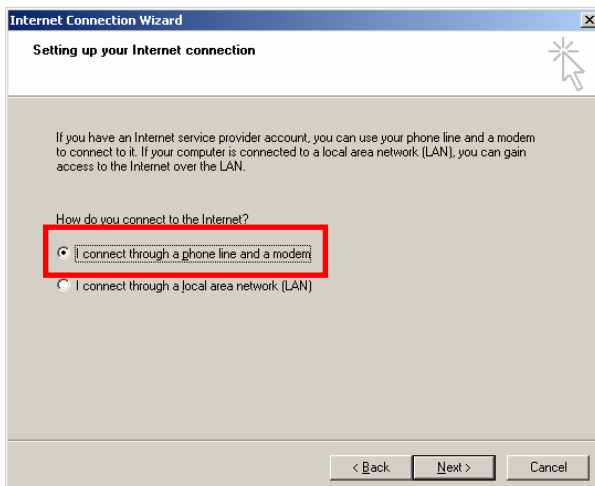

 Select the “I connect through a phone line and a modem” check box, and then click “Next”.

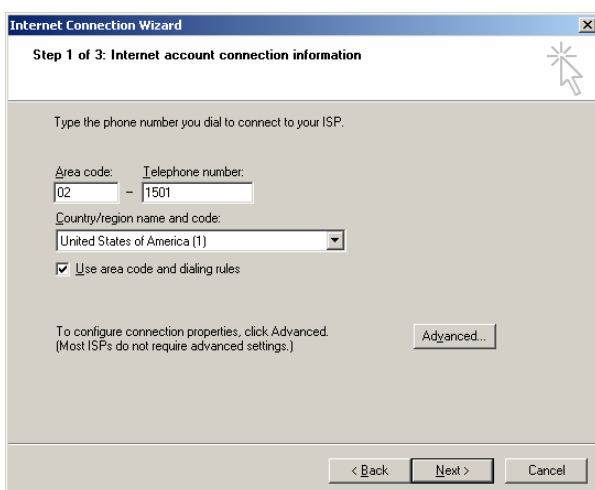


 Enter the corresponding area code, telephone number and select your “Country/region name and code” and click “Next”. For more information on telephone number, see your carrier.

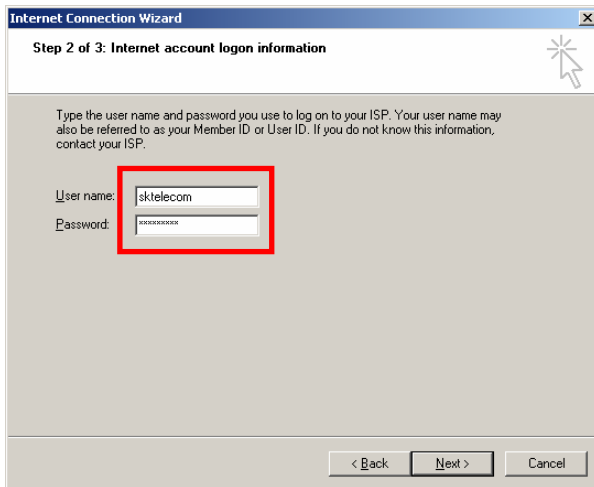


The screenshot shows the 'Internet Connection Wizard' window at Step 2 of 3: 'Internet account login information'. The window has a title bar with 'Internet Connection Wizard' and a close button. Below the title bar is a sub-header 'Step 2 of 3: Internet account login information'. The main area contains instructions: 'Type the user name and password you use to log on to your ISP. Your user name may also be referred to as your Member ID or User ID. If you do not know this information, contact your ISP.' Below this are two input fields: 'User name:' with the text 'sktelecom' and 'Password:' with a masked password 'xxxxxxxx'. A red rectangle highlights both input fields. At the bottom are three buttons: '< Back', 'Next >', and 'Cancel'.

 Enter User name and password and then click “Next”. For more information on User name and password, see your carrier.

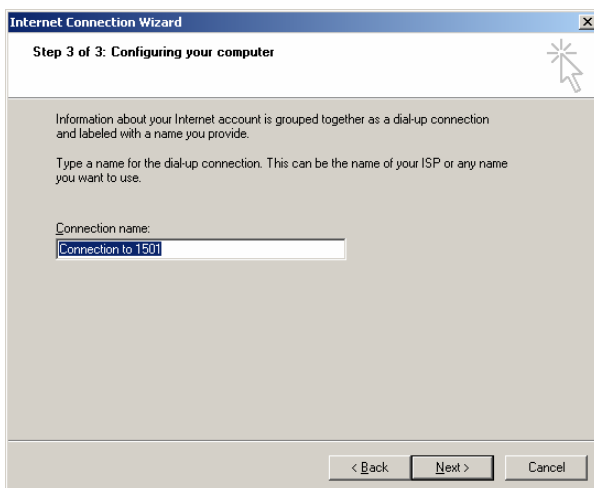

The screenshot shows the 'Internet Connection Wizard' window at Step 3 of 3: 'Configuring your computer'. The window has a title bar with 'Internet Connection Wizard' and a close button. Below the title bar is a sub-header 'Step 3 of 3: Configuring your computer'. The main area contains instructions: 'Information about your Internet account is grouped together as a dial-up connection and labeled with a name you provide. Type a name for the dial-up connection. This can be the name of your ISP or any name you want to use.' Below this is a single input field labeled 'Connection name:' with the text 'Connection to 1501'. At the bottom are three buttons: '< Back', 'Next >', and 'Cancel'.

 Click “Next”.

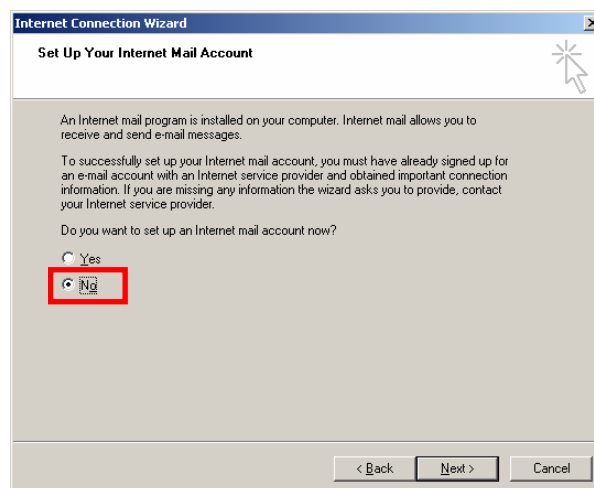

The screenshot shows the 'Internet Connection Wizard' window at the 'Set Up Your Internet Mail Account' step. The window has a title bar with 'Internet Connection Wizard' and a close button. Below the title bar is a sub-header 'Set Up Your Internet Mail Account'. The main area contains instructions: 'An Internet mail program is installed on your computer. Internet mail allows you to receive and send e-mail messages. To successfully set up your Internet mail account, you must have already signed up for an e-mail account with an Internet service provider and obtained important connection information. If you are missing any information the wizard asks you to provide, contact your Internet service provider. Do you want to set up an Internet mail account now?'. Below this are two radio buttons: 'Yes' and 'No'. The 'No' radio button is selected and highlighted with a red rectangle. At the bottom are three buttons: '< Back', 'Next >', and 'Cancel'.

Select “No”, and click “Next”.

 


Click “Finish” to have the next screen appear.



Click “Connect” to connect to the Internet on your notebook using this device.

You will see “Connection to 1501” as shown below.

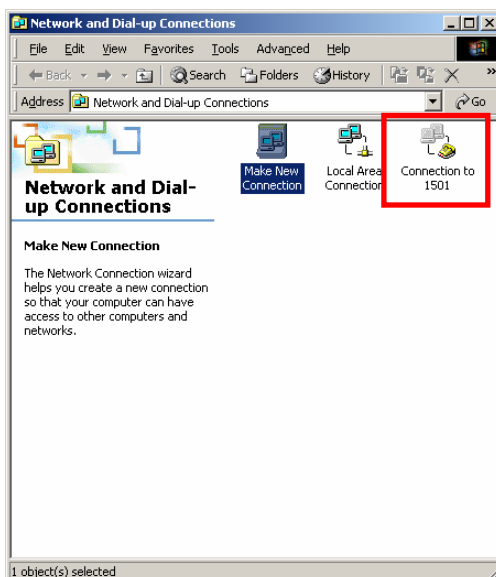

You may click “Connection to 1501” to connect to the Internet next time.