 


VIDEO APPS

EVERYTHING, WITH ONE REMOTE

When you search or browse for movies or individual episodes of series, your results include videos available to stream from your selected video apps — no need to switch to a different input.

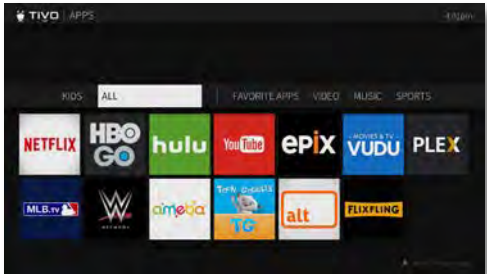 


Don't have time to watch it now? Rather than search for it again later, 'Bookmark' it to add a link to the video directly to My Shows.

THE SMARTBAR

READY WHEN YOU ARE

The SmartBar predicts, located at the bottom of the Home screen, shows to watch based on what your household usually watch at a particular time or day. For example, if you normally watch the previous night's late-night talk show the next morning, you'll see it in the SmartBar when you wake up. If the kids tend to watch shows while dinner's cooking, those shows will be waiting in the SmartBar at that time each day.

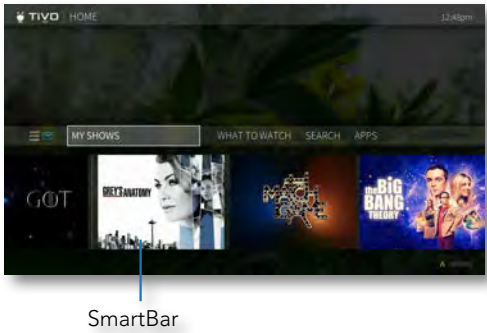

QUICKVIEW

NEVER MISS A THING

Want to take a quick look at what else is on? Simple. While you're watching live TV or recorded show, QuickView lets you see what else is playing now or coming up without missing the action on the show you're watching.

It's easy: press UP to see a condensed guide; DOWN to display the SmartBar; LEFT to bring up your favorite channels; and RIGHT to take a look at what's playing on other tuners.

QUICKMODE™

IT'S NOT FAST-FORWARD, IT'S QUICKMODE!

QuickMode lets you watch a show 30% faster, while also letting you hear what everyone is saying! No chipmunks allowed.

QuickMode is available while you're watching a recorded show, or if you're "behind" live TV (for instance, if you have rewound a show that's airing live). Just press PLAY to bring up the status bar, then SELECT to start QuickMode. Press PLAY and SELECT again to watch at normal speed.



GOT QUESTIONS? Here's how you can always find answers:

- Find detailed instructions on how to use the many features of the TiVo Service at tivo.com/howto.
- Use the Help screens on your TiVo box. Go to 'Settings' > 'Help' > 'Tips & Troubleshooting.'
- Call CableCo Customer Support at 1-XXX-XXX-XXXX or visit us online at CableCo.com/support.

Write your TiVo Service Number (TSN) here so that you have it handy in the future.

TSN # _____

© 2018 TiVo Inc. All rights reserved. Patented. U.S. pat. nos. at www.tivo.com/patents. TiVo, the TiVo logo, OnePass, QuickMode, WishList, the Instant Replay logo, the Jump logo, the Thumbs Up logo and the Thumbs Down logo are registered trademarks of TiVo Inc. or its subsidiaries worldwide. Midco and the Midco logo are the registered trademarks of Midcontinent Communications. iOS is a registered trademark of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Hulu is a trademark of Hulu, LLC. Netflix is a registered trademark of Netflix, Inc. YouTube is a trademark of Google Inc. All other trademarks are the property of their respective owners

 
For safety and compliance information, visit tivo.com/safety-compliance.

WELCOME TO THE TIVO® EXPERIENCE!

The TiVo experience instantly gives you total control of the TV programming you love, and much more! The TiVo digital video recorder (DVR) also connects to the Internet and gives you access to an entire universe of on-demand movies, TV shows, and web videos (and you can stream shows from your TiVo DVR to every room in your home!).

Also, with six tuners and 150 hours of HD recording capacity (enough for 300 episodes of "Modern Family"), you can say good bye to recording conflicts!

Press the TiVo button on your TiVo remote control to get to the Home screen, the starting point for all of TiVo's amazing features.

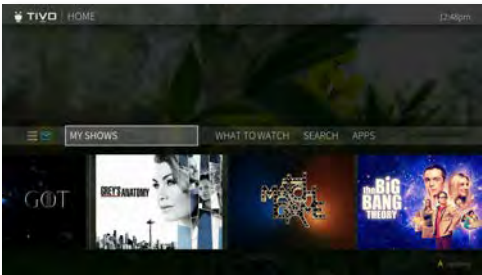

For more help using your TiVo box, visit tivo.com/howto.

ONEPASS™

YOUR TICKET TO LIMITLESS ENTERTAINMENT.

OnePass gathers every episode of a series available anywhere and adds them all right to your My Shows list. Now you can watch a series from beginning to end, or start on any episode or season you want. If it's not available on TV or video on demand, OnePass fills in the gaps with episodes from providers like Netflix, Hulu, HBO GO, and more.

 


To create a OnePass, find a show you want to watch, then choose "Create a OnePass."

MY SHOWS


FIND. WATCH. REPEAT.

All of your recordings and streaming videos appear in the My Shows list. To get to the My Shows list from any menu screen or from live TV, just press the TiVo button twice. (Just press it once if you're already on the Home screen.)

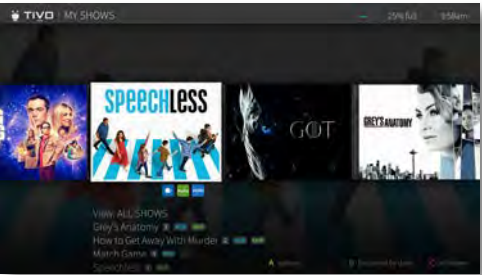

At the top of the My Shows list, you'll see the Continue Watching strip: the fastest route to the shows you've been watching most recently. Below that, filters like 'Movies,' 'TV,' and 'Kids' let you narrow your My Shows choices instantly. Beneath the filters, you'll find all of your OnePass selections, single recordings, WishList searches, and bookmarked shows and movies.

 THE TIVO EXPERIENCE

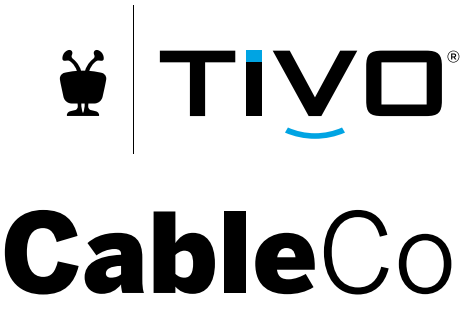

EVEN MORE COOL STUFF YOU CAN DO...

ASK FOR WHAT YOU WANT.

The TiVo voice remote is the only remote that lets you speak in natural language and gives you the ability to narrow your search results as you go. Search for shows, tune to a channel, ask for recommendations...it's all at your fingertips.

To issue a voice command, o issue a voice command, press and hold the  button and speak naturally into the remote. You can say things like “Play the latest episode of Modern Family,” or “Launch Netflix,” or “Find some action movies.” You can even add on to your initial command to get more specific. For example, after the command, “Show me some action movies,” you could add “From the 80s...just the ones with Bruce Willis.”

Note: Contact CableCo for voice remote availability.

SEEK AND YOU SHALL FIND!

Only the TiVo experience offers fully integrated search. No other device instantly scans across all TV programming, available on-demand libraries and the web to find exactly what you want. It's like an entertainment search engine presenting you with a list of great options, so there's almost nothing you can't start watching in seconds!

Search by show title, episode title, show description, or person name (actor, director, etc.). The TiVo service searches upcoming TV shows and movies and video on demand offerings all at the same time. You can even search for a particular channel by its network name or call sign (e.g., ABC or ESPN).



TAKE A SHORTCUT TO GREAT SHOWS.

So many channels, so little time! TiVo's “What to Watch” What to Watch lets you browse shows available to stream, watch live, bookmark, or record.

Top-level categories include ‘On TV Today,’ ‘Sports,’ ‘Movies,’ and more. Each category also includes more specific sub-categories to help you find exactly what you're looking for. For example, from the ‘Movies’ strip, select ‘View All’ to see subcategories like ‘New Releases,’ ‘Action,’ and ‘Comedy.’

TIVO IS ALL ABOUT PLEASANT DISCOVERIES.

Finding the things you love is a snap with a WishList® search. Have a subject, title, actor or director you're curious about? Just set up a WishList search and your TiVo box will search all your programming 24/7/365 and record it for you.

THE TIVO WHOLE HOME SOLUTION.

The TiVo Whole Home Solution delivers TV plus streaming video services like Netflix and YouTube to just about anywhere in your home!

A TiVo Mini lets you stream shows from your TiVo DVR to another TV location.

Or, you can stream shows from your TiVo DVR to your mobile devices, and quickly download shows to your mobile device for viewing when you're away from your home network.



BE IN CONTROL WITH THE ALL-POWERFUL TIVO APP!

Easily stream or transfer shows to your iPad or other mobile device using the TiVo app! (Bonus: The TiVo app also lets you schedule recordings, control live TV, search for shows and more, right from your mobile device!) Download the free TiVo app from the App Store.

 
- Watch live TV or recorded shows on your mobile device*

- Download shows to take with you on the go*

- Schedule recordings from anywhere

- Browse current listings and What to Watch

- Manage OnePass selections and the To Do List

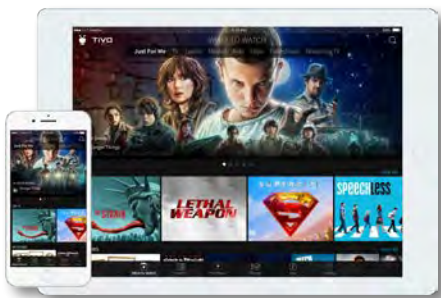


* Requires compatible TiVo hardware and an iOS or Android device running current software. To stream live TV or recorded shows, your mobile device must be connected to the same home network as your DVR. Some shows cannot be downloaded due to the copy protection assigned them by the program provider.

THE TIVO REMOTE CONTROL.

Note: Contact CableCo for voice remote availability.

 - 1 The TIVO BUTTON takes you to the Home screen.
- 2 If programmed, TV PWR turns your TV on or off. Go to ‘Menu’ > ‘Settings’ > ‘Remote, CableCARD, & Devices’ > ‘Remote Control Setup’ to program.
- 3 If programmed, use INPUT to select the input for your TV.
- 4 BACK goes back to the previous screen.
- 5 Use the ARROW BUTTONS to navigate the TiVo menus. In live TV, press UP for the one-line guide, DOWN to see personalized predictions, LEFT for your favorite channels, and RIGHT to see what's on other tuners.
- 6 If programmed, VOLUME and MUTE control the volume on your TV or AV receiver.
- 7 Press and hold the VOICE button to issue voice commands.
- 8 REPLAY repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show. When browsing, press to jump to the first item in a strip.
- 9 Use the THUMBS UP and THUMBS DOWN buttons to rate shows to influence which shows get recorded as TiVo Suggestions.
- 10 The A, B, C buttons set options and sort and filter views, and to turn accessibility features on or off. Press and hold A for the screen reader, B for closed captioning, or C for video description.
- 11 CLEAR dismisses items appearing over live TV and deletes titles from My Shows and the To Do List.

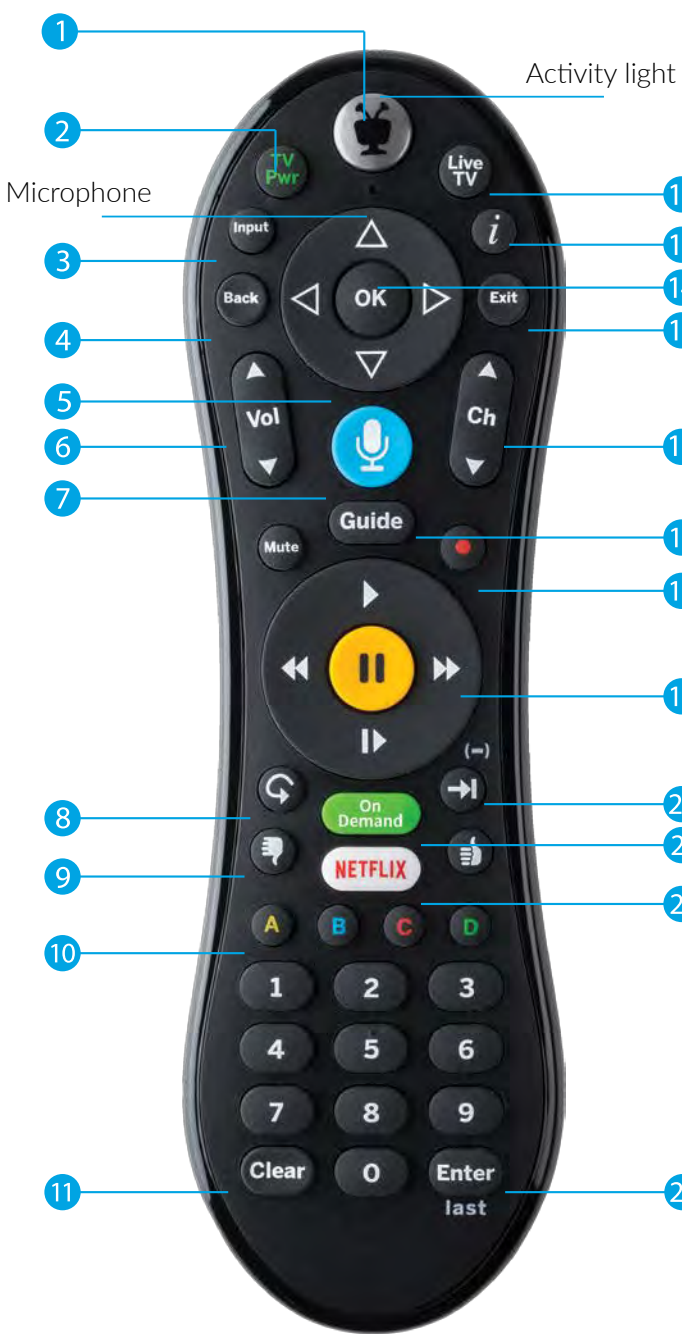

- 12 LIVE TV takes you to live TV and lets you cycle through tuners.
- 13 INFO shows the info card while watching a show; press this button again to make it disappear.
- 14 Press OK to choose menu items.
- 15 Use EXIT to close certain apps.
- 16 Use CHANNEL UP/DOWN to change the channel or move quickly through lists and the guide.
- 17 GUIDE takes you to the on-screen program guide.
- 18 Press RECORD to record the show you're watching, or to set up a recording for a show selected in the guide.
- 19 While watching shows, use these buttons to control playback. Press up to three times for three speeds. In the TiVo menus, use REWIND and FAST-FORWARD to move quickly through strips. Press PLAY and then OK to start/stop QuickMode™.
- 20 ADVANCE moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press to jump to the next tick mark when fast-forwarding or rewinding. Use to enter a dash when tuning to OTA sub-channels.
- 21 Press ON DEMAND to go directly to the video on demand library.
- 22 Press the NETFLIX button to launch the Netflix app.
- 23 ENTER/LAST returns to the last channel viewed.

* To program your TiVo remote, press the TiVo button to go to the Home screen and select the Menu icon . Then choose ‘Settings’ > ‘Remote, CableCARD, & Devices’ > ‘Remote Control Setup.’ Follow the easy on-screen instructions.

SAFETY INSTRUCTIONS AND REGULATORY NOTICES

BEFORE YOU START INSTALLATION OR USE OF THIS PRODUCT, CAREFULLY READ ALL SAFETY INSTRUCTIONS

Applicability

These Safety Instructions and Regulatory Notices apply to:

- Technicolor Set-Top Boxes

Using equipment safely



When using this product, always follow the basic safety precautions to reduce the risk of fire, electric shock and injury to persons, including the following:

- Always install the product as described in the documentation that is included with your product.
- Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

Important safety instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement

of the obsolete outlet.

- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as a power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Used symbols

Following symbols may be found in this and accompanying documentation as well as on the product or accompanying accessories:

Symbol	Indication
	This symbol is intended to alert you that uninsulated voltage within this product may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this product.
	This symbol is intended to alert you of the presence of important operating and maintenance (servicing) instructions in the documentation that is included with your product.
	This symbol indicates for indoor use only (IEC 60417-5957).



PAP



3754227B

TECHNICOLOR

1-5 rue Jeanne d'Arc
92130 Issy-les-Moulineaux
France

www.technicolor.com

Copyright 2017 Technicolor. All rights reserved.
All trademarks referenced are service marks, trademarks, or registered trademarks of their respective companies. Specifications subject to change without notice.
DMS3-SAF-25-381 v3.0.

technicolor



Symbol	Indication
	This symbol indicates Double insulated Class II equipment (IEC 60417-5172). Does not require an earth connection.
	This symbol indicates Alternating Current (AC).
	This symbol indicates Direct Current (DC).
	This symbol indicates Electrical polarity.
	This symbol indicates Fuse.

Directives

Product use

You must install and use this product in strict accordance with the manufacturer's instructions as described in the user documentation that is included with your product.

Before you start installation or use of this product, carefully read the contents of this document for device specific constraints or rules that may apply in the country where you want to use this product. If you have any doubts about the installation, operation or safety of this product, please contact your supplier.

Any change or modification made to this product that is not expressly approved by Technicolor will result in the loss of product warranty and may void the user's authority to operate this equipment. Technicolor disclaims all responsibility in the event of use that does not comply with the present instructions.

Software and firmware use

The firmware in this equipment is protected by copyright law. You may only use the firmware in the equipment in which it is provided. Any reproduction or distribution of this firmware, or any portion of it, without express written consent from Technicolor is prohibited.

Software described in this document is protected by copyright law and furnished to you under a license agreement. You may only use or copy this software in accordance with the terms of your license agreement.

Open Source Software notification

The software of this product may contain certain open source software modules which are subject to Open Source Software license terms (see <https://opensource.org/osd> for definition). Such Open Source Software components and/or versions may change in the future versions of the software product.

A list of the Open Source Software used or provided as embedded into the current software of the product and their corresponding licenses and version number are, to the extent required by applicable terms, available on Technicolor's website at the following address:

www.technicolor.com/en/hi/minisites/open-source or at another address as Technicolor may provide from time to time.

If and where applicable, depending on the terms of the applicable Open Source Software licenses, the source code of the Open Source Software is available for free upon request.

For avoidance of doubt, Open Source Software is only licensed by the original owner of the Open Source Software under the terms set forth in the designated Open Source License.

Environmental information



Batteries (if applicable)

Batteries contain hazardous substances which pollute the environment. Do not dispose of them with other articles.

Take care to dispose them at special collecting points.

Recycle or dispose of batteries in accordance with the battery manufacturer's instructions and local/national disposal and recycling regulations.

Energy efficiency

Energy savings

The user documentation that is included with your product not only provides useful information on all the features of your product, but also on its energy consumption. We strongly encourage you to carefully read this documentation before putting your equipment in service in order to get the best service it can offer you.

Safety instructions



- Read these instructions.
- Keep these instructions.
- Heed all warnings and cautions.
- Follow all instructions.

Climatic conditions

This product:

- Is intended for in-house stationary use; the maximum ambient temperature must not exceed 40 °C (104 °F); the relative humidity must be between 20 and 80 %.
- Must not be mounted in a location exposed to direct or excessive solar and/or heat radiation.
- Must not be exposed to heat trap conditions and must not be subjected to water or condensation.

- Must be installed in a Pollution Degree 2 environment (an environment where there is no pollution or only dry, non-conductive pollution). If applicable, batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like.

Ventilation and positioning

This product is intended to be used indoors in a residential or office environment.

- Remove all packaging material before applying power to the product.
- Place and use the product only in positions as described in the user documentation that is included with your product.
- Do not block or cover any ventilation openings; never stand it on soft furnishings or carpets.
- Never push objects through the openings in this product.
- Leave 7 to 10 cm (3 to 4 inches) around the product to ensure that proper ventilation gets to it.
- Do not install the product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not put anything on it which might spill or drip into it (for example, lighted candles or containers of liquids). Do not expose it to dripping or splashing, rain or moisture. If a liquid enters inside the product, or if the product has been exposed to rain or moisture, unplug it immediately and contact your supplier or customer service.

Cleaning

Unplug this product from the wall socket and disconnect from all other devices before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Water and moisture

Do not use this product near water, for example near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool. Transition of the product from a cold environment to a warm one may cause condensation on some of its internal parts. Allow it to dry by itself before using the product.

Electrical powering

The powering of the product must adhere to the power specifications indicated on the marking labels.

In case this product is powered by a power supply unit:

- **For US and Canada:** This product is intended to be supplied by a UL listed Direct Plug-in Power Unit marked "Class 2" and rated as indicated on the label on your product.
- This power supply unit must be Class II and a Limited Power Source in accordance with the requirements of IEC 60950-1/EN 60950-1, Clause 2.5 and rated as indicated on the label on your product. It must be tested and approved to national, or local standards.



Only use the power supply unit that is supplied with this product, is supplied by your service provider or local product supplier, or a replacement power supply unit provided by your service provider or local product supplier.

The use of other types of power supplies is prohibited.

If you are not sure of the type of power supply needed, consult the user documentation that is included with your product or contact your service provider or local product supplier.

Accessibility

The plug on the power supply cord or power supply unit serves as disconnect device. Be sure that the mains supply socket outlet you use is easily accessible and located as close to the product as possible.

The power connections to the product and the mains supply socket outlet socket must be accessible at all times, so that you always can disconnect the product quickly and safely from the mains supply.

Overloading

Do not overload mains supply socket outlets and extension power cords as this increases the risk of fire or electric shock.

Handling batteries

This product (or its remote control) may contain disposable batteries.



CAUTION

There is danger of explosion if the battery is mishandled or incorrectly replaced. Replace only with the same or equivalent type of battery. Do not disassemble it or attempt to recharge it outside the system.

Do not disassemble, crush, puncture, short the external contacts, dispose of in fire, or expose to fire, water or other liquids.

- Insert batteries correctly. There may be a risk of explosion if the batteries are incorrectly inserted.
- Do not attempt to recharge disposable or non-reusable batteries.
- Please follow instructions provided for charging rechargeable batteries.
- Replace batteries with the same or equivalent type.
- Do not expose batteries to excessive heat (such as sunlight or fire) and to temperatures above 100 °C (212 °F).



CAUTION

Do not ingest coin or button cell batteries!
Chemical Burn Hazard

This product or remote control supplied with this product may contain a coin/button cell battery. If the coin/button battery is swallowed, it can cause severe internal burns in just 2 hours and lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Cable Distribution

For this apparatus, the cable shield/screen shall be grounded (earthed) as close as practical to the point of entry of the cable into the building.

For products sold in the US and Canada, this reminder is provided to call the system installer's attention to ANSI/NFPA 70, the National Electrical Code (NEC), in particular Section 820.93, Grounding of Outer Conductive Shield of a Coaxial Cable (or Canadian Electrical Code Part 1).

Limiting the human body exposure to electromagnetic fields

This product should be installed and operated with a minimum distance of 20 cm (8 inches) between the product and a person's body.

Servicing



To reduce the risk of electric shock or electrocution, do not disassemble this product.

If service or repair work is required, take it to a qualified service dealer.

Damage requiring service

Unplug this product from the mains supply socket outlet and refer servicing to qualified service personnel under the following conditions:

- When the power supply, power cord or its plug are damaged.
- When the attached cords are damaged or frayed.
- If liquid has been spilled into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally.
- If the product has been dropped or damaged in any way.
- There are noticeable signs of overheating.
- If the product exhibits a distinct change in performance.
- If the product is giving off smoke or a burning smell.

Protect the product when moving it

Always disconnect the power source when moving the product or connecting or disconnecting cables.

Interface classifications (upon applicability)

The external interfaces of the product are classified as follows:

- Cable (IN/OUT): TNV circuit, not subjected to overvoltages (TNV-1)
- MoCA, HPNA, RF: TNV circuit, not subjected to overvoltages (TNV-1)
- All other interface ports (e.g. HDMI, analog audio/video, Ethernet, USB,...), including the low voltage power input from the AC mains power supply: SELV (Safety Extra-Low Voltage) circuits.

Regulatory information

North-America - Canada

Notification of Canadian Radio Frequency interference statement

This Class B digital apparatus complies with Canadian ICES-003.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

Canada - Radiation exposure statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm (8 inches) between the radiator and your body.

Canada - Industry Canada (IC)

In case this product is equipped with a wireless transceiver, this device complies with Industry Canada's licence-exempt RSSs. Operation is

subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Restricted frequency bands

In case this product is equipped with a wireless transceiver operating in the 2.4 GHz band, it may only use channels 1 to 11 (2412 to 2462 MHz) on Canada territory.

In case this product is equipped with a wireless transceiver operating in the 5 GHz band, it is for indoor use only.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

North-America - United States of America

Important safety instructions

- The cable distribution system should be grounded (earthed) in accordance with ANSI/NFPA 70, the National Electrical Code (NEC), in particular Section 820.93, Grounding of outer Conductive Shield of a Coaxial Cable.
- Leave 5 to 8 cm (2 to 3 inches) around the product to ensure proper ventilation to it.
- Never push objects through the openings in this product.

Federal Communications Commission (FCC) radio frequency interference statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Responsible Party: Technicolor, 101W, 103rd St., Indianapolis, IN 46290 USA, 317-587-5466.

RF exposure statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instruction as documented in the product documentation.

When the product is equipped with a wireless interface, then it becomes a mobile or fixed mounted modular transmitter and must have a separation distance of at least 20 cm (8 inches) between the antenna and the body of the user or nearby persons. In practice, this means that the user or nearby persons must have a distance of at least 20 cm (8 inches) from the product and must not lean on the product in case it is wall-mounted. With a separation distance of 20 cm (8 inches) or more, the Maximum Permissible Exposure limits are well above the potential this wireless interface is capable to produce.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Restricted frequency bands

In case this product is equipped with a wireless transceiver operating in the 2.4 GHz band, it can only use channels 1 to 11 (2412 to 2462 MHz) on U.S.A. territory.

In case this product is equipped with a wireless transceiver operating in the 5 GHz band, it meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

CONSIGNES DE SÉCURITÉ ET INFORMATIONS RÉGLEMENTAIRES

AVANT D'INSTALLER OU D'UTILISER CE PRODUIT, LISEZ ATTENTIVEMENT TOUTES LES CONSIGNES DE SÉCURITÉ.

Applicabilité

Ces Consignes de sécurité et informations réglementaires s'appliquent aux produits suivants :

- Décodeurs Technicolor

Pour utiliser votre équipement en toute sécurité



Lorsque vous utilisez ce produit, respectez toujours les précautions de sécurité de base suivantes afin de réduire le risque d'incendie, de décharge électrique et de blessure corporelle :

- Installez toujours le produit comme décrit dans la documentation jointe à votre produit.
- Évitez d'utiliser ce produit pendant un orage. Un faible risque d'électrocution dû à la foudre existe.

Consignes de sécurité importantes

- 1 Lisez ces consignes.
- 2 Conservez ces consignes.
- 3 Tenez compte de tous les avertissements.
- 4 Respectez toutes les consignes.
- 5 N'utilisez pas cet appareil à proximité d'eau.
- 6 Nettoyez-le uniquement avec un chiffon sec.
- 7 N'obstruez pas les orifices de ventilation.
Installez l'appareil conformément aux instructions du fabricant.
- 8 Ne l'installez pas à proximité de sources de chaleur, telles que des radiateurs, des bouches d'air chaud, des poêles ou d'autres appareils (y compris des amplificateurs) qui produisent de la chaleur.
- 9 N'annulez pas le dispositif de sécurité de la fiche polarisée ou à la terre. Une fiche polarisée présente deux broches, dont l'une plus large que l'autre. Une fiche de terre

possède deux broches normales et une troisième de mise à la terre. La broche plus large et la troisième broche sont là pour assurer pour votre sécurité. Si la fiche fournie n'est pas adaptée à votre prise, adressez-vous à un électricien pour faire remplacer la prise obsolète.

- 10 Protégez le cordon d'alimentation pour éviter qu'il ne soit piétiné ou pincé, en particulier au niveau des fiches, des prises de courant et de son point de sortie de l'appareil.
- 11 Utilisez uniquement les fixations/accessoires spécifiés par le fabricant.
- 12 Utilisez l'appareil uniquement avec le chariot, le support, le trépied ou la table spécifié par le fabricant ou vendu avec. Si vous utilisez un chariot, soyez prudent lors du déplacement de l'ensemble chariot/appareil afin d'éviter toute blessure due à leur renversement.
- 13 Débranchez l'appareil en cas d'orage ou si vous ne l'utilisez pas pendant de longues périodes.
- 14 Confiez toutes les réparations à du personnel qualifié. Des réparations sont nécessaires lorsque l'appareil a été endommagé d'une manière quelconque, par exemple si le cordon d'alimentation ou la fiche est abîmé, si des liquides ont été renversés ou que des objets sont tombés dans l'appareil, ou si celui-ci a été exposé à la pluie ou l'humidité, ne fonctionne pas normalement ou est tombé.

Symboles utilisés

Vous pouvez voir les symboles suivants dans ce document, dans la documentation qui



PAP



3754227B

TECHNICOLOR

1-5 rue Jeanne d'Arc
92130 Issy-les-Moulineaux
France

www.technicolor.com

Copyright 2017 Technicolor. Tous droits réservés.

Tous les noms de marque mentionnés sont des marques de service, des marques commerciales ou des marques déposées et appartiennent à leurs propriétaires respectifs. Les spécifications peuvent faire l'objet de modifications sans préavis.

DMS3-SAF-25-381 v3.0.

technicolor



l'accompagne, sur le produit ou sur les accessoires fournis avec :

Symbole	Signification
	Ce symbole a pour but de vous prévenir que la tension non isolée à l'intérieur de ce produit peut être suffisante pour provoquer une décharge électrique. Tout contact avec un élément situé à l'intérieur de ce produit peut dès lors se révéler dangereux.
	Ce symbole vise à vous alerter de la présence d'instructions importantes concernant le fonctionnement et l'entretien (la réparation) dans la documentation utilisateur jointe au produit.
	Ce symbole indique que l'appareil est réservé à un usage à l'intérieur uniquement (IEC 60417-5957).
	Ce symbole indique qu'il s'agit d'un équipement de classe II à double isolation (IEC 60417-5172). Il ne requiert pas de raccordement à la terre.
	Ce symbole indique la présence de courant alternatif (CA).
	Ce symbole indique la présence de courant continu (CC).
	Ce symbole identifie la polarité électrique.
	Ce symbole indique la présence d'un fusible.

Directives

Utilisation du produit

Vous devez installer et utiliser ce produit en respectant strictement les instructions du fabricant, telles que décrites dans la documentation utilisateur jointe au produit. Avant d'installer ou d'utiliser ce produit, lisez attentivement ce document afin de prendre connaissance des contraintes ou règles spécifiques d'application dans le pays dans lequel vous voulez utiliser ce produit.

En cas de doute sur l'installation, l'utilisation ou la sécurité de ce produit, veuillez contacter votre fournisseur.

Toute modification apportée à ce produit qui n'est pas expressément approuvée par Technicolor entraînera la perte de la garantie du produit et peut retirer à l'utilisateur le droit d'utiliser l'équipement. Technicolor rejette toute

responsabilité en cas d'utilisation de l'appareil non conforme aux présentes instructions.

Utilisation du logiciel et du microprogramme

Le microprogramme de cet appareil est protégé par la législation en matière de copyright. Vous pouvez uniquement utiliser le microprogramme dans l'appareil dans lequel il est fourni. Toute reproduction ou distribution de ce microprogramme sans le consentement écrit exprès de Technicolor est interdite.

Le logiciel décrit dans ce document est protégé par la législation en matière de copyright et vous est fourni dans le cadre d'un contrat de licence. Vous pouvez uniquement utiliser ou copier ce logiciel conformément aux conditions de votre contrat de licence.

Avis concernant les Logiciels Open Source

Le logiciel de ce produit peut contenir certains modules logiciels open source soumis aux conditions de la licence applicable aux Logiciels Open Source (voir la page <https://opensource.org/osd> pour une définition). Ces composants et/ou versions des Logiciels Open Source peuvent changer dans les versions futures du produit logiciel.

Une liste des Logiciels Open Source utilisés ou intégrés dans le logiciel actuel du produit, ainsi que les licences et numéros de version correspondants sont disponibles, dans la mesure requise par les conditions d'application, sur le site web de Technicolor à l'adresse suivante :

www.technicolor.com/en/hi/minisites/open-software ou à une autre adresse que Technicolor pourrait fournir à l'occasion.

Le cas échéant, en fonction des conditions des licences applicables en matière de Logiciels Open Source, le code source du Logiciel Open Source est disponible gratuitement sur demande. Afin d'éviter tout doute, le Logiciel Open Source est uniquement fourni sous licence par son propriétaire original aux conditions prévues dans la licence du Logiciel Open Source concernée.

Informations relatives à l'environnement



Piles (le cas échéant)

Les piles contiennent des substances dangereuses, qui polluent l'environnement. Ne les mettez pas au rebut avec d'autres articles. Assurez-vous de les déposer dans des points de collecte spéciaux.

Recyclez ou éliminez les piles conformément aux instructions du

fabricant des piles et aux réglementations locales/nationales en matière d'élimination et de recyclage.

Efficacité énergétique

Économies d'énergie

La documentation utilisateur fournie avec votre produit contient non seulement des informations utiles sur ses diverses fonctionnalités, mais également sur sa consommation d'énergie. Nous vous recommandons vivement de lire attentivement cette documentation avant de mettre l'appareil en service pour tirer le meilleur parti de ses fonctionnalités.

Consignes de sécurité



- *Lisez ces consignes.*
- *Conservez ces consignes.*
- *Tenez compte de l'ensemble des avertissements et mises en garde.*
- *Respectez toutes les consignes.*

Conditions climatiques

Ce produit :

- Est destiné à un usage fixe à l'intérieur ; la température ambiante ne doit dépasser 40 °C (104 °F) ; l'humidité relative doit être comprise entre 20 et 80 %.
- Ne doit pas être monté dans un endroit exposé à des rayons solaires et/ou thermiques directs ou excessifs.
- Ne doit pas être exposé à des conditions d'effets de serre et ne doit pas se trouver en présence d'eau ou de condensation.
- Doit être installé dans un environnement présentant une pollution de degré 2 (environnement exempt de pollution ou avec une pollution sèche, non conductrice).

Le cas échéant, les piles (bloc pile ou piles installées) ne doivent pas être exposées à une chaleur excessive, telle que la lumière du soleil, le feu et d'autres conditions similaires.

Ventilation et positionnement

Ce produit est destiné à être utilisé à l'intérieur, dans un environnement résidentiel ou de bureau.

- Retirez tout le matériau d'emballage avant de brancher le produit.
- Installez et utilisez le produit uniquement aux endroits décrits dans la documentation jointe à votre produit.
- N'obstruez pas et ne couvrez pas les orifices de ventilation ; ne posez jamais le produit sur des tapis ou moquettes.
- N'insérez jamais des objets à travers les ouvertures de ce produit.

- Laissez entre 7 et 10 cm (3 à 4 pouces) autour du produit pour garantir une ventilation correcte.
- N'installez pas le produit à proximité de sources de chaleur, telles que des radiateurs, des bouches d'air chaud, des poêles ou d'autres appareils (y compris des amplificateurs) qui produisent de la chaleur.
- Ne placez rien qui soit susceptible de se déverser ou de couler à l'intérieur (bougies allumées ou récipients contenant des liquides, par exemple) sur le produit. Ne l'exposez pas à des éclaboussures, des projections, la pluie ou l'humidité. Si un liquide pénètre à l'intérieur du produit, ou si celui-ci a été exposé à la pluie ou à l'humidité, débranchez-le immédiatement et contactez votre fournisseur ou le service clients.

Nettoyage

Débranchez le produit de la prise murale et de tout autre appareil avant de le nettoyer. N'utilisez pas de détergents liquides ou en aérosol. Utilisez un chiffon humide pour le nettoyage.

Eau et humidité

N'utilisez pas ce produit à proximité d'une source d'eau, par exemple près d'une baignoire, d'un lavabo, d'un évier, d'une cuve de lessivage ou d'une piscine, ni dans un sous-sol humide. Le transfert du produit d'un environnement froid vers un environnement chaud peut entraîner l'apparition de condensation sur certaines pièces internes. Laissez le produit sécher avant de l'utiliser.

Alimentation électrique

L'alimentation du produit doit respecter les spécifications en matière d'alimentation figurant sur les étiquettes.

Dans le cas où ce produit est alimenté par un bloc d'alimentation :

- **Pour les États-Unis et le Canada** : ce produit doit être alimenté par un bloc d'alimentation plug-in direct homologué UL de classe 2 ayant la puissance nominale indiquée sur l'étiquette du produit.
- Ce bloc d'alimentation doit être de classe II, être limité conformément aux exigences de la norme IEC 60950-1/EN 60950-1, Clause 2.5 et

avoir la puissance nominale indiquée sur l'étiquette du produit. Il doit être testé et répondre aux normes nationales ou locales.



Utilisez uniquement le bloc d'alimentation fourni avec ce produit ou délivré par votre fournisseur de services ou revendeur local, ou un bloc d'alimentation de rechange fourni par votre fournisseur de services ou revendeur local.

L'utilisation d'autres types de sources d'alimentation est interdite.

Si vous n'êtes pas certain du type d'alimentation nécessaire, consultez la documentation utilisateur jointe au produit ou contactez votre fournisseur de services ou revendeur local.

Accessibilité

La fiche du cordon d'alimentation ou le bloc d'alimentation permet de déconnecter l'appareil. Assurez-vous que la prise secteur que vous utilisez est facilement accessible et située le plus près possible du produit.

Les raccordements électriques au produit et à la prise secteur doivent être accessibles à tout moment, de façon à ce que vous puissiez déconnecter le produit rapidement et en toute sécurité de l'alimentation secteur.

Surcharge

Ne surchargez pas les prises d'alimentation secteur ni les rallonges, car cela augmente le risque d'incendie et de décharge électrique.

Manipulation des piles

Ce produit (ou sa télécommande) peut contenir des piles jetables.



ATTENTION

Il existe un danger d'explosion si les piles sont manipulées ou remplacées incorrectement. Remplacez-les uniquement par des piles du même type ou équivalent. Ne les démontez pas et n'essayez pas de les recharger en dehors du système.

Vous ne devez en aucun cas les démonter, les écraser, les percer, court-circuiter les contacts externes, les jeter au feu ou les exposer au feu, à de l'eau ou à d'autres liquides.

- Insérez les piles correctement. L'insertion incorrecte des piles peut provoquer un risque d'explosion.
- Ne tentez pas de recharger des piles jetables ou à usage unique.
- Veuillez suivre les instructions fournies pour le chargement de piles rechargeables.

- Remplacez les piles par des piles du même type ou équivalent.
- N'exposez pas les piles à une chaleur excessive (lumière du soleil ou feu, par exemple) et à des températures supérieures à 100 °C (212 °F).



ATTENTION

N'avez pas les piles boutons !

Risque de brûlures chimiques

Le produit ou la télécommande fournie avec peut contenir une pile bouton. En cas d'ingestion, celle-ci peut provoquer de graves brûlures internes en seulement 2 heures et conduire à la mort.

Conservez les piles neuves et usagées hors de portée des enfants. Si le compartiment des piles ne se ferme pas correctement, arrêtez d'utiliser le produit et tenez-le hors de portée des enfants. Si vous pensez que des piles peuvent avoir été avalées ou placées à l'intérieur du corps, consultez immédiatement un médecin.

Distribution par câble

Pour cet appareil, le blindage du câble doit être mis à la terre le plus près possible du point d'entrée du câble dans le bâtiment.

Pour les produits vendus aux États-Unis et au Canada, ce rappel vise à attirer l'attention de l'installateur du système sur la norme ANSI/NFPA 70, ou le Code électrique national (NEC, National Electrical Code), en particulier sa Section 820.93, Grounding of Outer Conductive Shield of a Coaxial Cable (ou le Code électrique canadien, Partie 1).

Pour limiter l'exposition aux champs électromagnétiques

Ce produit doit être installé et utilisé à une distance minimale de 20 cm (8 pouces) du corps d'une personne.

Entretien/réparation



Pour réduire le risque de décharge électrique, ne démontez pas le produit.

Si l'appareil nécessite une réparation ou un entretien, confiez-le à un réparateur qualifié.

Problème nécessitant une réparation

Débranchez le produit de la prise d'alimentation secteur et confiez-le à un réparateur qualifié dans les cas suivants :

- L'alimentation, le cordon d'alimentation ou la fiche est endommagé.
- Les cordons d'alimentation sont endommagés ou effilochés.
- Du liquide s'est infiltré à l'intérieur du produit.
- Le produit a été exposé à la pluie ou à de l'eau.

- Le produit ne fonctionne pas normalement.
- Le produit est tombé ou a été abîmé d'une quelconque manière.
- Le produit présente des signes perceptibles de surchauffe.
- Les performances du produit présentent des variations importantes.
- Une odeur de brûlé ou de la fumée se dégage du produit.

Protection du produit en cas de déplacement

Déconnectez toujours la source d'alimentation lorsque vous déplacez le produit ou branchez/débranchez des câbles.

Classification des interfaces (le cas échéant)

Les interfaces externes du produit sont classées comme suit :

- Cable (Câble) (IN/OUT) : circuit TNV, non sujet à des surtensions (TNV-1)
- MoCA, HPNA, RF : circuit TNV, non sujet à des surtensions (TNV-1)
- Tous les autres ports d'interface (par exemple, HDMI, audio/vidéo analogique, Ethernet, USB, etc.), y compris l'entrée d'alimentation basse tension depuis l'alimentation secteur : circuits SELV (Safety Extra-Low Voltage)

Informations réglementaires

Amérique du Nord - Canada

Déclaration Canadienne d'interférence de Fréquence Radio

Cet appareil numérique de Classe B est conforme à la norme canadienne NMB-003.

Le présent produit est conforme aux spécifications techniques applicables d'Innovation, Sciences et Développement Économique Canada.

Canada - Avis radiation énoncées

Cet équipement est conforme avec les limites d'exposition aux radiations IC énoncées pour un environnement incontrôlé. Il doit être installé et opéré avec une distance minimale de 20 cm (8 pouces) entre la source de radiation et votre corps.

Canada - Industrie Canada (IC)

Si le produit est équipé d'un émetteur-récepteur sans fil, il est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage; (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Bandes de fréquences limitées

Si le produit est équipé d'un émetteur-récepteur sans fil fonctionnant dans la bande de 2,4 GHz, il utilise uniquement les canaux 1 à 11 (2 412 à 2 462 MHz) sur le territoire canadien.

Si le produit est équipé d'un émetteur-récepteur sans fil fonctionnant dans la bande de 5 GHz, il peut uniquement être utilisé dans un environnement intérieur.

La disponibilité de certains canaux spécifiques et/ou bandes de fréquences de fonctionnement sont en fonction du pays et sont firmware programmé en usine pour correspondre à la destination prévue. Le réglage du firmware n'est pas accessible par l'utilisateur.