

CYGNETT

GoStick

BLUETOOTH SELFIE-STICK

FOR SMARTPHONES AND GoPro® MOUNT
COMPATIBLE CAMERAS



Phone mount

Place your smart phone or camera in the clip by lifting the tab at the top and gently placing it on your phone until it is tight and secure. Pull the spring mounted phone holder and release with phone in place to hold your phone tightly.

Twist and lock extendable pole.

Twist left and pull apart to extend, and then twist right to lock in place. Reverse to close and lock.

GoPro Mount

Mount your GoPro in the mount provided, but replace the tightening screw at the base of the phone mount with the extra-long adjusting screw.

Pairing your shutter button with your Apple or Android device is easy.

1. Switch button on the side of the remote to 'ON', and a light will flash blue. Then go to your smartphone's Bluetooth settings, ensure Bluetooth is turned on, and select for 'AB Shutter 3' when it appears.
 - a. iOS/Apple: Settings > Bluetooth > Turn Bluetooth on. It will automatically start searching for devices.
 - b. Android: Menu > Settings > Wireless & Network > Bluetooth settings > turn Bluetooth on by checking box. Then select 'Search for Devices'.
2. You're now ready to use the Selfie Stick. Use the corresponding shutter button on the remote to activate the shutter button.

Compatible with Android 4.2.2 OS or newer and iOS 6.0 or newer. In the event of an incompatible version of Android OS, Cygnett recommends the Camera 360 Ultimate* app, available on Android and iOS platforms.

Mini tripod

Extend 3 legs and place on flat ground for hands-free selfies or video.

CAUTION: Do not use on uneven ground. Do not use in windy conditions. Any damage done to the digital device or accessory as a result of the tripod falling over will not be covered by Cygnett.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law (or local consumer law). You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Cygnett warrants this product against defects in workmanship and material for a period of two (2) years from its original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Please read the following information carefully and retain this warranty card for any warranty claim.

Terms and conditions:

- This product is for household use only. If the product is used in a commercial environment, the warranty period will be automatically reduced to three (3) months.
- Cygnett warrants that, with normal use or service, the product will be free from faulty parts, manufacture or workmanship.
- The warranty does not apply where damage is caused by other factors, e.g. mishandling, abuse, accident or failure to follow operating instructions.

How to make a warranty claim:

As a wholesaler, Cygnett does not process replacements or refunds directly to the customer. Please contact the retailer/store/reseller you bought the product from for a replacement or refund if the product is faulty.

Should the retailer no longer exist or be unreachable, or should the product be out of stock, please contact us at:

Cygnett Pty Ltd

Email: info@cygnett.com
Phone: (03) 9912 9121
Address: Level 1, 664 Lorimer Street
Port Melbourne, Victoria, Australia 3207

Please note: Subject to Australian Consumer Law, the customer is responsible for all costs relating to all packaging, freight and insurance for transit of the product to and from Cygnett.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



*TheCamera 360 Ultimate app is the property of PinGuo Inc. and/or its affiliates.



FOLD

FOLD

FOLD

FOLD