

---

## **User Guide**

---

## Contents

<b>1 Basic Knowledge</b> .....	<b>3</b>
1.1 Brief Introduction.....	3
1.2 General Considerations .....	3
1.3 Battery Precautions .....	4
1.4 Charge Mobile Phone.....	5
1.5 Charger Precautions .....	5
1.6 Cleaning and Maintenance.....	6
<b>2 Introduction</b> .....	<b>6</b>
2.1 Icons.....	6
2.2 Phone Layout .....	7
2.3 Boot Using .....	8
2.3.1 Insert and Remove SIM Card.....	8
2.3.2 Power On/Off.....	9
2.3.3 Unlock SIM Card.....	9
2.3.4 Unlock Screen.....	10
<b>3 Basic Functions</b> .....	<b>11</b>
3.1 Dial.....	11
3.2 Contacts.....	13
3.3 Messages .....	15
3.4 File Management.....	16
3.5 Camera .....	17
3.6 Images .....	18
3.7 Video Player.....	19
3.8 Music Player .....	20
3.9 FM Radio .....	21
3.10 Recorder.....	22
3.11 Clock .....	23
3.12 Calendar .....	23
3.13 Calculator .....	24
3.14 Notepad .....	25
3.15 Flashlight.....	26
3.16 E-mail.....	26
3.17 Browser .....	27
3.18 Searching.....	29
3.19 Download.....	31
3.20 ToDo.....	31
3.21 Compass .....	32
3.22 Oinom .....	33

1.2 Main Features.....	33
<b>2 Install Client.....</b>	<b>35</b>
2.1 Install and Use Conditions.....	35
2.2 Download and Install Android Client.....	35
3.23 Oinom key.....	35
<b>4 Settings.....</b>	<b>37</b>
4.1 SIM Card Management.....	37
4.2 WIFI.....	37
4.3 Bluetooth.....	38
4.4 Mobile Network.....	39
4.5 Flight Mode.....	39
4.6 Scenes Mode.....	40
4.7 Display.....	40
4.8 Storage.....	40
4.9 Battery.....	41
You can set the phone percentage of battery display and see remaining battery power and time.....	41
4.10 Application.....	41
4.11 Security.....	42
4.12 SOS Setting.....	43
4.13 Language and Input Method.....	43
4.14 Backup and Reset.....	43
4.15 Date and Time.....	44
4.16 Schedule Power On/Off.....	44
4.17 Auxiliary Function.....	44
4.18 About Phone.....	45
<b>5 Common Problems &amp; Solutions.....</b>	<b>45</b>

# **1 Basic Knowledge**

---

## **1.1 Brief Introduction**

Thank you for purchasing this digital mobile phone. This instruction manual special used to guide you to understand the functions and features.

In addition to common call functions and records, this phone also provides you a variety of useful features and services. It will bring you more convenience and pleasure for your work and life.

Some of the services and functions described in this manual depend on the network and reservation service. Therefore, the menu items in the phone may not be available, various menus and functions of the phone may have different shortcut number.

Our company reserves the right to modify the contents of this manual without prior notice.

## **1.2 General Considerations**

- Your phone can only use our designated batteries and chargers. Using other products may cause battery leakage, overheating, explosion and fire.
- Do not put the battery, mobile phone and charger in a microwave oven or high-pressure equipment, or may cause circuit damage and fire and other accidents.
- Keep the phone away from children's reach to avoid they lest it as a toy,

causing personal injury.

- On airplanes, in hospitals and other places prohibit the use of mobile phones, please turn off the phone.

- Do not use the mobile phone near the weak signal or high-precision electronic equipments. Radio wave interference may cause incorrect operation of the electronic equipment and other problems.

- Do not disassemble or modify the phone, otherwise it will cause damage, leakage and circuit faults to the phone.

- Avoid mobile phone too close to magnetic objects such as magnetic cards, mobile phone radiation wave may clear floppy disk, saving card, credit card information stored on.

### 1.3 Battery Precautions

- The use of mobile phone battery life is limited. In frequent charging battery time gradually shortened. The multiple charging is invalid, the battery life has been, you should replace the specified type of new battery.

- Do not throw old batteries in the general household waste. There is a clear local regulations for battery disposal, please follow the instructions required to do.

- Do not throw the battery into fire, otherwise it will cause the battery to ignite and explode. Installing batteries, do not apply pressure to force, otherwise it will cause the battery to leak, overheat, explosion and fire.

- If the battery fluid into the eye may cause blindness, then do not rub your eyes, rinse with fresh water, and then immediately to the hospital.

- Do not disassemble or modify the battery, otherwise it will lead to battery leakage, overheating, explosion and fire.


- Do not use or leave the battery beside the fire or heater hot place, otherwise it will lead to battery leakage, overheating, explosion and fire.

- Do not wet the battery, otherwise it will cause the battery to overheat, smoke and corrosion. Do not use or leave the battery in direct sunlight or near hot car,

otherwise it will result in fluid leakage and overheating may degrade performance and shorten the service life.

- Do not more than 24 hour continue charge.

## 1.4 Charge Mobile Phone

The joint is connected to the mobile phone charger, mobile phone battery indicator  on the screen will flash cycle; charging if it is turned off, charging indicator will appear on the screen of the screen, the battery charging. If the phone is still excessive use when battery is low, probably over a period of time after charging indicates a symbol will appear on the screen charge. When the on-screen battery indicator shows full, and no longer flashing, indicating that charging has been completed. After charging is complete, disconnect the AC power outlet which connects the phone and charger.

## 1.5 Charger Precautions

- Please use 220V AC. Using other voltage can cause leakage, fire or damage to the phone and charger. Prohibit short-circuit charger, otherwise it will cause electric shock, smoke and damage to the charger. Please do not use the charger in the case of the power cord damage, otherwise it will lead to a fire and electric shock.

- Please clean the dust on the power socket.

- Please do not put water container near the charger, to avoid overheating, leakage and malfunction caused by water spills. If the charger come into contact with water or other liquids, immediately unplug the power from the outlet down to prevent overheating, fire, electric shock and malfunction of the charger.

- Do not disassemble or modify the charger, otherwise it will lead to personal injury, electric shock, fire and damage to the charger.

- Please do not use the charger in the bathroom where high humidity, otherwise it will cause electric shock, fire and damage of the charger.









## 1.6 Cleaning and Maintenance







Do not use alcohol, thinner or benzene solution to wipe the phone. Dirty socket can cause poor connect, power down, it leads to cannot recharge, please regularly clean.

# 2 Introduction

## 2.1 Icons

In the standby interface, may appear small ICONS, details are as follows:

Icons	Instructions
	Time Display
	Alarm clock has been set and activated
	Show battery level
	Vertical bars indicate the signal strength of the GSM network signal
	Connect to the wireless network
	Activate Bluetooth
	Indicates music playing
	Receives new message

	Missed Call
	Meeting Mode
	Flight Mode
	Mute Mode
	Activate USB
	Access Restricted

## 2.2 Phone Layout



Keys	Instructions
1. OK Key	OK Key
2. Navigation key	Up and Down navigation key



3. Left Soft Key	Left key
4. Delete Key	Press to delete
5. Dial Key	Press to dial
6. Right Soft Key	Right Key
7. Home Key	Press to return to main menu
8. Power Key	Press to Power on/off
9. * Key	* Key
10. # Key	# Key
11. USB/Charge	USB/Charge Jack
12. Headphone	Headphone Jack
13. Shortcuts	Press to enter the shortcut menu
14. Volume Key +	Press to increase volume
15. Volume Key -	Press to decrease volume
16. SOS Key	Press to call emergency contact
17. Camera	Camera
18. Flash	Flash, open the flashlight program, it can be used as flashlight.

## 2.3 Boot Using

 
### 2.3.1 Insert and Remove SIM Card

Turn off the phone, remove battery and other external power supply. According to the

mobile phone label inserted SIM card. When you need to take out the SIM card, please turn it off, take out the battery, then remove SIM card from SIM card holder.

### 2.3.2 Power On/Off

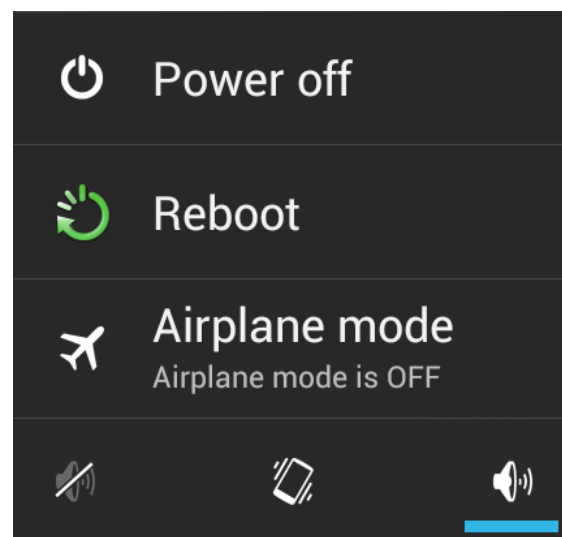

- To turn on the phone, please long press the power key on the phone up side.
- Turn off the phone, long press the power key. The following message box pops up, select "Off".
- Press the power key to switch phone in addition, you can also choose to reboot the phone, select the flight mode, mute mode, vibration mode and standard mode.



### 2.3.3 Unlock SIM Card

In order to prevent illegal use, SIM card using PIN1 (Personal Identification Number) code encrypt protection. Use the function, every time you must enter PIN1 code when the phone is switched on, so that you can unlock the SIM card, and then send or receive the cal



Press the ON / OFF key to boot the phone; enter PIN1 code, press  to clear the error input, press  to confirm.

If you enter the wrong PIN1 code in several times, SIM card will be locked, then please contact your SIM card network operator.

### 2.3.4 Unlock Screen




In order to prevent unauthorized use, you can set your phone screen lock. Elected to use this function, every time you light up the screen, you must draw your unlock pattern, so that you can unlock the phone, and then send or receive calls.

 
 
Users can clear the unlock pattern (see "Security Settings").




## 3 Basic Functions

 
---

### 3.1 Dial

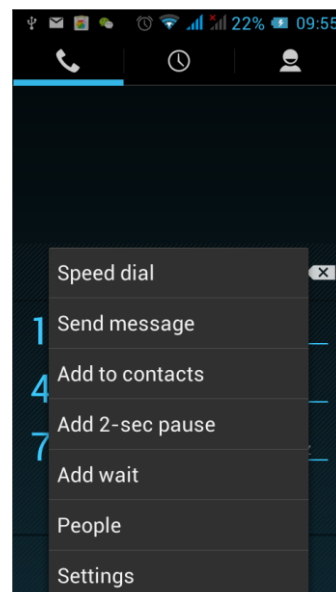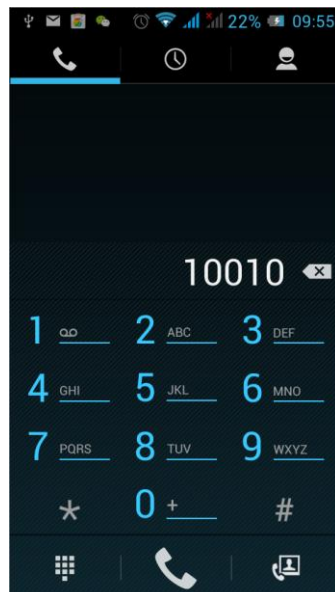 
In standby interface to click  into the dial-up interface, click the digital on the screen to dial the number. If you need to change the phone number, please click  back to delete characters, then press  to dial the number. Press the Menu key to pop-up menu options, as shown, you can choose to send SMS, added to the "Contacts" or the Settings, etc.





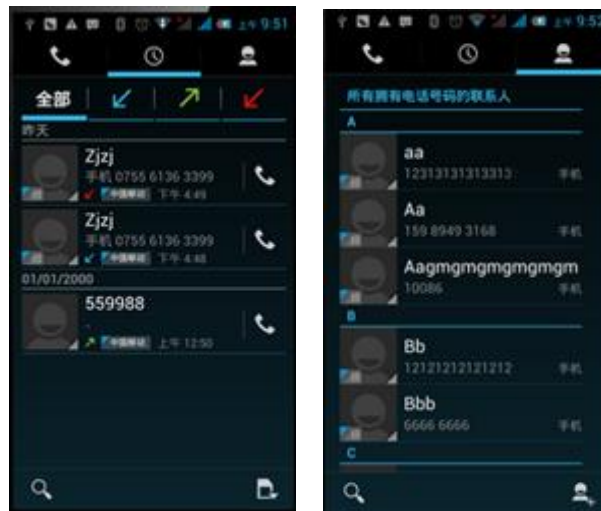

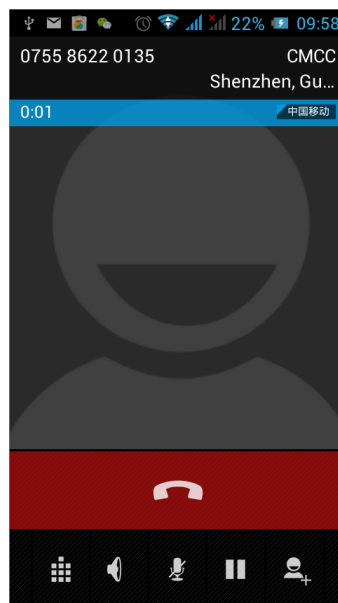

You can also touch  at the top of screen, enter to the call records interface to dial out. Or click  at the top of the screen, enter the contact interface to dial out. Click  directly in the standby interface, can also into the contact interface to dial out.







 
After the call is connected as shown:



◆ Click  to open the dial pad, according to the call prompted to input the corresponding number, such as 10086 when playing prompts.



- ◆ Click  to open the speaker, amplified voice calls.
- ◆ Click  to mute, do not send local voice.
- ◆ Click  to keep current on the phone or restore is held.
- ◆ Click  to use the keyboard to enter a contact or from call logs, contacts, select the relevant contact, to make a new call.
- ◆ Click  to end the current call.

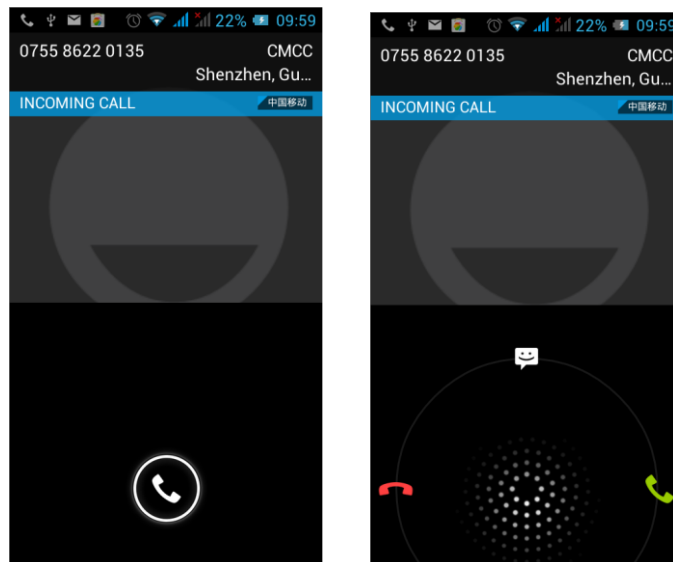 
Interface as shown when a call comes in, tap  and drag  to answer the phone, drag  to reject a call, drag  to send SMS.





 
## 3.2 Contacts

You can directly open the "Contacts" on the main screen, or open it in "Dial" app. Enter the contact interface as shown, click on a contact to view the contact information

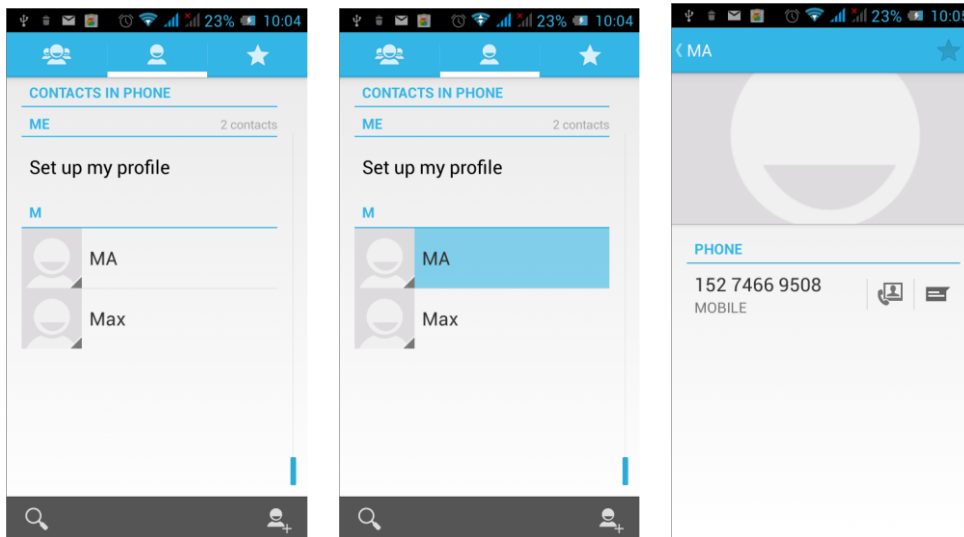 
stored, click on  to call the contact, click on  to send SMS to the contact. Press the Menu key to modify, share and delete the contact.



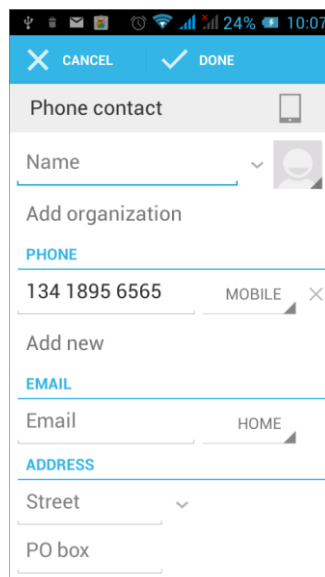


In the contact interface, click on  to quickly search contacts, click on  to add a new contact. You can choose to save the newly added contacts to the phone or the SIM card and save the contact name, phone, email, address and other information, as shown:

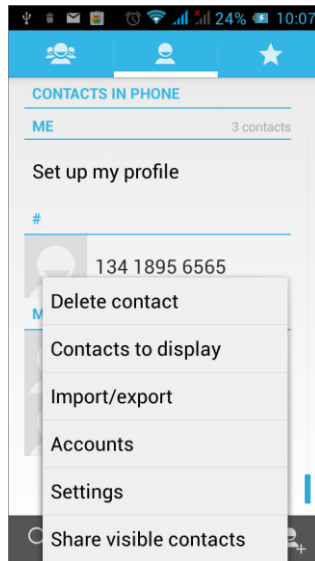 



In the contact interface click menu button will pop up the following menu options, you can according to your need to delete, import, export and share contacts and other operations.



 
### 3.3 Messages

Click  on the home screen, enter the message interface. Click  to enter the written message interface. In the "input names and numbers" area, input the number, or click on the contact icon, select a number from your contacts. Edit message content in the "input the text message" area. Touch  to send a message after completion.

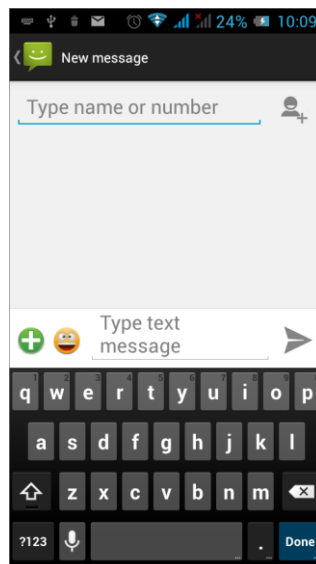

 
Click  on the screen, can insert images, video, audio and other files, SMS will be automatically converted into MMS. In Message interface, click on the menu, you can choose to delete, set up and send message, such as the menu.



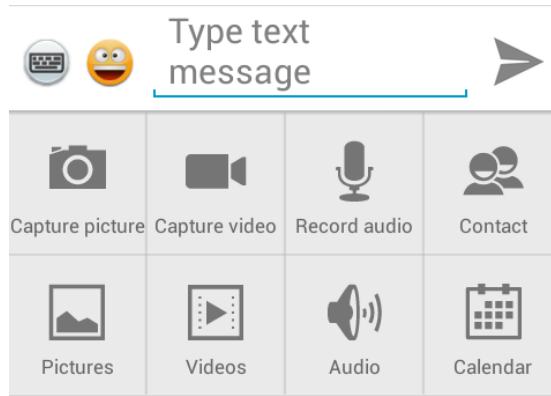 


### 3.4 File Management

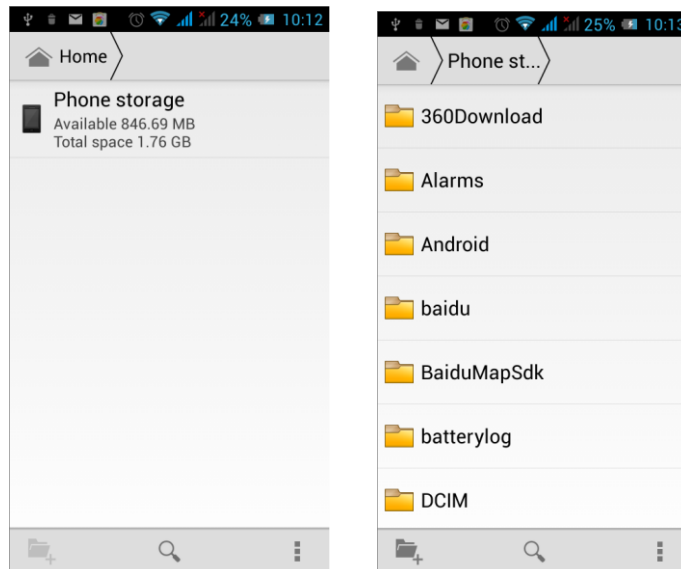

You can view and management the files which be stored locally on the phone or SD card. You can copy the files, paste, rename, delete, share and other operations.

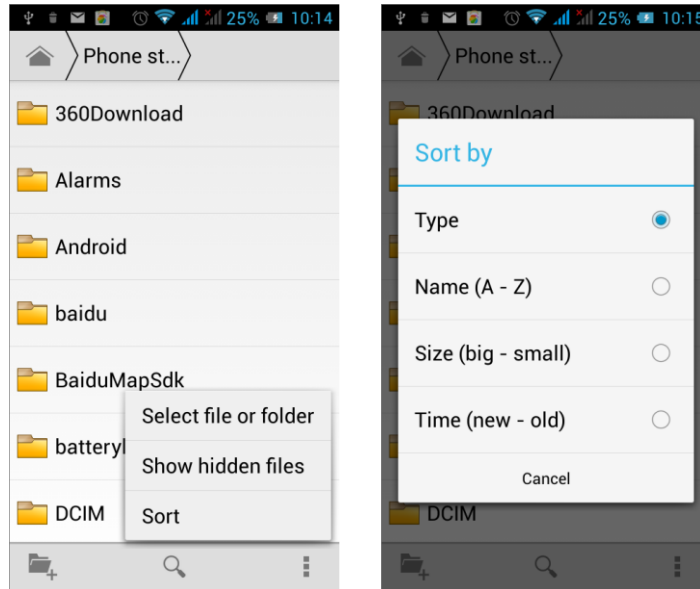 



Long press file or click on menu key, you can select one or more files or folders to share, copy, delete, cut, rename and other operations. You can also reordered folder by name, size or date.

 




### 3.5 Camera

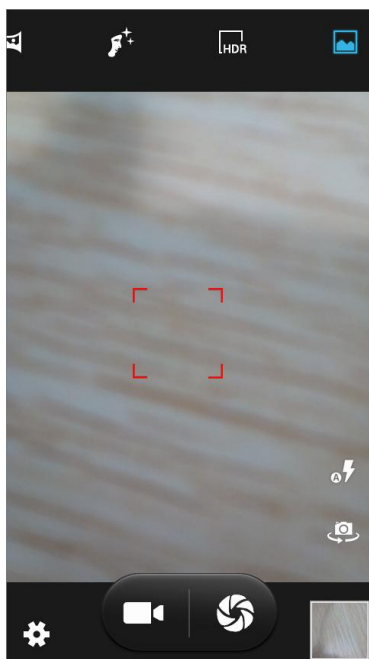 
On the main screen, tap  into the application, and then click  to enter the camera viewfinder screen. You can choose various camera mode at the top of the icon, at the bottom right corner, you can choose the flashlight mode, and switch camera mode. Touch the preview area can be adjusted to focus. As shown in figure:



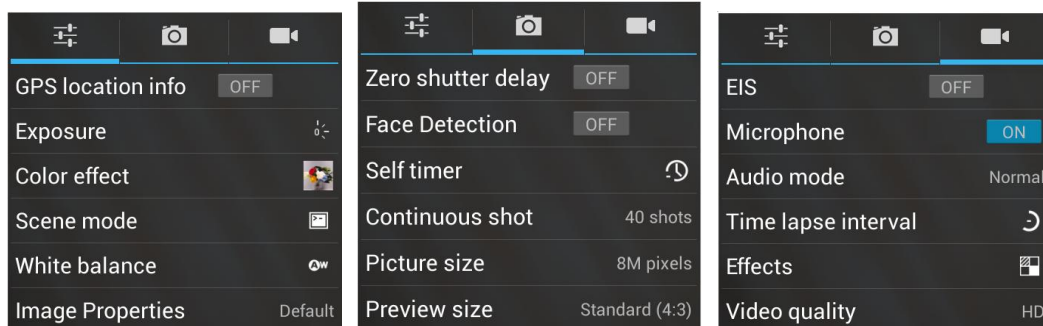

Click  to enter the camera setting mode, you can according to your needs for camera exposure, effects, shooting and other settings. As shown:

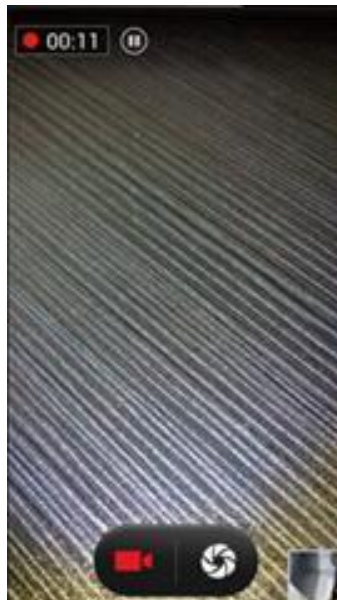


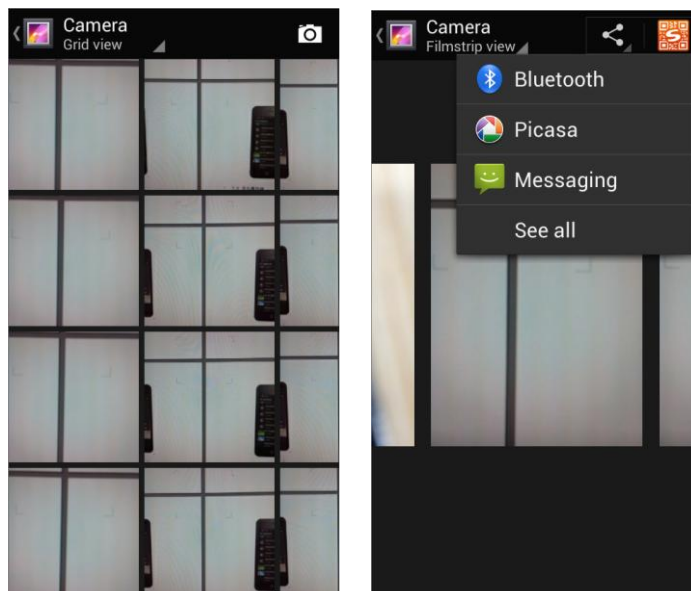 
Click  to take a picture, click  to convert video interface, as shown:







### 3.6 Images

 
Tap  on the main screen to enter the application, and then click , you can view all the pictures and video files that saved in the mobile phone and SD card, press menu key to browse images,

delete and grouping operation, etc. When you view any image, click  icon, you can operate the image by information, Bluetooth and so on.





 
### 3.7 Video Player

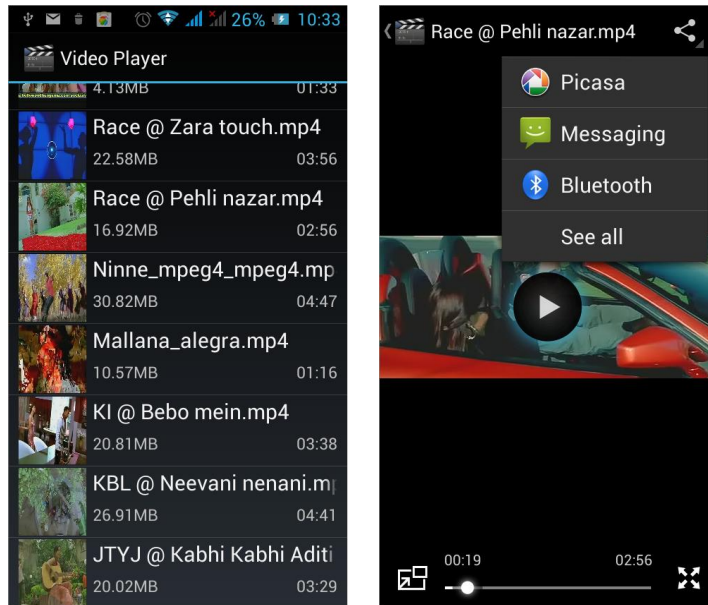On the main screen, tap  into the application, and then click  to enter the video list. Click on the menu key you can delete, sort, and other operations. Select a video to play, click  to full-screen playback. Click time progress bar to forward and reverse operation. Click  to send video to message, Bluetooth, E-mail to share.





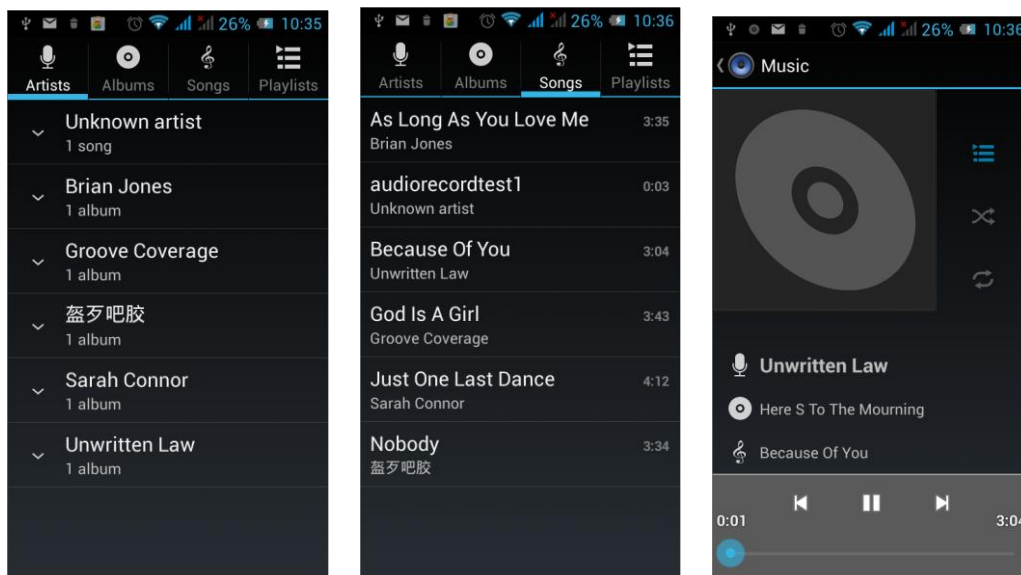


 


### 3.8 Music Player






On the main screen, tap  into the application, and then click  to enter the music player.

 


At the top of the screen, the artist, album, songs and playlists four ICONS respectively all the audio files are classified in the mobile phone. You can choose your favorite arrangement to find the songs that you want to listen. Choose to play a song:



-  Indicates pause/play song.
-  indicates continue playing.
-  indicates switch to last song, long press to rewind.
-  indicates switch to next song, long press to forward.
-  indicates the progress of the song playback (time display), sliding around the scroll bar to jump to any position in the song.
-  indicates on/off the shuffle.
-  indicates on/off repeat all songs.
-  indicates repeat current song.
-  indicates back to song list.

 
### 3.9 FM Radio

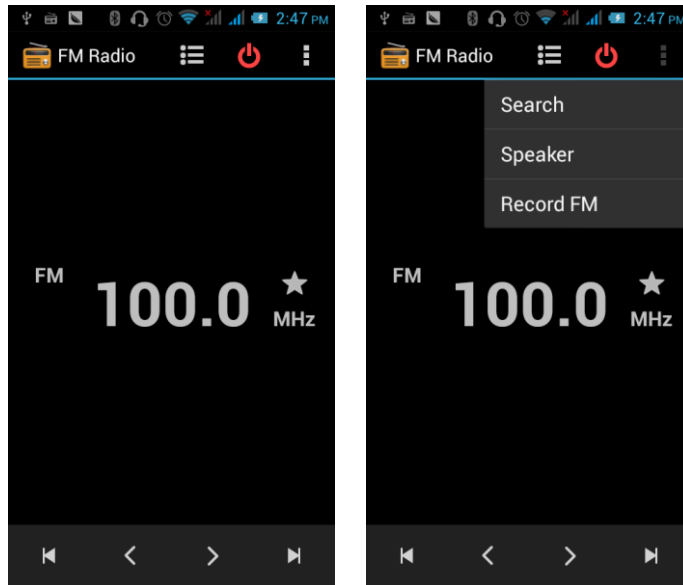

On the main screen, tap  into the application, and then click  to enter the radio. Into the radio, you need to plug in the headset cable, you can search channel. If this function is not prompted to not insert the headset, please pay a little attention when you using. Click  to enter the channel list; clicking  Stop / Play Radio; clicking , you can search for it, FM recording and other operations, as shown:





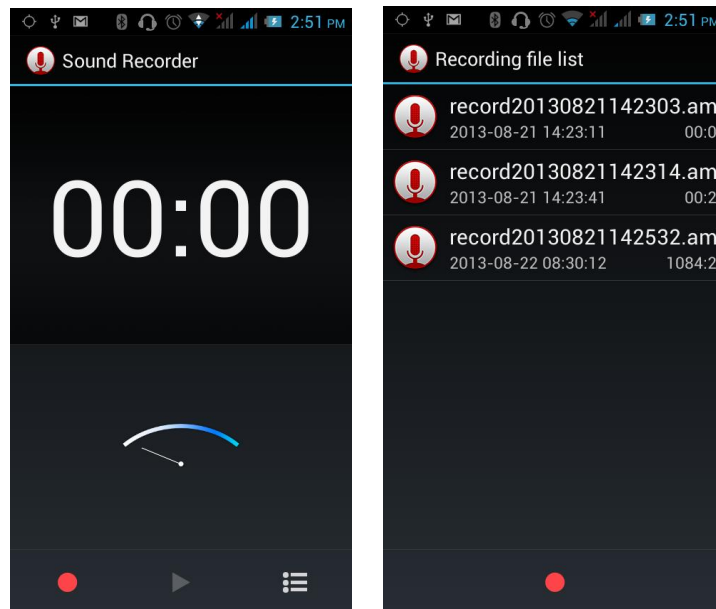

### 3.10 Recorder

On the main screen, tap  into the application, and then click  to enter the radio. You can record audio files.








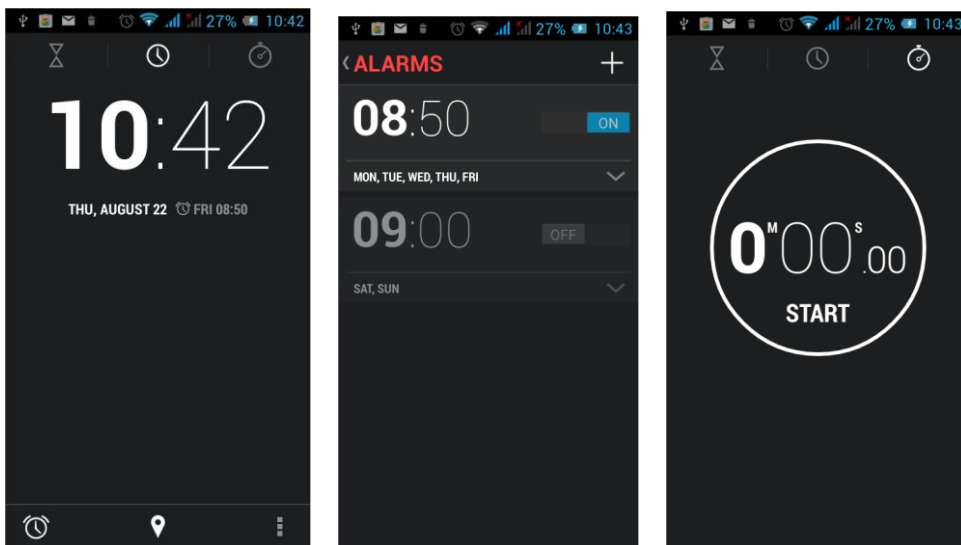 
- Start recording: Tap 
- Play recording: Tap 

- End recoding: Tap 
- Pause recording: Tap 
- List of recording: Tap 



Recorded audio files successfully saved automatically generated file list, click  to view the recording or playback recording, and automatically save to your phone.

### 3.11 Clock

 
On the main screen, tap  into the application, and then click  to enter the clock., You can see the setting date and time, week and alarm in the clock interface. Click  to view and set the alarm; click  to open the stopwatch function; click  to select night mode, set menu and set the alarm, etc.



 
### 3.12 Calendar

Tap  on the main screen to into the application, and then click  to access the calendar.



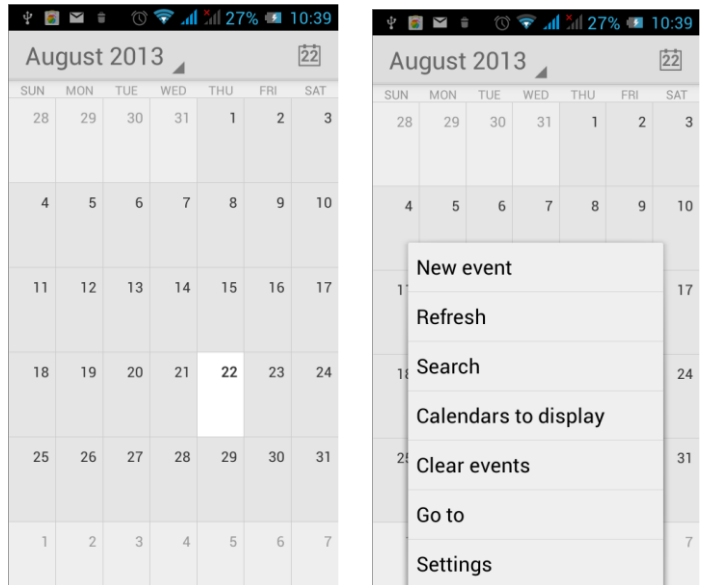

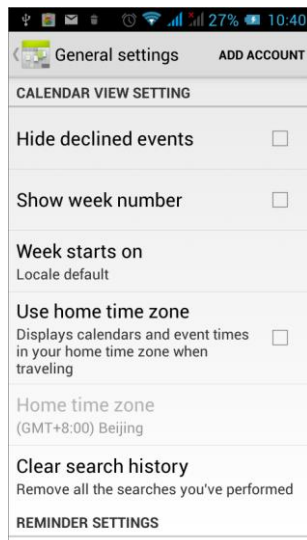

 
Into the calendar interface, slide up and down, you can view the previous month and next month's calendar, click the menu key to select the new activity, refresh, search, set, and other related operations. Settings can be set calendar view and reminder. Figure:






### 3.13 Calculator

 
On the main screen, tap  into the application, and then click  to access the calculator. Your phone provides you a calculator with the four basic functions,

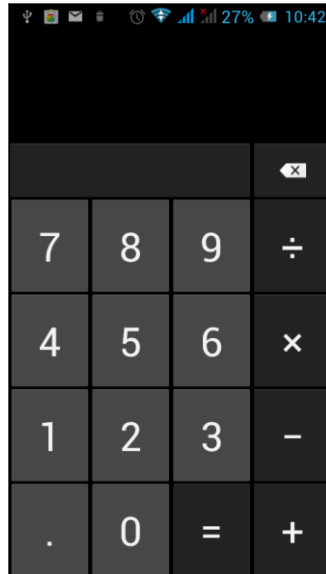allowing you to perform simple arithmetic. Press the "Clear" to clear the recent input or the result.





### 3.14 Notepad

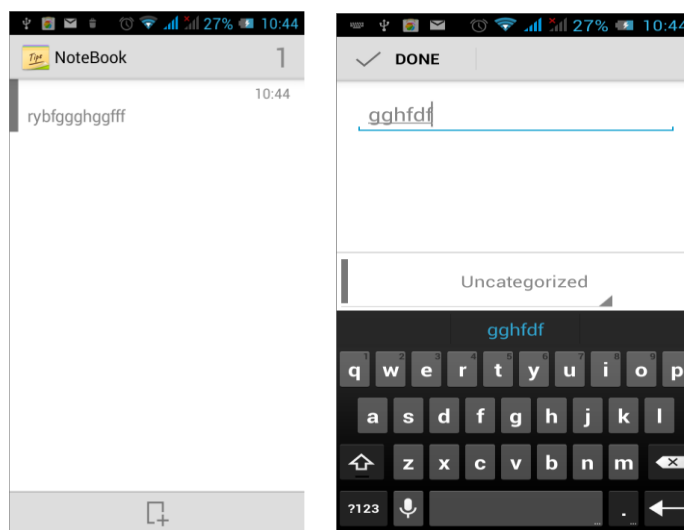On the main screen, tap  into the application, and then click  into Notepad. Click on  to add a new Notepad. Click the "Unclassified" area to classify the new added Notepad, mainly divided into work items, personal matters, family matters and learning issues.





### 3.15 Flashlight

On the main screen, tap  into the application, and then click on  to enter the flashlight. Click the "off" to open flashlight, click "on" to close flashlight.

 
Note: Exit this interface will turn off the flashlight.





### 3.16 E-mail

On the main screen, tap  into the application, and then click  to enter the e-mail. You can send email messages to anyone with an email address.

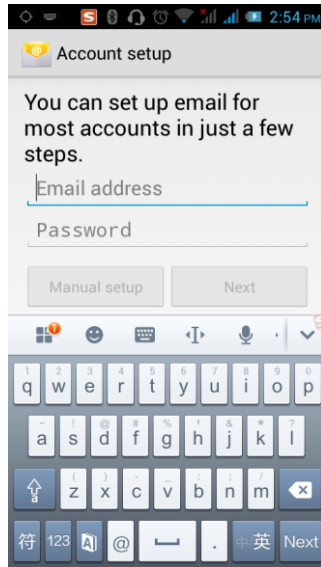 
Enter the program and set up my account, then you can click on your email account has been built into the account, to start, edit, create account, delete operations, can be sent or received email like computers. The program requires network support.



### 3.17 Browser



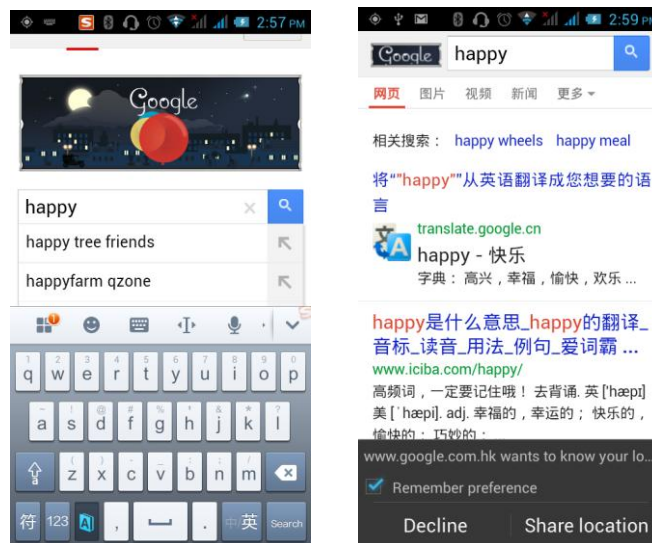

On the main screen, tap  into the application, and then click  to enter the browser. The support of the network (WI-FI or GPRS) into Web browser lets you surf the Web on your phone, and view Web pages, like in a computer. You can create a bookmark on your phone and sync bookmarks with your computer. Directly from the main screen to quickly access your favorite sites.

 
In the search box, enter the content you want to find, click the Search icon, enter the relevant pages:



 
Touch the screen, the screen display URL above, display the menu below:



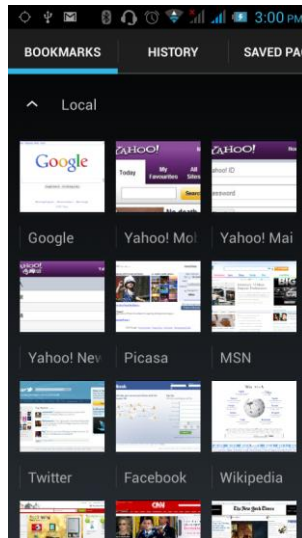

Click  to go to the previous page; Click  to enter next page; Click  to view the pages you have open, you can slide up and down, and select a page to enter; clicking , you can view your bookmarks, history, and saved web page:

 
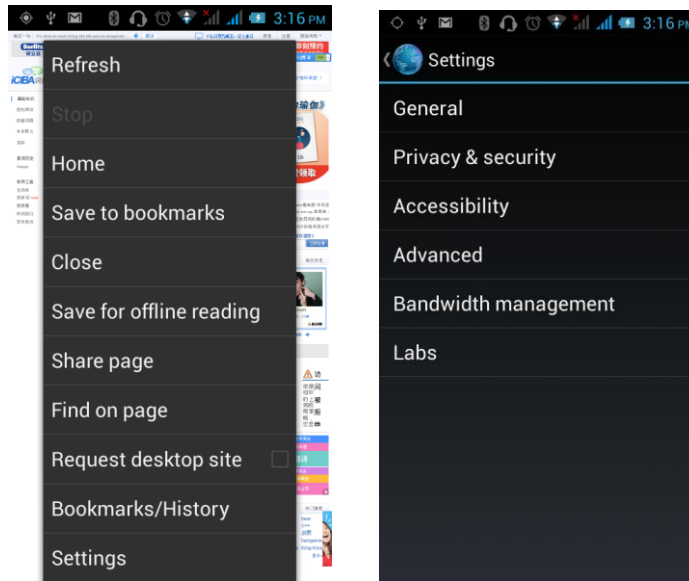 


Click on the menu key on the main page, you can refresh, close, save to bookmark, share web pages, settings, etc.

 



### 3.18 Searching

 
 
On the main screen, tap  into the application, and then click  to enter the search interface:

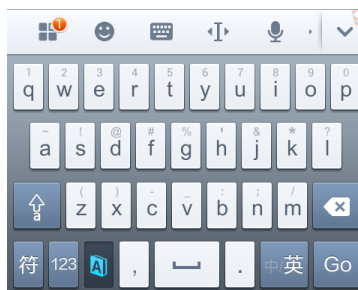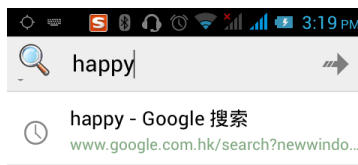

 
Enter the content you want to search, click the Searching key, select the type of search you want, such as web pages, contacts, etc.:

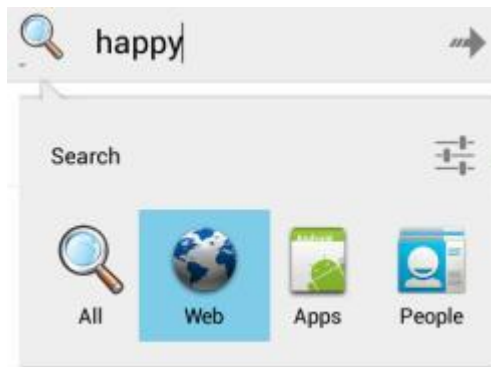

Click , enter the search results:

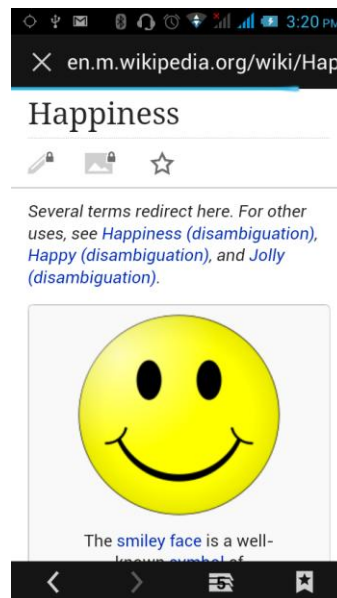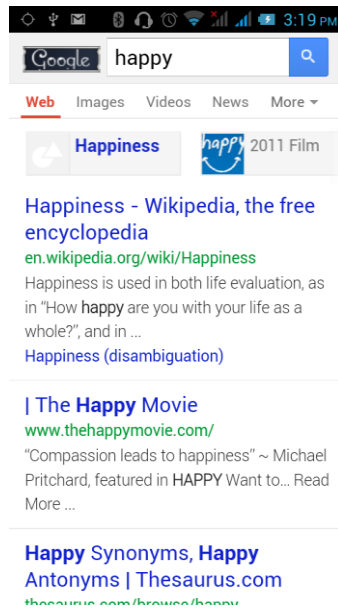

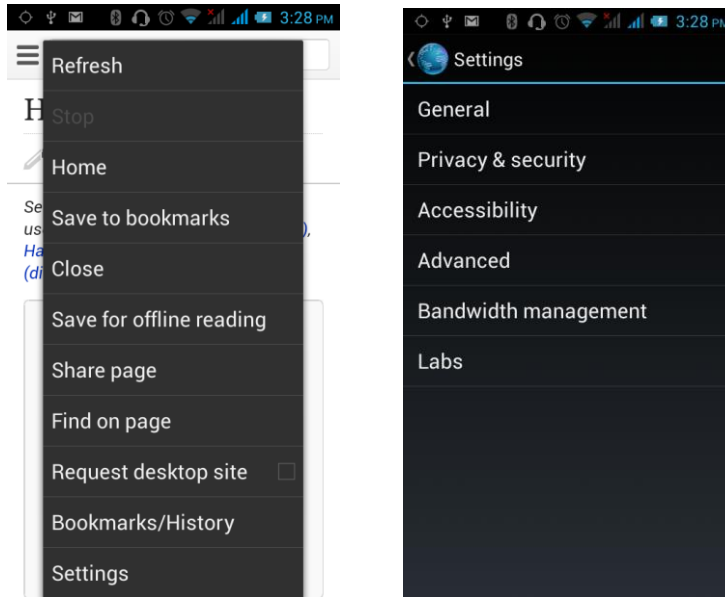


Click on the menu key on the main page, you can refresh, close, save to bookmark, share web pages, settings, etc.



 
 
### 3.19 Download

On the main screen, tap  into the application, and then click  to enter the download interface. You can view the content which have been downloaded or being download. On download content interface, press the Menu key can be sorted by size or time of operation.

 
### 3.20 ToDo


On the main screen, tap  into the application, and then click  to enter the ToDo interface. You can view the ToDo list and completed item on the interface. Or you can click  icon on the screen bottom to add item. On the Add Item interface, you can enter title, description. You can also set the deadline according to your need.



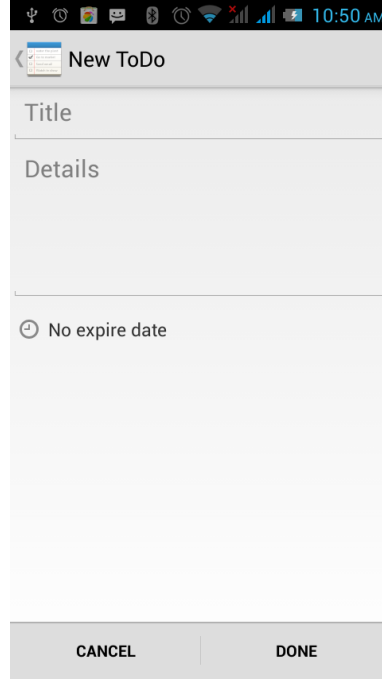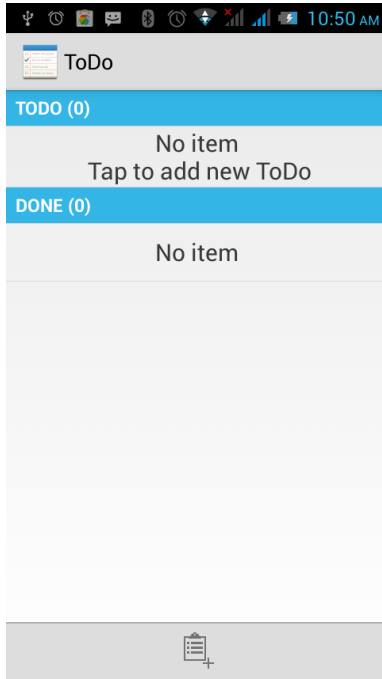


### 3. 21 Compass

 


, 如图所示: On the main screen, tap  into the application,



and then click  to enter the compass interface. The compass icon on middle of the screen will change the orientation of the phone, an icon appears above the corresponding

angle, such as: , as shown:

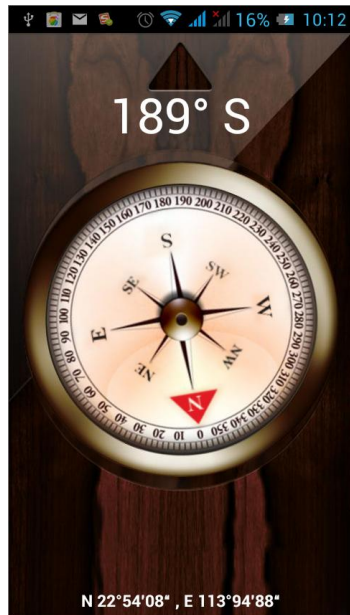

### 3.22 Oinom

Oinom is a "forever online" communication tool, it can apply to most smart phones on the market, it uses WWAN (wireless wide area network) and WLAN (wireless local area network), a key call mechanism, communication barrier-free between employees. It is applicable to any network coverage environment, as long as the 3G/2G/Wi-Fi. Reduce the costs of the enterprise internal communication, improve work efficiency.

#### 1.2 Main Features

- Millisecond call performance. Select your contact or group, press the call key then you can start to talk. HD voice quality. It adopts advanced voice transmission technology, you can clearly hear every conversation.

- Diversified network coverage of 3G/2G/Wi-Fi. It uses the latest wireless networking technology, with greater flexibility and extensibility, so your communications can cover a wider range.
- Centralized management of group and members. In the background of the Web, you can intuitively manage the group and each mobile phone and device of the group. Control room to view each employee's current position and trajectory. Later you can also manage employees' voice dispatching work in the background, it is convenient and efficient.
- Multimode tips. When a user's status is green, it means that the person is "online" status, you can press the call key for voice. If the status is red, it means that person is in the "Do Not Disturb" mode, it is unable to real-time voice, then latter will provide offline message function.
- Press the phone PTT key or have new voice wake up automatically software display to the front desk.
- All sessions are security encryption, using the closed loop mode, access is limited to employees or authorized users.

## 2 Install Client

### 2.1 Install and Use Conditions

- Android mobile phones (above 2.2 version) or IOS mobile phones (above 5.0 version);
- Signal stability of 2G/3G/Wi-Fi network connection.

### 2.2 Download and Install Android Client

Login <http://www.ptttalk.com/> to scan the QR code to download the software, click allow install when the system prompt to install.

Note: You can view the download progress via status bar notification when downloading. After the download is complete, the system will automatically pop up the installation interface. Please click on the download notification in the status bar when no pop up installation, and then install it.

## 3.23 Oinom key

Tap Oinom Key menu on the main screen, enter to menu list.





Select one menu (As shown above)

When prompted, whether to set "phone" option as shortcuts, select "yes" to set successfully

Return to main screen, long press the shortcuts key, directly into the already set menu.

# 4 Settings

---

 
On the main screen, tap  into the application, and then click  to enter the settings, you can according to your need to personalize your phone settings.


## 4.1 SIM Card Management

 
Set the SIM card for voice calls, video calls, messages, data connections and other settings.


## 4.2 WIFI

 
Click WIFI, enter WIFI interface, click "Open" icon on the top right of the screen, your phone will automatically search for wireless networks within range.

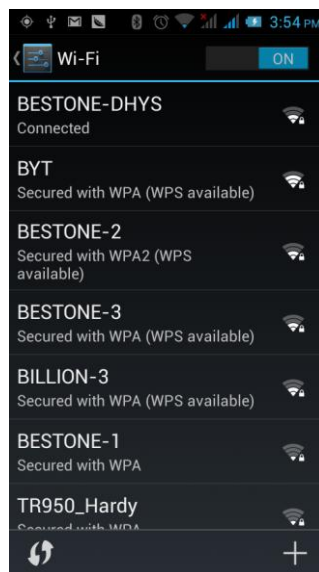

Click  to refresh the network list, if you get a license, you can click on your wireless network license has been made, enter the password in the input area, and then click "Connect", the connection is completed show "Connected", then your phone it can be connected.

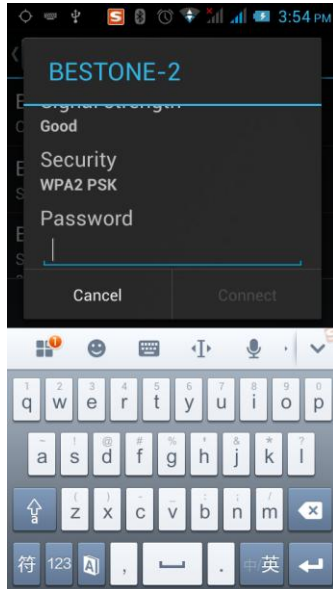 


You can also click  on the screen in the lower right corner, add a network:

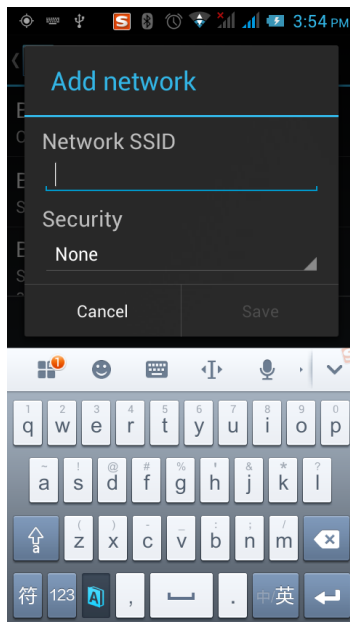

 
## 4.3 Bluetooth

Activate Bluetooth, the phone automatically searches for Bluetooth devices seen around, you can click on any device with which to pair the device to pair, with the search after connection for file transfer and other operations.

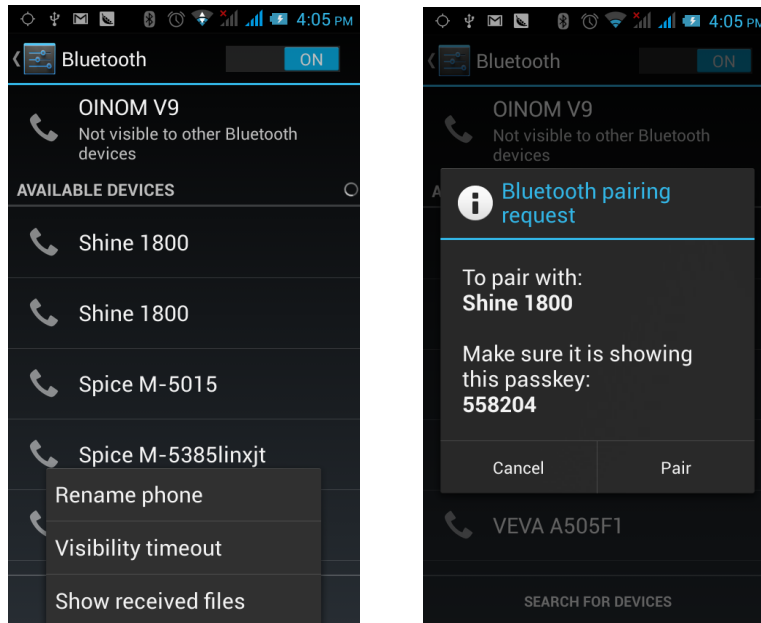

## 4.4 Mobile Network

In this menu you can turn on or off the data connection, enabling 3G services, network operators and other options:

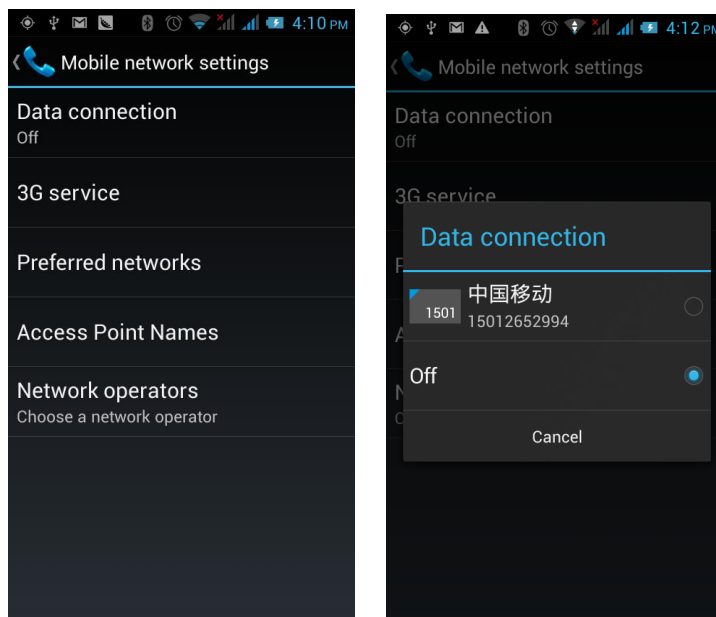



## 4.5 Flight Mode

 
When clicked the flight mode, it will disable all wireless connections, calls and messages are not available.



## 4.6 Scenes Mode

The following modes can be set up on the phone: Standard, Mute, Meeting, Outdoor;

You can also click  on the left corner to add a new mode, click  on the lower right corner to return to the default settings.

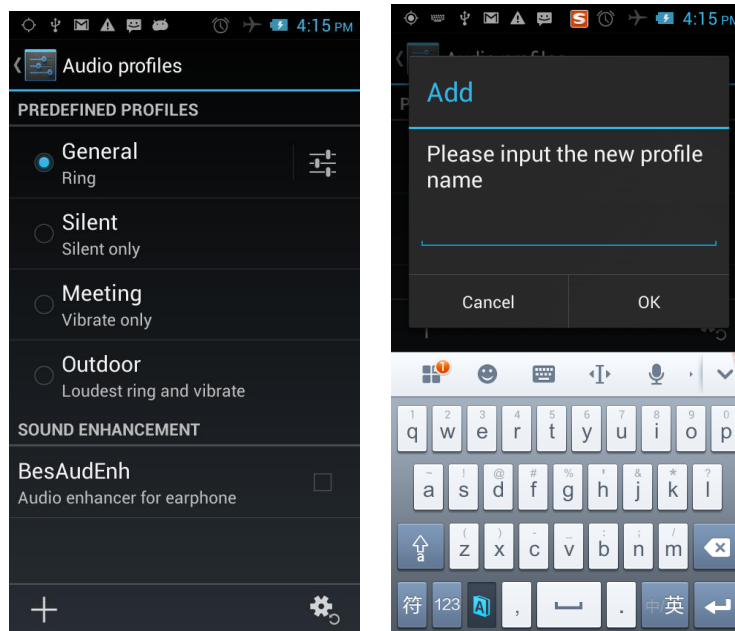

## 4.7 Display

Open to personalize set the phone brightness, scene, wallpaper, themes and automatically rotate the screen, etc.

## 4.8 Storage

You can view the phone and SD card total capacity, free space, you can choose the preferred installation location and format the phone memory.

 


## 4.9 Battery

You can set the phone percentage of battery display and see remaining battery power and time.

## 4.10 Application

You can view the phone has downloaded applications, phone storage applications, running applications and all applications. You can click on the menu key to reorder these programs by size:

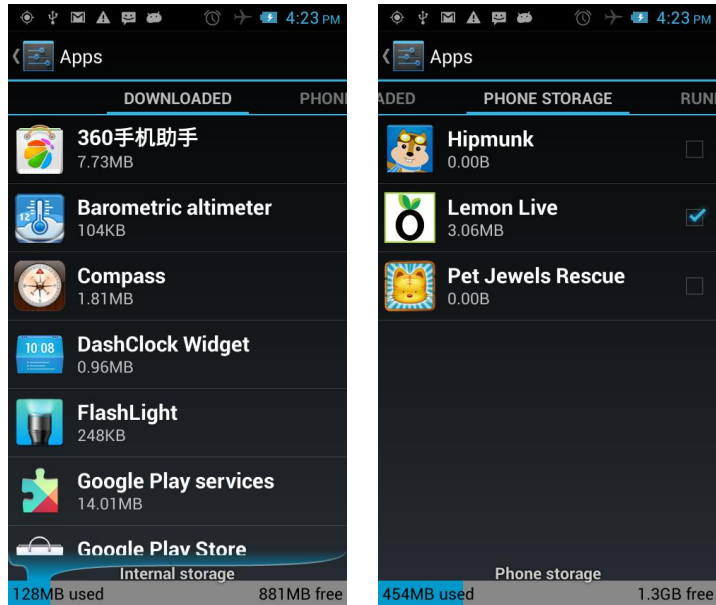

## 4.11 Security

Set the screen security, SIM card lock, password, device management, credential storage and other settings:



## 4.12 SOS Setting

 
You can set up an emergency number and edit emergency text messages in this, but when you press the emergency call button, the phone will automatically dial the number, and send text messages.

## 4.13 Language and Input Method

You can choose your preferred language and input method, you can also click



for the input method for the relevant settings:

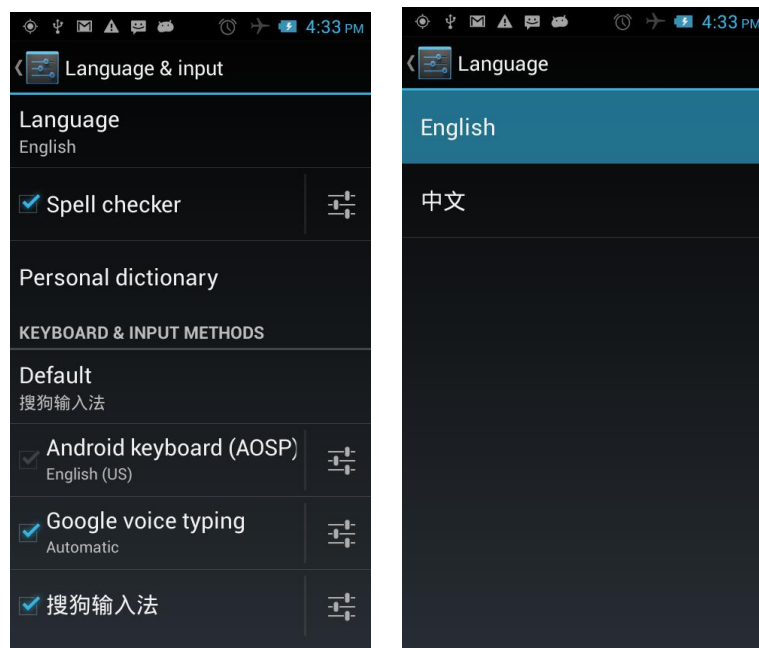 


## 4.14 Backup and Reset

You can backup my data, automatically restore, restore the factory settings and operations, restore factory settings will delete all personal data on your phone.

## 4.15 Date and Time

You can choose to automatically determine the date and time, and automatically determines the time zone, use the 24-hour format, and select the date format and other operations:

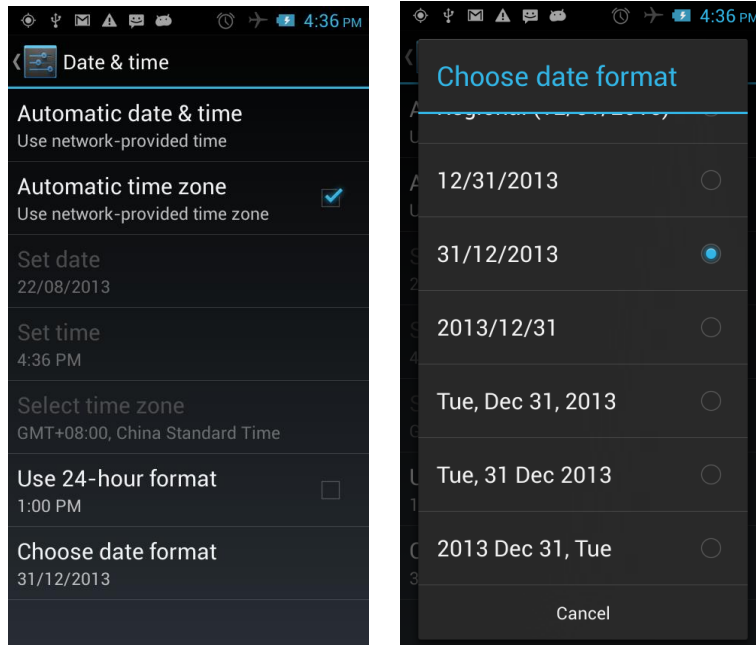 


## 4.16 Schedule Power On/Off

Set the time to automatically turn on or off the phone.

## 4.17 Auxiliary Function

To set fast boot, auto-rotate screen, large font, press the "Power" key to end the call and other functions:

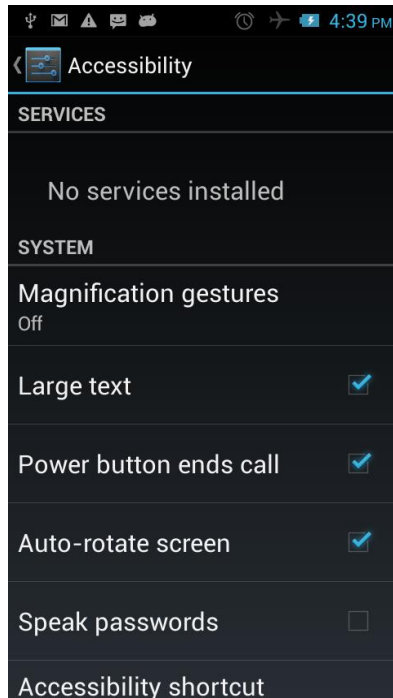

## 4. 18 About Phone

View phone's current signal, power, service status, the phone's software and hardware information.

# 5 Common Problems & Solutions

If an exception occurs while using your phone, please refer to the following table to troubleshoot

Common problems	The causes	The solutions
Poor signal	Using the mobile phone in poor reception area, such as nearby buildings or basement, the radio waves cannot effectively communicate;	Try to avoid

	Using the mobile phone in the call dense period, such as commute time, line congestion caused by the inability of the calls.	Try to avoid
	Associated with the launch of the base station network built near and far	Can ask Internet service providers provides service area map
Echo or noise	Due to poor network trunk, is a regional problem	Hang up and redial, trunk lines may replace good one.
	Some regional bad line	
Standby time shorter	Standby time is related to the network system setting	Turn off the mobile phone in the poor reception area.
	The battery need to replaced, please replace new battery.	Please replace new battery.
	The phone will continue to search base station, it will use a lot of battery power, causing the standby time become shorter.	Please move to strong signal place or turn off the phone.
Unable to boot	The battery power is exhausted.	Check the battery power or charge it.
SIM card error	SIM card is damaged	Contact your network service supplier.
	SIM card not installed	Make sure SIM Card has been installed.
	SIM card metal surface have dirt	Use clean cloth to brush the SIM card metal contact point
unable to	SIM card is invalid	Contact your network

connect the network		service supplier.
	Beyond the GSM or 3G network service area.	Ask your network service supplier the service area.
	The signal is weak	Please move to the strong signal place to retry
Calls unable to call	set up the call barring function	cancel the call barring function
	set up the fixed dial function	cancel the fixed dial function.
PIN error	input incorrect PIN Code in three times	contact your network service supplier.
Unable to charge	Battery or charger damaged	need to replace new battery or charger
	Charge in lower than -10°C or higher than 55°C environment	change the charging environment
	Bad contact	check whether the plug connection well
Unable to add phonebook record	Phonebook memory is full	delete some part of phonebook record.
unable to set up some function	Network provider does not support this feature, or you did not apply for this function	contact your network provider.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **SAR Information Statement**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and

certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **0.53 W/kg** and when worn on the body, as described in this user guide, is **0.40 W/kg**(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is **0.40 W/kg**. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RFexposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **2A13K-CM16** Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. \* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6

watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

### **Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **10 mm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.