

User Manual

D1015



DECT PHONE

INTRODUCTION

Thank you for purchasing our newest DECT single model, the manual is designed to familiarize you with this phone. To get the maximum use from the phone, we suggest that you read this instruction manual carefully before using.

Important Notices:

- 1) Please charge the battery for at least 12 hours before using. You hear a beep when the handset is correctly in position on the charging cradle.
- 2) To keep the batteries charged, whenever you don't need to use the handset (such as overnight, or when you go out), leave the handset on the charge cradle.

SAFETY INSTRUCTION

When using your telephone equipment, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons:

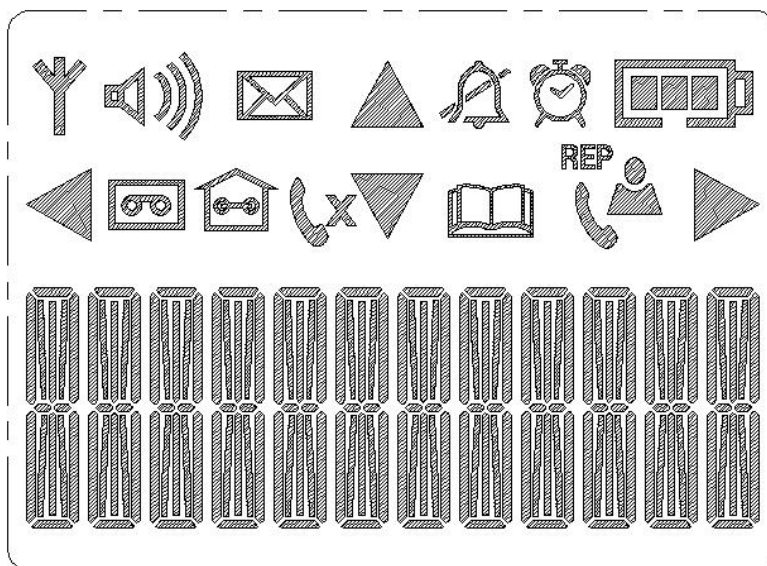 
- ✧ Read, understand and follow all warnings and instructions
- ✧ Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a soft damp cloth for cleaning.
- ✧ Do not place this product on unstable surfaces. The product may drop, causing serious damage to the product.
- ✧ Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- ✧ Never push foreign objects of any kind into this product through cabinet slots as they may affect dangerous voltage points or short circuit parts that could result in fire or electric shock. Never spill liquid of any kind on the product.
- ✧ Avoid moving or disconnecting this unit during a heavy storm, as there may be a remote risk of electric shock from lightning and thunder.
- ✧ IMPORTANT – The base unit must be used with the mains adapter supplied with the unit.
- ✧ Using any other adapter will may invalidate any approval given to this apparatus.
- ✧ Unprofessional person cannot open the telephone even meets troubles, please send to service center.

FEATURES






- LCD 3 lines display
- Maximum 5 handsets can be registered to the same base unit, and maximum 4 bases per handset
- 16 kinds of interface languages: Portuguese, Spanish, English, French, German, Italian, Dutch, Hungarian, Greek, Polish, Danish, Norwegian, Swedish, Turkish, Russian and Ukrainian
- Pre-dial and edit function
- Redial and pause function
- 30 incoming numbers memories and 10 outgoing numbers memories
- 50 phone book memories with 12 characters & 20 digits maximum
- Call transfer to other handset and intercom call between two handsets
- Conference call between external call and two handsets
- 10 ringing tones for selection

- Ringing tone/earpiece/hands-free volume adjustable
- Different melody for different call available
- Alarm clock function
- Tone/Pulse dialing mode can be set
- Flash time 100/300/600/1000ms for selection
- LCD backlight function
- Auto/manual answering function
- Dialing barring function
- Keypad lock function
- Mute function
- EQLIZER function
- receiver booster function
- 3 one-touch memories function
- In use and charge LED indicator

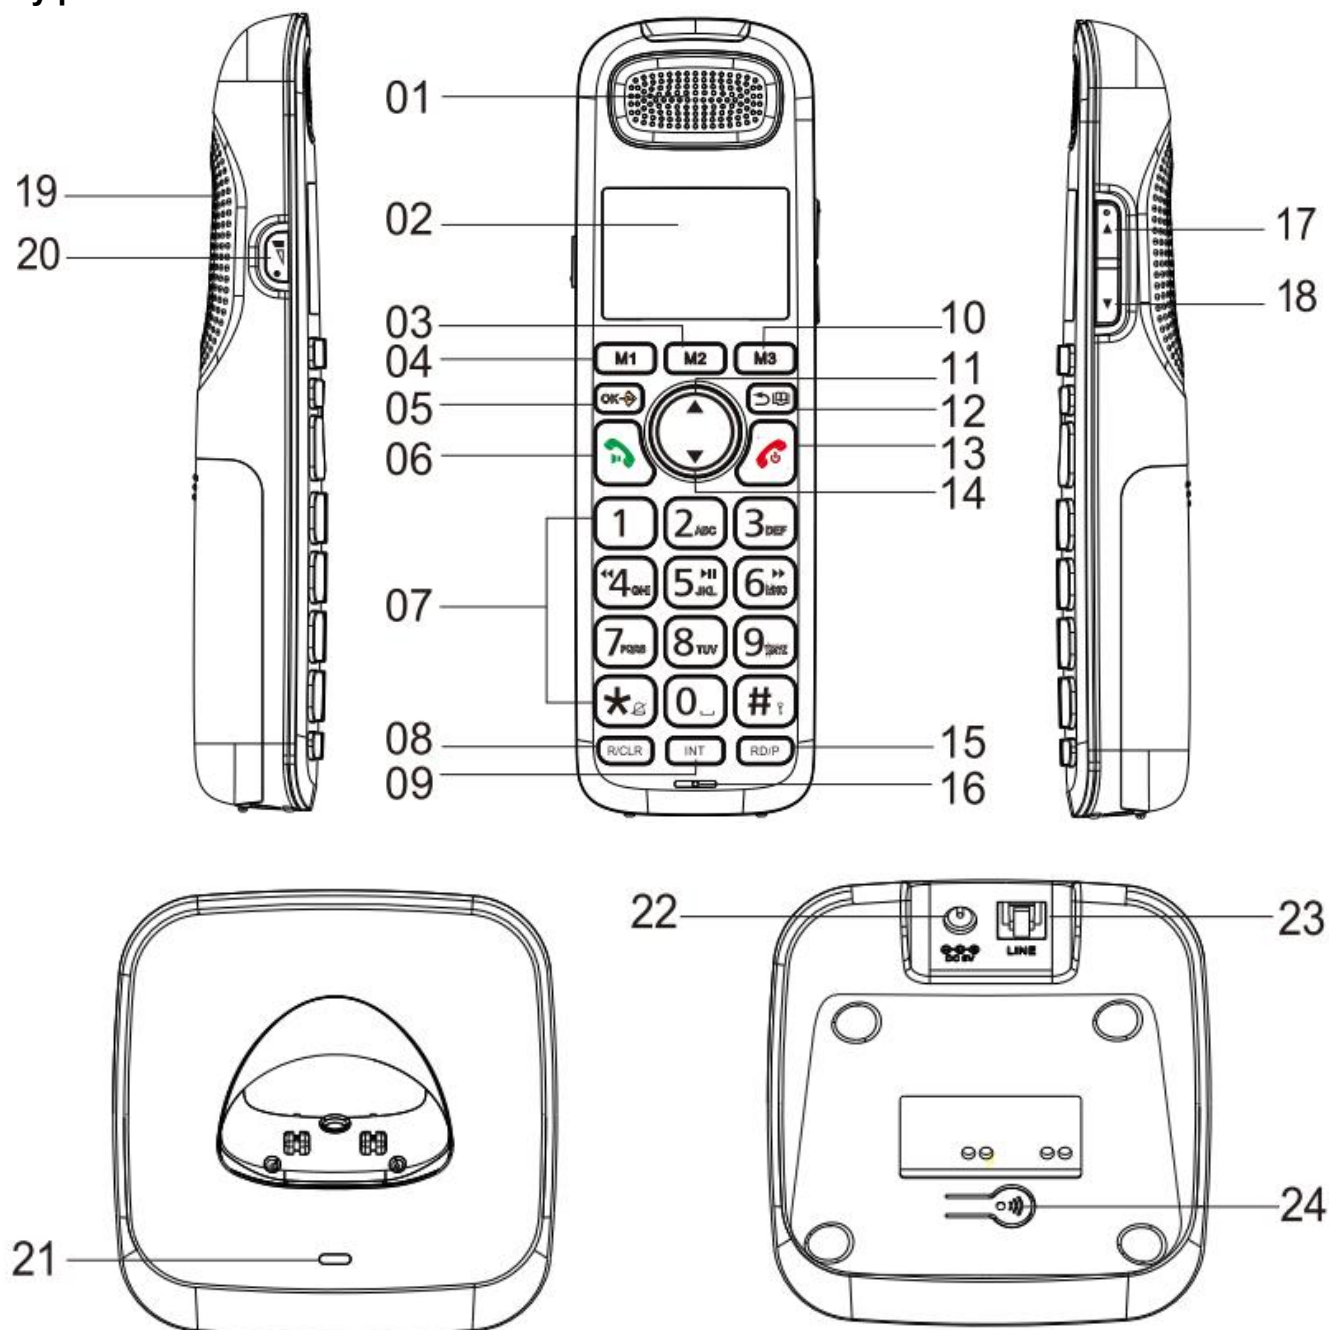 
LCD DISPLAY/LCD MAP/KEY PAD DESCRIPTION




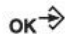





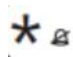
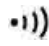

Icon	Description	Function
	ANTENNA	The antenna icon will always be shown on the LCD, it indicates for signal strength, flashes when the handset is out of range, disappear when registration to base is lost.
	Talk	The icon will be displayed when the user has pressed key once .The icon will be displayed when making an external call
	ALARM_IN D	The alarm icon will be shown as steady on when the alarm is set. The alarm icon will flash when the alarm is triggered.
	RING OFF	Displayed when external ring set to off
	PHONEBO OK	Displayed when viewing the phonebook entries.
	VMWI_IND	Displayed when a new voice message is received from the network.




	NEW CID	The icon will be displayed when a new call comes
	HANDSFR EE	The icon will be displayed when press  key, in idle state.
	BATTERY_ IND	Displayed charging indication and indication of the current battery status.
	Intercom	The icon will be displayed when making an internal call

Key pad



01 HEARD/SET	02 LCD	03 M2	04 M1	05 MENU/OK/MUTE
06 TALKE/H.F	07 NUMERICAL KEY	08 FLASH/CLEAR	09 INTERCOM	
10 M3	11 UP	12 PHONE BOOK	13 HANG UP/POWER OFF	14 DOWN
15 REDIAL/PAUSE	16 MICROPHONE	17 VOLUME+	18 VOLUME-	
19 SPK	20 AUDIO BOOST	21 IN USE/CHARGE LED	22 DC/6V	
23 LINE	24 PAGER			

Icon	Description	Function Definition
	off hook	In standby mode press once to take the handset into off hook mode. In standby mode press twice to take the handset to hand free mode, In the talking state, press this key to exchange the conversation between the speaker and headset.
	MUNE/OK	Entry to the menu functions from idle mode; Confirming selections & actions. In talk mode press the key to perform mute function.
	OFF/END	In talk mode, press once to hang up the call; In standby mode, hold for 3 seconds to power down the handset. Press this key to turn off the ringer when the call comes in
	Phonebook/B ACK	This key is used to enter the phonebook both in standby mode and in talk mode. Press to exit present menu
	UP	Scrolling up through lists and menu options; Increasing the volume; Review incoming number, outgoing number and phonebook number. Access to outgoing number list in standby mod When a call comes in, press this key to turn up the ringtone
	DOWN	Scrolling down through lists and menu options; Decreasing the volume. Review incoming number, outgoing number and phonebook number. Access to Incoming number list in standby mode When a call comes in, press this key to turn down the ringtone
R/CLR	Flash/Delete	The key is used to delete memory; Delete the current input by a short pressing during menu edit.
RD/P	Redial/Pause	In on hook or off hook state, press it to insert a pause time between two digits numbers. Redial the last dialed number.
	keypad lock	A Long press to activate keypad lock; To set up a conference call.
	ring on/off	In addition to its use for text and number entry; Press and hold to switch the handset external call ring on/off
	Page	Page the handset. Register the handset to a specified base.
	Intercom	To set up an internal call to another handset; To transfer an incoming call to another handset; To set up a conference call with an external line and an internal


		handset.
	Audio boost	At handset conversation mode, press  once to increase the volume about 15 dB. Press  key again or pick up the handset next time, the handset volume is return to primary state.
M1/ M2/M3	one-touch memory	In on-hook state, pre-dial a number or scroll to the desired number..Press and hold M1 key the number is stored. In on-hook or off-hook state, press M1 M2 or M3 key, the number is dialed out.

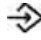


INSTALLATION

- 1) Plug the main power lead into the bottom of the base unit.
- 2) Plug the main adapter into mains socket with the switch on the socket set to off.
- 3) Switch on main power at the socket.
- 4) Fit the batteries in the handset

Note: If you do not modify the password yourself, all the passwords in this manual are default as 0000.

Menu Settings

During idle state, press  key to enter the menu setting, there are five sub-menus under the handset menu item.

Press \wedge or \vee key to select the above items and then press  key to enter. Press  to quit the setting state, or press  to back to the previous menu. Details of each item are shown in next parts.



Note: The system will time out if you leave more than 30 seconds between key presses.

The menu tree as follow:

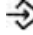

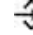
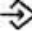
HANDSET MENU TREE		
CALL LOG	MISSED	
	RECEIVED	
	DIALED	
PHONE BK	LIST	
	N. ENTRY	
	EDIT REC	
	DEL REC	
	DEL. ALL?	
	MEM. CRP	
	DELE. HS	
BS SET	DIAL MOD	TONE
		PULSE
	FLASH HR	100/300/600/1000MS
	MOD. PIN	default 0000

	BS RESET	default 0000
HS SET	ALARM	ON (SNOOZE Y/N)
		OFF
	RING SET	INT RING
		EXT RING
		VOLUME
	TONE SET	KEY TONE
		BATT. LOW
		OUTRANGE
		NATURAL
		TREBLE
		EQLIZER
	LANGUAGE	
	HS NAME	
	AUTO ANS	ON
		OFF
	BARRING	default 0000
	DATE&HRS	
	CONTRST	
	SELE BS	BASE 1.2.3.4 and AUTO
	HS INIT	default 0000
REGISTER	BASE 1(2.3.4)	

Handset Menu function 1: CALL LOG

Press  key, use \wedge or \vee key to choose **CALL LOG**, press  key to enter. And there are three items in this menu, **MISSED**, **RECEIVED** and **DIALED**.

In **CALL LOG**

- 1) Press  key to enter missed call lists, received call lists or dialed call lists.
 - 2) The LCD will show the last record. (If no entries are available in the list, the LCD will be shown **EMPTY**).
 - 3) Press \wedge or \vee key to view other record. press 0 key to check the record time
 - 4) When the desired number is show, press the  key to dial out the number automatically.
- When the record is show, press  key, use \wedge or \vee key to choose, press  key to confirm.

- 1) **ADD TO PB** : this function allows the user to add an entry from the caller list to the phone book.
- 2) **DELETE** : this function allows the user to delete the currently selected entry from caller list
- 3) **DELETE ALL** : this function allows the user to delete all numbers

Note: In idle state, press \wedge key once to outgoing records or press \vee key to review incoming records.

Handset Menu function 2: PHONE BOOK

Each individual Handset has its own phonebook, independent of each other handset, with a maximum of 50 entries, each name a maximum of 12 characters, each number a maximum of 20 digits and a melody selected from 1 to 10.


Press  key. Use \wedge or \vee key to select **PHONE BOOK**. Then press  key to confirm.

➤ **LIST**

LCD display **LIST**. The function allows the user to review the phone book record lists by using





the \wedge or \vee key. Press 0 key to see the name/number

When the desired number is show, press the  key to dial out the number automatically.

Shortcut: In the idle mode, press  key to enter phone book list conveniently. Press 0 key to see the name/number

➤ NEW ENTRY

Press \wedge or \vee key to select **NEW ENTRY** item. This function allows the user to add an entry to the phone book.


- 1) Press  key to enter, the cursor for the name flashes.
- 2) Enter the name using the alphanumeric keys and press  key to confirm.
- 3) If you make a mistake, press **R/CLR** key to correct.
- 4) Enter the number and press  key to confirm
- 5) Press \wedge or \vee key to select the melody to be stored and press  key to confirm.

Input method as follow:

<div>press</div> <div>times</div> <div>key</div>	1st	2nd	3rd	4th	5th	6th
		d	d	h	h	h
1	÷	--	/	1		
2	A	B	C	2		
3	D	E	F	3		
4	G	H	I	4		
5	J	K	L	5		
6	M	N	O	6		
7	P	Q	R	S	7	
8	T	U	V	8		
9	W	X	Y	Z	9	
*	*					
0	space	-	0			
#	o					

➤ EDIT RECORD

Press \wedge or \vee key to select **EDIT RECORD** item. This function allows the user to modify a phonebook record.

- 1) Press  key to enter, the first record in the phone book will be displayed.
- 2) Press \wedge or \vee key to select the designated record to change. Once a record has been selected, the user will have the option to edit each of the name/number and change melody.

➤ DEL RECORD

Press \wedge or \vee key to select **DEL RECORD** item. This function allows the user to delete a phonebook entry.

➤ **DELETE ALL**

Press \wedge or \vee key to select **DELETE ALL** item. This function allows the user to delete all phonebook entries.

➤ **MEM STATUS**

Press \wedge or \vee key to select **MEM STATUS** item. If show 10/50, it means total 50 records can be stored in the phonebook and 10 records has been stored in it already.

Handset Menu function 3: BS SETTINGS

The user is able to change the base setting in base settings item, press \Rightarrow key and use \wedge or \vee key to select this item. Then you can do below:

➤ **DELETE HANDSET**

This function allows the user to delete a handset registration from the base (Cannot delete local) .

- 1) Press \Rightarrow key, the first show is **DELETE HS**.
- 2) Press \Rightarrow key to enter, the user will be prompted to enter the PIN code.
- 3) Input the correct 4-digit pin code using digit key (the default PIN code is 0000) .
- 4) Press \wedge or \vee key to scroll the handset names list up and down.
- 5) Press \Rightarrow key to confirm. The delete handset will be deleted from the list on registered handset on the base, and the handset will behave according to the out of range condition.

Note: In idle mode, press and keep $\bullet\bullet\bullet$ key for 5s, **IN USE/CHARGE** LED flashes, then press $\bullet\bullet\bullet$ key 7 times swiftly, the **IN USE/CHARGE** LED flashes quickly. Then all the handsets logout the base successful till **IN USE/CHARGE** LED die out.

➤ **DIAL MODE**

The user can select to change the mode will dial.

- 1) Press \Rightarrow key, then using \wedge or \vee key to select **DIAL MODE** item.
- 2) Press \Rightarrow key to enter, and the display shows **TONE**.
- 3) Press \wedge or \vee key to select **TONE** or **PULSE** dial mode.
- 4) Press \Rightarrow key to confirm your selection.

Note: According to your telephone lines or PABX systems you may need to change the dialing mode between Tone and Pulse.

➤ **FLASH TIME**


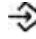


The user can select the flash time (100ms, 300ms, 600ms and 1000ms) to meet your telephone line or PABX requirement.

- 1) Press \Rightarrow key, then using \wedge or \vee key to select **FLASH TIME** item.
- 2) Press \Rightarrow key to enter.
- 3) Press \wedge or \vee key to select the desired flash time among 100ms, 300ms, 600ms and 1000 ms.
- 4) Press \Rightarrow key to confirm your selection.

➤ **MODIFY PIN**

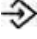


Some functions (including handset delete and base default) require a PIN code. The default PIN is 0000, but you are able to change to your personal 4-digit PIN.

- 1) Press \Rightarrow key to confirm. Then using \wedge or \vee key to select **MODIFY PIN** item.


- 2) Press  key to confirm, and the display shows **PIN?**
- 3) Entry the existing PIN code for the base and handset by using numerical keys (the default PIN code is 0000), then press  to confirm.
- 4) If the old code is validated, the display shows **NEW PIN**, enter a new PIN code (4 digits), press  to confirm.
- 5) The display shows **REPEAT**, input the new PIN code again.
- 6) Press  to confirm, the code will be stored and a tone sounded.

➤ **BASE DEFAULT**

This function allows the user to restore the base setting to the factory default.









- 1) Press  key, then using \wedge or \vee key to select **BS DEFAULT** item.
- 2) Press  key to confirm.
- 3) The user will be prompted to enter the PIN code, the display shows **PIN?**, then press numerical keys to input code (default as 0000).
- 4) Press  key to confirm. If the PIN code is validated all base settings will be returned to the factory default.

Handset Menu function 4: HS SETTINGS

The user is able to change a number of the settings for the handset to their own individual preferences. Press  key and use \wedge or \vee key to select **HS SETTINGS**. Then you can do below:

➤ **ALARM**

The user can set the alarm on the handset and adjust the alarm settings, to give an alert at a programmed time of every day.

- 1) Press  key, the first sub-menu is **ALARM** item.
- 2) Press  key to confirm.
- 3) Press \wedge or \vee key to select **ON** or **OFF**, press  key to confirm. Selection of **OFF** will turn the alarm off, and the user is dropped back to the **ALARM** menu surface, selection of **ON** option will turn the alarm on, then the user will be requested to set the alarm time.
- 4) After select **ON**, press  key to start the time settings of alarm, "12-00" displayed with "12" is blinking.
- 5) Press \wedge or \vee key to change the hours, press  key to confirm, use the same method to select minutes.
- 6) After select the alarm time, press  key, the user will be presented with a further option to select to ON or OFF to enable or disable the snooze function on the alarm.
- 7) Press  key to confirm your selection.
- 8) When the alarm is set, the  will appear on the top of the display

■ **Startup alarm:**

In idle state, the alarm will ring at very sharp time you have set.


■ **Intermit alarm:**

During the alarming, you can switch it off by pressing any key of the handset, or when a call comes, the alarm will be intermitted too.

■ **Close alarm:**


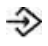

Re-enter the alarm setting menu option and select **OFF**.

Notes:



- 1) If the SNOOZE is set ON, the alarm will be repeated about every 5 minutes for about five times, with the alarm icon continuing to flash. During the alarming, press any key except  key to intermit alarming, and will begin to ring after 5 minutes.
- 2) If the SNOOZE is set OFF, the alarm will sound for 45 seconds once.

➤ **RING SETUP**



The user is able to change the handset ringing on internal calls and external calls. There are 10 ringer melodies and 5 different volume levels can be set.

- 1) Press  key, then using \wedge or \vee key to select **RING SETUP** item.
- 2) Press  key to enter.
- 3) Press \wedge or \vee key to select the **INT RING** and **EXT RING** setup.
- 4) Press  key to confirm.
- 5) Press \wedge or \vee key to select the **MELODY** and **VOLUME** setup.


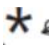
If select **MELODY**,

- a) Press  key to confirm.
- b) Press \wedge or \vee key to select desired melody, the corresponding melody sound can be heard with the selection.
- c) Press  key to confirm your selection.

If select **VOLUME**,


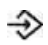


- a) Press  key to confirm.
- b) Press \wedge or \vee key to select desired ringer volume **1- 5**, the corresponding volume sound can be heard, if you want to switch off select **OFF**.
- c) Press  key to confirm your selection.

Notes:

- 1) If you select ring **OFF** for **INT RING**, when transfer call to this unit, it will not ring;
- 2) If you select ring **OFF** for **EXT RING**, there will be a ringing off icon  display on LCD and when there is an incoming call, the handset will not ring. (Shortcut key: press and hold  key to switch the handset external call ring on/off).

➤ **TONE SETUP**

The user is able to change the handset tone settings.

- 1) Press  key, then using \wedge or \vee key to select **TONE SETUP** item.
- 2) Press  key to enter.
- 3) Press \wedge or \vee key to select the **KEY TONE** and **BATTERY LOW, RANGE ALARM** setup.
- 4) Press  key to confirm.
- 5) Press \wedge or \vee key to select the **ON** or **OFF** to enable/disable the sounding of a beep respectively.
- 6) Press  key to confirm your selection.

Notes:

- 1) If you turn the tone on for key tone, a beep for key tone will sound when a key is pressed on the handset.

- 2) If you turn the tone on for battery low warning, a beep will sound when the battery is low.
- 3) If you turn the tone on for the out of range warning, a beep will sound when the handset goes out of range of the base unit.

➤ **Set the Equalizer**

The phone has three different frequency range filters to compensate for the ears limited sensitivity in these ranges.

- 1) press ➡ then using ^ or v key to select **HS SET**
- 2) press ➡ then using ^ or v key to select **EQLIZER**
- 3) press ➡ then using ^ or v key to select the desired frequency range filter(**NATURAL, TREBLE, BASS**)

➤ **LANGUAGE**

- 1) Press ➡ key, then using ^ or v key to select **LANGUAGE** item.
- 2) Press ➡ key to enter.
- 3) Press ^ or v key to select the language from **ENGLISH** (English), **DEUTSCH** (German), **FRANÇAIS** (French), **ITALIANO** (Italian), **ESPAÑOL** (Spanish), **PORTUGUES** (Portuguese), **РУССКОЕ** (Russian), **TÜRKÇE** (Turkish), **ΕΛΛΗΝΙΚΑ** (Greek), **УКРАЇНСЬКА** (Ukrainian), **POLSKI** (Polish), **MAGYAR** (Hungarian), **SVENSKA** (Swedish), **NEDERLANDS** (Dutch), **DANSK** (Danish) and **NORSK** (Norwegian). Each language will display in its own native translation.
- 4) Press ➡ key to confirm your selection.

➤ **HANDSET NAME**

The operation will allow the user to change the handset name

- 1) Press ➡ key. Using ^ or v key to select **HS NAME**
- 2) Press ➡ key, and the display will show a flashing cursor on the name line.
- 3) Key in the handset name.
- 4) If you make a mistake, press **R/CLR** key to correct.
- 5) Press ➡ key to confirm.

➤ **AUTO ANSWER**

The Handset can be set to answer an incoming call automatically by simply pick it up from the charging cradle. The user is able to select to enable/disable this auto answer feature.

- 1) Press ➡ key. Using ^ or v key to select **AUTO ANSWER**
- 2) Press ➡ key to enter.
- 3) Press ^ or v key to select **ON** or **OFF**
- 4) Press ➡ key to confirm your selection. Exit from this sub-menu and return the user to the **AUTO ANSWER**

➤ **BARRING**

The handset can be set to disable 5 groups outgoing calls. The user is able to select to enable/disable this feature. But the internal calls to intercom or conference will still be available.

- 1) Press ➡ key. Using ^ or v key to select **BARRING**,
- 2) Press ➡ key the user will be prompted to enter the PIN code, input 4-digit code (defaulted as 0000).
- 3) Press ➡ key to confirm, then using ^ or v key to select **ON** or **OFF**, press ➡ key to

confirm.

- 4) If select **ON**, the display shows **NUMBER 1**, press \wedge or \vee to choose **NUMBER i**(i=1~4).
- 5) Then press \Rightarrow to confirm, using the numerical key to input number (maximum 4 digits) which you want to barring. (For example: if you set barring number is 1234, then the numbers begin with 1234 will be not allowed to be dialed out, and LCD display **CALLS BARRED**.)
- 6) Press \Rightarrow key to confirm. Repeat the above steps to set the rest of 3 groups.

➤ **DATE & TIME**

The user is able to set the date and time on the handset, by selecting the following option.

- 1) Press \Rightarrow key. Using \wedge or \vee key to select **DATE&TIME**
- 2) Press \Rightarrow key and the last two digits of the year flashes.
- 3) Edit the year by pressing \wedge or \vee key. Then use \Rightarrow key to confirm and enter the month value setting.
- 4) Using the same method for month, date and time setting.

Notes:

- 1) The date and time will be automatically set when the caller ID message is received in FSK.
- 2) When the unit is powered on initially, the date and time will be blinking, please to set the date and time first according to use above methods.

➤ **CONTRAST**

The user is able to set the contrast of the LCD display, by selecting the following options.

- 1) Press \Rightarrow key to enter LCD display contrast settings.
- 2) Press \Rightarrow key. Using \wedge or \vee key to select **CONTRAST**,
- 3) Press \Rightarrow key to confirm, then press \wedge or \vee key to select from 1-8 levels.

➤ **SELECT BASE**

The handset can be registered to more than one base (up to a maximum of 4), and you can select which base you want the handset to operate with.

- 1) Press \Rightarrow key, then using \wedge or \vee key to choose **SELECT BASE**.
- 2) Press \Rightarrow key and the LCD displays **BASE 1 +**.
- 3) Press \wedge or \vee to select base (BASE 1~4) or AUTO.(Note: the handset will only link with base number followed by a "+")
- 4) Press \Rightarrow to begin searching, if you hear a sound of "di-du-di", means linked successful.

Note: If you select "AUTO", the handset will link with the first of the registered bases that it finds.

➤ **HANDSET DEFAULT :**

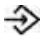



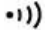
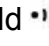
This function allows the user to restore the handset setting to the factory default

- 1) Press \Rightarrow key, then using \wedge or \vee key to select **HS DEFAULT** item.
- 2) Press \Rightarrow key to confirm.
- 3) The display shows **PIN?**, then key in the PIN code (default 0000).
- 4) Press \Rightarrow key to confirm. If the PIN code is validated all handset settings will be returned to the factory default.


Handset Menu function 5: REGISTRATION

Maximum 5 handsets can be linked to the same base unit by the follow ways,

Maximum 4 bases can be linked to the same handset by the follow ways:



- 1) In standby mode, press  key, then using \wedge or \vee key to select **REGISTRATION** item.
- 2) Press  key to enter, Press \wedge or \vee key to select BASE from **BASE1**, **BASE2**, **BASE3** or **BASE4**.
- 3) Press  key to confirm, LCD displays **PIN?**, then enter the pin code (defaulted as 0000, if input wrong number, press **R/CLR** to delete).
- 4) When finished, press  key to confirm. LCD display **SEARCHING**, then press BASE  and hold  key until you has get **DI-DU-DU-** sound. The handset and base have registration successfully.

Notes:


- 1) If the handset and base is fail to registration successfully, the handset will return to the standby mode.
- 2) You can repeat the above steps to register another handset for the same base, and the successfully registered handset will display **HS2** or **HS3** on the LCD according to the registration sequence.
- 3) Press  key to page the handset when difficult to look for.

ADVANCED OPERATION





Speakerphone operation & volume control

Press  key once to obtain a dial tone, dial your number, when you hear the called party answers the phone. You can also press  the key one more time to change the speaker to answer the call.

During the speakerphone operation, the user can adjust the speaker volume level by pressing the \wedge or \vee key. Total 5 levels for selection.

Note: If you press  key Use the speaker to convert to headphones, you can press the \wedge or \vee key to adjust the earpiece volume, total 6 levels for selection.

Mute the mouthpiece

During a call, press  key once to mute the mouthpiece and , **MUTE** will show on LCD. Press  key again to get back to the call and the , **MUTE** will disappear.

Caller ID – type I & II

➤ TYPE I

After you have applied the caller ID service, you can see the caller party phone number during an incoming ring.

➤ TYPE II

During the conversation, the phone number of the incoming call of the third party can be seen in the unit.

This function can be worked when the user applied the Telecom service.

Flash

The flash function of **R/CLR** key can support some special network service, such as call waiting, call transfer, etc. These services require a subscription and the operations depend on the

different exchanger.


Pause

Press **RD/P** key will insert a 3.6 seconds pause time between two digit numbers.


Pre-dialing

The unit has pre-dialing function, when you may enter and edit the number before dial it out.

The following procedure describes how to use this function:

- 1) In idle mode, enter the number you want to dial. During entering, you can press **R/CLR** key to correct the number.
- 2) Press  key once, the unit will dial out the number show on the LCD.

Redial function

In idle state, press  key, press **RD/P** key, the last dialed number will be dialed again.

One-touch Memory function

1) Store the number into one-touch memory

In on-hook state, pre-dial a number or scroll to the desired number.

Press and hold **M1** key till a “DI DO” sound being heard, the number is stored.

2) Dial one-touch memory


In on-hook or off-hook state, press **M1** key, the number is dialed out.

) Delete one-touch memory



In on-hook state, press **#** key twice, then press and hold **M1** key to delete it.

Double-touch memor

Can store 10 groups of Numbers respectively in the numeric key 0→9

- 1) Storage NUMBER: in standby state, predial a NUMBER to be stored, press  key, the LCD displays **TOP NUMBER _**, and then enter the storage address (for example: the NUMBER is stored in the NUMBER 2, enter 2), hear the "beep" sound, the NUMBER is stored.
- 2) Memory number dialed: in standby mode, long press the number key (for example: number stored in number key 2, hold press 2 key,) the storage number is dialed

Handset volume booster function

1. At handset conversation mode, if you feel the handset volume too low, press  once to increase the volume about 15 dB temporary to help you to lesson clearly.
2. Press  key again or pick up the handset next time, the handset volume is return to primary state.

To Lock/Unlock the keypad

To lock the keypad

Press and hold the **#**  key for about 2 seconds.

You will hear a beep tone, while the keypad is locked, any key you press is invalid.

To unlock the keypad

Press and hold the **#**  key for about 2 seconds.

You will hear a beep tone, the handset will be unlocked and it will go back to idle mode.




MULTI-HANDSET OPERATION

Maximum 5 handsets can be linked to the same base unit. Maximum 4 bases can be linked to the same handset.

If you have two handsets registered with one base, operation it by the follow ways:



➤ Intercom

The intercom feature is activated by pressing the  key.






- 1) In idle mode, press  key once.
- 2) The destination handset will ring, press  key to enter conversation mode. To end intercom mode, either handset can hang up the call by press  key.

➤ Call transfer

During a call, it's to transfer the call to another handset.

- 1) During a phone call, press  key once. The destination handset will ring.
- 2) Press  key of the other handset to accept the call.
- 3) The two internal handsets will be connected. To complete the transfer of the call, the initiating handset should be placed on the cradle and the external call will now be connected to the second handset.




➤ Three-way conference call

- 1) When a call comes, Press (HS1)  key
- 2) Then press (HS1)  key once. The destination handset will ring.
- 3) Press (HS2)  key to accept call.
- 4) Press (HS1) then the  key then you can talk all together.
- 5) Press  to quit the three-way conference mode, then other parties can also continue to communication.

If you have more than two handsets registered with one base, operation it by the follow ways:



➤ Intercom

The intercom feature is activated by pressing the  key.



- 1) In idle mode, press  key once.
- 2) The user will be prompted to select the number of the internal handset with which you wish to connect.
- 3) The destination handset will ring, press  key to enter conversation mode. To end intercom mode, either handset can hang up the call by press  key.

➤ Call transfer


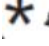

During a call, it's to transfer the call to another handset.

- 1) During a phone call, press  key once, you will be prompted to select the number of the internal handset with which they wish to connect.
- 2) The destination handset will ring. With the melody defined for an internal call.
- 3) Press  key of the other handset to accept the call.
- 4) The two internal handsets will be connected. To complete the transfer of the call, the initiating handset should be placed on the cradle and the external call will now be connected to the second handset.

➤ Three-way conference call

- 1) When a call comes, Press (HS1)  key
- 2) Then press (HS1)  key once, you will be prompted to select the number of the internal

handset with which you wish to connect.

- 3) The destination handset will ring.
- 4) Press (HS2)  key to accept call.
- 5) Press (HS1) then the  key then you can talk all together.
- 6) Press  to quit the three-way conference mode, then other parties can also continue to communication.

Note: Due to continuous product development, all features and specifications are subject to change without prior notice.

TROUBLE SHOOTING

- ✧ **No signal bar is displayed on the screen**
 - ✓ The handset is out of range. Move it closer to the base station
- ✧ **No dialing tone**
 - ✓ Check your phone connections
 - ✓ The handset is out of range. Move it closer to the base station
- ✧ **No docking tone**
 - ✓ The handset is not placed properly on the base station/ charger
 - ✓ The charging contacts are dirty. Disconnect the power adaptor first and clean the contact with proper damp cloth.
- ✧ **The handset on the charger does not charge**
 - ✓ Make sure the batteries are inserted correctly.
 - ✓ Make sure the handset is placed properly on the base station/ charger
 - ✓ Batteries are defective. Purchase new ones for replace.
- ✧ **No display**
 - ✓ Make sure the batteries are charged
 - ✓ Make sure there is power and the phone is connected
- ✧ **The handset no ring**
 - ✓ Make sure the handset ring tone is turned on.
- ✧ **Ring volume too low**
 - ✓ Check if the ringing volume is set improper, reset it.
- ✧ **Receive only**
 - ✓ Check if P/T mode is properly set.
 - ✓ Check if you have set the barring number, if you want dial out this number, reset the barring number.
- ✧ **The base can not page the handset**
 - ✓ Repeat the registration operations to register the base and handset again.
- ✧ **Most of the functions failed**
 - ✓ Check if the batteries are strong enough, charge the batteries.
 - ✓ If batteries are OK, remove the battery, unplug the lines and reinstall after 10 minutes.

Note: Due to continuous product development, all features and specifications are subject to change without prior notice.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This base complies with FCC radiation exposure limits set forth for an uncontrolled environment. This base should be installed and operated with minimum distance 20cm between the radiator& your body.

The handset has been tested and comply with FCC SAR limits.

1. This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
2. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
3. If this equipment [US: DARW401AD1015] causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to

file a complaint with the FCC if you believe it is necessary.

4. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
5. If trouble is experienced with this equipment [US: DARW401AD1015], for repair or warranty information, Service can be facilitated through our office at:
U.S. Agent Company name: Iconsign Inc.
Address: 2310 Homestead Road, Suite C1, Los Altos, CA, 94024, USA
Tel: +1 (408) 320-9867
Fax: N/A
If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
6. Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified. For repair procedures, follow the instructions outlined under the limited warranty.
7. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.
8. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this [W4] does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
9. If the telephone company requests information on what equipment is connected to their lines, inform them of:
 - a) The ringer equivalence number [0.1A]
 - b) The USOC jack required [RJ11]
 - c) Facility Interface Codes ("FIC") [N/A]
 - d) Service Order Codes ("SOC") [N/A]
 - e) The FCC Registration Number [US: DARW401AD1015]
10. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point. For this product the FCC Registration number is [US: DARW401AD1015] indicates the REN would be 0.1A.
11. We suggest the customers use a surge arrestor to protect the device.