Finger Tips

DAHL InTouch I GSM and WCDMA Dual sim-card Smart phone In Touch I DAHL SWEDEN MOBILE TECHNOLOGY AB

Quick Start Guide

Welcome to Dahl Intouch.

This Ouick Start guide tells you how to set up your cell phone Intouch and use its key features. To start, turn on your Intouch by pressing and holding the On/Off button for a few seconds. Then follow the onscreen instructions to set up your Intouch.



To turn off or restart intouch, press and hold the On/Off button for a few seconds, then drag the slider to confirm. To turn off the screen but still receive calls, press On/Off once. Press the Home button at any time to return to the Home screen. To quickly switch between recently used apps, double-click the Home button and tap an app icon.

Button basics.

Volume

Up/Down



Make a call.

Tap a phone number in Contacts, Favorites, an email, a text message, or almost anywhere | caller and recipient. in intouch to make a call. Or open the Phone app and tap the Keypad button to dial manually. To silence an incoming call, press the On/Off button once. To send a call directly to voicemail, press On/Off twice. To answer a call while using the intouch headset, press the center button once. Press it again to end



Messages

Requires a FaceTime-enabled device for both | Tap the Messages icon to send an SMS or | Intouch automatically corrects and suggests

Video call



MMS to other mobile phone users. Type a name or phone number in the To field or select someone from your contacts. Type your message, then tap Send. To send photos or video, tap the Camera button.



Intelligent keyboard

words as you type. So if you tap a wrong letter, iust keep typing. To accept the suggested cally inserts apostrophes in contractions. If dictionary. To dictate rather than type, tap the then tap Copy.



Cut, copy, and paste

Tap the text you want to edit, or touch and hold to bring up the magnifying glass, then slide your finger to move the insertion point. word, tap the space bar. Or tap the "x" to iq- You can select a word by double-tapping it, nore the suggestion. The keyboard automati- and select more or less text by dragging the grab points. Then tap to cut, copy, or paste. you tap the space bar twice, it adds a period. To copy text from web pages, email, or text You can double-tap a word to look it up in the messages, touch and hold to select the text,



Notifications

When you receive a notification, it appears briefly at the top of the screen without interrupting what you' re doing. Ignore it or tap it to respond right away. To see a

of your recent notifications, swipe down from the top of any screen. You can access a new notification from the Lock screen by sliding its icon to the right.



Go to Settings, then click it; Choose Wlan, choose On; Then you can see the list of available wifi connections: Click the wifi connections available to you, you need input the password if necessary; Then you can see the wifi signals on the top of the screen. You can use wifi for network connections to save you data browsing for surfing internet, watching videos, playing music, sending and other devices; To click the the device you receiving emails....

If you want to terminate the wifi network connections, please go to settings and click it. Choose Wlan and choose Off. Or go to the top of screen, pull down the menu and you see Wlan signal and click it, then Wlan will become grey and then it is successfully

Bluetooth

You can use blue tooth to exchange data either from you or from other people after

tooth, choose On; Then you can see signal to let your device to detect blue tooth of want to pair. Your Bluetooth will reminding you of connections. Choose Pairing or unpairing for connections;

connections, please go to settings and click

Go to Settings, then click it; Choose blue

If you want to terminate the blue tooth it. Choose blue tooth and then choose Off. Or go to the top of screen, pull down the menu

Camera

From the Lock screen, double-click the Home | Tap the Photos icon on the Home screen to button to quickly access the camera, or tap see your pictures. Flick right or left to move the Camera icon on the Home screen. Adjust focus and exposure by tapping anyone or anything on the screen. To take a picture, of your blue tooth from your device; You can tap the Camera button or press the Volume name your Bluetooth also. Then click it so as Up button. To record HD video, set the switch to Video, then tap the Record button. Tap it again to stop recording.



between images. Double-tap or pinch to

Tap once to bring up the onscreen controls. You can edit or enhance a photo, share it, print it, and more. If you have Photo Stream enabled in iCloud, new pictures you take are automatically pushed to all your other



Video and song controls

While playing music or watching a movie, tap anywhere on the screen to bring up the controls. Tap again to hide them. To stream vour music or video to an Apple TV, tap the AirPlay button.* From the Lock screen, you can double-click the Home button to quickly access your audio controls.



See the web up close

Double-tap any element on a web page—picture or text—to zoom in. Doubletan

again to zoom back out. Rotate iPhone to see the web in widescreen. Tap the Reader on compass view. Find places around you button at the top of the screen to view an article without clutter. Tap the Multi-page button to flick between multiple web pages or open a new one.



Find location, Search surroundings

To see where you are on a map, tap the Location button. A blue dot appears at your current position. To see which way you' re facing, tap the Location button again to turn by typing words like "Starbucks" or

"pizza" in the search field. Double-tap to zoom in. Tap once with two fingers to zoom out. Youcan also get directions or tap the Page Curlbutton for additional map views.



Create folders, Organize apps

Touch and hold any app icon until it starts to jiggle. Then drag one app onto another to create a folder. Folders are automatically named by category, or you can rename them. You can customize your Home screen by dragging apps and folders to different positions and screens. When you' re done, press the Home button.



Learn more

Learn more about Intouch features

For the InTouch User Guide and important information, visit support, dahlmobile.com intouch. To view the guide on intouch, download it from the

www.dahlmobile.com/ inTouch.

Get support

Contact your wireless service provider for support on network services, voicemail, and billing.

intouch for support on Intouch

Battery The lithium-ion battery in InTouch I should be replaced by Dahl Mobile or a Dahl Mobile Authorized Service Provider, and must be recycled or disposed of separately from household waste.

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by

unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device. pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is
- -- Consult the dealer or an experienced radio/TV technician for help.
- 1. Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.



2. RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

- 3. The product shall only be connected to a USB interface of version USB2.1
- 4. Adapter shall be installed near the equipment and shall be easily accessible.
- 5. EUT Temperature:-10 °C ~+55°C
- 6. Adapter: The plug considered as disconnect device of adapter

Manufactory: DAHL MODEL: KYT0500100BV

Input: 100-240Vac, 50/60Hz, Max 0.2A

Output: 5Vdc, 1A

7. The device complies with RF specifications when the device used at 1cm form your body

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC,

Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure quidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1 cm from the