









SECURITY INFORMATION





Please remember to obey relevant rules and regulations whenever use your phone. This will prevent bad effect from you and the environment.

General security



	Don't make or receive handheld calls while driving. And never text while driving.
	Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.
	Your phone may produce a bright or flashing light.
	Small parts may cause a choking.

	Don't dispose of your phone in fire.
	Your phone can produce a loud sound.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.
	Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.

	Don't take your phone apart.
	Switch off when near explosive materials or liquids.
	Only use approved accessories.
	Don't rely on your phone for emergency communications.

INTRODUCING YOUR MOBILE PHONE

Learn about your mobile phone's layout, keys, display and icons.

Unpacking

Check the product box for the following items:

- Mobile phone
- Battery
- Travel adapter (charger)
- User manual


The supplied accessories perform best for your phone.

Phone layout

From the front view of your phone you will observe the following elements:



From the front view of your phone you will observe the following elements:

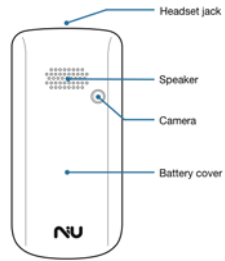

Keys

The following table offers you a quick description about the phone's keys:

Key	Function
FUNCTION	Perform the action indicated in the bottom of the screen.
NAVIGATION	In standby mode, you can access the user-defined functions, In Menu mode, scroll through menu options.
CENTRAL BUTTON	In standby mode, press and hold the button to turn on the flashlight, In Menu mode, select the highlighted menu option or confirm an action.
CALL	Open the list of recent calls or make a call to the displayed number. You can answer an incoming call.
HANG UP	Ends a call or reject an incoming call. Hold down for 3 seconds to turn on / off the phone.
1.....0	Enter numbers, text and / or special characters.

Screen

The screen of your mobile phone is designed as follows:



PREPARING YOUR MOBILE PHONE

Get started setting up your mobile phone for its first use.

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services.

To install the SIM card and battery,

1. Remove the battery cover.



 
2. Insert the SIM card.

Your phone has 2 SIM card slots to allow you use 2 SIM cards and switch between them.



- Place the SIM card in the phone with the gold-colored contacts facing down.
- Without inserting a SIM card, you can use your phone's non-network services and some menus.

3. Insert the battery.




4. Replace the battery cover



Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts MicroSD™ or MicroSDHC™ memory cards up to 32 GB (depending on memory card manufacturer and type).

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

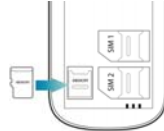



Learn how to perform basic operations of your mobile phone.

Turn your phone on and off

To turn your phone on,

1. Press and hold [Power].
2. Enter your PIN and press < OK > (if necessary).

To turn your phone off, repeat step 1 above.

Access menus

To access your phone's menus,

1. In Idle mode, press the left soft key < Menu > to access Menu mode.
2. Use the Navigation key to scroll to a menu or option.
3. Press < Select>, < OK>, or the Confirm key to confirm the highlighted option.
4. Press < Back> to move up one level; Press [Power] to return to Idle mode.

Use basic call functions

Learn to make or answer calls in this section

Make a call:

1. In Idle mode, enter an area code and a phone number.
2. Press [☎] to dial the number.
3. To end the call, press [⏏].

Answer a call:

1. When a call comes in, press [☎].
2. To end the call, press [⏏].

Send and view messages

In this section, learn to send and view text (SMS), multimedia (MMS).

To send a text or multimedia message:

1. In Menu mode, select Messages → Create new message → Message.
2. Enter a destination number and scroll down.
3. Enter your message text.

For sending as a text message, skip to step 5.
For attaching multimedia, continue with step 4.

4. Press < Options> → Add multimedia and add an item.

5. Press < Options> → Send to send the message.

Add contacts

Learn the basics of using the phonebook feature.

Add a new contact:

1. In Idle mode, enter a phone number and press <Options>.

2. Select Save → a memory location (phone, SIM1, or SIM2) → New.

3. Select a number type (if necessary).

4. Enter contact information.


5. Press < Options > → Save to add the contact to memory.

Find a contact

1. In Menu mode, select Phonebook.

2. Enter the first few letters of the name you want to find.

3. Select the contact's name from the search list.

Once you have found a contact, you can call the contact by pressing [].

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio:

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select FM radio.
3. Press the Confirm key to start the radio.
4. Control the FM radio using the following keys:

Key	Function
NAVIGATION	In standby mode, you can access the user-defined functions, In Menu mode, scroll through menu options.

Listen to music files:

After transferring music files to the "My Music" folder of your phone or memory card,

1. In Menu mode, select Multimedia → Audio Player.
2. Select a music category → a music file.
3. Control playback using the following keys:

Key	Function
NAVIGATION	In standby mode, you can access the user-defined functions, In Menu mode, scroll through menu options.

Using the flashlight

To turn on or off the flashlight, switch the side button.

Browse the web

Learn to access your favorite web pages.

Browse web pages:

1. In Menu mode, select Browser → Home → a SIM card (if necessary) to launch your service provider's homepage.
2. Navigate web pages using the following keys:

Key	Function
NAVIGATION	In standby mode, you can access the user-defined functions. In Menu mode, scroll through menu options.

USING THE CAMERA

Learn the basics to capture and view photos.

Capture photos

1. In Menu mode, select Camera to turn on the camera.
2. Aim the lens at the subject and make any adjustments.
3. Press the Confirm key to take a photo.
The photo is saved automatically.
4. Press < Back> to take another photo (step 2).

View taken photos

Press the left soft key then choose Photos to access to the photos gallery quickly.

Camera options

Entering in the Camera options you will be able to configure the following options:

Camera settings:

Select a shutter sound every time you take a picture.
Change the exposure value to adjust the photo brightness.

Change the Anti-flicker value to eliminate the fluorescent effect on the photos.

Adjust the contrast to differentiate dark and light areas.

Modify the delay timer to take self-photos.

Change the continuous shot number to take a series of photos.

Image settings:

You can change the image size.

You can adjust the image quality.

White balance:

Choose a color scheme according to the ambient.

Scene mode:

Allow you to select the night mode (extra light) or let the phone to choose the best mode.

Effect settings:

Add a color effect to the photos taken.

Storage:

Let you choose where to store the photos taken.

Restore default:

Restore the camera setting to the factory values.

CONNECTING TO INTERNET

Learn the basics to configure your phone and connect to Internet.

Add a new connection

1. In Menu mode, select Settings → Connectivity → Data account.
2. Press < Options > then Add Data account.
3. Set the parameters according to your carrier.

The basic parameters are:

- Account name
- APN
- Username
- Password
- SIM selection (if necessary)

Some carriers use Proxy Servers, refer to your carrier configuration for more information.

4. Once the needed parameters are set, press < OK > and confirm the new connection pressing < Yes >.

To use the connection as default, press < Options > then Change default.

To add another connection, repeat all the steps.

Configure the browser

Once the connection is added, you need to configure the Internet browser:

1. In Menu mode, select Services → Internet service → Settings → Data account, select the SIM card (if necessary) and choose the connection created in the previous step.

Switch between carriers (SIM cards)

If you use multiple SIM cards and want to switch to another one, follow these steps:

1. Configure the connection for both SIM cards (refer to "Add a new connection").

2. In Menu mode, select Services → Internet service → Settings → Select profile and choose SIM1 or SIM2 according your necessities.

Is possible to select Always ask, then the browser will ask which SIM you want to use before start the Internet session.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the Phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone

While operating can be well below the maximum value, in general, the closer you are to a Wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure accessory that Contains no metal and that positions the handset a minimum of 1.5 cm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.