



# QUICK START GUIDE



1. REMOVE BACK COVER

 


2. INSERT SIM CARDS AND  
MEMORY CARD



EN

3. INSERT BATTERY

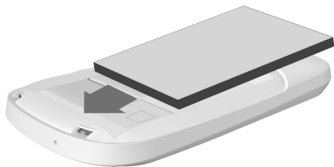

4. CHARGE FOR 8 HOURS BEFORE  
TURNING ON.



 
5. TURN CELL PHONE ON AND  
WAIT FOR INITIAL SETUP



6. MULTIMEDIA PLAYER



CONNECT PHONE TO COMPUTER VIA USB  
CABLE TO TRANSFER MUSIC

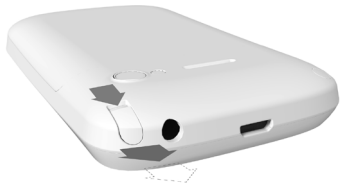

EXTEND THE ANTENNA FOR TV AND  
FM RADIO USAGE.

## 7. LED LIGHT



PRESS AND HOLD THE CENTER BUTTON  
TO TURN ON AND OFF THE LED LIGHT

# USER MANUAL SPRIZ<sup>P430</sup>



EN



## INTRODUCING YOUR MOBILE PHONE

Learn about your mobile  
phone's layout, and keys.

## UNPACKING

Check the product box for the following  
items:

Mobile phone

Battery

Travel adapter (charger)

 
User manual

The supplied accessories perform best for your phone.




## PHONE LAYOUT

From the front view of your phone you will observe the following elements:

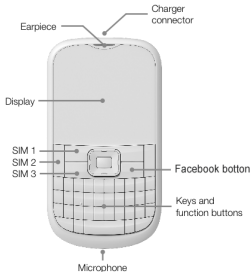

 From the back view of your phone you will observe the following elements:

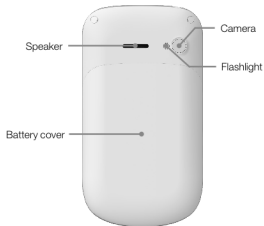

## KEYS

The following table offers you a quick description about the phone's keys:

KEY	Function
FUNCTION	Perform the action indicated in the bottom of the screen.
NAVEGATION	In standby mode, you can access the user-defined functions. In Menu mode, scroll through menu options.
CENTRAL BUTTON	In standby mode, press and hold the button to turn on the flashlight. In Menu mode, select the highlighted menu option or confirm an action.
CALL SIM 1	Open the list of recent calls or make a call to the displayed number. You can answer an incoming call.

CALL SIM 2	Open the list of recent calls or make a call to the displayed number. You can answer an incoming call.
CALL SIM 3	Open the list of recent calls or make a call to the displayed number. You can answer an incoming call.
HANG UP	Ends a call or reject an incoming call. Hold down for 3 seconds to turn on / off the phone.
0123.....9	Enter numbers, text and / or special characters.
#	Hold down 3 seconds to change the sound profile to vibrate.





## PREPARING YOUR MOBILE PHONE

Get started setting up your  
mobile phone for its first use.

### INSERT SIM AND BATTERY

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services.

To install the SIM cards and battery,

1. Remove the battery cover.



 
## 2. Insert SIM cards.

Your phone has 3 SIM card slots to allow you use 3 SIM cards and switch between them.



- Place the SIM card in the phone with the gold- colored contacts facing down.
- Without inserting a SIM card, you can use your phone's non-network services and some menus.

## 3. Insert the battery.

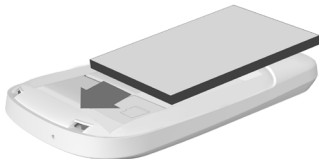

## 4. Replace the battery cover.

## INSERT A MEMORY CARD(OPTIONAL)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ or microSDHC™ memory cards up to 32 GB (depending on memory card manufacturer and type).

Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

1. Remove the battery cover.



2. Unlock the memory card holder

3. Lift the memory card holder and insert a memory holder with the label side facing up.



4. Close the memory card holder

5. Lock the memory card holder.

6. Replace the battery cover.

To remove the memory card, remove the battery cover, unlock and lift the memory card holder, and remove the memory card.




## USING BASIC FUNCTIONS

Learn how to perform basic  
operations of your mobile  
phone.

## ON AND OFF

To turn your phone on,

1. Press and hold [].
2. Enter your PIN and press < OK > (if necessary).

 
## ACCESS MENUS

To access your phone's menus,

1. In Idle mode, press the left soft key < Menu > to access Menu mode.
2. Use the Navigation key to scroll to a menu or option.
3. Press < Select>, < OK>, or the Confirm




 
key to confirm the highlighted option.

4. Press <Back> to move up one level;  
Press [] to return to Idle mode.


 
## USE BASIC CALL FUNCTIONS

Learn to make or answer calls in this section

Make a call:

1. In Idle mode, enter an area code and a phone number.
2. Press [] to dial the number.
3. To end the call, press [].

Answer a call:

1. When a call comes in, press [].
2. To end the call, press [].

## SEND AND VIEW MESSAGES

In this section, learn to send and view text (SMS), multimedia (MMS).

To send a text or multimedia message:

1. In Menu mode, select Messages -> Create new message -> Message.
2. Enter a destination number and scroll down.

3. Enter your message text.

For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4.

4. Press < Options> -> Add multimedia and add an item.

5. Press < Options> -> Send to send the message.

### **Add contacts**

Learn the basics of using the phonebook feature.

#### **Add a new contact:**

1. In Idle mode, enter a phone number and

press <Options>.

2. Select Save -> a memory location (phone, SIM1, or SIM2) -> New.

3. Select a number type (if necessary).

4. Enter contact information.


5. Press < Options > -> Save to add the contact to memory.

### **Find a contact**

1. In Menu mode, select Phonebook.

2. Enter the first few letters of the name you want to find.

3. Select the contact's name from the search list.

Once you have found a contact, you can call the contact by pressing [  ]

## LISTEN TO MUSIC

Learn how to listen to music via the music player or FM radio.

### Listen to the FM radio:

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select FM radio.
3. Press the Confirm key to start the radio.

4. Control the FM radio using the following keys:

KEY	FUNCTIONS
NAVEGATION	Controls the FM radio functions, turning on or off, change channels, channel scanning.

### Listen to music files:

After transferring music files to the "My Music" folder of your phone or memory card,

1. In Menu mode, select Multimedia → Audio Player.
2. Select a music category → a music file.

3. Control playback using the following keys:

KEY	FUNCTIONS
NAVEGATION	Controls audio player functions, turning on or off, change Music, search music.

### Using the flashlight

To turn on or off the flashlight, press and keep pressing the center button for about 3 seconds.



## USING THE CAMERA

Learn the basics to capture  
and view photos.

### Capture photos

1. In Menu mode, select Camera to turn on the camera.
2. Aim the lens at the subject and make any adjustments.
3. Press the Confirm key to take a photo. The photo is saved automatically.
4. Press < Back> to take another photo (step 2).

### View taken photos

Press the left soft key then choose Photos to access to the photos gallery quickly.

### Camera options

Entering in the Camera options you will be able to configure the following options:

**Camera settings:**

Select a shutter sound every time you take a picture.

Change the exposure value to adjust the photo brightness.

Change the Anti-flicker value to eliminate the fluorescent effect on the photos.

Adjust the contrast to differentiate dark and light areas.

Modify the delay timer to take self-photos.

Change the continuous shot number to take a series of photos.

**Image settings:**

You can change the image size.

You can adjust the image quality.

**White balance:**

Choose a color scheme according to the ambient.

**Scene mode:**

Allow you to select the night mode (extra light) or let the phone to choose the best mode.

Effect settings:

Add a color effect to the photos taken.

**Storage:**

Let you choose where to store the photos taken.

**Restore default:**


Restore the camera setting to the factory values.



## SECURITY INFORMATION

Please remember to obey relevant rules and regulations whenever use your phone. This will prevent bad effect from you and the environment.

## GENERAL SECURITY

	Don't make or receive handheld calls while driving. And never text while driving.
	Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.
	Your phone may produce a bright or flashing light.
	Small parts may cause a choking.

	Don't dispose of your phone in fire.
	Your phone can produce a loud sound.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.

	Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.
	Don't take your phone apart.
	Switch off when near explosive materials or liquids.
	Only use approved accessories.
	Don't rely on your phone for emergency communications.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

#### **Specific Absorption Rate (SAR) information:**

This wireless phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Device types: SPRIZ P430 (FCC ID: A4JSPRIZP430) has also

been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.643W/kg and when properly worn on the body is 0.928W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

## **Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not

comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

