



FRONT SIDE

Importer: ООО «Октобл», 141031, Россия, Московская область, Мытищинский район, МКАД 84-й км., ТПЗ «Алтуфьево», владение 3, +7(495)6414446  
 進口代理商台灣迪卡儂有限公司 臺中市南屯區大墩南路379號 04-24713612 攝影機遙控器 主要材料: 聚碳酸酯 (PC) 製造日期:

для занятий спортом  
 дистанционное управление  
 以下标示仅在中国大陆地区适用  
 商標 DECATHLON  
 产品名称: 相机遙控器 G-EYE REMOTE  
 功能: 用于旅游遙控指定型号运动相机  
 電池: CR2032鈕扣電池  
 防水等級: IPX7  
 执行标准:

ONVIF:  
 生产商: 迪脉(上海)企业管理有限公司  
 地址: 上海市浦东新区板桥路393号2幢二层西北側 邮编: 201204  
 产品等级: 合格品  
 质检证明: 合格

540-0011 大阪府中央区農人橋1-1-22 大江ビル10階 ナチュラムイーコマース株式会社  
 IMPORTADO PARA O BRASIL POR IGUASPORT Ltda CNPJ: 02.314.041/0001-88  
 TURKSPORT Spor Ürünleri Sanayi ve Ticaret Ltd.Şti Osmangazi Mahallesi Çobançeşme Koşuyolu Bulvarı No: 3 Marmara Forum Garden Office 0B Blok 01 Bakırköy 34146 İstanbul, TURKEY

廢電池請回收  
 Made in China  
 Fabricado na China  
 Произведено в Китае  
 Imat edikdij yor Çin  
 中國製造  
 中國製造  
 中国製造

www.customer-care.geonaute.com  
 Ref pack: 2165620  
 63068  
 DECATHLON  
 DECATHLON - 4 Boulevard de Mons - BP 299 59665 Villeneuve d'Ascq cedex - France

3 583788 274087 8387342

BACK SIDE

EN Start / Pause video FR Démarrer / Mettre en pause la video ES Iniciar / Pausar el video DE Start / Video unterbrechen IT Avviare / Mettere in pausa il video NL De video starten / pauzeren PT Iniciar / pausar video em pausa PL Włącz wideo / Pauza HU A videó indítása / megszakítása RO Pornire / pauza video SK Spustiť / Prelušit video CS Spustit / Pozastavit video SV Starta / pausa video BG Havano / П оставяне на пауза на видеото HR Pokreni / pauziraj video SL Začetek / prekinitev posnetka EL Εκκίνηση / Πάυση βίντεο TR Videoyu başlat / duraklat RU Включить / Поставить на паузу видео VI Bật / Dừng video ID Start / Pause video ZH 开始/暂停播放视频 JA 動画の開始/一時停止 ZT 開始/暫停視頻 TH เริ่มต้น/หยุดชั่วคราว KO 시작 / 일시 중지 동영상 AR بدء تشغيل الفيديو / إيقافه FA شروع فیلمبرداری / توقف آن

EN Simultaneous photo FR Photo en simultané ES Foto simultánea DE Gleichzeitig angezeigte Bilder IT Foto in simultanea NL Gelijktijdige foto-opname PT Fotografia em simultâneo PL Zjęcie robione równocześnie HU Egyidőjű foto RO Realizare fotografie simultan SK Simultánne fotografie CS Současné focení SV Simultant foto BG Едновременна снимка HR Simultana fotografija SL hkratsno slikanje EL Τουτόχρονη φωτογράφιση TR Simultane fotoğraflar RU одновреме́нно VI Ảnh chụp đồng thời ID Foto secara simultan ZH 同步照片 JA 同時写真 ZT 同步照片 TH ถ่ายภาพในเวลาเดียวกัน KO 동시 사진 AR تصوير متزامن FA تصویر همزمان

EN Stop video FR Stopper la video ES Parar el video DE Video anhalten IT Arrestare il video NL De video onderbreken PT Parar video PL Zatrzymanie wideo HU A videó megállítás RO Oprire video SK Zastavit video CS Zastavit video SV Stoppa video BG Край на видеото HR Zauzaviti video SL Zauzavitev posnetka EL Δικοπή βίντεο TR Videoyu durdur RU Остановить видео VI Ngừng video ID Stop video ZH 停止播放视频 JA 動画の停止 ZT 停止視頻 TH หยุดวิดีโอ KO 동영상 중지 AR إيقاف الفيديو / إيقافه FA توقف فیلمبرداری

EN Pairing : follow the procedure after activating the REMOTE function in the general camera settings FR Appairage : suivre la procédure après avoir activé la fonction REMOTE dans les paramètres généraux de la caméra ES Emparejado: siga el procedimiento después de activar la función REMOTE en los ajustes generales de la cámara DE Kopplung: Folgen Sie den Anweisungen nach dem Aktivieren der REMOTE-Funktion in den allgemeinen Kameraeinstellungen IT Accoppiamento: seguire la procedura dopo avere attivato la funzione REMOTE nelle impostazioni generali della videocamera NL Koppelen: Volg de procedure nadat u de functie AFSTANDSBEDIENING hebt geactiveerd in de algemene camera-instellingen PT Emparelhamento: siga o procedimento após ativar a função REMOTA nas configurações gerais da câmara PL Parowanie: postępuj zgodnie z procedurą po włączeniu funkcji REMOTE w ustawieniach ogólnych kamery HU Párosítás: a funkciókezdés előtt általános beállításokban a REMOTE funkció aktiválása után kövesse a lépéseket RO Cuplarea: urmați procedura după ce ați activat funcția REMOTE în setările generale ale camerei SK Párovanie: Po zapnutí DIALKOVEJ funkcie vo všeobecných nastaveniach kamery sa riadte postupom CS Párování: postupujte dle pokynů po aktivaci funkce REMOTE v obecném nastavení kamery SV Koppling: Följ förfarandet efter aktivering av funktionen REMOTE (Fjärranströming) i de allmänna kamerainställningarna BG Събиране на дадене части: спазвайте процуду рата, след като сте активирали функцията ДИСТАНЦИОННО в общите настройки на камерата HR Uparivanje: sledite postupak za aktiviranje funkcije DALJINSKOG u općim postavkama fotoaparata SL Povezovanje: v splošnih nastavitvah aktivirajte funkcijo DALJINSKEGA UPRAVLJANJA in sledite postopku EL Ζεύξη: ακολουθήστε την διαδικασία όπου ενεργοποιήσετε την λειτουργία REMOTE στις γενικές παραρμ του κάμερας TR Birleştirme: kameranın genel ayarları içinde, REMOTE fonksiyonunu etkin durumuna getirdikten takiben, prosedüre devam ediniz. RU Соединение: следуйте процедуре после активации функции REMOTE в общих настройках камеры. VI Ghép đôi: theo các thủ tục sau khi kích hoạt chức năng REMOTE trong cài đặt camera chung ID Penyambungan: ikuti lah prosedur setelah mengaktifkan fungsi REMOTE pada pengaturan umum kamera ZH 配对: 在常规相机设置中启动遙控功能后执行此程序。JA 一般カメラ設定でリモート機能を手動させた後、手順に従ってください。ZT 配对: 在常规相机设置中启动遙控功能之后, 进行以下的步骤 TH การจับคู่: หลังจากเปิดใช้งานฟังก์ชันการเชื่อมต่อระยะไกลแล้ว ให้ปฏิบัติตามขั้นตอนการเชื่อมต่อ REMOTE ในค่าการตั้งค่ากล้องทั่วๆ ไป AR إعداد الكاميرا: بعد تفعيل وظيفة التحكم عن بعد في الإعدادات العامة للكاميرا، اتبع الخطوات التالية. FA تنظیم دوربین: پس از فعال کردن عملکرد کنترل از راه دور در تنظیمات کلی دوربین، مراحل زیر را دنبال کنید.

# EN - General instructions for use For US market

G-EYE REMOTE - 8387342

**DECATHLON**

DECATHLON - 4 Boulevard de Mons - BP  
299 59650 Villeneuve d'Ascq cedex - France

**ROCKRIDER**

Questions or missing parts ?

[customer.service@decathlon.com](mailto:customer.service@decathlon.com)

## IMPORTANT

- Decathlon is not liable for accidents or injuries due to improper use of the product, failure to adhere to the instructions given in this guide, or modifications to the product

- To avoid serious injury or death, follow the safety information in this document

- Keep these instructions

- While every effort has been made to ensure that the information contained in the

guide is accurate and complete, Decathlon is not liable for any errors or omissions

- This product is not a toy. It is not intended for use by children 12 years of age or younger. Youth of ages 13 to 17 should only

use this product under the direct supervision of an adult. An adult should review and explain the full set of instructions in this guide with the youth (age 13 years and over) before using it.

## SAFETY INSTRUCTIONS

Failure to follow these warnings may result in serious injury or property damage and will void warranty.

- WARNING RELATED TO SAFETY PRECAUTIONS :

- WARNING + PICTO When using the G-EYE Remote during your activities always be aware of your surroundings to avoid injuring yourself and others.

- WARNING + PICTO Observe the following precautions :

-Do not drop, disassemble, crush, bend, deform, incinerate or microwave the G-EYE Remote.

-Do not use the G-EYE Remote if it has been cracked, punctured or damaged by water.

-Do not use the G-EYE Remote in water

-Do not dry your G-EYE Remote with an external heat source : microwave or hair dryer for example.

-Failure to observe these precautions could result in fire or electric shock.

- WARNING The G-EYE Remote is designed to be operated in tempera-

tures between 0° C and 40° C.

Extreme temperatures may temporarily affect battery life or affect the functionality of the G-EYE Remote. During use, your G-EYE Remote may become hot. Simply let it sit and cool before attempting to use it again.

- CAUTION When using your G-EYE Remote closed to another electronic device, read the safety precautions of this device. Turn off your G-EYE Remote when rescues actions using localisation tools (GPS, BEA-

CONS...) are running around you to limit the interferences.

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide rea-

sonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- However, there is no guarantee that interference will not occur in a particular installation.

- If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.  
- NOTE: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.