

Questions ?

customer.service@decathlon.com

 **IMPORTANT**

- Decathlon is not liable for accidents or injuries due to improper use of the product, failure to adhere to the instructions given in this guide, or modifications to the product

- To avoid serious injury or death, follow the safety information in this document
- Keep these instructions
- While every effort has been made to ensure that the information contained in the

guide is accurate and complete, Decathlon is not liable for any errors or omissions
- This product is not a toy. It is not intended for use by children 12 years of age or younger. Youth of ages 13 to 17 should only

use this product under the direct supervision of an adult. An adult should review and explain the full set of instructions in this guide with the youth (age 13 years and over) before using it.

SAFETY INSTRUCTIONS

Failure to follow these warnings may result in serious injury or property damage and will void warranty.

WARNING RELATED TO SAFETY PRECAUTIONS :

- WARNING When using the G-EYE 900 and during activities : always be aware of your surroundings to avoid injury to yourself and others.
- WARNING Observe the following precautions :
-Do not drop, disassemble, crush, bend, deform, incinerate or microwave the camera.
-Do not insert foreign objects in the connectors of the camera.
-Do not use the camera if it has been cracked, punctured or damaged by water.
-Do not use the camera in water or in a humid area without the waterproof casing and its closed door.
-Do not dry your camera with an external heat source : microwave or hair dryer for example.

-Failure to observe these precautions could result in fire or electric shock.
- WARNING When camera is charging, do not handle the plug or charger with wet hands : failure to observe this precaution could result in electric shocks.
- WARNING Only use chargers marked : «OUTPUT 5V 1A». If you don't know, use the included USB cable to charge with your computer.
- WARNING If using your G-EYE camera with a helmet mount, always make sure that select helmet that meets the applicable safety standards. Select the right helmet for your sport and control that the size fit for you. Inspect your helmet to make sure that it is in good condition and always follow the helmet manufacturer's instructions. No helmets can avoid injuries in every accident.

- WARNING Your G-EYE is designed with glass (lens, screen). Should the glass break, care should be taken to avoid injuries.
- WARNING During use or charge, your G-EYE may become hot. Simply let it sit and cool before attempting to use it again.
- WARNING This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.
- CAUTION When using your camera near another electronic device, read the safety precautions of the user manual. Turn off your camera when rescues actions using localisation tools (GPS, BEACONS...) are

running around you to limit the interferences.
- CAUTION Risk of fire and burns. Do not recharge, disassemble, heat above (the manufacturer's specified temperature rating), or incinerate. Keep battery out of reach of children and in original package until ready to use. Dispose of used batteries promptly. Never put batteries in mouth. If swallowed, contact your physician or local poison control center."
- NOTICE Avoid using your camera in very cold or very hot temperatures environments. Low or high temperatures conditions may temporarily shorten the battery life or may cause the camera stop working properly.
- NOTICE Always follow the local laws when using your camera, including privacy laws which may restrict recording in certain areas.

USER INSTRUCTIONS:

WARNING RELATED TO USER INSTRUCTIONS :

NOTICE When using G-EYE camera, always use the related mount to your sport.
Please, before using your G-EYE, refer to the user manual included in the packaging.

STORAGE:

To ensure that your product lasts, we advise you to:

WARNING RELATED TO STORAGE:

- WARNING Before cleaning your G-EYE, take care to unplug your device

from an electricity power source (charger, PC...).
- NOTICE After using, rinse the waterproof case under pure water then wipe it with a clean tissue.

- NOTICE Store your camera within its waterproof case in a dry and temperate condition.

- NOTICE Before storage, recharge your G-EYE and then unplug it from an electricity power source (charger, PC...)

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment.
- To ensure RF exposure levels remain at or below the tested levels use a beltclip, holster, or similar accessory that have no metallic component in the assembly and must main-

tains a minimum separation distance of 0mm between your body and the device.
- SAR information for this device is on file with FCC and can be found under the display grant section of <https://www.fcc.gov/oet/ea/fccid>
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- NOTE: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.