




| | | | | | |
|----|---|-----------------------------|----|---|-------------------------|
| 11 |  | Pager Tone On | 12 |  | Siren |
| 13 |  | Silent Mode 2 | 14 |  | Transmit |
| 15 |  | Receive | 16 |  | Out of Range |
| 17 |  | Sensor | 18 |  | Sensor Bypassed |
| 19 | ALL | All Zones | 20 | 1 | 1 |
| 21 |  | Car Door | 22 |  | Car Door (Zone bypass) |
| 23 |  | Hood (Trigger) | 24 |  | Hood (Zone bypass) |
| 25 |  | Trunk (Trigger) | 26 |  | Trunk (Zone bypass) |
| 27 |  | Home (Garage - Open) | 28 |  | Home (Garage Close) |
| 29 |  | Small Remote Start | 30 |  | Timer Mode |
| 31 |  | Manual Transmission Enabled | 32 |  | Car 1 |
| 33 |  | Car 2 | 34 |  | Thermometer very cold |
| 35 |  | Thermometer cold | 36 |  | Thermometer comfortable |
| 37 |  | Thermometer warm | 38 |  | Thermometer hot |
| 39 |  | Defroster | 40 |  | Arrow |
| 41 |  | Sound Wave | 42 |  | Large Siren |

➤ Feature List:

Arm

Command: Press one time to Arm

Feedback: Lock Icon will appear, and one beep from remote

Notes: Press/hold for 1.5 seconds to Arm the system and then activate the Panic output

Disarm

Command: Press one time to Disarm

Feedback: Unlock icon appears and remote beeps twice

Notes: Press/hold for 1.5 seconds to Disarm the system and then activate the Panic output

Remote Start

Command: Press one time to activate Remote Start

Feedback: Remote Start Icon appears on screen. remote emits a tone

Aux

Command: **Press** and **hold** for 1.5 seconds to activate the Trunk Release.

Feedback: The trunk icon appears and the remote plays a short tone.

Notes: This is an optional feature. See your sales rep/installer for details.

Function shift

Command: **Press** 1 to 4 times. (See Function shift table)

Feedback: Display shows a text message across the bottom for the command received.

Notes: Each Press then release, shifts the function of the command button.