- Tall curb stone
- Towing eyelet mounted on your vehicle
- Towing hitch mounted on your vehicle

## The Lexus park assist system may not detect the following:

- Thin objects such as wire or rope
- Objects with a surface area too small to reflect ultrasonic waves such as wire gauze or fence
- Sound wave absorbing objects such as catton or snow
- Objects with a sharp edge.
- Shorter objects
- · Tall objects with the upper part projected

# Hands-free system

Hands-free system allows you to call or receive without your hands off the steering wheel by connecting your cellular phone.

This system supports the Bluetooth. Bluetooth is a data wireless system by which you can call without your cellular phone connecting with a cable or placing on a cradle.

If your cellular phone does not support the Bluetooth, this system can not be functioned.


#### INFORMATION

inthefollowingconditions, the system may not be functioned.

- The cellular phone is turned OFF.
- The current position is outside the communication area.
- The cellular phone is not connected.
- The cellular phone has a low battery.



By pushing the switch above, you can receive a call or hang up without your hands off the steering wheel.

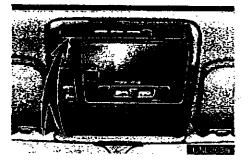

You can use the microphone above when talking on the phone.

103

 $\neg$ 


## OTHER FUNCTIONS

# **CAUTION**


While you are driving, do not use a cellular phone or connect the Bluetooth phone.

# (a) Enter the Bluetooth phone

To use a hands-free system, you need to enteryour phone in the system. Once you registered it, you can make a hands-free call.

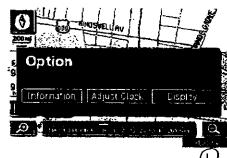

1. Push the "OPTION" button to display the "Option" screen and touch the "Information" switch.

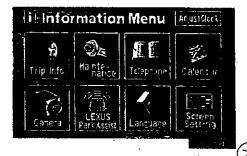

2. Touch the "Telephone" switch to display "Telephone" screen.



3. Touch the "Settings" switch to display "Settings" screen.



4. Touch the "Entry" switch to connect your cellular phone to the system. Input the PASS- KEY displayed on the screen.



When the connection is completed, device and Bluetooth Device Address is displayed.



You do not need to enter it in case of using the same phone.

# (b) Select the Bluetooth phone

In case of registering a number of Bluetooth, you need to select the usual phone.



1. Touch the "Settings" switch to display "Settings" screen.




105

2004 LS430 (G) EMV (OM50659E)


03/05/15

2. Touch the "Select" switch to display "Select Telephone" screen. You can select the Bluetooth phone from maximum 4 numbers. New registration is displayed when you did not still register Bluetooth phone.


Biuetooth mark is displayed when you choose the phone.

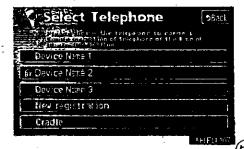

Although you can register up to 4 Bluetooth phones in the system, one Bluetooth phone is functioned. (c) Delete the Bluetooth phone

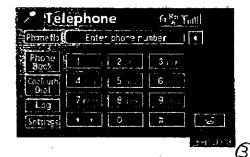

1. Touch the "Settings" switch to display "Settings" screen.

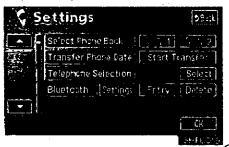

2. Touch the "Delete" switch to display "Delete Tetephone" screen. You can delete the Bluetooth phone which you registered. Select the desired phone from the list.



# (d) Call the Bluetooth phone

After you enter the Bluetooth phone, you call by using hands-free system. This system has 6 methods below by which you call.

## (i) By dial

You can call by inputting the telephone number. You can not operate it while driving.



input the telephone number and touch the "Call".


# (ii) By dial book

You can call by phone book data which is transferred from your cellular phone.

The system has two phone books. You can register maximum up to 500 numbers in each book.



1. Touch the "Phone Book" switch to display "Phone Book" screen.

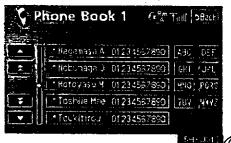

2. Select the desired number from the list.



Touch the "Call".

107

2004 LS430 (G) EMV (OM50659E)

03/05/15

#### (iii) By dialed numbers

You can call by dialed number. The system memorize up to maximum 5 dialed numbers. If it is over than 5, the oldest number is deleted.



1. Touch the "Log" switch to display "Dialled Numbers" screen.



2. Select the desired number from the list.



Touch the "Call".

## (iv) By received calls


You can call by received calls. When a call is received, the system memorize up to maximum 5 numbers. If it is over than 5, the oldest number is deleted.




1. Touch the "Log" switch to display.

C Dialled Numb	ers Por Year Speck
Of CORT Page (Received Carls )	
1 Nogavasa Asai	012045678301234
2 Nobunaga Gda	012345078901234
3 Motoyasu Hatsudaira	012345678901234
4 Tosrie Baeda	C123456/89C1234
5 Toukittikou Ymosita	012345678901234
	-5-FUM

2. Touch the "Received Calls" switch to display "Received Calls" screen.

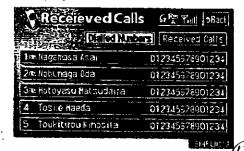

3. Select the desired number from the list.

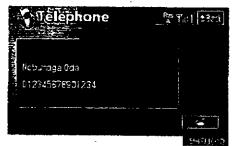


Touch the "Call".

(v) By one touch call

You can call by registered telephone number which you selected from a phone book, dialed numbers and received calls. This can be functioned while you are driving. (See page XX for details.)



1. Touch the "One Touch Dial" switch to display "One Touch Dial" screen.

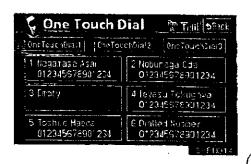

2. Touch the desired number to call, You can change the page by touching "One Touch Dial 2" or "One Touch Dial 3".

(vi) By POI call

You can call by operating a switch when "Call" displayed on the screen from Navigation system. (See page XX for details.)

2004 LS430 (G) EMV (OM50659E)

03/05/15


109

#### (e) Receive Bluetooth phone



When a call is received, this screen is dis-played with a sound. Touch the "Call" to talk on the phone. You can adjust the vol-ume of received call by touching "—" or

#### (f) Talk Bluetooth on the phone

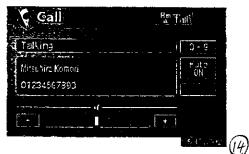

🛴 Call Number Enter Nurber

Touch the desired number to input the key.

While you are talking on the phone, this screen is displayed. You can do the above operation on the screen.

To adjust the volume of the opposite voice on the phone:
Touch "-" or "+" switch.

To hang up the phone: Touch the "?" switch.

To mute your voice:
Touch the "Mute ON" switch.

To input the ten- key: Touch the "0- 9" switch.

# (g) Change the settings of the Bluetooth phone



Touch the "Settings" switch to display "Settings" screen.



You can change the settings of the phone.

# (i) Change the phone book


The system has two phone books. You can select either of a phone book.



Touch the "Phone Book 1" or "Phone Book 2" switch.

# (ii) Transfer the telephone number

You can transfer your telephone numbers to the system. Up to maximum 500 numbers can be registered in one phone book. Transfer it while the engine is running.

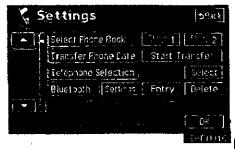

1. Touch the "Start Transfer" switch to display "Data Transfer" screen.

111

2. Touch the "Overwrite" or "Add" switch.



3. Transfer the phone data to the system.



This screen appears while transferring. To cancel it, touch the "Cancel" switch. If the transferring is interrupted on the way, the phone data transferred by then can be memorized in the system.

(iii) Register the one touch dial


You can register the desired telephone number from phone books, dialed calls and received numbers. Up to maximum 17 items a phone book can be registered.




1. Touch the "One Touch Dial" switch in which you want to register the phone number.

 $\neg \circ$ 

## OTHER FUNCTIONS

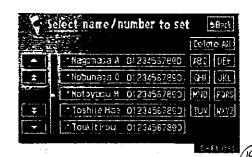


2. Touch the desired telephone number.

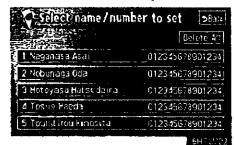

Select the new registration from 1-18 expect 6 and touch the switch. A latest received number is registered in 6th item.

# (iv) Delete the memory

 Delete the telephone number in phone book.

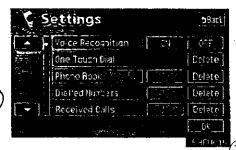

Touch the "Delete" switch of phone book.




Select the desired number from the list.

If you want to delete all the phone number in phone book, touch the "Delete All" switch.

113

2004 LS430 (G) EMV (OM50659E)


03/05/15

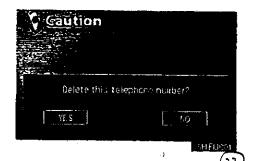

Touch "YES" switch.

Touch "NO" switch and the previous screen appears.

Delete the dialed number

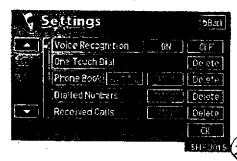

Touch the "Delete" switch of dialed number.



Select the desired number from the list.


If you want to delete all the dialed numbers, touch the "Delete All" switch;




Touch "YES" switch.

Touch "NO" switch and the previous screen appears.

Delete the received calls

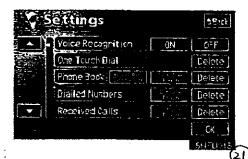

Touch the "Delete" switch of received calls.

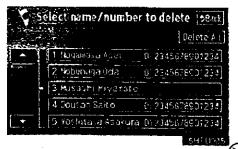

Select the desired number from the list.


If you want to delete all the received calls, touch the "Delete All" switch.




Touch "YES" switch.

Touch "NO" switch and the previous screen appears.

Delete the one touch dial

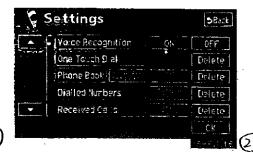

Touch the "Delete" switch of one touch dial.

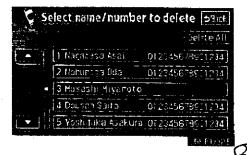

Select the desired number from the list.

If you want to delete all the one louch dial, touch the "Delete All" switch.

115

03/05/15

2004 LS430 (G) EMV (OM50659E)



Touch "YES" switch

Touch "NO" switch and the previous screen appears.

Speech command example: Searching for a route to your home.

- 1. Push the speech command switch.
- 2. Say "Home".


# Clock adjustment

The clock in this system can be corrected manually or by using signals from the GPS. Daylight Saving Time setting or your desired time setting is available.

1. Push the "OPTION" switch.



2. Touch "Adjust Clock".

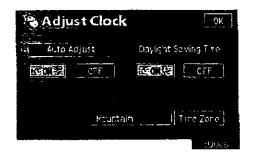

Auto Adjust ON: When you touch this switch, the time is set to the GPS clock, and this switch is highlighted in green.

Auto Adjust OFF: To reset the hour, touch the "H" switch. To reset the minute, touch the "M" switch. To adjust the time to the nearest hour, touch ":00" switch.

Daylight Saving Time: Daylight saving time can be set or canceled.

While daylight saving time is set, this switch is highlighted in green.

Time Zone: You can select the time zone. Touching this switch changes to the time zone selection screen.