

7. Push the "UNLOCK" switch of the wireless remote control key and check if the system is cancelled.

If the system does not work properly, have it checked by your Toyota dealer.

TESTING THE SYSTEM (vehicles with the theft deterrent system)

1. Open all the windows.
2. Turn the ignition key to the "LOCK" position and remove it.
3. Have all passengers get out of the vehicle.
4. With the driver's door opened, push the power door lock switch to lock and then unlock three times in succession. The engine immobiliser/theft deterrent system indicator light blinks rapidly. Complete step 5 before 5 minutes have passed.

5. Close all side doors and back door, then push the "LOCK" switch of the wireless remote control key TWICE within 5 seconds.

This will set the double locking system and the theft deterrent system without setting the radar sensor function. (For details, see "Theft deterrent system" on 32 in this section.)

6. Try to unlock all the side doors from the inside.

The inside lock knob should return to the lock position.

7. Push the "UNLOCK" switch of the wireless remote control key and check if the system cancelled.

If the system does not work properly, have it checked by your Toyota dealer.

Theft deterrent system



The theft deterrent system is designed to deter vehicle theft. This system flashes turn signal lights and sounds the alarm if someone attempts to damage or break into your vehicle. Furthermore, when the interior light switch is in the "DOOR" position, the interior light turns on.


This system will activate when it detects any of the following abnormalities.

- Any of the side doors are unlocked or opened without the wireless remote control key.
- The back door/trunk lid or hood is forcibly opened.
- The ignition is hotwired.
- The battery becomes disconnected or connected.
- Someone or something moves inside the vehicle when the radar sensor function is on.

You can turn off the radar sensor function if necessary, for example, when a pet is left in the vehicle.

- The wireless remote control key is used to set and cancel the theft deterrent system and to stop the alarm. The instructions for the wireless remote control key are presented on page 25 in Section 1-2.

When the theft deterrent system is set, an alarm will sound if a side door or back door/trunk lid is unlocked or opened with a key.

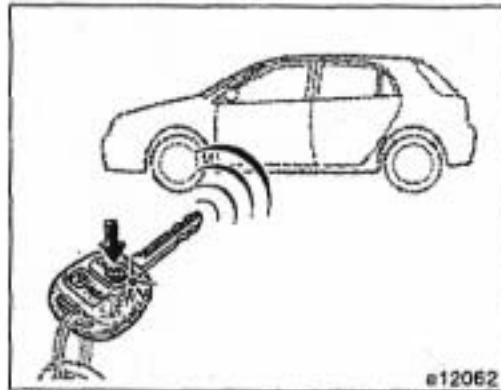


SETTING THE SYSTEM

You can set the theft deterrent system with or without the radar sensor function. To cancel the radar sensor function, do step 3. To turn on the radar sensor function, skip step 3.

1. Turn the ignition key to the "LOCK" position and remove it.
2. Have all passengers get out of the vehicle.
3. To cancel the radar sensor function—
With the driver's door opened, push the power door lock switch to lock and then unlock three times in succession. The indicator light blinks rapidly. Complete through step 5 within 5 minutes.
4. Close all the side doors, hood and back door/trunk lid securely.
5. Push the "LOCK" switch of the wireless remote control key. At this time, the turn signal lights flash once and the indicator light comes on.

However, if the "LOCK" switch is pressed when any of the side doors, back door/trunk lid or hood is opened, the setting is interrupted until all the side doors, back door and hood are closed.

The system will automatically be set after 30 seconds. When the system is set, the indicator light will start flashing.

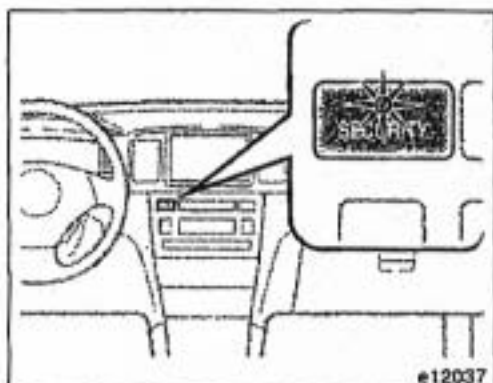

6. After making sure the indicator light starts flashing, you may leave the vehicle.

Never leave anyone in the vehicle when you set the system, because unlocking from the inside will activate the system. If you have mistakenly pushed the "LOCK" switch twice or more, you need to push the "UNLOCK" switch to release the double locking system. (See "Double locking system" on page 31 in this section.)



CAUTION

Never activate the double locking system when there are people in the vehicle, because all the side doors cannot be opened from inside the vehicle. If locking the doors by accident, push "UNLOCK" switch of the wireless remote control key.

CANCELLING THE SYSTEM

You can cancel the system with the wireless remote control key only.

Push the "UNLOCK" switch of the wireless remote control key.

When the turn signal lights flash twice, the system has not been activated. If they flash three or more times, the theft deterrent system has been activated. Check if there is any abnormality on your vehicle.

If a side door, hood or back door/trunk lid is not opened within 30 seconds, all the doors will be automatically locked and the theft deterrent system will be set after 30 seconds.

ACTIVATING THE SYSTEM

The system will start the alarm under the following conditions:

- Any of the side doors are unlocked or opened without the wireless remote control key.
- The back door/trunk lid or hood is forcibly opened.
- The ignition is hotwired.
- The battery becomes disconnected or connected.
- Someone or something moves inside the vehicle when the radar sensor function is on.

The indicator light will come on when the system is activated.

The system flashes the turn signal lights and sounds the alarm. Furthermore, when the interior light switch is in the "DOOR" position, the interior light turns on.

Also, if the door is unlocked without the wireless remote control key, all the side doors and back door will re-lock automatically.

After the alarm stops, the indicator light will start flashing.

Reactivating the alarm

Once the system has been set, even if the alarm has been stopped, the system will continue to be activated under conditions described in "ACTIVATING THE SYSTEM". The alarm can sound again and activation can occur again up to ten times.

Stopping the alarm

To stop the alarm, push the "UNLOCK" switch of the wireless remote control key. At this time, the system will be canceled.

The alarm may sound if the battery is recharged or replaced. If this happens, stop the alarm using the method described above.

TESTING THE THEFT DETERRENT SYSTEM

1. Open all the windows.
2. Turn the ignition key to the "LOCK" position and remove it.
3. Have all passengers get out of the vehicle.
4. With the driver's door opened, push the power door lock switch to lock and then unlock three times in succession. The indicator light blinks rapidly. Complete through step 6 within 5 minutes.
5. Close all the side doors, hood and back door/trunk lid securely.
6. Push the "LOCK" switch of the wireless remote control key. At this time, the turn signal lights flash once and the indicator light comes on. The indicator light will begin to flash after 30 seconds.

This will set the theft deterrent system without setting the radar sensor function.

7. Unlock the driver's door with a key or the inside lock knob. An alarm should sound.
 8. Stop the alarm by pushing the "UNLOCK" switch of the wireless remote control key.
 9. Repeat this operation for the other side doors, back door/trunk lid, and hood.
- If the system does not work properly, have it checked by your Toyota dealer.

TESTING THE RADAR SENSOR FUNCTION

1. Open all the windows.
2. Turn the ignition key to the "LOCK" position and remove it.
3. Have all passengers get out of the vehicle.
4. Close all the side doors, hood and back door/trunk lid securely.
5. Push the "LOCK" switch of the wireless remote control key. At this time, the turn signal lights flash once and the indicator light comes on. The indicator light will begin to flash after 30 seconds.

This will set the theft deterrent system with the radar sensor function.
6. Put your hand through the open window, move it close to the driver's seat, and then remove it. An alarm should sound.
7. Stop the alarm by pushing the "UNLOCK" switch of the wireless remote control key.

If the system does not work properly, have it checked by your Toyota dealer.

For vehicles sold in USA

FCC ID : BAB271000-186

This device complies with part 15 of FCC rules.

“Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.”

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

For vehicles sold in Canada

This device complies with RSS-210 of Industry and science Canada.

Operation is subject to the following two condition.

- (1) this device may not cause interference, and
- (2) this device must accept any interference , including interference that may cause undesired operation of the device.”