Size: 212.3x75.5mm

材质: 108g铜板纸, 正反面印刷

DOUBLE SIDE PRINT

QUICK START GUIDE

(oca Cola

QUICK START GUIDE

Coca Cola QUICK START GUIDE

WIRELESS STEREO SPEAKER

WIRELESS STEREO SPEAKER

✔ Charge the speaker before using it for the first time.

EASY PAIRING (first time pairing)

Make sure the speaker is turned on before attempting to pair it with a smart

Your speaker will automatically enter pairing mode.

Blue LED indicator, will start flashing. The speaker will "beep" when it is ready

From your smart phone or tablet, find a list of nearby devices and choose "CC-BTCN". Enter "0000" if asked. The blue indicator will turn solid blue when pairing is complete! You will also hear" beep "

Now you can play your favorite music.

PAIRING YOUR SPEAKER

Your speaker will work best if it is within 30 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.

WIRELESS STEREO SPEAKER

SPECIFICATIONS

Bluetooth Version: 51 3W Speaker:

Operation Range: Up to 33ft (10m) Play Time: Up to 3 hours Battery Capacity: 300mAh Frequency response: 100HZ-18KHZ Signal Noise Ratio: ≥85dB Charging Time: Up to 2 Hours FCC ID: **2AANZBTCN** BT ID: D042258

WARRANTY

Contact us if you have any problems at support@dglusa.com.

WARNING

Keep away from water and moisture. Keep away from heat sources. Do not disassemble.

QUICK START GUIDE

Bluetooth[®]

(oca:Gola QUICK START GUIDE

Coca:Cola QUICK START GUIDE

WIRELESS STEREO SPEAKER

MEDIA KEY FUNCTIONS

On/Off Switch • Turn left/right to turn on/off device

• Turn left - next track • Hold left - Volume up

Prev/Vol-· Turn right - previous track · Hold right- Volume down

Play/Pause · Press - to play/pause music · Press and hold - change to

different reproduction modes

USB Port

Listen to your music stored on a flash drive. Music will play once the flash drive is inserted into the USB port.

 $\begin{tabular}{ll} \bf Micro\,SD\\ Insert \, the \, TF \, card \, into \, TF \, slot. \, Music \, will \, play \, once \, the \, card \, is \, inserted. \end{tabular}$

Auto Reconnect

If the speaker is off, while connected to the phone, it will reconnect when the speaker is turned back on and in range.

To play music in AUX mode, connect the USB cable (included) to the speaker. The speaker will function as a sound amplifier.

Connect the USB cable (included) into the USB port on the speaker. Red light indicates speaker is charging.

WIRELESS STEREO SPEAKER

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the

WIRELESS STEREO SPEAKER

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.