



TABLE OF CONTENTS	
Important Safety Information	2
Specifications	5
Introduction	5
Overview	6
Controls and Features	7
Operating Instructions	9
Auto Shut-off Safety Feature	12
Install the Quirky App	13
Using Alexa	19
Using Google Home	21
Cleaning	25
Descaling the Coffee Maker	25
Troubleshooting	26
FCC Statement	27
RF Warning Statement	27
Warranty	27
Pictures in the manual are for reference only. Please refer to the actual product.	
	1

IMPORTANT SAFETY INFORMATION

SAVE THESE INSTRUCTIONS

When using your Café, basic safety precautions should always be followed. Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Quirky Café is designed only for home use and domestic commercial applications such as small offices, restaurants, and hotels. Neither Quirky nor its affiliates are responsible for damage resulting from improper use or for damages caused by non-compliance with the information, warnings, and instructions provided in this manual. Please keep this manual in a safe place for future reference.

WARNING: Quirky Café is designed to be used indoors in household environments such as homes, clients in hotels, staff kitchens in shops or offices and bed and breakfast type environments. This product is NOT intended to be used in industrial or medical areas or in labs.

- Before inserting the main plug into a power outlet, ensure that your main supply voltage and current rating matches the power supply details on your WiFi Coffee Maker's model label. Café's rated voltage is 120V and its fixed frequency is 60 Hz.
- Never immerse the appliance or power cord in any liquids. Wipe the surfaces clean with a damp cloth or sponge.
- Never place the appliance in the dishwasher.
- Do not use this appliance outdoors.
- If repairs are needed, send the appliance to our customer service department or a qualified service provider, do not attempt to repair the unit yourself.
- Always turn the unit OFF: after use, in case of a malfunction; and before cleaning.
- When removing the plug from the wall socket, never pull on the power cord.
- Keep all parts of the coffee maker out of reach of children at all times.
- Do not attempt to remove any parts of the housing.

Please read this manual carefully and retain for future reference.

SAVE THESE INSTRUCTIONS

- Do not insert metal objects into the interior of the appliance.
- To prevent damage to the power cord, do not let it pass over sharp corners or edges.
- Keep the power cord away from the heating base of the coffee maker.
- Do not expose the appliance to rain or moisture.
- Do not operate the appliance outdoors or with wet hands.
- Keep away from heat or open flame.
- The use of any accessories which are not recommended by the manufacturer may cause injury to persons or damage to the appliance.
- Add only clean, cold water to the coffee maker.
- Do not overfill the coffee maker.
- Only use the coffee maker with the provided heating base.
- Avoid spilling water on the appliance or power cord.
- Never leave the empty coffee pot on the warming plate while the coffee maker is on or warming. Doing so may crack the coffee pot.
- If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent.
- Do not operate Quirky Café if the power cord shows signs of damage or if it has been dropped.
- The surface of the heating base will be very hot during use and for a short while after use. Ensure that the base has cooled before touching.

WARNING: Quirky Café is not intended for use by children. It is not a toy! Do not allow children to play with any part of the appliance. Keep children away from the power cord, they can pull the unit down and be burned by hot water or become entangled in the power cord. Keep the coffee maker, the

SAVE THESE INSTRUCTIONS

heated base, and the cord out of the reach of children at all times.

WARNING: This appliance operates at very high temperatures. There could be danger of scalding from escaping water or steam. Do not touch any part of the coffee maker except the stay cool handle when the appliance is in use and ensure that the lid is properly closed.

WARNING: Position the lid so that steam is directed away from the handle.

WARNING: Do not remove the lid while the water is boiling.

WARNING: Ensure that Quirky Café is switched off before removing the coffee maker from the base.

WARNING: There is potential injury from misuse of this product.

WARNING: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided they have been given supervision and instruction concerning the use of the appliance in a safe way and they understand the hazards involved.

Please read this manual carefully and retain for future reference.

SPECIFICATIONS

RATED VOLTAGE	120V
POWER	900W
HEATING METHOD	UNDERPAN HEATING
HEATING TYPE	THERMAL
COFFEE POT MATERIAL	GLASS
PROTECTION	AUTO SHUT-OFF
CAPACITY	6 CUPS / 1.5 LITERS
FCC ID	2AANZCAFÉ

INTRODUCTION

Thank you for purchasing the Quirky Café Smart Coffee Maker! Ever wish you could make a pot of coffee from your bed on a lazy Sunday morning? Now you can!

The Café, the WiFi smart coffee maker allows you to control it with the sound of your voice or a touch of your smart phone, control it with the sound of your voice or a touch of your phone.

Pictures in the manual are for reference only. Please refer to the actual product.

OVERVIEW

CONTROLS AND FEATURES

The control panel consists of an LED display, power button, timer, clock, program, and mode controls.

First Use Cleaning Instructions

Ensure the Café is clean and all packaging has been removed from inside and outside the product. Before using the Café for the first time, clean it by running through a cleaning cycle.

1. Fill the coffee maker with cold, clean water to the fill line.
2. Place the filter into the machine (without adding coffee), and close the lid.
3. Place the coffee pot on the heating base.
4. Connect to power source.
5. Press any button, 12:00 will appear on your display.
6. Press the Power Button once. The red LED indicator will turn on. After heating, the water will run through the Café into the coffee pot.
7. Wait 30 seconds while your Café runs, then press the Power Button again. The blue LED indicator will turn on. This will have your Café enter auto-prepare phase.

What Type of Water Should You Use?

We recommend the use of filtered water for the Café.

Using filtered water not only gives you the best taste, it prevents sediment from building up in your coffee maker and clogging the coffee maker.

How Much Coffee Should You Use?

The general rule for coffee is that 2 tablespoons of ground coffee should be used for every 6 ounces of water. This amount can be adjusted to suit personal tastes.

Please read this manual carefully and retain for future reference.

OPERATING INSTRUCTIONS

1. Place the Café on a firm and level surface.
2. Pour the desired amount of clean water into the coffee maker through the water tank.
3. Place a coffee filter into the plastic filter and fill with coffee grounds.
4. Ensure the plastic filter is aligned properly in the Café. Close the lid.
5. Connect the Café to a power supply. The display will show "12:00" when it is ready to use.
6. Place the coffee pot on the warming plate, ensuring that it is aligned to the tip of the funnel.
7. Press power button once. The red indicator light will turn on and coffee will begin brewing.
8. When brewing is complete, press the Power Button to turn your Café off.

NOTE: You may remove the coffee pot to pour coffee at any time during the brewing process. It is recommended you do not do this longer than 30 seconds as it may cause brewed coffee to drip onto the heating base.

Always pay attention to min / max water levels and ensure the lid is properly and firmly closed.

Setting Current Time

1. Press the Program Button until "Clock" is illuminated on the LED display.
2. Press Hour and Min buttons to set your current time. The coffee maker is set to military time, and your settings are from 00:00 to 23:59.
3. After you have set the current time, press the Program Button again to confirm your set time.

Programming An Automatic Brew

1. Press the Program Button until "Timer" is illuminated on the LED display.
2. Press Hour and Min buttons to set your desired brew time. The coffee maker is set to military time, and your settings are from 00:00 to 23:59.
3. After you have set the current time, press the Program Button again to confirm your desired time.

Canceling A Programmed Automatic Brew

The blue LED indicator light will indicate that there is a programmed automatic brew scheduled on your Café.

To cancel the programmed brew, press the Power Button 3 times until the LED indicator light turns off.

This will indicate your programmed brew has been canceled and the Café is now set to manual use.

4. Press "Mode" to set your desired brew strength. The coffee beans on the display will illuminate to indicate brew strength. You can choose between light, medium and strong.

Please read this manual carefully and retain for future reference.

Pausing Hot Coffee

Once coffee is brewed, you may pour it into another container.

NOTE: When pouring hot coffee, make sure you are only holding the coffee pot by the stay-cool handle.

Ensure that coffee is leaving the coffee maker from the spout to better control the flow of water.

Replace the coffee pot on the base when not in use, and unplug the cable from the power source.

AUTO SHUT-OFF SAFETY FEATURE

The Café is equipped with a safety auto shut-off feature to protect the appliance from damage in case of improper use.

If the Café is activated accidentally without first being filled with water, or if all the water in the Café has evaporated during brewing, the auto shut-off will engage and disable the heating element.

In the event that the auto shut-off is engaged, remove the power plug from the wall outlet immediately.

Wait 3-5 minutes until the coffee maker is sufficiently cool.

Then proceed to refill the coffee maker and continue use.

Please read this manual carefully and retain for future reference.

INSTALL THE QUIRKY APP

Please scan the QR Code, or search for "Quirky" in the App Store or Google Play.

Works with:

amazon alexa Google Assistant

Registration and Login

1. Run the Quirky App from your smart phone.
2. Register or login. The App will take you to the home page.

Device Preparation

Before moving forward, please ensure your Café and your device are prepared for pairing and setup.

- Ensure Café has been connected to a power source.
- Ensure your smart phone is able to connect to a WiFi network and has internet access.
- Download and open the App on your smart phone.

Pairing

1. If this is the first time connecting a Quirky smart home device, you can add your first device by pressing the "Add Device" button on the home page.

If devices are connected to your Quirky App, and you want to add a new device, press the "+" icon on the top right to connect a new device.

USING ALEXA

Please make sure that your Alexa app is connected to Amazon Echo and both work together successfully under your WiFi home network.

1. Login in your Alexa App, tap top left corner, and tap "Skills".
2. Select the device you want to connect from the list.

ADD DEVICE

Power on your device. Press and hold the PROG button as shown below and confirm the LED light on the product is blinking.

According to the requirements of ETL software standard, you need manually enable WIFI function for every time when it is plugged in.

Enter Wi-Fi password

Only supported on 2.4GHz Wi-Fi networks

Marc's Home Change Network

password

OK

Device added successfully

Quirky

Living Room Master Bedroom Second Bedroom Dining Room Kitchen Study Room March's_droom

Completed

USING ALEXA

Please make sure that your Alexa app is connected to Amazon Echo and both work together successfully under your WiFi home network.

1. Login in your Alexa App, tap top left corner, and tap "Skills".
2. Find the Quirky App in the search bar and tap "Enable."

ADD DEVICE

Power on your device. Press and hold the PROG button as shown below and confirm the LED light on the product is blinking.

According to the requirements of ETL software standard, you need manually enable WIFI function for every time when it is plugged in.

USING GOOGLE HOME

PREPARATION

- Download the Google Home app on your smart phone.
- Register your Google Account.
- Pair Café with Quirky App and name it with a simple and easily recognizable name.
- Finish setting up Google Home.

NOTE: This device currently only supports US accounts.

1. Open your Google Home App, select Account on the bottom right hand corner.

Settings

Matt Smith matts@gmail.com

Can Home - Member

0 local devices

Set up device Settings

Google Assistant services

Shopping list

Voice match

Music

TV & video

More settings

At the top, tap "Assistant"

Home Control

For speaking to your Assistant

Assistant voice

How your Assistant will sound

Continued Conversation

For asking follow-up questions

Voice Match

Teach your Assistant to recognize your vo...

Home control

Manage the devices in your home

Tap "x" on the bottom right hand corner of the screen.

ADD DEVICE

Power on your device. Press and hold the PROG button as shown below and confirm the LED light on the product is blinking.

According to the requirements of ETL software standard, you need manually enable WIFI function for every time when it is plugged in.

CLEANING

1. Only clean the Café when the power source has been disconnected.
2. Do not use abrasive cleaning tools or harsh cleaning solutions.
3. Do not immerse the heating base or the coffee maker's electronic components or power cable in water.
4. Do not place any part of the appliance in the dishwasher.
5. To clean the exterior, use a slightly damp, lint-free cloth or sponge.
6. Open the water tank lid, remove the filter by twisting counterclockwise. Rinse clean with water.
7. Ensure all parts of the Café have fully dried before plugging into a power source.

DESCALING THE COFFEE MAKER

If you have hard water, it is recommended you decalcify your Café coffee maker once every three months to remove build-up.

NOTE: If you are using Café, and it switches off before the coffee is fully brewed, this is an indicator that your coffee maker needs to be decalcified.

1. Pour any decaling agent into the coffee pot as you would pour water. You may also use a mixture of 2 parts white vinegar to 1 part water.
2. Fill the water tank with this mixture.
3. Do not add coffee grounds or a filter.
4. Run the Café as instructed in "First Use Cleaning Instructions."
5. If you are using a cleaning agent, it is recommended you allow the Café to go through several cleaning cycles with new, filtered water. If you are using vinegar, repeat until the vinegar odor disappears. Continue running until water brews clean.

TROUBLESHOOTING

Please find some answers to some frequently asked questions about your Café. If these do not address any issues you may be having, please contact Quirky customer service. Contact information is located at the end of the Warranty Section of this manual.

Q1: The coffee pot is leaking from the lid.
A1: Your coffee pot is not placed correctly on the heating base. Centralize the coffee pot on the lid.

Q2: Coffee is brewing too slowly or overflows from the lid of the machine.
A2: Your coffee grinds may be ground too fine for the machine, thereby clogging it. Try using coarser coffee grinds. Your nylon filter may be dirty. Clean it and replace it before trying again.

Q3: Water is leaking from the bottom of the coffee maker.
A3: You may need to descale your coffee machine if you are using hard water. Please refer to instructions in the "Descaling the Coffee Maker" section.

Q4: The Café stopped working.
A4: This may be caused if the Café attempts to brew coffee under circumstances which may have triggered the auto shut-off safety feature. Turn off your Café and unplug it. Allow it to cool and rest for 30 seconds before plugging in and continuing use.

Q5: Coffee temperature is lukewarm.
A5: This usually indicates water level is low in the water tank. Ensure you are filling the water tank with enough water prior to brewing.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to measure the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF WARNING STATEMENT

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 1.87 inches / 20 cm between the radiator and your body.

WARRANTY

This product is covered by a 90-day limited warranty. For details, please contact customer service at: support@quirky.com