

CLASSIC WIRLESS EARBUDS

Operation Manual CC-3109

Thank you for purchasing these Classis Wireless Earbuds. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Bluetooth Earbuds
- USB Charging Cable Operation Manual

CHARGING YOUR HEADSET

- 1. Plugs the Micro-USB Charging cable into your earbuds.
- 2. Plug the USB port on a computer or power
- 3. Charge for 90 mins or until the red charging indicator light shuts off, then the blue indicator light will be on.
- 4. Unplug your earbuds, it is now ready for use.

CAUTION

- 1. When not in use for a prolonged period, it is recommended that you turn off the headset to lengthen battery life.
- 2. When the power indicator light flashes red, this indicates that the battery on your headset is low, it is recommended your echarge your headset.

SPECIFICATION

Previous Track:

Volume Down:

Next Track:

Volume Up:

Bluetooth spec: Bluetooth profiles supported: Frequency range: Operation range: Transmission Power: Battery: Charaina time: Play music time: Talk time: up to 4 hours Standby time: Weight:

V3.0

class 2

90 mins

HSP, HFP, A2DP

up to 33ft(10m)

3.7 V / 55 mAh

up to 3.0 hours

up to 80 hours

57 x 12 x 9mm

Long press "+"

Long press " - "

Click "+"

Click " - "

20Hz-20kHz

* FCC ID:2AANZCC-3109

USING YOUR BLUETOOTH HEADSET

- Turn On Headset:
- Press and hold the "O" button for 3 seconds until the
- blue and red light turn on at the same time. • Turn Off Headset:
- Press and hold the "O" button for 2 seconds. The blue light will flash 3 times and the red light will flash 1 time, then the device will shut off.
- · Pairina: Ensure Bluetooth is enabled on your mobile device or tablet. Make sure your device and your headset are no more than 3ft apart during this pairing process. With the headset off, press and hold the
- available Bluetooth devices to pair. Answer a Call:
- call.
- Press the "O" button quickly to answer an incoming · Reject a Call: Press and hold the "()" button to reject a call.

flash alternately. Select "CC-3109" from the list of

- Play/Pause Music:
- Press the "()" button to play/pause music.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference

received, including interference that may cause undesired operation. Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE "O" button for 6 seconds. The blue and red light will OR PERIPHERAL

> Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

harmful interference to radio communications.

- Increase the separation between the equipment and receiver. . Connect the equipment into an outlet on a circuit
- different from that to which the receiver is connected.

operate the equipment.