HYPE® QUICK START GUIDE Y

HYPE QUICK START GUIDE

HYPE QUICK START GUIDE

WATER-RESISTANT WIRELESS SPEAKER

CHARGING THE SPEAKER

Charge the speaker before using it for the first time.

Plug in the cable to the micro
USB port and charge for at
least 3 hours.

Connect the charging cable to charging port.



PAIRING YOUR SPEAKER

Your speaker will work best if it is within 33 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.

WATER-RESISTANT WIRELESS SPEAKER

PAIRING YOUR SPEAKER (continued)

Make sure the speaker is turned off before attempting to pair it with a smart phone or tablet. Press the "OFF/ON" button to turn on the speaker.



Press the button, It works as Bluetooth mode automatically .



of nearby devices and choose "HY-FABP". Enter "0000" if asked. The speaker will "beep" when pairing is complete!

WATER-RESISTANT WIRELESS SPEAKER

MEDIA KEY FUNCTIONS



Turn speaker ON/OFF

Play/ Pause music

+ Press & Hold - Press Once-Next track Increase volume

> Press & Hold - Press Once-Previous track Decrease volume

Answer/End a call

HYPE* QUICK START GUIDE

HYPE QUICK START GUIDE

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and

WATER-RESISTANT WIRELESS SPEAKER

HYPE QUICK START GUIDE

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more

Reorient or relocate the receiving antenna.

of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BT ID: D032334

SPECIFICATIONS

Bluetooth Version: V4.2 + EDR

Standby Time: Up to 24 Hours

Charaina Time: Up to 2 Hours

Battery Capacity: 1200mAh

FCC ID: 2AANZFABP

Operation Range: Up to 33ft (10m) Play Time: Up to 5 hours

For warranty information, please contact us at : support@dglusa.com

WARNING

Keep away from heat sources. Do not disassemble.