

Size: 59.14 x 57 mm

材质: 108g铜板纸, 正反面印刷, 覆亚膜

DOUBLE SIDE PRINT

HYPE® QUICK START GUIDE

ALLOY PRO WIRELESS EARPHONES

CHARGING THE EARPHONES

⚡ Charge the earphones before using it for the first time.

🕒 Plug in the cable to the micro USB port and charge for at least 2 hours.



Connect the charging cable to charging port.



HYPE® QUICK START GUIDE

ALLOY PRO WIRELESS EARPHONES

PAIRING YOUR EARPHONES


Your earphones will work best if they are within 30 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.

PAIRING YOUR EARPHONES (continued)

Make sure the earphones are turned off before attempting to pair it with a smart phone or tablet.

HYPE® QUICK START GUIDE

ALLOY PRO WIRELESS EARPHONES

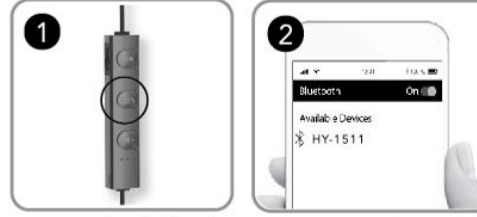

Press and hold the "Multifunction" button for 5 seconds to turn on the earphones. You will see the light flash red and blue. This indicates that your earphones are ready to pair.

From your smart phone or tablet, find a list of nearby devices and choose "HY-1511". Enter "0000" if asked. The earphones will flash a blue light when pairing is complete!

HYPE® QUICK START GUIDE

ALLOY PRO WIRELESS EARPHONES

CONNECTION LOST?

- If pairing the earphones does not work, turn off the earphones and repeat the steps again in "Pairing your Earphones."
- Make sure your earphones are within range of your smart device.
- If you hear a long beep, you need to recharge your earphones. Connection may be lost due to low battery.
- When charging your earphones, only use the enclosed USB cable.

MEDIA KEY FUNCTIONS



- | | | |
|--|-----------------------------------|----------------------------------|
| | Press & Hold - Increase volume | Press Once - Next Track |
| | Press & Hold - Turn device on/off | Press Once - Play/ Pause music |
| | Press & Hold - Decrease volume | Press Twice - Redial last number |
| | | Press Once - Previous Track |

HYPE® QUICK START GUIDE

ALLOY PRO WIRELESS EARPHONES

SPECIFICATIONS
Bluetooth Version: 4.2
Wireless Distance: Up to 33ft (10m)
Play Time: Up to 2 hours
Talk Time: Up to 2 Hours
Standby Time: Up to 50 Hours
Battery Capacity: 75 mAh
Charging Time: About 2 Hours
BT ID: D035934
FCC ID: 2AANZY-1511

WARRANTY
This product is covered by a 3 month limited manufacturer's warranty. Contact us if you have any problems at support@dglusa.com.

WARNING
Keep away from water and moisture.
Keep away from heat sources.
Do not disassemble.

HYPE® QUICK START GUIDE

ALLOY PRO WIRELESS EARPHONES

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

HYPE® QUICK START GUIDE

ALLOY PRO WIRELESS EARPHONES

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

HYPE® QUICK START GUIDE

ALLOY PRO WIRELESS EARPHONES

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

