


HYPE™

TBOX™


B/CLIP⁶⁶⁰

BLUETOOTH
MINI SPEAKER

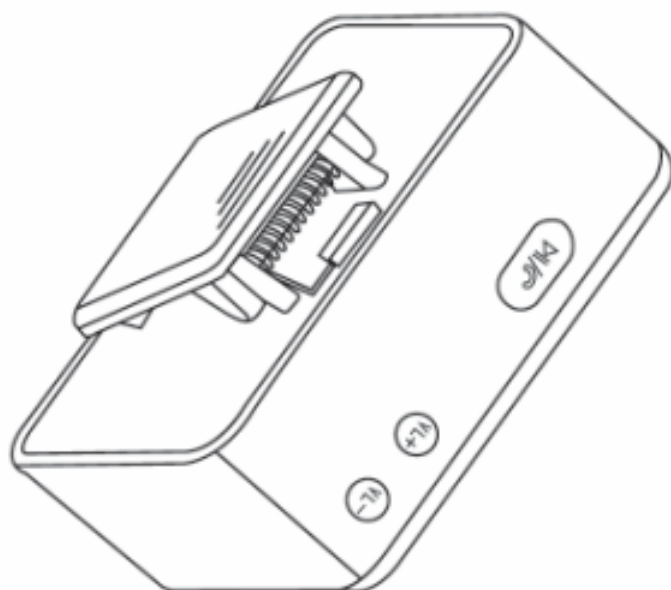

Operation Manual HYAU-454

DIAGRAM

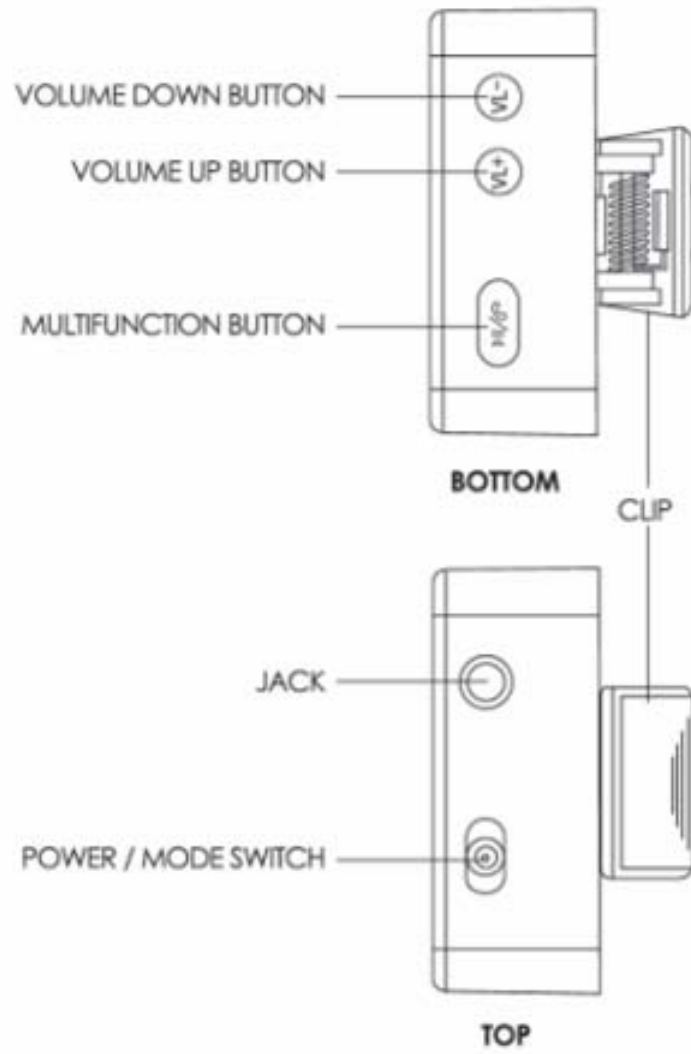

Thank you for purchasing the TBOX B/CLIP. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Bluetooth Mini Speaker
- USB Charging Cable
- Operation Manual
- 3.5mm Audio Cable

KEY FEATURES

- Compatible with Bluetooth-enabled tablets & devices
- Built-in rechargeable battery
- Multifunction answer button
- Stereo sound quality
- Optional 3.5mm audio input

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.

Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not use the volume at excessive levels as this may damage hearing.

Do not expose batteries, battery pack, or batteries to installed to excessive heat, such as direct sunlight, or open flame.

CHARGING THE SPEAKER

The speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the speaker.

Connect the USB cable to a computer USB port and the USB plug to the charging jack of the speaker. The red LED light will illuminate while the speaker is charging.

When the battery is fully charged, the LED light will turn off automatically. Disconnect the speaker at this point. The speaker will then be ready for use.

BLUETOOTH PAIRING

1. Turn on your speaker. The LED light will light up.
2. Move the "Mode" switch to right which is the opposite side of the 3.5mm jack. The speaker will beep three times.
3. Now the speaker is in pairing mode and waiting for a connection to your device.
4. Activate the Bluetooth function on your mobile device and start searching for Bluetooth devices.
5. From the list of devices found, select HYAU454.
6. If a pin is required enter "0000" from your mobile device and press enter.
7. The speaker should now be paired to your device.

Note: If pairing is not completed within 3 minutes, your Bluetooth speaker will return to standby mode to conserve power. If you are ready to pair to your device again, repeat the steps listed above.

USING A DEVICE WITH A 3.5MM CABLE

1. Turn on your speaker. The LED light will light up.
2. Move the mode switch to the left where the 3.5mm jack is.
3. Plug the one end of the 3.5mm cable into the speaker and plug the other end into your device.
4. Once you start playing music on your device you should hear it coming from the speaker right away.
5. Press the Multifunction Button once on the speaker **3** to pause and resume music.

MANUAL KEY FUNCTIONS

Your speaker is equipped with a multifunction shortcut key. Please note the following functions.

1. Answering a Call

When a call comes in, you will hear your ring tone through the speaker. Press the Multifunction Button to answer the call. the LED indicator light will turn green to indicate the call is connected. Press the volume control buttons to adjust volume on your call.

2. Rejecting a Call

When a call comes in, to reject the call, press the Multifunction Button twice in quick succession to reject the call.

3. Holding a Call

During the call, press and hold the play/pause button to hold a call. Press and hold the play/pause button again to return to your call.

4. Ending a Call

During talking, press the Multifunction Button again to end or disconnect the call.

5. Redialing

Press the Multifunction Button twice in rapid succession to redial the last dialed number.

6. Volume Control

When listening to music or on a call, you can adjust volume by pressing the Vol + or Vol - button accordingly.

TROUBLE SHOOTING

If you are unable to connect the speaker to your device, please try the following:

- Check if the battery is low. When the battery is low, your speaker will not function properly. Please charge the battery.
- Check the power switch and make sure it is on. When powered on, the power light on the speaker will flash.
- Restart Bluetooth device, and make sure your device can locate the speaker.

BATTERY MAINTENANCE

1. In order to prolong battery life, turn off your speaker when not in use.
2. If the speaker is not in use for a long period of time, store it in a dry, safe location. The speaker will need to be charged every 2 months to maintain battery life.

CARE AND MAINTENANCE

- Do not expose the speaker to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the speaker to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.
- Do not dispose of the speaker in fire as it may explode or combust.
- Do not expose the speaker to contact with sharp objects as this will cause scratches and damage.
- Do not let the speaker fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the speaker.

In the event that the speaker does not function properly, return it to the store where it was purchased.

SPECIFICATIONS

Bluetooth:	Version 2.1
Operation Range:	Up to 33ft (10m)
Battery:	Lithium-Polymer
Sensitivity:	80 db
Signal-to-Noise Ratio:	>60 db
Power Connection:	DC 5V, 0.5A
Size:	1.8 x 1.7 x 1.1 in
Driver:	26 mm
Impedance:	8 Ohms
Distortion:	<1%

WARRANTY INFORMATION

The condition of this warranty and our responsibilities under this warranty are as follows:

Supplier's warranty is non-transferable. And this warranty is limited to the original purchaser only.

- * You must be able to prove the date of original purchase of the unit with a dated receipt.
- * The warranty is not applicable if the product has been subject to physical abuse, improper installation, modification or repair by unauthorized third party.
- * The responsibility of supplier's products shall be limited to the repair or replacement of the product as its sole discretion.
- * Specifically exempt from any warranty are limited-life consumable components subject to normal wear and tear such as batteries, decorates and other accessories.
- * A supplier will not take any responsibility if the failure of the unit has resulted from accident, abuse, misuse, or any unauthorized repair, modification or disassemble.
- * Modification and repair of the unit should be done by authorized and qualified service personnel, Center or returned to the manufacturer.
- * This warranty gives you specific legal rights, and you may also have other rights which vary under local laws.

sent in cannot be repaired within a reasonable time or at a reasonable cost. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.

4) The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our product.

5) Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.

6) Any other further claims are excluded, especially those for replacement due to damage caused to the outside of the product, provided there is no obligatory legal liability.

The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations. We offer a warranty on our products in accordance with the following conditions:

- 1) Hype™ products are covered by a 12 month warranty. We will resolve damages or defects on Hype™ products free of charge within 12 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 12 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.
- 2) The warranty does not cover batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.
- 3) The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. Hype™ reserves the right to exchange the product for a replacement product of equal value if the product sent in cannot be repaired within a reasonable time or at a reasonable cost. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.
- 4) The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our product.
- 5) Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.
- 6) Any other further claims are excluded, especially those for replacement due to damage caused to the outside of the product, provided there is no obligatory legal liability.

We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, and loss of earnings or interruption to business.

Asserting a warranty claim:

1) To make use of the warranty service for hardware issues, you must contact the Hype™ Service Center by email at support@dglusa.com

2) Hype™ will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and will be asked to send the product to Hype™.

IMPORTANT: Hype™ will only accept parcels that have an RMA number.

Please observe the following when sending the product:

1) Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the product (cables, chargers, manuals, etc.) unless the Hype™ Service Center specifies otherwise.

2) Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.

3) You must enclose a copy of the sales slip as proof of purchase.

4) Once Hype™ has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

Service outside of warranty

Hype™ can refuse any service claim made that is not covered by the warranty.

If Hype™ agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs. Hype™ will not accept any packages that have not first been approved by Hype™ by means of an RMA (Return Material Authorization).

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation