



BMI
MERCHANDISE

Wireless Karaoke To-Go
Speaker Mic
Operation Manual BMI-KRK-ASST

FCC ID: 2AANZKRK
BT ID: D038588
MADE IN CHINA

Thank you for purchasing the BMI Wireless Karaoke To-Go Speaker Mic. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Wireless Karaoke Mic
- Micro USB Charging Cable
- AUX Cable
- Operation Manual

KEY FEATURES

- Compatible with Bluetooth®-enabled devices
- Built-in rechargeable battery
- Built-in speaker
- Volume and echo control
- Live Recording

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.


Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children. Do not expose batteries, battery pack, or batteries to installed

to excessive heat, such as direct sunlight, or open flame.

DIAGRAM

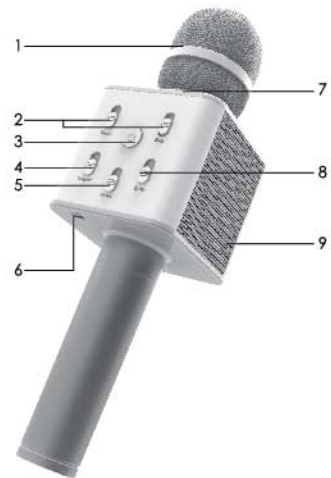

- | | |
|---------------------------|---------------------------------------------|
| 1. Mic | 6. Micro USB Charge Port |
| 2. Treble/Bass Switch | 7. Previous Track/Pause / Next track button |
| 3. Power Switch/LED Light | 8. Echo Switch |
| 4. Volume Switch | 9. Speaker |
| 5. Accompaniment Switch | |

CHARGING THE KARAOKE MIC

The karaoke mic comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied charge cable to charge the speaker.

Connect the USB end to a computer USB port or a USB wall

charger and the micro USB to the charge port on the karaoke mic. The red LED indicator will illuminate while the karaoke mic is charging.

A full charge of the battery takes around 4 hours. When the battery is fully charged, the LED indicator will turn off. Disconnect the karaoke mic at this point. The karaoke mic is ready for use.

When the battery is low, the speaker will turn off automatically. When this occurs, please recharge the karaoke mic.

PROMPT NOTIFICATION

- The karaoke mic will notify you during "Power On" with a blue light.
- The karaoke mic will notify you when "Pairing Successful" with the sound of a beep.

PAIRING THE KARAOKE MIC

1. Ensure the karaoke mic is turned off. If it is not, please turn off the karaoke mic first before pairing.
2. Place the karaoke mic and the Bluetooth® device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 3 feet apart.
3. Ensure Bluetooth is enabled on your device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.
4. Press the On/Off switch and the device will automatically search for your device indicated by a beep.
5. Once you have activated Bluetooth on your device, select the karaoke mic "BMI-KRK-ASST" from the list of available Bluetooth devices.
6. If required, enter the PIN code "0000" and confirm the entry.

Note: If pairing is unsuccessful, turn off the karaoke mic first and re-pair following the aforementioned steps. Once you have paired the karaoke mic with a device, the karaoke mic will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not

need to re-pair any previously connected devices.

OPERATING THE KARAOKE MIC

Once the karaoke mic is paired to your device, you can stream music wirelessly to the built-in speakers using your favorite karaoke app. You should be able to download karaoke apps through your device's provider. Should you encounter any problems while streaming, please refer to your device's user manual.

ADJUST VOICE ECHO

Push the echo switch up or down to adjust voice echo.

ADJUST VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

RECORDING WITH YOUR KARAOKE MIC

1. Connect USB end to your karaoke mic and the AUX end to your device. Once the AUX cable is connected the Bluetooth will be disabled until the AUX cable is disconnected.
2. You can use your karaoke app or your favorite music recording software to choose the songs you like to sing and record. Please refer to the instructions in your karaoke app if you encounter any issues with recording.

SPECIFICATIONS

Bluetooth® Version:	V4.2
Speaker Output:	3W x 2
Frequency Range:	100 Hz - 15 kHz
Sensitivity:	47 dB
Play Time:	Up to 5 Hours
Battery Type:	Rechargeable Lithium-Ion
Battery Capacity:	1200 mAh
Charging Voltage:	DC 5V
Charging Time:	4 Hours
Charging Interface:	Micro USB
Weight:	0.805 lbs / 0.365 kgs

CARE AND MAINTENANCE

- Do not expose the unit to excessive heat or humidity to avoid damage to the product's internal circuitry.
- Do not use abrasive cleaning solvents to clean the unit.

• Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.

- Do not dispose of the unit in fire as they may explode or combust.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.