


101 mm w x 174mm h

材质：108g铜板纸，正反面印刷

# wireless doorbell


## Controls:

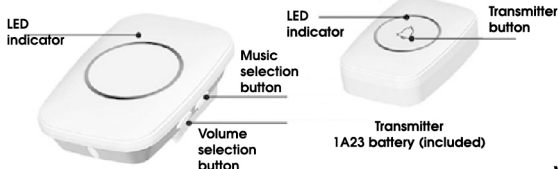


## Features:

- 590 ft. Range
- 36 Tunes
- Volume levels
- LED indicator
- Water-resistant
- 3 AA Batteries (not included)

## Receiver Battery Usage:

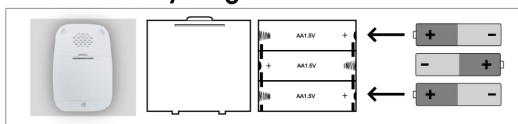

## Wall Mount (optional)

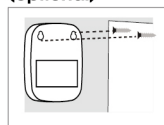

## Installing Your Wireless Doorbell Transmitter

### Screw mounting method



### Double-sided tape installation method



## Operating Your Wireless Doorbell

1. Select your doorbell tone by pressing the Music Selection Button on the side of your receiver.
2. Press and hold the volume button for 4 seconds. The receiver will light up.
3. Next, press the transmitter button. The LED indicator on the receiver will flash and your doorbell tone will be set.
4. Adjust the volume with the volume selection button.

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### WARNING

Keep away from heat sources. Do not disassemble.  
Do not mix old and new batteries. Do not mix alkaline, standard (carbon - zinc), or rechargeable (nickel cadmium) batteries

FCC ID: 2AANZWDBL  
MADE IN CHINA