

材质：108g铜板纸，正反面印刷  
DOUBLE SIDE PRINT

**Vibe**  
audio


## QUICK START GUIDE

### LED FLAME PARTY SPEAKER

#### CHARGING THE SPEAKER

- ⚡ Charge the speaker before using it for the first time.
- 🕒 Plug in the cable to the micro USB port and charge for 2 hours.

Connect the charging cable to charging port.

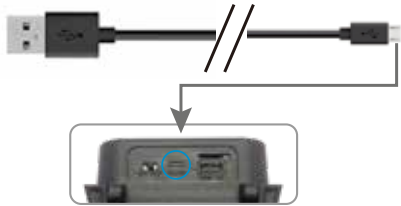

**Vibe**  
audio

## QUICK START GUIDE

### LED FLAME PARTY SPEAKER

#### MEDIA KEY FUNCTIONS



1. ON/OFF    2. Charge Jack    3. TF Card Port    4. U Disk Port



- ⏪/- Press once - play/ previous song / Press & hold -decrease volume
- ▶/||/rws Press once - play/pause music / Press twice - TWS mode
- ▶/|/+ Press once - play next song / Press & hold - increase volume
- MODE** Switch between TF card, u disk or FM.
- 💡 Light modes switch

**Vibe**  
audio

## QUICK START GUIDE

### LED FLAME PARTY SPEAKER

#### SPECIFICATIONS

- Speaker: 3 inch
- Output Power: 3W
- Frequency Response: 2402-2480MHz
- Sensitivity: 50dB
- Battery Capacity: 400 mAh
- Voltage: DC 5V
- Charging Time: 2 hours
- Play Time: up to 3 hours
- Product Size: 6.1"x2.6"x3.7"
- Bluetooth Verson: V5.0
- Bluetooth Distance: 10m
- Impedance: 4Ω



**Vibe**  
audio

## QUICK START GUIDE

### LED FLAME PARTY SPEAKER

#### PAIRING YOUR SPEAKER

Your speaker will work best if it is within 33 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.



Press the power button to turn on the speaker and the speaker will "beep" when it is ready to pair. From your smart phone or tablet, find a list of nearby devices and choose "DG-SB55". Enter "0000" if asked. The speaker will "beep" again when pairing is complete!

**Vibe**  
audio

## QUICK START GUIDE

### LED FLAME PARTY SPEAKER

#### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

**Vibe**  
audio

## QUICK START GUIDE

### LED FLAME PARTY SPEAKER

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### WARNING

Keep away from water and moisture.  
Keep away from heat sources.  
Do not disassemble.

Distributed DGL Group, Ltd. 2045 Lincoln Hwy,  
Edison, NJ, 08817, USA.

BT ID: D044460  
FCC ID: 2AANZSB55

