Size: 414x57mm, 材质: 128g铜板纸,双面印刷, 蓝色线为刀模线。不需要印刷

₩Vibe QUICK START GUIDE

WIRELESS FARBUDS & CHARGING CASE

USING THE PORTABLE CHARGING CASE

We recommend that you keep the earbuds in the portable charge case when not in use. While on-the-go, the case doubles as a charging solution for the earbuds. Simply put the earbuds into the charging case. The earbuds will be powered automatically, a full charge of the earbuds takes about 2 hours.

Connect the Micro USB cable to the charaina port on case. A full charae

of the case battery takes up 2 hours. When the case is charging, the LED light flashes red. The red light will turn to red when fully charged.

×Vibe QUICK START GUIDE

₩Vibe

QUICK START GUIDE

3

× Vibe QUICK START GUIDE

QUICK START GUIDE

WIRELESS FARBUDS & CHARGING CASE

1000



WIRELESS EARBUDS & CHARGING CASE

• If only one earbud works, turn off the earbud

If paired two earbuds don't work, turn off the

• Make sure your earbuds are within range of

If you hear a short beep every 30 seconds.

you need to recharge your earbuds.

Connection may be lost due to low battery.

earbud and reconnect earbuds as a pair.

and reconnect earbuds as a pair.



CONNECTION LOST?

vour smart device.

**Vibe

Your earbuds come pre-paired. If they lose connection, please follow the below steps to reconnect.

Press and hold multifunction buttons on both earbuds to power on both earbuds, then wait till the indicator lights flash blue slowly on both earbuds.

WIRELESS FARBUDS & CHARGING CASE



Turn on Bluetooth on your To turn OFF press and phone or tablet. Choose "DG-TWRC". Enter "0000" if button on both earbuds asked. You're paired! Both until the LED flashes red. earbuds flash blue every 6 seconds.

× Vibe

FCC STATEMENT

OR PERIPHERAL

WIRELESS FARBUDS & CHARGING CASE

USING EARBUDS FOR DIFFERENT DEVICES

The earbuds can be paired to different devices. For example, you can use one earbud with a smart phone and the other earbud for a tablet.



Turn on one earbud by press and hold the multifunction button for 3 seconds. The earbud flash red and blue. Leave the other earbud turned off.

WIRELESS FARBUDS & CHARGING CASE



×× Vibe

Select "DG-TWRC" from the Bluetooth menu of vour first device. Enter PIN code "0000" if asked. This earbud is ready to use.



To pair the other earbud. make sure vour other wireless device is nearby. Same pairing operation as the first earbud. Choose"DG-TWRC" Enter "0000" if asked.

xxVibe QUICK START GUIDE

WIRELESS EARBUDS & CHARGING CASE

MUSIC CONTROLS

- Press the button once to pause your music.
- Volume control is only through your smart phone or wireless device.

USING YOUR EARBUDS FOR CALLS

- Press the button once to answer or end call.
- Press and hold the button to reject a call.

NOTE: When answering calls, the call can be heard and controlled by both earbuds.

QUICK START GUIDE

WIRELESS EARBUDS & CHARGING CASE

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This

device may not cause harmful interference, and (2) this

device must accept any interference received, including

Please note that changes or modifications not expressly

approved by the party responsible for compliance could

ECC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE

interference that may cause undesired operation.

void the user's authority to operate the equipment.

QUICK START GUIDE

hold the multifunction

xxVibe QUICK START GUIDE

WIRELESS EARBUDS & CHARGING CASE

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

xVibe

QUICK START GUIDE

QUICK START GUIDE

WIRELESS EARBUDS & CHARGING CASE

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AANZ-TWRC BT ID: D051448

WARRANTY

x∀ibe

This product is covered by a 3 month limited manufacturer's warranty. Contact us if you have any problems at support@dglusa.com.

WIRELESS EARBUDS & CHARGING CASE

WARNING

Keep away from water and moisture. Keep away from heat sources.

Do not disassemble.

RF warning statement:

The device has been evaluated to meetgeneral RF exposure

The device can be used in portable exposure condition without restriction.



