QUICK START GUIDE

WIRELESS STEREO FARBUDS

### USING THE PORTABLE CHARGING CASE

We recommend that you keep the earbuds in the portable charge case when not in use. While on-the-go, the case doubles as a charging solution for the earbuds. Simply put the earbuds into the charging case. Press the button on the charging case to turn on the case. And the earbuds will begin to charge, a full charge of the earbuds takes 1.5 hours.



Connect the Micro USB cable to the

charging port on case. A full charge of the case battery takes up 2 hours. When the case is charging, the LED light flashes red. The red light will turn to blue when fully charged.

QUICK START GUIDE

WIRELESS STEREO EARBUDS



Blue is fully charged!



Your earbuds come pre-paired. If they lose connection, please follow the below steps to reconnect.

Press and hold multifunction buttons on both earbuds to power on both earbuds, then wait till the indicator liahts flash red and blue slowly on both earbuds.

QUICK START GUIDE

WIRELESS STEREO EARBUDS



Double click the multifunction button on either earbud to select a master earbud. The two earbuds will pair to each other automatically. The indicator lights of both earbuds will flash red and blue quickly to indicate they are paired successfully. Both earbuds still flash red and blue to indicate it is ready to pair.

QUICK START GUIDE

WIRELESS STEREO EARBUDS



Turn on Bluetooth on your To turn OFF press and phone or tablet. Choose hold the multifunction "CC-TWS". Enter "0000" if button on both earbuds asked. You're paired! Both until the LED flashes red earbuds flash blue every 6 for three times. seconds.



QUICK START GUIDE

WIRELESS STEREO FARBUDS

USING EARBUDS FOR DIFFERENT DEVICES

The earbuds can be paired to different devices. For example, you can use one earbud with a smart phone and the other



earbud for a tablet.

Turn on one earbud by press and hold the multifunction button for 3 seconds. The earbud flash red and blue. "0000" if asked. This earbud Leave the other earbuil is ready to use. turned off.

QUICK START GUIDE

WIRELESS STEREO EARBUDS



Select "CC-TWS" from the Bluetooth menu of your first device. Enter PIN code

To pair the other earbud. make sure your other wireless device is nearby. Same pairing operation as the first earbud. Choose "CC-TWS". Enter "0000" if asked.

# QUICK START GUIDE

WIRELESS STEREO EARBUDS

## MUSIC CONTROLS

- Press the button once to pause your music.
- Press and hold the button for 1.5 seconds, it will go to
- Volume control is only through your smart phone or wireless device.

### USING YOUR EARBUDS FOR CALLS

- Press the button once to answer or end call.
- Press and hold the button to reject a call.
- Press the button twice to dial the last call.

NOTE: When answering calls, the call can be heard and controlled by both earbuds.

CONNECTION LOST?

vour smart device.

lost due to low battery.

QUICK START GUIDE

If only one earbud works, turn off the earbud

If paired two earbuds don't work, turn off the

Make sure your earbuds are within range of

If you hear a long beep, you need to

recharge your earbuds. Connection may be

earbud and reconnect earbuds as a pair.

and reconnect earbuds as a pair.

QUICK START GUIDE

WIRELESS STEREO EARBUDS

# WIRELESS STEREO EARBUDS

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

QUICK START GUIDE

WIRELESS STEREO EARBUDS

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio

or television reception, which can be determined by

QUICK START GUIDE

WIRELESS STEREO EARBUDS

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is
- · Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AANZTWS BT ID: D051448

QUICK START GUIDE

WIRELESS STEREO EARBUDS

## WARRANTY

Contact us if you have any problems at support@dglusa.com.

### WARNING

Keep away from water and moisture. Keep away from heat sources.

Do not disassemble.



