

HOW TO OPERATE YOUR WALKIE TALKIE

1. OPEN "BATTERY DOOR" AND SNAP IN 3X 1.5V "AA" BATTERIES
 2. TURN THE "ON/OFF" SWITCH TO "ON".
 3. PRESS THE "PUSH-TO-TALK" BUTTON FOR TRANSMITTING AND SPEAK IN A NORMAL VOICE LEVEL INTO THE "SPEAKER/MICROPHONE", HOLDING THE SET 8 CM FROM YOUR MOUTH.
 4. RELEASE THE "PUSH-TO-TALK" BUTTON FOR RECEIVING INCOMING MESSAGES.
- * OPERATION RANGE IS BASED ON OPEN SPACE WITHOUT INTERFERENCE.



Product Safety and RF Exposure

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Caution: To maintain compliance with the FCC's RF exposure guidelines hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face, use only the supplied belt clip for this product and transmitting, use of other accessories may not ensure compliance with FCC RF exposure guidelines.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environment. Unauthorized antennas, modification, or attachments could damage the transmitter and may violate FCC regulations

The device is authorized to operate at a duty factor not to exceed 50%.

Hazardous Environments:

Do not operate the communicator in hazardous environments, explosion or fire may result. Do not operate the communicator near unshielded electrical blasting caps. Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio to the OFF position to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radios." Construction crews often use remote control RF devices to set off explosives.

Never use cleaners or solvents to clean your device. Use a dry, lint-free cloth to clean the battery contacts. Do not submerge the unit in water.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FRS: 462.5625MHz