

游戏手柄使用手册




Micro Game Station

手柄示意图

正面



侧面

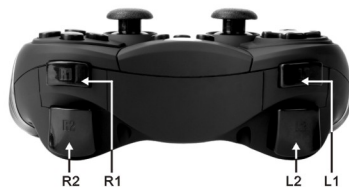

手柄功能和操作

手柄操作

- 当手柄电源和游戏机电源同时打开后，手柄上黄灯会不停的闪动，这时你需要双击手柄的START键进行对码操作，如果黄灯熄灭，表示对码成功。现在你就可以用手柄去控制游戏机了。如果多次双击START键，黄灯仍然闪动，请重新打开手柄再次对码。如果黄灯仍然闪动，请重启游戏机和手柄后重新对码。
- 当手柄离游戏机太远时，手柄黄灯可能会开始闪动，这时你需要离游戏机近一点直到灯不在闪动，这里不需要双击START对码。
- 注：黄灯熄灭表示手柄能正常使用；黄灯闪动表示需要对码。在游戏机重启或开电源后，都需要双击手柄START键进行对码。

按键定义


- 手柄方向键和左摇杆都对应游戏机的方向键（UP DOWN LEFT RIGHT）。
 - 手柄右边的A, B, X, Y键和右摇杆都对应游戏机的游戏按键（A, B, X, Y）。
 - 手柄SELECT, START, R1, L1按键对应游戏机的SELECT, START, R, L按键。
 - 手柄R2, L2按键也对应游戏机的R, L按键。
- 手柄MACRO, MODE按键没做定义。

• Handle Map

Front view



Side view

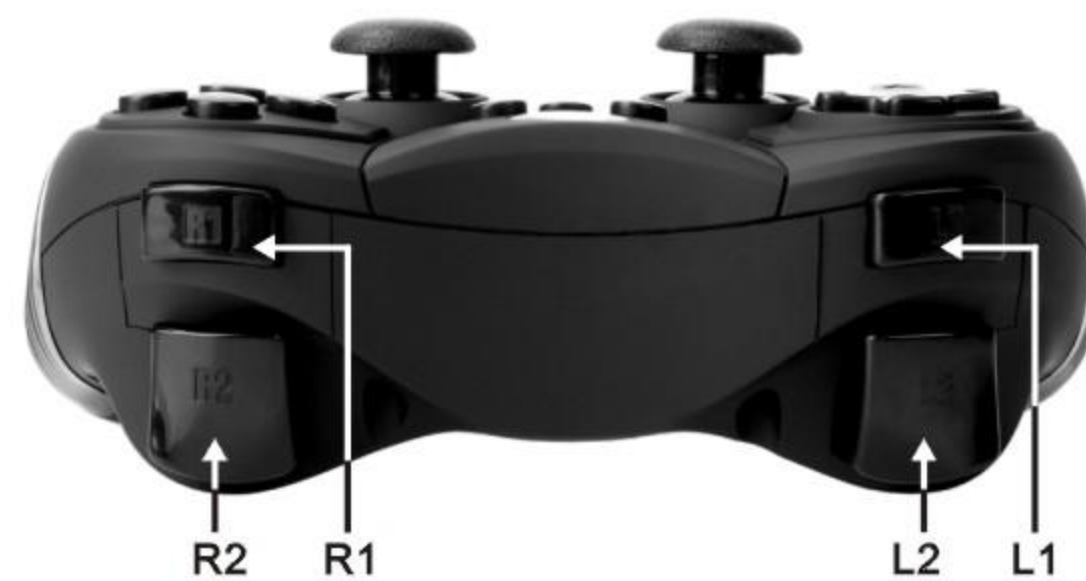

• Handle functions and operation

Handle operation

- When the handle power supply and video game consoles at the same time opened, the handle on the yellow light will stop flashing, then you need to double-click the START button to handle operation of the code, if the amber light is off, said the success of the code. Now you can use the handle to control the game by. If you double-click the START button several times, the yellow light is still flashing, please re-open the handle on the code again. If the amber light is still flashing, please restart the game and again after the handle to the code.
- When the handle too far away from the game, the controller may start flashing yellow light, when you need one point from the game close until the lights are not flashing, there do not need to double-click the START of the code.
- Note: The yellow light extinguished that can handle normal use; the yellow light flashing expressed the need for code. In the game after the restart or open the power, require double-click the START button to the handle of the code.

Key Definition

- The arrow keys and the left joystick handle corresponds to the direction of game keys (UP DOWN LEFT RIGHT).
 - Handle to the right of A, B, X, Y button and right joystick keys corresponds to the game console (A, B, X, Y).
 - Handle SELECT, START, R1, L1 button corresponding to console SELECT, START, R, L button.
 - Handle R2, L2 buttons also correspond to console R, L button.
- Handle MACRO, MODE buttons do not define.


FCC INFORMATION FOR THE CONSUMER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 **深圳市丁果科技有限公司**
深圳市灵犀数码产品有限公司
—— 联合出品 ——

地址: 深圳市福田区深南大道6021号喜年中心A座1109
电话: 0755-88283088/88283099 传真: 0755-88283098
E-mail: dingoo@dingoo.hk 邮政编码: 518040