

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)this device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

Note :This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE:THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Content

PageShot

1. PageShot Overview

Overview	6
Package Contents	7
Part Names	8-11
Product Features	12
System Requirements	12
PageShot Specifications	12

2. Connecting PageShot

Connecting the Power	14
- Installing	14
- Using the Adaptor	14
Connecting the Earphones	14
Connecting PageShot to a TV/(Projector)	15
Connecting PageShot to a Computer	15

3. Using PageShot

Turning PageShot On	18~19
- Configuring NTSC/PAL	19
Holding Remote Control Operations (HOLD Button)	19
Disabling Video Out While Playing MP3's	19
Selecting the PageShot Menu	20-21
- The PageShot Menu Icons	21
Using PRESENTATIONS	21-27
- Playing a Presentation	22
- Editing a Presentation	24-25
- Previewing Presentation File Images, Configuring the Presentation Start File	25-26
- Deleting a Presentation, Configuring the Start Path	27
Using JPEG	28-33
- Viewing JPEG Images in STILL CUT	29-30
- Viewing JPEG Images in SLIDE SHOW	31
- Viewing JPEG Images in STILL CUT	29-30
- Viewing JPEG Images in THUMBNAIL	32
- Deleting a JPEG image, Configuring the JPEG Start Path	33
Using MP3	33-37

- Playing MP3 Files	35
- Skipping a Music File, Adjusting the Volume	35
- Repeating, Deleting, Configuring the MP3 Start Path	36-37
Using VOICE	37-41
- Recording a Voice File, Playing a Voice File	38
- Exploring the Playback Location in a Voice File, Adjusting the Volume	39
- Repeating, Deleting a Voice File	40
- Configuring the Start Path	41
Using SETUP	41-53
- The PageShot Menu Icons	42
- Upgrading the Firmware	42-43
- Formatting the Memory	44
- Viewing Information	45
- Adjusting the Horizontal/Vertical Location of the Screen	46
- Configuring the PageShot Device	46
- Configuring the Start mode	47-48
- Muting the Sound	48-49
- Configuring the SLIDE SHOW Page Interval	49
- Configuring POWER SAVE	50
- Configuring Internal and External Memory	51
- Configuring the Video Out Signal (NTSC/PAL)	52
- Using External Memory	53
4. Using Applications	
Installing the USB Driver	56-61
- Windows 98 Second Edition	56-58
- Windows Millennium Edition	58
- Windows 2000	59-61
- Windows XP	61
Checking the Connectivity	62-63
Safely Removing PageShot After Use	63-64
Installing the PAGESHOT File Manager	65-66
Using the PAGESHOT File Manager	66-84
- Running the PAGESHOT File Manager	67
- Icon Functions	68
- Detailed Description of Functions	69-84

FORMATTING PAGESHOT	69	
CONVERTING A POWERPOINT FILE TO JPEG	69-70	
IMAGE FORMAT CONVERSION AND RESIZING	71-72	
SCREEN CAPTURING	73-74	
PLAYING A VOICE FILE	75	
EDITING THE INITIALIZATION FILE	76-77	
EDITING A PRESENTATION FILE	78-81	
VIEWING THE DETAIL LIST	81	
VIEWING THE THUMBNAIL LIST	81	
INFORMATION	81	
Copying Files to PageShot	82	
Renaming a File	83	
Deleting a File	84	
Configuring the Language	84	
Configuring the Image Size Depending on the TV Output		84

5. Using PAGESHOT File2 JPEG 85

- Running PAGESHOT File2 JPEG	85
- Icon Functions	86
- Detailed Description of Functions	87
Selecting the File Format	87
Downloading	87
Uploading	88
Deleting	89
Updating	89
Formatting PageShot	89

PageShot Overview	Package Contents	Part Names
Product Features	System Requirements	PageShot Specifications

1. PageShot Overview

Overview




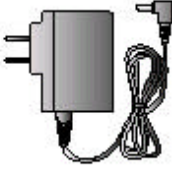 






PageShot is a portable presentation device that enables the giving of presentations without the need for other equipment such as a laptop computer.


Using PageShot, a presentation can be held anywhere that a display device such as a TV or projector is present.

PageShot provides functions for playing presentations created on a computer, playing MP3 files, and recording. By connecting to a computer via USB, you can easily create, edit, and save presentation files.

It will greatly enhance your efficiency and add value to your business

Package Contents

 PageShot Main Body	 Remote Control	 CD-Rom (Including driver and user guide)	 Adaptor	 Carrying-Case
 USB Cable	 A / V Cable	 2EA Battery (AA Size)	 Remote Control Battery (Specification : CR 2032)	 Earphones

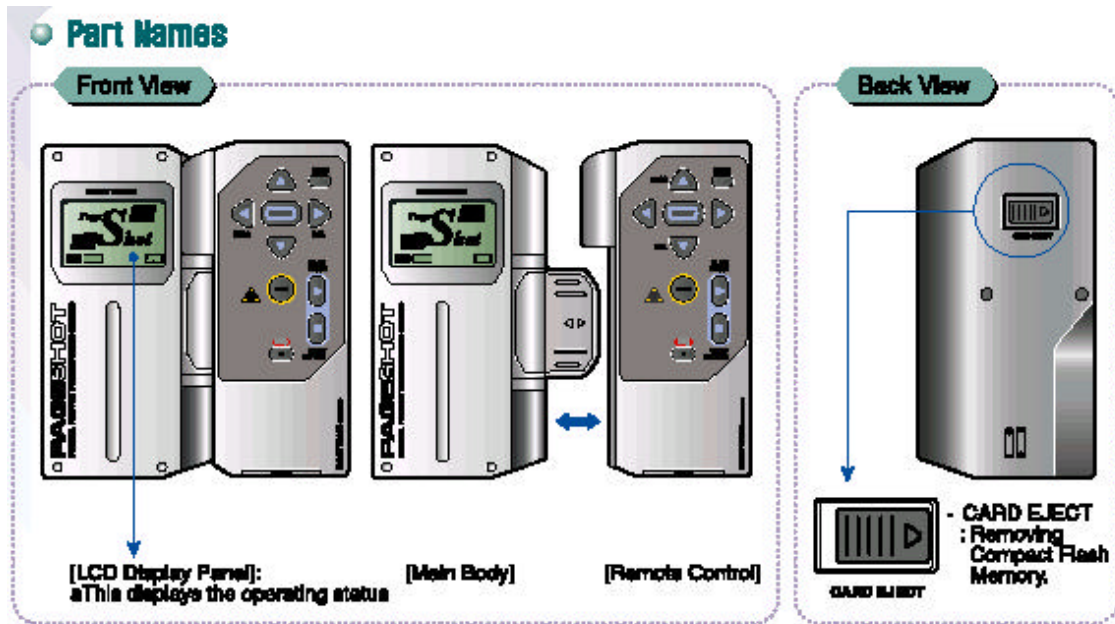 

Front View

 
[LCD Display Panel]: This displays the operating status

[Main Body]

[Remote Control]

Back View

- CARD EJECT: Removing Compact Flash Memory.

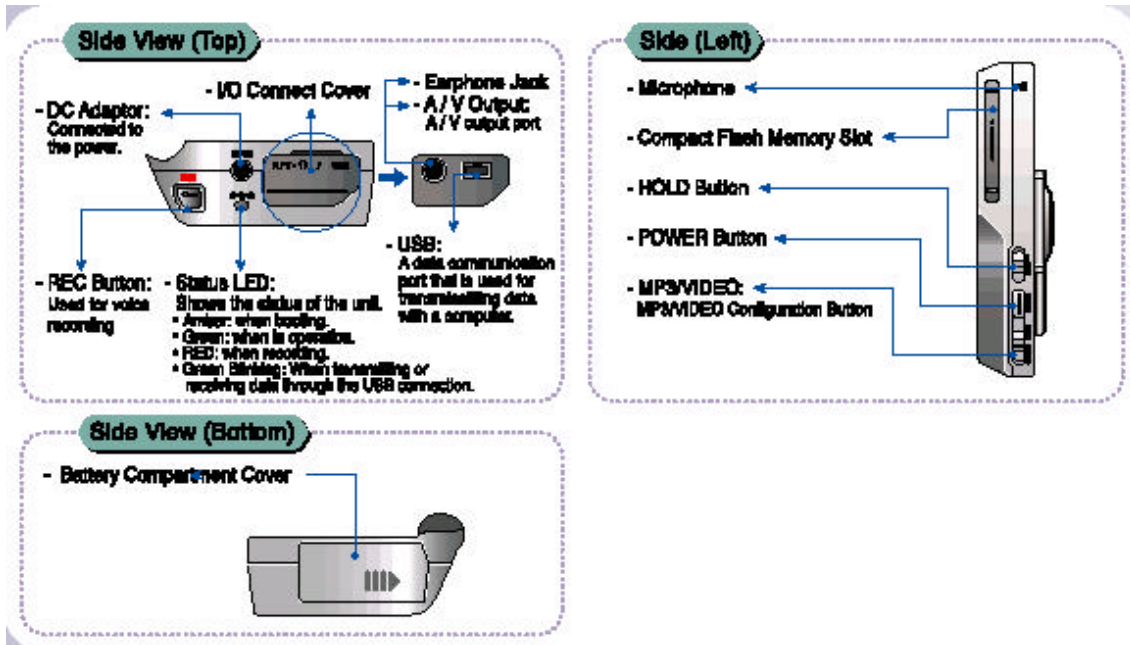

Side View (Top)

- DC Adaptor: Connected to the power.
- REC Button: Used for voice recording
- I/O Connect Cover
- Status LED: Shows the status of the unit.
 - * Amber: when booting.
 - * Green: when in operation.
 - * RED: when recording.
 - * Green Blinking: When transmitting or receiving data through the USB connection.
- Earphone Jack
- A / V Output: A / V output port
- USB: A data communication port that is used for transmissitting data with a computer.

 
Side View (Bottom)

- Battery Compartment Cover

Side (Left)

- Microphone
- Compact Flash Memory Slot
- HOLD Button
- POWER Button
- MP3/VIDEO: MP3/VIDEO Configuration Button

Front View of the Remote Control

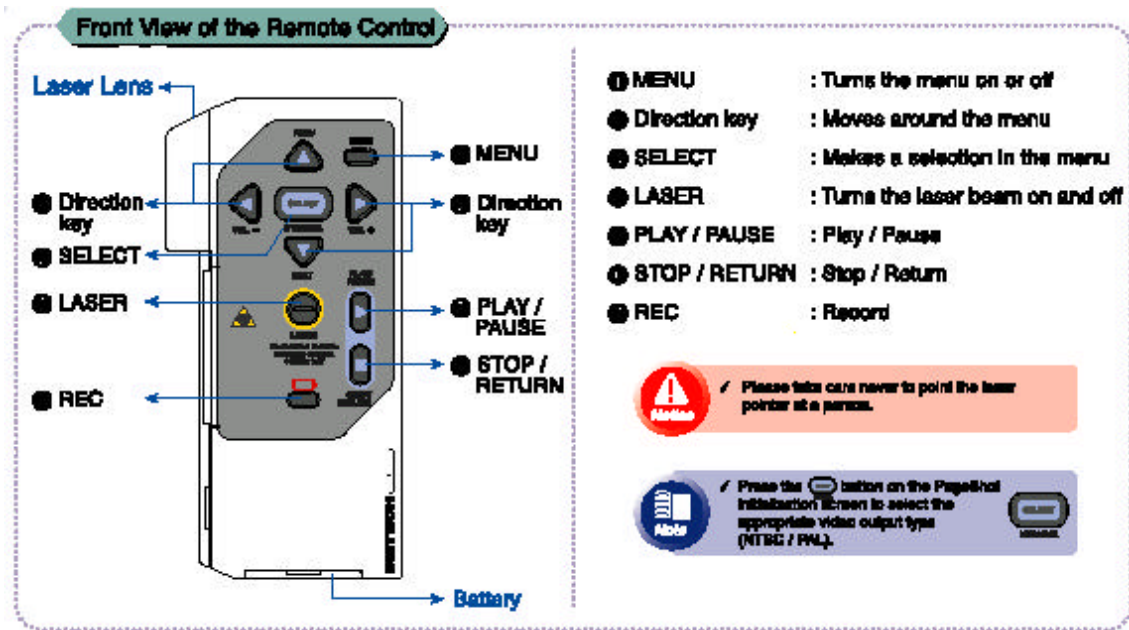

Laser Lens

Direction key

SELECT

LASER

REC

MENU

Direction key

PLAY / PAUSE

STOP / RETURN

Battery

MENU: Turns the menu on or off

Direction key: Moves around the menu

SELECT: Makes a selection in the menu

LASER: Turns the laser beam on and off

PLAY / PAUSE: Play / Pause

STOP / RETURN: Stop / Return




REC: Record

Notice. Please take care never to point the laser pointer at a person.

Note. Press the (icon) button on the PageShot initialization screen to select the appropriate video output type (NTSC / PAL).

Using the remote control for the first time:

Using the remote control for the first time

- 1** Open the battery door by pulling the under-side of the remote control to open the battery compartment cover.

- 2** Insert and align the battery with the + and - symbols in the battery compartment.

- 3** Slide and close the battery compartment cover.


Note ✓ The remote control battery is a CR2032 3 Volt Lithium Cell.

1. Open the battery door by pulling the under-side of the remote control to open the battery compartment cover.
2. Insert and align the battery with the + and - symbols in the battery compartment.
3. Slide and close the battery compartment cover.

Note. The remote control battery is a CR2032 3 Volt Lithium Cell.

Product Features

- Windows 98, ME, 2000, and XP compatible
- Automatic conversion of PowerPoint slides into the PageShot presentation format
- USB plug-in support
- Multi image folder support
- Slide preview function support
- Extended memory support
- MP3 player function support
- Recording function function

System Requirements

CPU : Pentium

Memory : 64M

OS : Windows 98, ME, 2000, and XP

Peripheral I / O : USB Port

PageShot Specifications




Image Resolution	640 * 440 (NTSC) 640 * 500 (PAL)
Image Format	JPEG
Audio Format	MP3
Voice Format	G.723
Storage Capacity	Image - About 1000 image files MP3 - About 12 music files (when the length of a music clip is about 4 minutes) Voice Recording - About 6 hours
Storage Media	Internal Memory 64M External Memory Compact Flash
LCD (Liquid Crystal Display)	128 * 64 Black-and-white Graphic LCD
Interface	PC USB1.1 TV RCA Cable NTSC/PAL; Stereo Audio
Pointing	Laser Pointer (1mW)
OS	Windows 98SE, ME, 2000, and XP

Power	DC 3V Adapter 2 AA-type Alkaline Batteries
Power Consumption	0.85W
Security Specification	
Dimension	114 * 56.6 * 27.5mm
Weight	About 100g (without)

2. Connecting PageShot


● Connecting the Power

   Installing the Battery

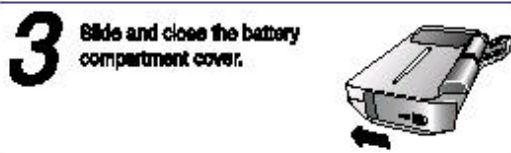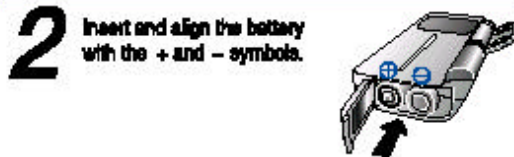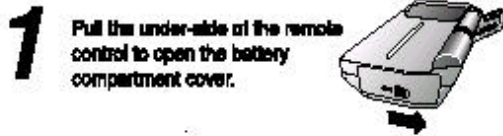


Using the Adaptor

 Connect the adaptor jack to the "DC IN" of PageShot.



 Connect the adaptor plug to the wall outlet.



- ✓ If you connect the AC power while the unit is operating on battery power, the system may become damaged. Turn off the unit before connecting the AC power.
- ✓ Before using the adaptor, remove the battery from the unit.

● Connecting the Earphones

- Connect the earphones for listening to an MP3 or voice file through the earphones.
- Connect the earphones to the "A/V" output port of PageShot.

Connecting the Power

Installing the Battery

1. Pull the under-side of the remote control to open the battery compartment cover.
2. Insert and align the battery with the + and - symbols.
3. Slide and close the battery compartment cover.

Using the Adaptor

Connect the adapter jack to the "DC IN" of PageShot.

Connect the adapter plug to the wall outlet.

If you connect the AC power while the unit is operating on battery power, the system may become damaged. Turn off the unit before connecting the AC power.

Before using the adaptor, remove the battery from the unit.

Connecting the Earphones

- Connect the earphones for listening to an MP3 or voice file through the earphones.
- Connect the earphones to the "A / V" output port of PageShot.

Connecting to a TV or Projector

Connect the "A/V" output port of PageShot to the voice/video input port of the TV or projector.

- Plug the black jack into the "A/V" output port of PageShot.
- Plug the yellow jack into the video input port of the TV or projector. Plug both the red and the white jacks into the voice input ports of the TV or projector.
- Set the TV source to VIDEO.

Connecting to a Computer

 
- Connect PageShot to the computer when you want to upload data from PageShot or download data created on the computer.
- Only the data upload and download functions of PageShot will work in this state.
- The other PageShot functions will not work in this state.
- The initialization screen is displayed on the TV and on the LCD.
- Connect the smaller jack of the USB cable to the "USB" port of PageShot, the bigger jack to the USB port of the computer.

Note. If you are connecting PageShot for the first time, refer to "Installing the USB driver" of "Using Applications".

● Connecting to a TV or Projector


Connect the A/V output port of PageShot to the voice/video input port of the TV or projector.

- Plug the black jack into the "A/V" output port of PageShot.
- Plug the yellow jack into the video input port of the TV or projector. Plug both the red and the white jacks into the voice input ports of the TV or projector.
- Set the TV source to VIDEO.

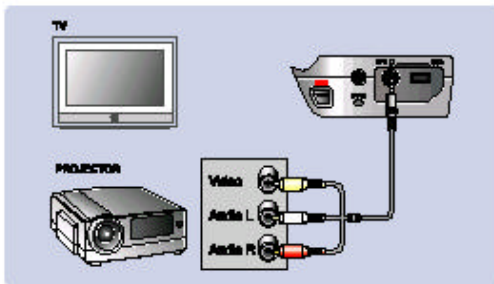

● Connecting to a Computer

 - Connect PageShot to the computer when you want to upload data from PageShot or download data created on the computer.
- Only the data upload and download functions of PageShot will work in this state.
- The other PageShot functions will not work in this state.
- The initialization screen is displayed on the TV and on the LCD.

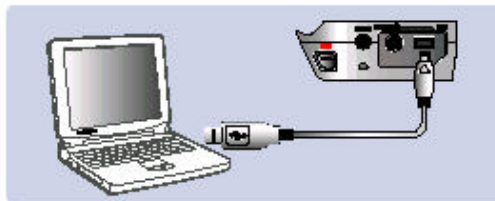


- Connect the smaller jack of the USB cable to the "USB" port of PageShot, the bigger jack to the USB port of the computer.



✓ If you are connecting PageShot for the first time, refer to "Installing the USB driver" of "Using Applications".

3. Using PageShot

 ● Turning PageShot On



Press the button

• When PageShot is turned on, the PageShot screen is displayed on the screen.



[PAGESHOT (SCREEN)]



- ✓ If you press the power button and the unit does not turn on: Check the connection to the adapter. (Referring to "Connecting the Power")
- ✓ If you press the button and the unit turns on and then off: Check the "HOLD" status.



[LCD display window]

Page 18

Turning PageShot On

Press the (icon) button.

When PageShot is turned on, the PageShot screen is displayed on the screen.

Note.

If you press the power button and the unit does not turn on: Check the connection to the adapter. (Referring to "Connecting the Power")

If you press the button and the unit turns on and then off: Check the "HOLD" status.

[LCD display window]

Page 19

Configuring NTSC / PAL

Depending on the TV used, configure the video signal type by using the (icon) button on the remote control.

Whenever you press this button, the NTSC or PAL video signal icon is displayed on the LCD panel of PageShot.

The NTSC or PAL icon is displayed only on the LCD panel of PageShot.

[LCD Display Panel]

Note.

NTSC (National Television System Committee)

This standard is used in Korea, the United States, Japan, Taiwan, Canada, Mexico, etc..

PAL (Phase Alternation Line)

This standard is used in European countries such as Germany, England, etc., and other countries such as China, Brazil, etc.

Holding Remote Control Operations (HOLD Button)

You can lock in the current settings by disabling the operation of the remote control buttons.

Disabling the Video Out While Playing MP3' s

MP3

No video output signal is sent. Only the audio signal is emitted (output).

This function is useful for listening to MP3' s.

VIDEO

Both the video and audio signals are set to output.

Selecting the PageShot Menu

1. Press the (icon) button to display the menu.
2. Press the (icon) button to move to the desired menu.
3. Press the (icon) button to launch the selected menu.

[PageShot Menu]

Selected menu name

Selected menu is inverted

Remaining battery charge

Video out signal (NTSC / PAL)


Voice recording or internal / external memory type


Current output mode


HOLD button status

 
[Menus on PageShot LCD]

Selecting the PageShot Menu

1 Press the  button to display the menu.
If you press again, menu will disappear.

2 Press the  button to move to the desired menu.

3 Press the  button to launch the selected menu.

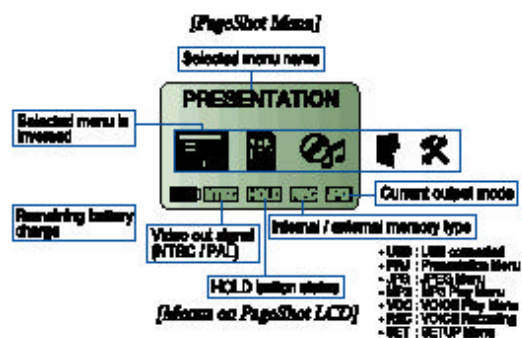

The PageShot Menu Icons

PRESENTATION	Plays presentation file - consists of JPEG and MP3 files.
JPEG	Displays a JPEG file in STILL CUT, SLIDE SHOW, or as a THUMBNAIL image.
MP3	Plays an MP3 file.
VOICE	Plays a voice file.
SETUP	Configures PageShot related functions.

Using PRESENTATIONS

You can play a presentation file consisting of JPEG and MP3 files.

The name of the file currently selected by the cursor

Sub menus

[PRESENTATION Menu Screen]






The name of the current folder.

The name of the file currently selected by the cursor.

It indicates if there are more files or folders that are not displayed on the current screen.


[PRESENTATION Menu LCD Screen]

The PageShot Menu Icons


	PRESENTATION	Plays presentation file - consists of JPEG and MP3 files.
	PHOTO	Displays a JPEG file in STILL CUT, SLIDE SHOW, or as a THUMBNAIL image.
	MP3/MUSIC	Plays an MP3 file.
	VOICE	Plays a voice file.
	SETUP	Configures PageShot related functions.

Using PRESENTATIONS

- You can play a presentation file consisting of JPEG and MP3 files.



[PRESENTATION Menu Screen]



[PRESENTATION Menu LCD Screen]

Playing a Presentation

1. Press the (icon) button to move to the desired file.

2. Press the (icon) button to start playback.

You can press the (icon) button instead.

The first JPEG, MP3, and description included in the presentation file are played.

(Manual Mode)

[TV Screen]

[LCD Screen]

Moves to the previous page.

Moves to the next page.

Stops playback.

Switches to Automatic mode.

In automatic mode, the next page is displayed when the configured time (Slide Delay) has passed.

Pauses playback in automatic mode.

Playing a Presentation

1 Press the button to move to the desired file.

2 Press the button to start playback.
You can press the button instead.

The first JPEG, MP3, and description included in the presentation file are played.
(Manual Mode)

[TV Screen] [LCD Screen]

Moves to the previous page.

Moves to the next page.

Stops playback.

Switches to Automatic mode.

Automatic progress based on the standard of MP3.

Pauses playback in automatic mode.

Resumes playback in automatic mode.
Switches to manual mode.

Note.

When you press the (icon) button,

- If it is a folder (icon), you move to that folder.
- If it is a super folder (icon), you move to that super folder.

When you press the (icon) button,







- If it is a folder (icon), the message "The operation does not exist." (icon) will be displayed.



Note.

The more files are included in the presentation, the more loading time is required.
It is recommended using a font larger than 14pt in the document images for presentation.

Editing a Presentation

• You can edit a presentation file to determine whether or not to play the configured JPEG, MP3 and script on the screen when playing the presentation file.

- 1** Press the  button to select the file to edit.
You can select only one file.
- 2** Press the  button to move to the sub menu.
- 3** Press the  button to move to the EDIT menu.
- 4** Press the  button to run.
The background image is changed, and the configured settings of the selected file are displayed on the screen. Refer to the [Presentation Edit Screen] figure.
- 5** Press the  button to change the page location.
- 6** Press the  button to move the cursor to H, J, M, or S.

About each individual page
 - H[Hide / Show] : You can configure whether to show or hide page.
 - J[JPEG] : You can configure whether or not to display an image.
 - M[MP3] : You can configure whether or not to play the MP3 file.
 - S[SCRIPT] : You can configure whether or not to display the script.
- 7** Press the  button.
By selecting the relevant buttons for H, J, M, S, the option is either Enabled or Disabled.
- 8** Press the  button.
This ends the presentation edit.
Saves the current configured settings.

Editing a Presentation

You can edit a presentation file to determine whether or not to play the configured JPEG, MP3 and script on the screen when playing the presentation file.

1. Press the (icon) button to select the file to edit.

You can select only one file.

2. Press the (icon) button to move to the sub menu.

3. Press the (icon) button to move to the EDIT menu.

4. Press the (icon) button to run.

The background image is changed, and the configured settings of the selected file are displayed on the screen.

Refer to the [Presentation Edit Screen] figure.

5. Press the (icon) button to change the page location.

6. Press the (icon) button to move the cursor to H, J, M, or S.

About each individual page



- H(Hide / Show) : You can configure whether to show or hide page.

- J(JPEG) : You can configure whether or not to display an image.

- M(MP3) : You can configure whether or not to play the MP3 file.

- S(SCRIPT) : You can configure whether or not to display the script.

7. Press the (icon) button.

By selecting the relevant buttons for H, J, M, S, the option is either Enabled or Disabled.

8. Press the (icon) button.

This exits the presentation edit.

Saves the current configured settings.

Presentation File Name

Page Configuration

JPEG Image

MP3 Audio

Contents of the Script

[Presentation Edit Screen]

Presentation File Name

Page Configuration

JPEG Image

MP3 Audio

Current Page / Total Page

[Presentation Edit LCD Screen]

Previewing the Presentation File Images

This is convenient to use when the content of the JPEG file is unclear from the name when editing a presentation.

1. Move to the presentation edit screen.

Refer to "Editing Presentations".

2. Press the (icon) button.

The 9 images included in the presentation are displayed in a screen.

[TV Screen]

[LCD Screen]

The diagram is divided into two main sections. The left section shows two screens: the top one is the 'Presentation Edit Screen' and the bottom one is the 'Presentation Edit LCD Screen'. The 'Presentation Edit Screen' displays a menu with categories: JPEG, MP3, and HOME. Under JPEG, there are three items: CAR801, CAR802, and CAR802. Under MP3, there are two items: CAR801 and CAR802. Under HOME, there are two items: JM and JMS. A 'PLAY' button is visible at the bottom. The 'Presentation Edit LCD Screen' shows a grid of 9 small image thumbnails. The right section is titled 'Previewing the Presentation File Images' and contains a list of instructions: 1. Move to the presentation edit screen. Refer to 'Editing Presentations'. 2. Press the [PLAY] button. Below the instructions, it states 'The 9 images included in the presentation are displayed in a screen.' and shows two screens: a 'TV Screen' with a 3x3 grid of 9 image thumbnails, and an 'LCD Screen' showing a 'File Name' field with a grid of 9 small image thumbnails.

3. Select the desired image by using the (icon) buttons.
4. Press the (icon) button.

The selected image is displayed in the presentation edit screen.

Note.

You can only view the files in the sub folder of the ROOT directory.

Example) ROOT\WPresentation ↯ Allowed

ROOT\WPresentation\WAA ↯ Not allowed

Configuring the Presentation Start File

You can configure the presentation file to be displayed when you turn PageShot on.

1. Select the desired file by using the (icon) buttons.
- You can select only one file.
2. Move to the sub menu by using the (icon) button.
 3. Move to the SETAUTORUN menu by using the (icon) buttons.
 4. Press the (icon) button.

The selected file is configured to be displayed when PageShot is launched.

The start path is also configured automatically.

3 Select the desired image by using the buttons.

4 Press the button.
The selected image is displayed in the presentation edit screen.

Configuring the Presentation Start File

• You can configure the presentation file to be displayed when you turn PageShot on.

1 Select the desired file by using the buttons.
You can select only one file.

2 Move to the sub menu by using the button.

3 Move to the SETAUTORUN menu by using the buttons.

4 Press the button.
The selected file is configured to be displayed when PageShot is launched.
The start path is also configured automatically.

You can only view the files in the sub folder of the ROOT directory.
Example) ROOT\WPresentation → Allowed
ROOT\WPresentation\WAA → Not allowed

Deleting a Presentation





1. Select the desired file to be deleted by using the (icon) buttons.
2. Move to the sub menu by using the (icon) button.
3. Move to the DELETE menu by using the (icon) buttons.
4. Press the (icon) button.


Deletes the selected file.

Note.

JPEG, and MP3 files included in the presentation file will not be deleted.

Deleting a Presentation

- 1** Select the desired file to be deleted by using the  buttons.
- 2** Move to the sub menu by using the  button.
- 3** Move to the DELETE menu by using the  buttons.
- 4** Press the  button.
Deletes the selected file.

 ✓ .JPEG, and MP3 files included in the presentation file will not be deleted.

Using JPEG

You can display the desired JPEG images in STILL CUT, SLIDE SHOW, and THUMBNAIL views.

Path of the current location

Preview

[JPEG Menu Screen]

The name of the selected file

Sub menu

Path of the current location

[JPEG Menu LCD Screen]

1. Move to the file you wish to run by using the (icon) buttons.

If your mouse pointer rests over a file name for more than 2 seconds, the image of the file will be displayed in the Preview window.

Only images whose size are less than 1200 x 1100 will be displayed.

2. Move to the sub menu by using the (icon) button.

3. Move to the desired menu by using the (icon) buttons.

STILL CUT

Displays images one by one.

SLIDE SHOW

Displays images in sequence.

THUMBNAIL

Displays 9 images in thumbnail view (at a time).

DELETE

Deletes the selected file.

Page 29

4. Press the (icon) button to run.

Note.

If you Press the (icon) button on a folder (icon), the path is changed to that folder.

Note.

Only images whose size are less than 640 x 500 are displayed.

JPEG images whose compression method is other than "Base Line" will not be properly displayed. (Initial screen output)

If the image is not displayed, convert the type of the image using the "PAGESHOT File Manager" and try again.

Viewing JPEG images in STILL CUT

1. Press the (icon) button in STILL CUT.

[TV Screen]

[LCD Screen]

2. Press the (icon) buttons to display the previous or next page.

3. Press the (icon) buttons to zoom in or out of an image.

Zoom

Original Size	Zoom-In x2	Zoom-In x4
Zoom-Out x4	Zoom-Out x2	Original Size

4. Whenever you Press the (icon) button, the screen location adjustment is enabled or disabled.


You can only use this in a magnified screen.


Press the (icon) buttons to change the screen location.


5. Press the (icon) button to exit.

The image will disappear, and the JPEG menu screen will appear.


• Zoom



Original Size



Zoom-In x2


Zoom-In x4


• Zoom-Out


Zoom-Out x4



Zoom-Out x2




Original Size

5

Press the  button to exit.
The image will disappear, and the JPEG menu screen will appear.


4

Whenever you Press the  button, the screen location adjustment is enabled or disabled.

You can only use this in a magnified screen.

Press the



buttons to change the screen location.

Viewing JPEG images in SLIDE SHOW

You can display images one by one after a configurable time interval.

1. Press the (icon) button in the SLIDE SHOW.

[TV Screen]

[LCD Screen]

2. Whenever you Press the (icon) button, the slide show is either paused or resumed.

While paused, the image is displayed in STILL CUT and you can perform the same operation.

[Pause TV Screen]

3. Press the (icon) button to exit.

The image disappears, and the JPEG menu screen will appear.

Note.

For information on the interval configuration, refer to "Configuring the SLIDE SHOW Page Interval" in "Using SETUP".

(icon)

Viewing JPEG Images in SLIDE SHOW

- You can display images one by one after a configurable time interval.

1 Press the button in the SLIDE SHOW.

[TV Screen] [LCD Screen]

2 Whenever you Press the button, the slide show is either paused or resumed.

While paused, the image is displayed in STILL CUT and you can perform the same operation.

[Pause TV Screen]

3 Press the button to exit.

The image disappears, and the JPEG menu screen will appear.

For information on the interval configuration, refer to "Configuring the SLIDE SHOW Page Interval" in "Using SETUP".

Viewing JPEG images in THUMBNAIL

1. Press the (icon) button in THUMBNAIL.

[THUMBNAIL TV Screen]

[THUMBNAIL LCD Screen]

2. Move to the desired image by using the (icon) buttons.

If you press the (icon) in the highest row, the previous 9 images are displayed.

If you press the (icon) in the lowest row, the next 9 images are displayed.

3. Press the (icon) button to maximize the image to the entire screen.

In the maximized screen, the image is displayed in STILL CUT and you can perform the same operation.

If the selected target is a folder, the images in the folder are displayed in THUMBNAIL.


Press the (icon) button to return to the previous THUMBNAIL screen.

 
4. Press the (icon) button to exit.


The image disappears, and the JPEG menu screen will appear.


Viewing JPEG images in THUMBNAIL


• [F2]의 작은 이미지를 화면에 보여줍니다.


1 Press the  button in THUMBNAIL.

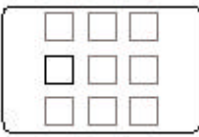
 [THUMBNAIL TV Screen]

 [THUMBNAIL LCD Screen]

2 Move to the desired image by using the  buttons.


If you press the  in the highest row, the previous 9 images are displayed.


If you press the  in the lowest row, the next 9 images are displayed.

3 Press the  button to maximize the image to the entire screen.

In the maximized screen, the image is displayed in STILL CUT and you can perform the same operation. If the selected target is a folder, the images in the folder are displayed in THUMBNAIL.

 
PLAY

Press the  button to return to the previous THUMBNAIL screen.

4 Press the  button to exit.

The image disappears, and the JPEG menu screen will appear.


Deleting a JPEG image



1. Press the  button in DELETE.


This deletes the selected JPEG file.

Configuring the JPEG Start Path.

You can set the start folder of PageShot to the current folder.

1. Move to the sub menu by using the  button.

2. Move to the SETRUNDIR menu by using the   buttons.

 
3. Press the  button.

Sets the start folder of PageShot to the current folder.


You can only specify the files in the sub folder of the ROOT directory.

(Example) Files in ROOT\WPresentation \simeq Allowed

Files in ROOT\WPresentation\WAA \simeq Not allowed

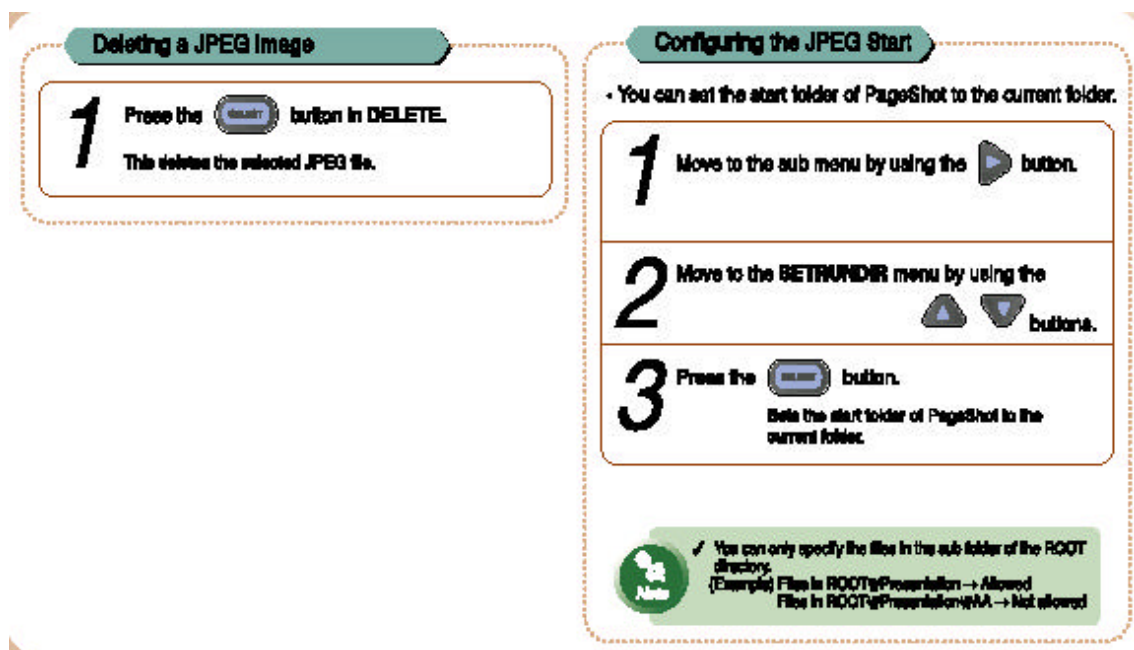




Deleting a JPEG Image


1 Press the  button in DELETE.
This deletes the selected JPEG file.

Configuring the JPEG Start

• You can set the start folder of PageShot to the current folder.

1 Move to the sub menu by using the  button.

2 Move to the SETRUNDIR menu by using the   buttons.

3 Press the  button.
Sets the start folder of PageShot to the current folder.

✓ You can only specify the files in the sub folder of the ROOT directory.
(Example) File in ROOT\WPresentation → Allowed
File in ROOT\WPresentation\WAA → Not allowed

Using MP3

You can playback stored MP3 files.

[MP3 Menu Screen]

Volume Adjustment Bar

The name of the file being played

Play Status (PLAY)

Play Time / Total Time

Repeat Mode (OFF)

Volume

[MP3 LCD Screen]

Playing MP3 Files

1. Move to the desired music file you wish to play by using the (icon) buttons.
2. Press the (icon) button to play the music file.
You can Press the (icon) button instead.
3. Press the (icon) button to pause.
To resume playback, press the button again.
4. Press the (icon) button to exit.

Using MP3

- You can playback stored MP3 files.

The diagram illustrates the MP3 playback interface. It shows two screens: the [MP3 Menu Screen] and the [MP3 LCD Screen]. The [MP3 Menu Screen] displays a file list with '7DAYS' selected. The [MP3 LCD Screen] shows playback details for '7DAYS', including play status (PLAY), play time (0:00:00), total time (7:00:00), repeat mode (OFF), and a volume bar. Labels point to these elements: 'Volume Adjustment Bar', 'The name of the file being played', 'Play Status (PLAY)', 'Play Time / Total Time', 'Repeat Mode (OFF)', and 'Volume'.

Playing MP3 Files

- 1 Move to the desired music file you wish to play by using the buttons.
- 2 Press the button to play the music file.
You can Press the button instead.
- 3 Press the button to pause.
To resume playback, press the button again.
- 4 Press the button to exit.

Page 35

Note.

If the size of an MP3 file is larger than 9MB, the part exceeding 9MB will not be played.

Note.

When you Press the (icon) button,

- If it is a folder (icon), you move to the folder.
- If it is a super folder (icon), you move to the super folder.

When you Press the (icon) button,

Skipping a Music File

1. Press the (icon) button to move to the next music file.
2. Press the (icon) button to move to the previous music file.

Note.

If the previous or next music file is a folder, playback will exit.

Adjusting the Volume



You can only adjust the volume when a file is playing.

1. Press the (icon) button.

You can control the volume level from 0 to 100.

If the sound is very low despite the volume being turned up to maximum, adjust the TV volume.

Repeating a File

1. Whenever you Press the (icon) button while playing, the mode is changed to OFF  ONE  ALL in order.

OFF	Disables repeat playback. Plays all the music files in the folder once.
ONE	Repeats the current music file.
ALL	Repeats all the music files in the folder.

2. REPEAT in the sub menu performs the same operation, and allows repeat configuration when stopped.

Deleting an MP3 File

1. Select the file to be deleted by using the (icon) buttons.
2. Move to the sub menu by using the (icon) button.
3. Move to the DELETE menu by using the (icon) buttons.
4. Press the (icon) button.

This deletes the selected file.

Configuring the MP3 Start Path

You can set the start folder of PageShot to the current folder.

1. Move to the sub menu by using the (icon) button.
2. Move to the SETRUNDIR menu by using the (icon) buttons.
3. Press the (icon) button.

This sets the start folder of PageShot to the current folder.

Note.

You can only specify the sub folder of the ROOT directory.

Example) ROOT\WPresentation ⚡ Allowed

ROOT\WPresentation\WAA ⚡ Not allowed

Using VOICE

You can record voice and then play the recorded clip back.

The voice file being played.

Playback status (PLAY)

Play Time / Total Time

Repeat Mode (OFF)

Volume Adjustment Bar

Volume

[VOICE Menu Screen]

The voice file being played.

Play status (PLAY)

Play Time / Total Time

Repeat Mode (OFF)

Volume

Volume

[VOICE Menu LCD Screen]

Recording a Voice File

1. Press the (icon) button.

Voice recording starts.

You can also start recording by pressing the REC button of the PageShot set.

This works in all modes.

If voice recording has started, all other functions stop.

Voice recording is given the highest priority.

2. Press the (icon) button.

Voice recording stops.

Note.

If the "Battery Low" message is displayed while recording, the recording up to that point is saved to memory and then voice recording is terminated.

Playing a Voice File

1. Move to the desired file by using the (icon) button.

2. Press the (icon) button to play the file.

You can Press the (icon) button, instead.

3. Press the (icon) button to pause.

To resume playing, press the button once again.

4. Press the (icon) button to exit.

Note.

When you press the (icon) button,

- If it is a folder (icon), you move to the folder.
- If it is a super folder (icon), you move to the super folder.

When you press the (icon) button,

- If it is a folder (icon), the message "The operation does not exist." (icon) will be displayed.

Exploring the Playback Location in a Voice File

You can search for playback locations while playing a voice file.

1. Press the (icon) button to rewind the file at twice the speed (REW).
2. Press the (icon) button to fast forward the file at twice the speed (FF).

Adjusting the Volume

You can only adjust the volume when a file is being played back.

1. Press the (icon) button.

You can control the volume level from 0 to 100.

If the volume is low, even though the volume is turned to maximum, adjust the TV volume.

When you press the (icon) button,

- If it is a folder (icon), you move to that folder.
- If it is a super folder (icon), you move to that super folder.

When you press the (icon) button,

- If it is a folder (icon), the message "The operation does not exist." (icon) will be displayed.

Exploring the Playback Location in a Voice File

- You can search for playback locations while playing a voice file.

- 1 Press the (icon) button to move the playback position backward by 2x speed. (REW)
- 2 Press the (icon) button to move the playback position forward by 2x speed. (FF)

Adjusting the Volume

- You can only adjust the volume when a file is being played back.

- 1 Press the (icon) button.

You can control the volume level from 0 to 100.

If the volume is low, even though the volume is turned to maximum, adjust the TV volume.

Repeating a File

1. Whenever you press the (icon) button while playing, the mode is changed to OFF → ONE → ALL in this order.

OFF	Disables repeat playback. Plays all the music files in the folder once.
ONE	Repeats the current music file.
ALL	Repeats all the music files in the folder.





2. REPEAT in the sub menu performs the same operation, and allows the repeat configuration while stopped.

Deleting a Voice File







1. Select the file to delete by using the (icon) buttons.
2. Move to the sub menu by using the (icon) button.
3. Move to DELETE menu by using the (icon) buttons.
4. Press the (icon) button.

Deletes the selected file.

Repeating a File

- 1 Whenever you Press the  button while playing, the mode is changed to OFF → ONE → ALL in order.
 - OFF  : Disables repeat playback. Plays all the music files in the folder once.
 - ONE  : Repeats the current music file.
 - ALL  : Repeats all the music files in the folder.
- 2 REPEAT in the sub menu performs the same operation, and allows repeat configuration when stopped.

Deleting a Voice File

- 1 Select the file to be deleted by using the   buttons.
- 2 Move to the sub menu by using the  button.
- 3 Move to DELETE menu by using the   buttons.
- 4 Press the  button.
Deletes the selected file.

Configuring the Start Path

You can set the start folder of PageShot to the current folder.

1. Move to the sub menu by using the (icon) button.
2. Move to the SETRUNDIR menu by using the (icon) buttons.
3. Press the (icon) button.

Sets the start folder of PageShot to the current folder.

Note.

You can only specify the sub folder of the ROOT directory.

Example) ROOT\WPresentation ↯ Allowed

ROOT\WPresentation\WAA (Not allowed

Using SETUP





You can change the related function configurations of PageShot.

[SETUP Menu Screen]

[SETUP Menu LCD Screen]

Configuring the Start Path

• You can set the start folder of PageShot to the current folder.

- 1** Move to the sub menu by using the  button.
- 2** Move to the SETRUNDIR menu by using the   buttons.
- 3** Press the  button.
Sets the start folder of PageShot to the current folder.

✓ You can only specify the sub folder of the ROOT directory.
(Example) ROOT\WPresentation → Allowed
ROOT\WPresentation\WAA → Not allowed

Using SETUP

- You can change the related function configurations of PageShot.



[SETUP Menu Screen]



[SETUP Menu LCD Screen]

PageShot Menu Icons

FIRMWARE UPGRADE	Upgrades the firmware of PageShot.
FORMAT FLASH	Initializes the Flash Memory.
INFORMATION	Shows configured settings. You cannot make changes in this menu.
SETUP SCREEN	Adjusts the horizontal and vertical location of the screen.
SETUP DEVICE	Shows the configurable settings and allows changes.

Upgrading the Firmware






You can upgrade the firmware of PageShot.

1. In the Firmware Upgrade menu, Press the (icon) button.

If you press the button in the Firmware Upgrade menu, the firmware file list will be displayed.


[Firmware File List Screen]

PageShot Menu Icons


	FIRMWARE UPGRADE	Upgrades the firmware of PageShot.
	FORMAT FLASH	Initializes the Flash Memory.
	INFORMATION	Shows configured settings. You cannot make changes in this menu.
	SETUP SCREEN	Adjusts the horizontal and vertical location of the screen.
	SETUP DEVICE	Shows the configurable settings and allows changes.

Upgrading the Firmware

- You can upgrade the firmware of PageShot.

1 In the Firmware Upgrade menu, Press the  button.

 If you press the button in the Firmware Upgrade menu, the firmware file list will be displayed

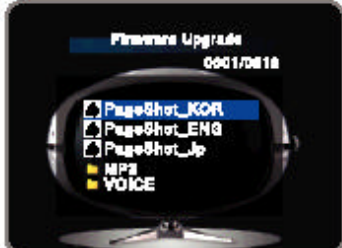

[Firmware File List Screen]

[Firmware File List LCD Screen]

1. Move to the desired firmware file you wish to upgrade by using the (icon) button.
 2. Press the (icon) button.
- A message box appears asking you for confirmation to apply the selected firmware.

Filename

[TV, LCD Screen]

3. Select "YES" or "NO" using the (icon) button.
 4. Press the (icon) button.
- YES: Starts the upgrade.
NO: Cancels the upgrade.

When the upgrade has been completed successfully, the system is restarted.

The "UPGRADE FAIL" message appears when the upgrade has failed. In this case, press the (icon) button to return to the firmware file list screen.

5. Press the (icon) button.

This moves to the SETUP menu.

Note.

If the firmware file is damaged, the "UPGRADE FAIL" message will be displayed. In this case, delete the firmware file, copy the file again, and retry the upgrade.

Notice.

Applying a different version of the firmware may disable some operations. Check before upgrading the firmware.

Formatting the Memory

You can initialize (format) the embedded memory (Flash memory) or the additionally installed memory (Compact Flash Memory).

1. In 'Format Flash', Press the (icon) button.

If you press the button in Format Flash, a message box appears asking you to confirm the format.

[TV, LCD Screen]

2. Press the (icon) button to select "YES" or "NO".

3. Press the (icon) button.

YES: Performs the format

NO: Cancels the format (SETUP menu)

Depending on the amount of memory, the time required may vary.

When the format has been completed, the SETUP menu screen will appear.

Warning

When you format the memory, you will lose ALL saved data.

CHECK before formatting.

Viewing Information

You can view the startup settings for PageShot.

You cannot change the settings in this menu.

[Information Screen]

[Information LCD Screen]

1. In Information, Press the (icon) button.

If you press the button in Information, the Information screen appears.

The entire settings are displayed on the TV, and a single item is displayed on the LCD.

2. Press the (icon) button to check the other item.

This works for LCD output only.

1. TITLE IMAGE :	The background image (JPEG) to be displayed when the power is turned on.
2. TITLE AUDIO :	The background audio (MP3) to be played when the power is turned on.
3. RUN DIR :	The Start folder location when the power is turned on.
4. AUTO RUN FILE :	The Presentation file (PRJ) to be played when the power is turned on.
5. FIRMWARE VERSION :	The Current Version of the firmware.
6. MEMORY :	memory usage / total amount of memory

3. Press the (icon) button.

This moves to the SETUP menu.

Note.

The TITLE IMAGE and TITLE AUDIO appear when Start mode is "N/A".

The AUTO RUN FILE appears when Start mode is "PJT".

For information on Start mode, refer to "SETUP DEVICE".